

BMW\_V01.30 BLD Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Series	Model Series	BLD
1 Series	E81/E82/E87/E88	●
1 Series	F20/F21	●
2 Series	F22/F23	●
2 Series	F45	●
3 Series	Z3_E36	●
3 Series	E46	●
3 Series	E90/E91/E92/E93	●
3 Series	F80	●
3 Series	F30/F31/F34/F35	●
4 Series	F32/F33/F36	●
4 Series	F82/F83	●
5 Series	E39	●
5 Series	E60/E61	●
5 Series	F10/F11/F18	●
5 Series	GT (F07)	●
6 Series	E63/E64	●
6 Series	F06/F12/F13	●
7 Series	E38	●
7 Series	E65/E66/E68	●
7 Series	F01/F02/F03/F04	●
I Series	I01/I12	●
X Series	X3_E83	●
X Series	X5_E53	●
X Series	X1_E84	●
X Series	X5_E70	●
X Series	X6_E71	●
X Series	X6_E72	●
X Series	X3_F25	●
X Series	X4_F26	●
X Series	X5_F15/F85	●
X Series	X6_F16/F86	●
Z Series	Z4_E85/86	●
Z Series	Z4_E89	●
Z Series	Z8_E52	●