

Vehicle	SubVehicle	Year	Function	Function	Function	Version
VOLVO C90		2007	Engine control module (ECM)	ECU identification		V1.10.001
VOLVO C90		2007	Engine control module (ECM)	Read codes		V1.10.001
VOLVO C90		2007	Engine control module (ECM)	Erase codes		V1.10.001
VOLVO C90		2007	Engine control module (ECM)	Freeze frame		V1.10.001
VOLVO C90		2007	Engine control module (ECM)	Active test		V1.10.001
VOLVO C90		2007	Engine control module (ECM)	Special functions		V1.10.001
VOLVO C90		2007	Central electronic module (CEM)	ECU identification	Resetting the adaptation values	V1.10.001
VOLVO C90		2007	Central electronic module (CEM)	Read codes		V1.10.001
VOLVO C90		2007	Central electronic module (CEM)	Erase codes		V1.10.001
VOLVO C90		2007	Central electronic module (CEM)	Freeze frame		V1.10.001
VOLVO C90		2007	Central electronic module (CEM)	Active test		V1.10.001
VOLVO C90		2007	Central electronic module (CEM)	Special functions		V1.10.001
VOLVO C90		2007	Central electronic module (CEM)	ECU identification	Reseting the service reminder indicator (SRI)	V1.10.001
VOLVO C90		2007	Central electronic module (CEM)	Read codes	Pre-delivery service for new car	V1.10.001
VOLVO C90		2007	Central electronic module (CEM)	Erase codes	Calibration of position sensor_GDL lams	V1.10.001
VOLVO C90		2007	Central electronic module (CEM)	Freeze frame	Readline off the alarm cause	V1.10.001
VOLVO C90		2007	Central electronic module (CEM)	Active test	Reading out of the vehicle mode	V1.10.001
VOLVO C90		2007	Central electronic module (CEM)	Special functions	Programming of global opening/closing of windows	V1.10.001
VOLVO C90		2007	Central electronic module (CEM)	ECU identification	Quick test of alternator function	V1.10.001
VOLVO C90		2007	Central electronic module (CEM)	Read codes	Reading out of the battery voltage	V1.10.001
VOLVO C90		2007	Central electronic module (CEM)	Erase codes	Ignition switch key position	V1.10.001
VOLVO C90		2007	Central electronic module (CEM)	Freeze frame	Programming of rear window wiper when reversing	V1.10.001
VOLVO C90		2007	Central electronic module (CEM)	Active test	Setting clock deviation	V1.10.001
VOLVO C90		2007	Central electronic module (CEM)	Special functions	Resetting the instrument	V1.10.001
VOLVO C90		2007	Central electronic module (CEM)	ECU identification	Readout of part number for Remote Receiver Module (RRX) and siren (SCM)	V1.10.001
VOLVO C90		2007	Central electronic module (CEM)	Read codes	Position sensor xenon lamp	V1.10.001
VOLVO C90		2007	Central electronic module (CEM)	Erase codes	Setting day and night mode for the instrumentation	V1.10.001
VOLVO C90		2007	Central electronic module (CEM)	Freeze frame		V1.10.001
VOLVO C90		2007	Central electronic module (CEM)	Active test		V1.10.001
VOLVO C90		2007	Central electronic module (CEM)	Special functions		V1.10.001
VOLVO C90		2007	Central electronic module (CEM)	ECU identification	Reseting the service reminder indicator (SRI)	V1.10.001
VOLVO C90		2007	Central electronic module (CEM)	Read codes	Testing all indicators and lamps in the driver information module (DIM)	V1.10.001
VOLVO C90		2007	Central electronic module (CEM)	Erase codes	Indicates programmed values	V1.10.001
VOLVO C90		2007	Central electronic module (CEM)	Freeze frame	Driver information module	V1.10.001
VOLVO C90		2007	Central electronic module (CEM)	Active test	Programming the driver information module (DIM)	V1.10.001
VOLVO C90		2007	Driver information module (DIM)	ECU identification		V1.10.001
VOLVO C90		2007	Driver information module (DIM)	Read codes		V1.10.001
VOLVO C90		2007	Driver information module (DIM)	Erase codes		V1.10.001
VOLVO C90		2007	Driver information module (DIM)	Freeze frame		V1.10.001
VOLVO C90		2007	Driver information module (DIM)	Active test		V1.10.001
VOLVO C90		2007	Driver information module (DIM)	Special functions		V1.10.001
VOLVO C90		2007	Driver information module (DIM)	ECU identification	Activating components and functions	V1.10.001
VOLVO C90		2007	Driver information module (DIM)	Read codes	Calibration (can with DTC)	V1.10.001
VOLVO C90		2007	Driver information module (DIM)	Erase codes	Reading off the configuration	V1.10.001
VOLVO C90		2007	Driver information module (DIM)	Freeze frame		V1.10.001
VOLVO C90		2007	Driver information module (DIM)	Active test	Resetting crash mode	V1.10.001
VOLVO C90		2007	Driver door module (DDM)	ECU identification		V1.10.001
VOLVO C90		2007	Driver door module (DDM)	Read codes		V1.10.001
VOLVO C90		2007	Driver door module (DDM)	Erase codes		V1.10.001
VOLVO C90		2007	Driver door module (DDM)	Freeze frame		V1.10.001
VOLVO C90		2007	Driver door module (DDM)	Active test	Initializing the window position	V1.10.001
VOLVO C90		2007	Driver door module (DDM)	Special functions		V1.10.001
VOLVO C90		2007	Passenger door module (PDM)	ECU identification		V1.10.001
VOLVO C90		2007	Passenger door module (PDM)	Read codes		V1.10.001
VOLVO C90		2007	Passenger door module (PDM)	Erase codes		V1.10.001
VOLVO C90		2007	Passenger door module (PDM)	Freeze frame		V1.10.001
VOLVO C90		2007	Passenger door module (PDM)	Active test	Initialzing the window position	V1.10.001
VOLVO C90		2007	Passenger door module (PDM)	Special functions		V1.10.001
VOLVO C90		2007	Infotainment control module (ICM)	ECU identification		V1.10.001
VOLVO C90		2007	Infotainment control module (ICM)	Read codes		V1.10.001
VOLVO C90		2007	Infotainment control module (ICM)	Erase codes		V1.10.001
VOLVO C90		2007	Infotainment control module (ICM)	Freeze frame		V1.10.001
VOLVO C90		2007	Infotainment control module (ICM)	Active test		V1.10.001
VOLVO C90		2007	Infotainment control module (ICM)	Special functions		V1.10.001
VOLVO C90		2007	Infotainment control module (ICM)	ECU identification	Programming the infotainment control module (ICM)	V1.10.001
VOLVO C90		2007	Infotainment control module (ICM)	Read codes	Programming other settings.	V1.10.001
VOLVO C90		2007	Infotainment control module (ICM)	Erase codes	Programming the clock	V1.10.001
VOLVO C90		2007	Climate control module (CCM)	ECU identification		V1.10.001
VOLVO C90		2007	Climate control module (CCM)	Read codes		V1.10.001
VOLVO C90		2007	Climate control module (CCM)	Erase codes		V1.10.001
VOLVO C90		2007	Climate control module (CCM)	Freeze frame		V1.10.001
VOLVO C90		2007	Climate control module (CCM)	Active test		V1.10.001
VOLVO C90		2007	Climate control module (CCM)	Special functions		V1.10.001
VOLVO C90		2007	Keyless vehicle module (KVM)	ECU identification	Identifying components on the LIN network that belong to the climate control system (CCM)	V1.10.001
VOLVO C90		2007	Keyless vehicle module (KVM)	Read codes	Programming the seat temperature	V1.10.001
VOLVO C90		2007	Keyless vehicle module (KVM)	Erase codes	Calibrating the climate control module (CCM)	V1.10.001
VOLVO C90		2007	Keyless vehicle module (KVM)	Freeze frame	Readline out detected/exected control module/sensors	V1.10.001
VOLVO C90		2007	Keyless vehicle module (KVM)	Active test	Readline out electronic damper motor, actual/ target range and tolerance limit	V1.10.001
VOLVO C90		2007	Phone module (PHM)	ECU identification		V1.10.001
VOLVO C90		2007	Phone module (PHM)	Read codes		V1.10.001
VOLVO C90		2007	Phone module (PHM)	Erase codes		V1.10.001
VOLVO C90		2007	Phone module (PHM)	Freeze frame		V1.10.001
VOLVO C90		2007	Phone module (PHM)	Active test		V1.10.001
VOLVO C90		2007	Phone module (PHM)	Special functions		V1.10.001
VOLVO C90		2007	Global positioning system module (GPS)	ECU identification	Read out of the number of programmed remote keys.	V1.10.001
VOLVO C90		2007	Global positioning system module (GPS)	Read codes		V1.10.001
VOLVO C90		2007	Global positioning system module (GPS)	Erase codes		V1.10.001
VOLVO C90		2007	Global positioning system module (GPS)	Freeze frame		V1.10.001
VOLVO C90		2007	Traffic message channel module (TMC)	ECU identification		V1.10.001
VOLVO C90		2007	Traffic message channel module (TMC)	Read codes		V1.10.001
VOLVO C90		2007	Traffic message channel module (TMC)	Erase codes		V1.10.001
VOLVO C90		2007	Traffic message channel module (TMC)	Freeze frame		V1.10.001
VOLVO C90		2007	Steering wheel module (SWM)	ECU identification		V1.10.001
VOLVO C90		2007	Steering wheel module (SWM)	Read codes		V1.10.001
VOLVO C90		2007	Steering wheel module (SWM)	Erase codes		V1.10.001
VOLVO C90		2007	Accessory electronic module (AEM)	ECU identification		V1.10.001
VOLVO C90		2007	Accessory electronic module (AEM)	Read codes		V1.10.001
VOLVO C90		2007	Accessory electronic module (AEM)	Erase codes		V1.10.001
VOLVO C90		2007	Accessory electronic module (AEM)	Freeze frame		V1.10.001
VOLVO C90		2007	Accessory electronic module (AEM)	Active test	Reading off the configuration	V1.10.001
VOLVO C90		2007	Phone module (PHM)	ECU identification		V1.10.001
VOLVO C90		2007	Phone module (PHM)	Read codes		V1.10.001
VOLVO C90		2007	Phone module (PHM)	Erase codes		V1.10.001
VOLVO C90		2007	Phone module (PHM)	Freeze frame		V1.10.001
VOLVO C90		2007	Parking assistance module (PAM)	ECU identification		V1.10.001
VOLVO C90		2007	Parking assistance module (PAM)	Read codes		V1.10.001
VOLVO C90		2007	Parking assistance module (PAM)	Erase codes		V1.10.001
VOLVO C90		2007	Parking assistance module (PAM)	Freeze frame		V1.10.001
VOLVO C90		2007	Parking assistance module (PAM)	Active test		V1.10.001
VOLVO C90		2007	Parking assistance module (PAM)	Special functions		V1.10.001
VOLVO C90		2007	Audio module (AUD)	ECU identification		V1.10.001
VOLVO C90		2007	Audio module (AUD)	Read codes		V1.10.001
VOLVO C90		2007	Audio module (AUD)	Erase codes		V1.10.001
VOLVO C90		2007	Audio module (AUD)	Freeze frame		V1.10.001
VOLVO C90		2007	Power seat module, left (PSL)	ECU identification		V1.10.001
VOLVO C90		2007	Power seat module, left (PSL)	Read codes		V1.10.001
VOLVO C90		2007	Power seat module, left (PSL)	Erase codes		V1.10.001
VOLVO C90		2007	Power seat module, left (PSL)	Freeze frame		V1.10.001
VOLVO C90		2007	Power seat module, left (PSL)	Active test		V1.10.001
VOLVO C90		2007	Power seat module, right (PSR)	ECU identification		V1.10.001
VOLVO C90		2007	Power seat module, right (PSR)	Read codes		V1.10.001
VOLVO C90		2007	Power seat module, right (PSR)	Erase codes		V1.10.001
VOLVO C90		2007	Power seat module, right (PSR)	Freeze frame		V1.10.001
VOLVO C90		2007	Power seat module, right (PSR)	Active test		V1.10.001
VOLVO C90		2007	Power seat module, right (PSR)	Special functions		V1.10.001
VOLVO C90		2007	Power seat module, right (PSR)	ECU identification		V1.10.001
VOLVO C90		2007	Remote digital audio receiver (RDAR)	Read codes		V1.10.001
VOLVO C90		2007	Remote digital audio receiver (RDAR)	Erase codes		V1.10.001
VOLVO C90		2007	Remote digital audio receiver (RDAR)	Freeze frame		V1.10.001
VOLVO C90		2007	Integrated audio module (IAM)	ECU identification		V1.10.001
VOLVO C90		2007	Integrated audio module (IAM)	Read codes		V1.10.001
VOLVO C90		2007	Integrated audio module (IAM)	Erase codes		V1.10.001
VOLVO C90		2007	Integrated audio module (IAM)	Freeze frame		V1.10.001
VOLVO C90		2007	Integrated audio module (IAM)	Active test		V1.10.001
VOLVO C90		2007	Trailer module (TRM)	ECU identification		V1.10.001
VOLVO C90		2007	Trailer module (TRM)	Read codes		V1.10.001
VOLVO C90		2007	Trailer module (TRM)	Erase codes		V1.10.001
VOLVO C90		2007	Combustion preheater module (CPM)	ECU identification		V1.10.001
VOLVO C90		2007	Combustion preheater module (CPM)	Read codes		V1.10.001
VOLVO C90		2007	Combustion preheater module (CPM)	Erase codes		V1.10.001
VOLVO C90		2007	Combustion preheater module (CPM)	Freeze frame		V1.10.001
VOLVO C90		2007	Combustion preheater module (CPM)	Active test		V1.10.001
VOLVO C90		2007	Transmission control module (TCM)	ECU identification		V1.10.001
VOLVO C90		2007	Transmission control module (TCM)	Read codes		V1.10.001
VOLVO C90		2007	Transmission control module (TCM)	Erase codes		V1.10.001
VOLVO C90		2007	Transmission control module (TCM)	Freeze frame		V1.10.001
VOLVO C90		2007	Transmission control module (TCM)	Active test		V1.10.001
VOLVO C90		2007	Transmission control module (TCM)	Special functions		V1.10.001
VOLVO C90		2007	Engine control module (ECM)	ECU identification		V1.10.001
VOLVO C90		2007	Engine control module (ECM)	Read codes		V1.10.001
VOLVO C90		2007	Engine control module (ECM)	Erase codes		V1.10.001
VOLVO C90		2007	Engine control module (ECM)	Freeze frame		V1.10.001
VOLVO C90		2007	Engine control module (ECM)	Active test		V1.10.001
VOLVO C90		2007	Engine control module (ECM)	Special functions		V1.10.001
VOLVO C90		2007	Engine control module (ECM)	ECU identification		V1.10.001
VOLVO C90		2007	Transmission control module (TCM)	Read codes		V1.10.001
VOLVO C90		2007	Transmission control module (TCM)	Erase codes		V1.10.001
VOLVO C90		2007	Transmission control module (TCM)	Freeze frame		V1.10.001
VOLVO C90		2007	Transmission control module (TCM)	Active test		V1.10.001
VOLVO C90		2007	Transmission control module (TCM)	Special functions		V1.10.001
VOLVO C90		2007	Transmission control module (TCM)	ECU identification		V1.10.001
VOLVO C90		2007	Engine control module (ECM)	Read codes		V1.10.001
VOLVO C90		2007	Engine control module (ECM)	Erase codes		V1.10.001
VOLVO C90		2007	Engine control module (ECM)	Freeze frame		V1.10.001
VOLVO C90		2007	Engine control module (ECM)	Active test		V1.10.001
VOLVO C90		2007	Engine control module (ECM)	Special functions		V1.10.001
VOLVO C90		2007	Transmission control module (TCM)	ECU identification		V1.10.001
VOLVO C90		2007	Transmission control module (TCM)	Read codes	</	

VOLVO	C90	2007	Engine control module (ECM)	Special functions	Programming the optimizing parameters	V1.10.001
VOLVO	C90	2007	Engine control module (ECM)	Special functions	Qualifying the engine module	V1.10.001
VOLVO	C90	2007	Engine control module (ECM)	Special functions	Adaptation of swivel channel throttle	V1.10.001
VOLVO	C90	2007	Engine control module (ECM)	Special functions	Adaptation of turbo control motor	V1.10.001
VOLVO	C90	2007	Engine control module (ECM)	Special functions	Adaptation of heated oxygen sensor	V1.10.001
VOLVO	C90	2007	Engine control module (ECM)	Special functions	Adaptation of intake air sensor	V1.10.001
VOLVO	C90	2007	Engine control module (ECM)	Special functions	Adaptation of differential pressure sensor particle filter	V1.10.001
VOLVO	C90	2007	Engine control module (ECM)	Special functions	Adaptation of fuel pressure control valve	V1.10.001
VOLVO	C90	2007	Engine control module (ECM)	Special functions	Reheating counter/particle filter	V1.10.001
VOLVO	C90	2007	Engine control module (ECM)	Special functions	Combustion of soot particles	V1.10.001
VOLVO	C90	2007	Engine control module (ECM)	Special functions	Checking injectors	V1.10.001
VOLVO	C90	2007	Engine control module (ECM)	Special functions	Checking the oil level	V1.10.001
VOLVO	C90	2007	Engine control module (ECM)	Special functions	Adjusting calculated oil level	V1.10.001
VOLVO	C90	2007	Engine control module (ECM)	Special functions	Resetting the adaptation values	V1.10.001
VOLVO	C90	2007	Engine control module (ECM)	Special functions	Programming the service reminder indicator (SRI)	V1.10.001
VOLVO	C90	2008	Central electronic module (CEM)	Read codes	Pre-delivery service for the car	V1.10.001
VOLVO	C90	2008	Central electronic module (CEM)	Erase codes	Calibration of position sensor, GOL lamens	V1.10.001
VOLVO	C90	2008	Central electronic module (CEM)	Freeze frame	Readline off the alarm cause	V1.10.001
VOLVO	C90	2008	Central electronic module (CEM)	Active test	Reading off the programmed vehicle mode	V1.10.001
VOLVO	C90	2008	Central electronic module (CEM)	Special functions	Quick test of the steering system	V1.10.001
VOLVO	C90	2008	Central electronic module (CEM)	Special functions	Resetting low voltage counters	V1.10.001
VOLVO	C90	2008	Central electronic module (CEM)	Special functions	Ignition switch key position.	V1.10.001
VOLVO	C90	2008	Central electronic module (CEM)	Special functions	Programmable window wiper when reversing	V1.10.001
VOLVO	C90	2008	Central electronic module (CEM)	Special functions	Setting clock deviation	V1.10.001
VOLVO	C90	2008	Central electronic module (CEM)	Special functions	Resetting crash mode	V1.10.001
VOLVO	C90	2008	Central electronic module (CEM)	Special functions	Read-out of part number for Remote Receiver Module (RRX) and siren (SCM)	V1.10.001
VOLVO	C90	2008	Central electronic module (CEM)	Special functions	Position sensor sensor lamp	V1.10.001
VOLVO	C90	2008	Brake control module (BCM)	ECU identification	Setting day and night mode for the instrumentation	V1.10.001
VOLVO	C90	2008	Brake control module (BCM)	Read codes	Activation of components and functions	V1.10.001
VOLVO	C90	2008	Brake control module (BCM)	Erase codes	Calibration (lasc with DTC)	V1.10.001
VOLVO	C90	2008	Brake control module (BCM)	Freeze frame	Reading off the configuration	V1.10.001
VOLVO	C90	2008	Supplemental restraint system module (SRS)	ECU identification	Resetting crash mode	V1.10.001
VOLVO	C90	2008	Supplemental restraint system module (SRS)	Read codes	Initialization the window position	V1.10.001
VOLVO	C90	2008	Supplemental restraint system module (SRS)	Erase codes	Initialization the window position	V1.10.001
VOLVO	C90	2008	Supplemental restraint system module (SRS)	Freeze frame	Initialization the window position	V1.10.001
VOLVO	C90	2008	Driver door module (DOM)	Special functions	Identifying components on the LIN network that belong to the climate control system (CCM)	V1.10.001
VOLVO	C90	2008	Driver door module (DOM)	ECU identification	Programming the seat temperature	V1.10.001
VOLVO	C90	2008	Driver door module (DOM)	Read codes	Calibrating the climate control module (CCM)	V1.10.001
VOLVO	C90	2008	Driver door module (DOM)	Erase codes	Reading out detected/expected control modules/sensors	V1.10.001
VOLVO	C90	2008	Passenger door module (PDM)	Read codes	Reading out electronic damper motor, actual/preset range and tolerance limit	V1.10.001
VOLVO	C90	2008	Passenger door module (PDM)	Erase codes	Resetting the service reminder indicator (SRI)	V1.10.001
VOLVO	C90	2008	Passenger door module (PDM)	Freeze frame	Testing all indicators and lamps in the driver information module (DIM)	V1.10.001
VOLVO	C90	2008	Passenger door module (PDM)	Active test	Indicates overarmed values	V1.10.001
VOLVO	C90	2008	Passenger door module (PDM)	Special functions	Display of DTC/ESC message	V1.10.001
VOLVO	C90	2008	Driver information module (DIM)	ECU identification	Programming seatbelt reminder in backseat	V1.10.001
VOLVO	C90	2008	Driver information module (DIM)	Read codes	Programming seatbelt reminder in front seat	V1.10.001
VOLVO	C90	2008	Driver information module (DIM)	Erase codes	Initialization the window position	V1.10.001
VOLVO	C90	2008	Driver information module (DIM)	Freeze frame	Programming the infotainment control module (ICM)	V1.10.001
VOLVO	C90	2008	Driver information module (DIM)	Active test	Programming other settings	V1.10.001
VOLVO	C90	2008	Driver information module (DIM)	Special functions	Programming the clock	V1.10.001
VOLVO	C90	2008	Infotainment control module (ICM)	ECU identification	Reading off the configuration	V1.10.001
VOLVO	C90	2008	Infotainment control module (ICM)	Read codes	Read out of the number of programmed remote keys.	V1.10.001
VOLVO	C90	2008	Infotainment control module (ICM)	Erase codes	Read out of part number and serial number, Remote Keyless Entry (RKE)	V1.10.001
VOLVO	C90	2008	Infotainment control module (ICM)	Freeze frame	Programming remote control setting	V1.10.001
VOLVO	C90	2008	Infotainment control module (ICM)	Special functions	Initializing the front seat position	V1.10.001
VOLVO	C90	2008	Infotainment control module (ICM)	ECU identification	Activation	V1.10.001
VOLVO	C90	2008	Keyless vehicle module (KVM)	Read codes	Programming remote control setting	V1.10.001
VOLVO	C90	2008	Keyless vehicle module (KVM)	Erase codes	Initializing the front seat position	V1.10.001
VOLVO	C90	2008	Keyless vehicle module (KVM)	Freeze frame	Activation	V1.10.001
VOLVO	C90	2008	Keyless vehicle module (KVM)	Active test	Programming remote control setting	V1.10.001
VOLVO	C90	2008	Keyless vehicle module (KVM)	Special functions	Initializing the front seat position	V1.10.001
VOLVO	C90	2008	Parking assistance module (PAM)	ECU identification	Activation	V1.10.001
VOLVO	C90	2008	Parking assistance module (PAM)	Read codes	Reinstalling the reserve battery	V1.10.001
VOLVO	C90	2008	Parking assistance module (PAM)	Erase codes	Programming digital radio receiver (DRD)	V1.10.001
VOLVO	C90	2008	Audio module (AUD)	ECU identification	ECU identification	V1.10.001
VOLVO	C90	2008	Audio module (AUD)	Read codes	ECU identification	V1.10.001
VOLVO	C90	2008	Audio module (AUD)	Erase codes	ECU identification	V1.10.001
VOLVO	C90	2008	Audio module (AUD)	Freeze frame	ECU identification	V1.10.001
VOLVO	C90	2008	Power seat module, left (PSL)	ECU identification	ECU identification	V1.10.001
VOLVO	C90	2008	Power seat module, left (PSL)	Read codes	ECU identification	V1.10.001
VOLVO	C90	2008	Power seat module, left (PSL)	Erase codes	ECU identification	V1.10.001
VOLVO	C90	2008	Power seat module, left (PSL)	Freeze frame	ECU identification	V1.10.001
VOLVO	C90	2008	Power seat module, left (PSL)	Active test	ECU identification	V1.10.001
VOLVO	C90	2008	Power seat module, right (PSR)	ECU identification	ECU identification	V1.10.001
VOLVO	C90	2008	Power seat module, right (PSR)	Read codes	ECU identification	V1.10.001
VOLVO	C90	2008	Power seat module, right (PSR)	Erase codes	ECU identification	V1.10.001
VOLVO	C90	2008	Power seat module, right (PSR)	Freeze frame	ECU identification	V1.10.001
VOLVO	C90	2008	Power seat module, right (PSR)	Active test	ECU identification	V1.10.001
VOLVO	C90	2008	Power seat module, right (PSR)	Special functions	ECU identification	V1.10.001
VOLVO	C90	2008	Power seat module, right (PSR)	ECU identification	ECU identification	V1.10.001
VOLVO	C90	2008	Accessory USB unit (AUD)	ECU identification	ECU identification	V1.10.001
VOLVO	C90	2008	Accessory USB unit (AUD)	Read codes	ECU identification	V1.10.001
VOLVO	C90	2008	Accessory USB unit (AUD)	Erase codes	ECU identification	V1.10.001
VOLVO	C90	2008	Accessory USB unit (AUD)	Freeze frame	ECU identification	V1.10.001
VOLVO	C90	2008	Trailer module (TRM)	ECU identification	ECU identification	V1.10.001
VOLVO	C90	2008	Trailer module (TRM)	Read codes	ECU identification	V1.10.001
VOLVO	C90	2008	Trailer module (TRM)	Erase codes	ECU identification	V1.10.001
VOLVO	C90	2008	Steering wheel module (SWM)	ECU identification	ECU identification	V1.10.001
VOLVO	C90	2008	Steering wheel module (SWM)	Read codes	ECU identification	V1.10.001
VOLVO	C90	2008	Steering wheel module (SWM)	Erase codes	ECU identification	V1.10.001
VOLVO	C90	2008	Steering wheel module (SWM)	Freeze frame	ECU identification	V1.10.001
VOLVO	C90	2008	Integrated audio module (IAM)	ECU identification	ECU identification	V1.10.001
VOLVO	C90	2008	Integrated audio module (IAM)	Read codes	ECU identification	V1.10.001
VOLVO	C90	2008	Integrated audio module (IAM)	Erase codes	ECU identification	V1.10.001
VOLVO	C90	2008	Integrated audio module (IAM)	Freeze frame	ECU identification	V1.10.001
VOLVO	C90	2008	Phone module (PHM)	ECU identification	ECU identification	V1.10.001
VOLVO	C90	2008	Phone module (PHM)	Read codes	ECU identification	V1.10.001
VOLVO	C90	2008	Phone module (PHM)	Erase codes	ECU identification	V1.10.001
VOLVO	C90	2008	Phone module (PHM)	Freeze frame	ECU identification	V1.10.001
VOLVO	C90	2008	Phone module (PHM)	Active test	ECU identification	V1.10.001
VOLVO	C90	2008	Remote digital radio receiver (RDR)	ECU identification	Programming remote control setting	V1.10.001
VOLVO	C90	2008	Remote digital radio receiver (RDR)	Read codes	Initializing the front seat position	V1.10.001
VOLVO	C90	2008	Remote digital radio receiver (RDR)	Erase codes	Activation	V1.10.001
VOLVO	C90	2008	Multimedia module (MMM)	ECU identification	Programming remote control setting	V1.10.001
VOLVO	C90	2008	Multimedia module (MMM)	Read codes	Initializing the front seat position	V1.10.001
VOLVO	C90	2008	Multimedia module (MMM)	Erase codes	Activation	V1.10.001
VOLVO	C90	2008	Multimedia module (MMM)	Freeze frame	Programming remote control setting	V1.10.001
VOLVO	C90	2008	Combination preheater module (CPM)	ECU identification	Initialization the front seat position	V1.10.001
VOLVO	C90	2008	Combination preheater module (CPM)	Read codes	Activation	V1.10.001
VOLVO	C90	2008	Combination preheater module (CPM)	Erase codes	Programming remote control setting	V1.10.001
VOLVO	C90	2008	Combination preheater module (CPM)	Freeze frame	Initialization the front seat position	V1.10.001
VOLVO	C90	2008	Engine control module (ECM)	Special functions	Activation	V1.10.001
VOLVO	C90	2008	Engine control module (ECM)	ECU identification	Programming remote control setting	V1.10.001
VOLVO	C90	2008	Engine control module (ECM)	Read codes	Initialization the front seat position	V1.10.001
VOLVO	C90	2008	Engine control module (ECM)	Erase codes	Activation	V1.10.001
VOLVO	C90	2008	Engine control module (ECM)	Freeze frame	Programming remote control setting	V1.10.001
VOLVO	C90	2008	Transmission control module (TCM)	ECU identification	Initialization the front seat position	V1.10.001
VOLVO	C90	2008	Transmission control module (TCM)	Read codes	Activation	V1.10.001
VOLVO	C90	2008	Transmission control module (TCM)	Erase codes	Programming remote control setting	V1.10.001
VOLVO	C90	2008	Transmission control module (TCM)	Freeze frame	Initialization the front seat position	V1.10.001
VOLVO	C90	2008	Transmission control module (TCM)	Active test	Activation	V1.10.001
VOLVO	C90	2008	Transmission control module (TCM)	Special functions	Programming remote control setting	V1.10.001
VOLVO	C90	2008	Transmission control module (TCM)	ECU identification	Initialization the front seat position	V1.10.001
VOLVO	C90	2008	Transmission control module (TCM)	Read codes	Activation	V1.10.001
VOLVO	C90	2008	Transmission control module (TCM)	Erase codes	Programming remote control setting	V1.10.001
VOLVO	C90	2008	Transmission control module (TCM)	Freeze frame	Initialization the front seat position	V1.10.001
VOLVO	C90	2008	Engine control module (ECM)	Special functions	Activation	V1.10.001
VOLVO	C90	2008	Engine control module (ECM)	ECU identification	Programming remote control setting	V1.10.001
VOLVO	C90	2008	Engine control module (ECM)	Read codes	Initialization the front seat position	V1.10.001
VOLVO	C90	2008	Engine control module (ECM)	Erase codes	Activation	V1.10.001
VOLVO	C90	2008	Engine control module (ECM)	Freeze frame	Programming remote control setting	V1.10.001
VOLVO	C90	2008	Combustion preheater module (CPM)	ECU identification	Activation	V1.10.001
VOLVO	C90	2008	Combustion preheater module (CPM)	Read codes	Programming remote control setting	V1.10.001
VOLVO	C90	2008	Combustion preheater module (CPM)	Erase codes	Initialization the front seat position	V1.10.001
VOLVO	C90	2008	Combustion preheater module (CPM)	Freeze frame	Activation	V1.10.001
VOLVO	C90	2008	Engine control module (ECM)	Special functions	Programming remote control setting	V1.10.001
VOLVO	C90	2008	Engine control module (ECM)	ECU identification	Initialization the front seat position	V1.10.001
VOLVO	C90	2008	Engine control module (ECM)	Read codes	Activation	V1.10.001
VOLVO	C90	2008	Engine control module (ECM)	Erase codes	Programming remote control setting	V1.10.001
VOLVO	C90	2008	Engine control module (ECM)	Freeze frame	Initialization the front seat position	V1.10.001
VOLVO	C90	2008	Transmission control module (TCM)	ECU identification	Activation	V1.10.001
VOLVO	C90	2008	Transmission control module (TCM)	Read codes	Programming remote control setting	V1.10.001
VOLVO	C90	2008	Transmission control module (TCM)	Erase codes	Initialization the front seat position	V1.10.001
VOLVO	C90	2008	Transmission control module (TCM)	Freeze frame	Activation	V1.10.001
VOLVO	C90	2008	Engine control module (ECM)	Special functions	Programming remote control setting	V1.10.001
VOLVO	C90	2008	Engine control module (ECM)	ECU identification	Initialization the front seat position	V1.10.001
VOLVO	C90	2008	Engine control module (ECM)	Read codes	Activation	V1.10.001
VOLVO	C90	2008	Engine control module (ECM)	Erase codes	Programming remote control setting	V1.10.001
VOLVO	C90	2008	Engine control module (ECM)	Freeze frame	Initialization the front seat position	V1.10.001
VOLVO	C90	2008	Combustion preheater module (CPM)	ECU identification	Activation	V1.10.001
VOLVO	C90	2008	Combustion preheater module (CPM)	Read codes	Programming remote control setting	V1.10.001
VOLVO	C90	2008	Combustion preheater module (CPM)	Erase codes	Initialization the front seat position	V1.10.001
VOLVO	C90	2008	Combustion preheater module (CPM)	Freeze frame	Activation	V1.10.001
VOLVO	C90	2008	Engine control module (ECM)	Special functions	Programming remote control setting	V1.10.001
VOLVO	C90	2008	Engine control module (ECM)	ECU identification	Initialization the front seat position	V1.10.001
VOLVO	C90	2008	Engine control module (ECM)	Read codes	Activation	V1.10.001
VOLVO	C90	2008	Engine control module (ECM)	Erase codes	Programming remote control setting	V1.10.001
VOLVO	C90	2008	Engine control module (ECM)	Freeze frame	Initialization the front seat position	V1.10.001
VOLVO	C90	2008	Transmission control module (TCM)	ECU identification	Activation	V1.10.001
VOLVO	C90	2008	Transmission control module (TCM)	Read		

VOLVO	C90	2010	Phone module (PHM)	Freeze frame		V1.10.001
VOLVO	C90	2010	Phone module (PHM)	Special functions		V1.10.001
VOLVO	C90	2010	Headlight control module (HCM)	ECU identification	Reinstalling the reserve battery	V1.10.001
VOLVO	C90	2010	Headlight control module (HCM)	Read codes		V1.10.001
VOLVO	C90	2010	Headlight control module (HCM)	Erase codes		V1.10.001
VOLVO	C90	2010	Headlight control module (HCM)	Freeze frame		V1.10.001
VOLVO	C90	2010	Headlight control module (HCM)	Special functions	Calibration of position sensor	V1.10.001
VOLVO	C90	2010	Electrical power steering module (EPS)	ECU identification		V1.10.001
VOLVO	C90	2010	Electrical power steering module (EPS)	Read codes		V1.10.001
VOLVO	C90	2010	Electrical power steering module (EPS)	Erase codes		V1.10.001
VOLVO	C90	2010	Electrical power steering module (EPS)	Freeze frame		V1.10.001
VOLVO	C90	2010	Transmission control module (TCM)	ECU identification	Initial adjustment	V1.10.001
VOLVO	C90	2010	Transmission control module (TCM)	Read codes	Testing the fuel pump (FP)	V1.10.001
VOLVO	C90	2010	Transmission control module (TCM)	Erase codes	Readiness code (USA/CDN)	V1.10.001
VOLVO	C90	2010	Transmission control module (TCM)	Freeze frame	iUIMPR read out (USA/CDN)	V1.10.001
VOLVO	C90	2010	Transmission control module (TCM)	Special functions	Extended fault tracing for the diagnostic trouble code (DTC), Engine control module (ECM)	V1.10.001
VOLVO	C90	2010	Transmission control module (TCM)	Special functions	Quick test of the fuel tank system	V1.10.001
VOLVO	C90	2010	Transmission control module (TCM)	Special functions	Activating components and functions	V1.10.001
VOLVO	C90	2010	Transmission control module (TCM)	Active test	Resetting adaptation	V1.10.001
VOLVO	C90	2010	Transmission control module (TCM)	Special functions	Resetting the transmission fluid change counter	V1.10.001
VOLVO	C90	2010	Transmission control module (TCM)	Special functions	Calibration of position sensor	V1.10.001
VOLVO	C90	2010	Transmission control module (TCM)	Special functions	Activating TST mode	V1.10.001
VOLVO	C90	2010	Transmission control module (TCM)	Special functions	Activation of the calibration	V1.10.001
VOLVO	C90	2010	Transmission control module (TCM)	Special functions	Control module adatation	V1.10.001
VOLVO	C90	2010	Transmission control module (TCM)	Special functions	Adjustment of the throttle unit	V1.10.001
VOLVO	C90	2010	Engine control module (ECM)	Special functions	Readjustment	V1.10.001
VOLVO	C90	2010	Engine control module (ECM)	Special functions	Quick test of fuel tank system (USA/CDN)	V1.10.001
VOLVO	C90	2010	Engine control module (ECM)	Special functions	Quick test of the fuel pump (FP)	V1.10.001
VOLVO	C90	2010	Engine control module (ECM)	Special functions	Test/adjustment of air intake, intake	V1.10.001
VOLVO	C90	2010	Engine control module (ECM)	Special functions	Test/movement of camshaft control, exhaust	V1.10.001
VOLVO	C90	2010	Engine control module (ECM)	Special functions	Adaption of the exhaust gas recirculation (EGR) valve	V1.10.001
VOLVO	C90	2010	Engine control module (ECM)	Special functions	Resetting the odometer particle trap	V1.10.001
VOLVO	C90	2010	Engine control module (ECM)	Special functions	Conducting the particle traps	V1.10.001
VOLVO	C90	2010	Engine control module (ECM)	Special functions	Adaption reset, control valve inlet (throttle)	V1.10.001
VOLVO	C90	2010	Engine control module (ECM)	Special functions	Resetting information about consumption	V1.10.001
VOLVO	C90	2010	Engine control module (ECM)	Special functions	Readjustment caused by current	V1.10.001
VOLVO	C90	2010	Engine control module (ECM)	Special functions	Readout of current from battery monitoring sensor	V1.10.001
VOLVO	C90	2010	Engine control module (ECM)	Special functions	Adaption of neutral position sensor	V1.10.001
VOLVO	C90	2010	Engine control module (ECM)	ECU identification		V1.10.001
VOLVO	C90	2010	Additive dosing module (ADM)	Read codes		V1.10.001
VOLVO	C90	2010	Additive dosing module (ADM)	Erase codes		V1.10.001
VOLVO	C90	2010	Additive dosing module (ADM)	Freeze frame		V1.10.001
VOLVO	C90	2010	Additive dosing module (ADM)	Special functions	Refilling the feed hose with additive	V1.10.001
VOLVO	C90	2010	Additive dosing module (ADM)	Special functions	Resetting the tank level gauge	V1.10.001
VOLVO	C90	2010	Additive dosing module (ADM)	Special functions	Checking the additive level	V1.10.001
VOLVO	C90	2010	Additive dosing module (ADM)	Special functions	Programmable optimizing parameters	V1.10.001
VOLVO	C90	2010	Additive dosing module (ADM)	Special functions	Quick-test injectors	V1.10.001
VOLVO	C90	2010	Additive dosing module (ADM)	Special functions	Resetting counter for oil quality	V1.10.001
VOLVO	C90	2010	Engine control module (ECM)	Special functions	Adaption of throttle module	V1.10.001
VOLVO	C90	2010	Engine control module (ECM)	Special functions	Adaption of the air intake, intake	V1.10.001
VOLVO	C90	2010	Engine control module (ECM)	Special functions	Adaption of turbo control motor	V1.10.001
VOLVO	C90	2010	Engine control module (ECM)	Special functions	Adaption of heated oxygen sensor	V1.10.001
VOLVO	C90	2010	Engine control module (ECM)	Special functions	Adaption of the pressure sensor	V1.10.001
VOLVO	C90	2010	Engine control module (ECM)	Special functions	Adaption of differential pressure sensor particle filter	V1.10.001
VOLVO	C90	2010	Engine control module (ECM)	Special functions	Adaption of fuel pressure control valve	V1.10.001
VOLVO	C90	2010	Engine control module (ECM)	Special functions	Resetting counter particle filter	V1.10.001
VOLVO	C90	2010	Engine control module (ECM)	Special functions	Checking injectors	V1.10.001
VOLVO	C90	2010	Engine control module (ECM)	Special functions	Checking the oil level	V1.10.001
VOLVO	C90	2010	Engine control module (ECM)	Special functions	Adjusting calculated oil level	V1.10.001
VOLVO	C90	2010	Engine control module (ECM)	ECU identification		V1.10.001
VOLVO	C90	2010	Engine control module (ECM)	Read codes		V1.10.001
VOLVO	C90	2010	Engine control module (ECM)	Erase codes		V1.10.001
VOLVO	C90	2010	Engine control module (ECM)	Freeze frame		V1.10.001
VOLVO	C90	2010	Engine control module (ECM)	Special functions	Resetting the adaptation values	V1.10.001
VOLVO	C90	2010	Central electronic module B (CEM-HS)	ECU identification		V1.10.001
VOLVO	C90	2011	Central electronic module B (CEM-HS)	Read codes		V1.10.001
VOLVO	C90	2011	Central electronic module B (CEM-HS)	Erase codes		V1.10.001
VOLVO	C90	2011	Central electronic module B (CEM-HS)	Freeze frame		V1.10.001
VOLVO	C90	2011	Central electronic module B (CEM-HS)	Special functions	Resetting the service reminder indicator (SRI)	V1.10.001
VOLVO	C90	2011	Central electronic module B (CEM-HS)	Special functions	Pre-delivery service for new car	V1.10.001
VOLVO	C90	2011	Central electronic module B (CEM-HS)	Special functions	Reading off of cause for Remote Receiver Module (RRX) and siren (SCM)	V1.10.001
VOLVO	C90	2011	Central electronic module B (CEM-HS)	Special functions	Reading off and program vehicle mode	V1.10.001
VOLVO	C90	2011	Central electronic module B (CEM-HS)	Special functions	Reading off low countours	V1.10.001
VOLVO	C90	2011	Central electronic module B (CEM-HS)	Special functions	Ignition switch key position.	V1.10.001
VOLVO	C90	2011	Central electronic module B (CEM-HS)	Special functions	Programming window wiper when reversing	V1.10.001
VOLVO	C90	2011	Central electronic module B (CEM-HS)	Special functions	Setting clock deviation	V1.10.001
VOLVO	C90	2011	Central electronic module B (CEM-HS)	Special functions	Resetting crash mode	V1.10.001
VOLVO	C90	2011	Central electronic module B (CEM-HS)	Special functions	Read-out of memory for Remote Receiver Module (RRX) and siren (SCM)	V1.10.001
VOLVO	C90	2011	Central electronic module B (CEM-HS)	Special functions	Resetting number-by-passing obstacle.	V1.10.001
VOLVO	C90	2011	Central electronic module B (CEM-HS)	Special functions	Quick test of alternator function	V1.10.001
VOLVO	C90	2011	Central electronic module B (CEM-HS)	Special functions	Remote controlled immobilisation, status	V1.10.001
VOLVO	C90	2011	Central electronic module B (CEM-HS)	Special functions	Remote controlled immobilisation, cause	V1.10.001
VOLVO	C90	2011	Central electronic module B (CEM-HS)	Special functions	Setting day and night mode for the instrumentation	V1.10.001
VOLVO	C90	2011	Brake control module (BCM)	ECU identification		V1.10.001
VOLVO	C90	2011	Brake control module (BCM)	Read codes		V1.10.001
VOLVO	C90	2011	Brake control module (BCM)	Erase codes		V1.10.001
VOLVO	C90	2011	Brake control module (BCM)	Freeze frame		V1.10.001
VOLVO	C90	2011	Brake control module (BCM)	Special functions	Activating components and functions	V1.10.001
VOLVO	C90	2011	Brake control module (BCM)	Special functions	Calibration (cars with DTC)	V1.10.001
VOLVO	C90	2011	Brake control module (BCM)	Special functions	Reading off the configuration	V1.10.001
VOLVO	C90	2011	Supplemental restraint system module (SRS)	ECU identification	Resetting crash mode	V1.10.001
VOLVO	C90	2011	Supplemental restraint system module (SRS)	Read codes	Initializing the window position	V1.10.001
VOLVO	C90	2011	Supplemental restraint system module (SRS)	Erase codes		V1.10.001
VOLVO	C90	2011	Supplemental restraint system module (SRS)	Freeze frame		V1.10.001
VOLVO	C90	2011	Supplemental restraint system module (SRS)	Special functions	Initializing the window position	V1.10.001
VOLVO	C90	2011	Information control module (ICM)	ECU identification		V1.10.001
VOLVO	C90	2011	Information control module (ICM)	Read codes		V1.10.001
VOLVO	C90	2011	Information control module (ICM)	Erase codes		V1.10.001
VOLVO	C90	2011	Information control module (ICM)	Freeze frame		V1.10.001
VOLVO	C90	2011	Information control module (ICM)	Special functions	Programming the information control module (ICM)	V1.10.001
VOLVO	C90	2011	Information control module (ICM)	Special functions	Programming other settings	V1.10.001
VOLVO	C90	2011	Information control module (ICM)	Special functions	Programming the clock	V1.10.001
VOLVO	C90	2011	Driver door module (DDM)	ECU identification		V1.10.001
VOLVO	C90	2011	Driver door module (DDM)	Read codes		V1.10.001
VOLVO	C90	2011	Driver door module (DDM)	Erase codes		V1.10.001
VOLVO	C90	2011	Driver door module (DDM)	Freeze frame		V1.10.001
VOLVO	C90	2011	Driver door module (DDM)	Special functions	Initializing the window position	V1.10.001
VOLVO	C90	2011	Passenger door module (PDM)	ECU identification		V1.10.001
VOLVO	C90	2011	Passenger door module (PDM)	Read codes		V1.10.001
VOLVO	C90	2011	Passenger door module (PDM)	Erase codes		V1.10.001
VOLVO	C90	2011	Passenger door module (PDM)	Freeze frame		V1.10.001
VOLVO	C90	2011	Passenger door module (PDM)	Special functions	Initializing the window position	V1.10.001
VOLVO	C90	2011	Infotainment control module (ICM)	ECU identification		V1.10.001
VOLVO	C90	2011	Infotainment control module (ICM)	Read codes		V1.10.001
VOLVO	C90	2011	Infotainment control module (ICM)	Erase codes		V1.10.001
VOLVO	C90	2011	Infotainment control module (ICM)	Freeze frame		V1.10.001
VOLVO	C90	2011	Infotainment control module (ICM)	Special functions	Programming the infotainment control module (ICM)	V1.10.001
VOLVO	C90	2011	Driver information module (DIM)	ECU identification		V1.10.001
VOLVO	C90	2011	Driver information module (DIM)	Read codes		V1.10.001
VOLVO	C90	2011	Driver information module (DIM)	Erase codes		V1.10.001
VOLVO	C90	2011	Driver information module (DIM)	Freeze frame		V1.10.001
VOLVO	C90	2011	Driver information module (DIM)	Special functions	Programming the driver information module (DIM)	V1.10.001
VOLVO	C90	2011	Driver information module (DIM)	Special functions	Programming the clock	V1.10.001
VOLVO	C90	2011	Climate control module (CCM)	ECU identification		V1.10.001
VOLVO	C90	2011	Climate control module (CCM)	Read codes		V1.10.001
VOLVO	C90	2011	Climate control module (CCM)	Erase codes		V1.10.001
VOLVO	C90	2011	Climate control module (CCM)	Freeze frame		V1.10.001
VOLVO	C90	2011	Climate control module (CCM)	Special functions	Identifying components on the LIN network that belong to the climate control system (CCM)	V1.10.001
VOLVO	C90	2011	Climate control module (CCM)	Special functions	Programming the seat temperature	V1.10.001
VOLVO	C90	2011	Climate control module (CCM)	Special functions	Calibrating the climate control module (CCM)	V1.10.001
VOLVO	C90	2011	Climate control module (CCM)	Special functions	Reading out electronic damper motor, actual/preset range and tolerance limit	V1.10.001
VOLVO	C90	2011	Keyless vehicle module (KVM)	Read codes	Initiation of the TCS switch by the tunnel console	V1.10.001
VOLVO	C90	2011	Keyless vehicle module (KVM)	Erase codes		V1.10.001
VOLVO	C90	2011	Keyless vehicle module (KVM)	Freeze frame		V1.10.001
VOLVO	C90	2011	Keyless vehicle module (KVM)	Special functions	Reading out of the number of programmed remote keys.	V1.10.001
VOLVO	C90	2011	Keyless vehicle module (KVM)	Special functions	Read-out of part number and serial number, Remote Keyless Entry (RKE)	V1.10.001
VOLVO	C90	2011	Accessory electronic module (AEM)	ECU identification		V1.10.001
VOLVO	C90	2011	Accessory electronic module (AEM)	Read codes		V1.10.001
VOLVO	C90	2011	Accessory electronic module (AEM)	Erase codes		V1.10.001
VOLVO	C90	2011	Accessory electronic module (AEM)	Freeze frame		V1.10.001
VOLVO	C90	2011	Accessory electronic module (AEM)	Special functions	Activation	V1.10.001
VOLVO	C90	2011	Parking assistance module (PAM)	ECU identification		V1.10.001
VOLVO	C90	2011	Parking assistance module (PAM)	Read codes		V1.10.001
VOLVO	C90	2011	Parking assistance module (PAM)	Erase codes		V1.10.001
VOLVO	C90	2011	Parking assistance module (PAM)	Freeze frame		V1.10.001
VOLVO	C90	2011	Parking assistance module (PAM)	Special functions	Programming remote control setting	V1.10.001
VOLVO	C90	2011	Audio module (AUD)	ECU identification		V1.10.001
VOLVO	C90	2011	Audio module (AUD)	Read codes		V1.10.001
VOLVO	C90	2011	Audio module (AUD)	Erase codes		V1.10.001
VOLVO	C90	2011	Audio module (AUD)	Freeze frame		V1.10.001
VOLVO	C90	2011	Power seat module, left (PSL)	ECU identification		V1.10.001
VOLVO	C90	2011	Power seat module, left (PSL)	Read codes		V1.10.001
VOLVO	C90	2011	Power seat module, left (PSL)	Erase codes		V1.10.001
VOLVO	C90	2011	Power seat module, left (PSL)	Freeze frame		V1.10.001
VOLVO	C90	2011	Power seat module, left (PSL)	Special functions	Activating	V1.10.001
VOLVO	C90	2011	Power seat module, right (PSR)	ECU identification		V1.10.001
VOLVO	C90	2011	Power seat module, right (PSR)	Read codes		V1.10.001
VOLVO	C90	2011	Power seat module, right (PSR)	Erase codes		V1.10.001
VOLVO	C90	2011	Power seat module, right (PSR)	Freeze frame		V1.10.001
VOLVO	C90	2011	Power seat module, right (PSR)	Special functions	Activating	V1.10.001
VOLVO	C90	2011	Power seat module, left (PSL)	ECU identification		V1.10.001
VOLVO	C90	2011	Power seat module, left (PSL)	Read codes		V1.10.001
VOLVO	C90	2011	Power seat module, left (PSL)	Erase codes		

VOLVO	C70 (06-)	2007	Driver door module (DDM)	Erase codes		V1.10.001
VOLVO	C70 (06-)	2007	Driver door module (DDM)	Freeze frame		V1.10.001
VOLVO	C70 (06-)	2007	Driver door module (DDM)	Active test		V1.10.001
VOLVO	C70 (06-)	2007	Driver door module (DDM)	Special functions		V1.10.001
VOLVO	C70 (06-)	2007	Pasenger door module (PDM)	ECU identification	Initializing the window position	V1.10.001
VOLVO	C70 (06-)	2007	Pasenger door module (PDM)	Read codes		V1.10.001
VOLVO	C70 (06-)	2007	Pasenger door module (PDM)	Erase codes		V1.10.001
VOLVO	C70 (06-)	2007	Pasenger door module (PDM)	Freeze frame		V1.10.001
VOLVO	C70 (06-)	2007	Pasenger door module (PDM)	Activation		V1.10.001
VOLVO	C70 (06-)	2007	Pasenger door module (PDM)	Special functions		V1.10.001
VOLVO	C70 (06-)	2007	Infotainment control module (ICM)	ECU identification	Initializing the window position	V1.10.001
VOLVO	C70 (06-)	2007	Infotainment control module (ICM)	Read codes		V1.10.001
VOLVO	C70 (06-)	2007	Infotainment control module (ICM)	Erase codes		V1.10.001
VOLVO	C70 (06-)	2007	Infotainment control module (ICM)	Freeze frame		V1.10.001
VOLVO	C70 (06-)	2007	Infotainment control module (ICM)	Special functions		V1.10.001
VOLVO	C70 (06-)	2007	Infotainment control module (ICM)	ECU identification	Programming the infotainment control module (ICM)	V1.10.001
VOLVO	C70 (06-)	2007	Supplemental restraint system module (SRS)	ECU identification	Programming other settlinges.	V1.10.001
VOLVO	C70 (06-)	2007	Supplemental restraint system module (SRS)	Read codes		V1.10.001
VOLVO	C70 (06-)	2007	Supplemental restraint system module (SRS)	Erase codes		V1.10.001
VOLVO	C70 (06-)	2007	Supplemental restraint system module (SRS)	Freeze frame		V1.10.001
VOLVO	C70 (06-)	2007	Supplemental restraint system module (SRS)	Special functions		V1.10.001
VOLVO	C70 (06-)	2007	Climate control module (CCM)	ECU identification	Resetting crash mode	V1.10.001
VOLVO	C70 (06-)	2007	Climate control module (CCM)	Read codes		V1.10.001
VOLVO	C70 (06-)	2007	Climate control module (CCM)	Erase codes		V1.10.001
VOLVO	C70 (06-)	2007	Climate control module (CCM)	Freeze frame		V1.10.001
VOLVO	C70 (06-)	2007	Climate control module (CCM)	Special functions		V1.10.001
VOLVO	C70 (06-)	2007	Climate control module (CCM)	ECU identification	Identifying components on the LIN network that belong to the climate control system (CCM)	V1.10.001
VOLVO	C70 (06-)	2007	Climate control module (CCM)	Read codes	Programmimg the seat temperature	V1.10.001
VOLVO	C70 (06-)	2007	Climate control module (CCM)	Erase codes	Calibrating the climate control module (CCM)	V1.10.001
VOLVO	C70 (06-)	2007	Climate control module (CCM)	Freeze frame	Read-out detected/exected control modules/sensors	V1.10.001
VOLVO	C70 (06-)	2007	Climate control module (CCM)	Special functions	Read-out electronic damper motor, actual/preset range and tolerance limit	V1.10.001
VOLVO	C70 (06-)	2007	Driver information module (DIM)	ECU identification		V1.10.001
VOLVO	C70 (06-)	2007	Driver information module (DIM)	Read codes		V1.10.001
VOLVO	C70 (06-)	2007	Driver information module (DIM)	Erase codes		V1.10.001
VOLVO	C70 (06-)	2007	Driver information module (DIM)	Freeze frame		V1.10.001
VOLVO	C70 (06-)	2007	Driver information module (DIM)	Activation		V1.10.001
VOLVO	C70 (06-)	2007	Driver information module (DIM)	Special functions		V1.10.001
VOLVO	C70 (06-)	2007	Driver information module (DIM)	ECU identification	Resetting the service reminder indicator (SRI)	V1.10.001
VOLVO	C70 (06-)	2007	Driver information module (DIM)	Read codes	Reading an indicator and lamps in the driver information module (DIM)	V1.10.001
VOLVO	C70 (06-)	2007	Driver information module (DIM)	Erase codes	Indicates programmed values	V1.10.001
VOLVO	C70 (06-)	2007	Driver information module (DIM)	Freeze frame	Display of DTC/ESC message	V1.10.001
VOLVO	C70 (06-)	2007	Driver information module (DIM)	Special functions	Programming the driver information module (DIM)	V1.10.001
VOLVO	C70 (06-)	2007	Keyless vehicle module (KVM)	ECU identification		V1.10.001
VOLVO	C70 (06-)	2007	Keyless vehicle module (KVM)	Read codes		V1.10.001
VOLVO	C70 (06-)	2007	Keyless vehicle module (KVM)	Erase codes		V1.10.001
VOLVO	C70 (06-)	2007	Keyless vehicle module (KVM)	Freeze frame		V1.10.001
VOLVO	C70 (06-)	2007	Keyless vehicle module (KVM)	Activation		V1.10.001
VOLVO	C70 (06-)	2007	Keyless vehicle module (KVM)	Special functions		V1.10.001
VOLVO	C70 (06-)	2007	Keyless vehicle module (KVM)	ECU identification	Programmed value	V1.10.001
VOLVO	C70 (06-)	2007	Keyless vehicle module (KVM)	Read codes	ECU identification	V1.10.001
VOLVO	C70 (06-)	2007	Global positioning system module (GPS)	ECU identification	Read-out of the number of programmed remote keys.	V1.10.001
VOLVO	C70 (06-)	2007	Global positioning system module (GPS)	Read codes		V1.10.001
VOLVO	C70 (06-)	2007	Global positioning system module (GPS)	Erase codes		V1.10.001
VOLVO	C70 (06-)	2007	Global positioning system module (GPS)	Freeze frame		V1.10.001
VOLVO	C70 (06-)	2007	Traffic message channel module (TMC)	ECU identification		V1.10.001
VOLVO	C70 (06-)	2007	Traffic message channel module (TMC)	Read codes		V1.10.001
VOLVO	C70 (06-)	2007	Traffic message channel module (TMC)	Erase codes		V1.10.001
VOLVO	C70 (06-)	2007	Traffic message channel module (TMC)	Freeze frame		V1.10.001
VOLVO	C70 (06-)	2007	Steering wheel module (SWM)	ECU identification		V1.10.001
VOLVO	C70 (06-)	2007	Steering wheel module (SWM)	Read codes		V1.10.001
VOLVO	C70 (06-)	2007	Steering wheel module (SWM)	Erase codes		V1.10.001
VOLVO	C70 (06-)	2007	Steering wheel module (SWM)	Freeze frame		V1.10.001
VOLVO	C70 (06-)	2007	Accessory electronic module (AEM)	ECU identification		V1.10.001
VOLVO	C70 (06-)	2007	Accessory electronic module (AEM)	Read codes		V1.10.001
VOLVO	C70 (06-)	2007	Accessory electronic module (AEM)	Erase codes		V1.10.001
VOLVO	C70 (06-)	2007	Accessory electronic module (AEM)	Freeze frame		V1.10.001
VOLVO	C70 (06-)	2007	Accessory electronic module (AEM)	Activation		V1.10.001
VOLVO	C70 (06-)	2007	Accessory electronic module (AEM)	Special functions		V1.10.001
VOLVO	C70 (06-)	2007	Phone module (PHM)	ECU identification	Reading off the configuration	V1.10.001
VOLVO	C70 (06-)	2007	Phone module (PHM)	Read codes		V1.10.001
VOLVO	C70 (06-)	2007	Phone module (PHM)	Erase codes		V1.10.001
VOLVO	C70 (06-)	2007	Phone module (PHM)	Freeze frame		V1.10.001
VOLVO	C70 (06-)	2007	Trailer module (TRM)	ECU identification		V1.10.001
VOLVO	C70 (06-)	2007	Trailer module (TRM)	Read codes		V1.10.001
VOLVO	C70 (06-)	2007	Trailer module (TRM)	Erase codes		V1.10.001
VOLVO	C70 (06-)	2007	Trailer module (TRM)	Freeze frame		V1.10.001
VOLVO	C70 (06-)	2007	Multimedia module (MMM)	ECU identification	Reinstalling the reserve battery	V1.10.001
VOLVO	C70 (06-)	2007	Multimedia module (MMM)	Read codes		V1.10.001
VOLVO	C70 (06-)	2007	Multimedia module (MMM)	Erase codes		V1.10.001
VOLVO	C70 (06-)	2007	Multimedia module (MMM)	Freeze frame		V1.10.001
VOLVO	C70 (06-)	2007	Subwoofer module (SUB)	ECU identification		V1.10.001
VOLVO	C70 (06-)	2007	Subwoofer module (SUB)	Read codes		V1.10.001
VOLVO	C70 (06-)	2007	Subwoofer module (SUB)	Erase codes		V1.10.001
VOLVO	C70 (06-)	2007	Subwoofer module (SUB)	Freeze frame		V1.10.001
VOLVO	C70 (06-)	2007	Electrical power steering module (EPS)	ECU identification		V1.10.001
VOLVO	C70 (06-)	2007	Electrical power steering module (EPS)	Read codes		V1.10.001
VOLVO	C70 (06-)	2007	Electrical power steering module (EPS)	Erase codes		V1.10.001
VOLVO	C70 (06-)	2007	Electrical power steering module (EPS)	Freeze frame		V1.10.001
VOLVO	C70 (06-)	2007	Parking assistance module (PAM)	ECU identification		V1.10.001
VOLVO	C70 (06-)	2007	Parking assistance module (PAM)	Read codes		V1.10.001
VOLVO	C70 (06-)	2007	Parking assistance module (PAM)	Erase codes		V1.10.001
VOLVO	C70 (06-)	2007	Parking assistance module (PAM)	Freeze frame		V1.10.001
VOLVO	C70 (06-)	2007	Audio module (AUDI)	ECU identification		V1.10.001
VOLVO	C70 (06-)	2007	Audio module (AUDI)	Read codes		V1.10.001
VOLVO	C70 (06-)	2007	Audio module (AUDI)	Erase codes		V1.10.001
VOLVO	C70 (06-)	2007	Power seat module, left (PSL)	ECU identification		V1.10.001
VOLVO	C70 (06-)	2007	Power seat module, left (PSL)	Read codes		V1.10.001
VOLVO	C70 (06-)	2007	Power seat module, left (PSL)	Erase codes		V1.10.001
VOLVO	C70 (06-)	2007	Power seat module, left (PSL)	Freeze frame		V1.10.001
VOLVO	C70 (06-)	2007	Power seat module, left (PSL)	Activation		V1.10.001
VOLVO	C70 (06-)	2007	Power seat module, left (PSL)	Special functions		V1.10.001
VOLVO	C70 (06-)	2007	Power seat module, left (PSL)	ECU identification	Programming remote control setting	V1.10.001
VOLVO	C70 (06-)	2007	Power seat module, right (PSR)	ECU identification	Initializing the front seat position	V1.10.001
VOLVO	C70 (06-)	2007	Power seat module, right (PSR)	Read codes	Activation	V1.10.001
VOLVO	C70 (06-)	2007	Power seat module, right (PSR)	Erase codes		V1.10.001
VOLVO	C70 (06-)	2007	Power seat module, right (PSR)	Freeze frame		V1.10.001
VOLVO	C70 (06-)	2007	Power seat module, right (PSR)	Activation		V1.10.001
VOLVO	C70 (06-)	2007	Power seat module, right (PSR)	Special functions		V1.10.001
VOLVO	C70 (06-)	2007	Power seat module, right (PSR)	ECU identification	Programming remote control setting	V1.10.001
VOLVO	C70 (06-)	2007	Remote digital audio receiver (RDR)	ECU identification	Initializing the front seat position	V1.10.001
VOLVO	C70 (06-)	2007	Remote digital audio receiver (RDR)	Read codes	Activation	V1.10.001
VOLVO	C70 (06-)	2007	Remote digital audio receiver (RDR)	Erase codes		V1.10.001
VOLVO	C70 (06-)	2007	Integrated audio module (IAM)	ECU identification		V1.10.001
VOLVO	C70 (06-)	2007	Integrated audio module (IAM)	Read codes		V1.10.001
VOLVO	C70 (06-)	2007	Integrated audio module (IAM)	Erase codes		V1.10.001
VOLVO	C70 (06-)	2007	Integrated audio module (IAM)	Freeze frame		V1.10.001
VOLVO	C70 (06-)	2007	Combustion preheater module (CPM)	ECU identification		V1.10.001
VOLVO	C70 (06-)	2007	Combustion preheater module (CPM)	Read codes		V1.10.001
VOLVO	C70 (06-)	2007	Combustion preheater module (CPM)	Erase codes		V1.10.001
VOLVO	C70 (06-)	2007	Combustion preheater module (CPM)	Freeze frame		V1.10.001
VOLVO	C70 (06-)	2007	Convertible roof module (CRM)	ECU identification		V1.10.001
VOLVO	C70 (06-)	2007	Convertible roof module (CRM)	Read codes		V1.10.001
VOLVO	C70 (06-)	2007	Convertible roof module (CRM)	Erase codes		V1.10.001
VOLVO	C70 (06-)	2007	Convertible roof module (CRM)	Freeze frame		V1.10.001
VOLVO	C70 (06-)	2007	Engine control module (ECM)	ECU identification		V1.10.001
VOLVO	C70 (06-)	2007	Engine control module (ECM)	Read codes		V1.10.001
VOLVO	C70 (06-)	2007	Engine control module (ECM)	Erase codes		V1.10.001
VOLVO	C70 (06-)	2007	Engine control module (ECM)	Freeze frame		V1.10.001
VOLVO	C70 (06-)	2007	Engine control module (ECM)	Activation		V1.10.001
VOLVO	C70 (06-)	2007	Engine control module (ECM)	Special functions		V1.10.001
VOLVO	C70 (06-)	2007	Engine control module (ECM)	ECU identification	Finding the predefined service position	V1.10.001
VOLVO	C70 (06-)	2007	Engine control module (ECM)	Read codes	Unlocking catches	V1.10.001
VOLVO	C70 (06-)	2007	Engine control module (ECM)	Erase codes	Calibration of position sensor	V1.10.001
VOLVO	C70 (06-)	2007	Engine control module (ECM)	Freeze frame	Locking off diagnostic data	V1.10.001
VOLVO	C70 (06-)	2007	Engine control module (ECM)	Activation	Adjustation of the throttle unit	V1.10.001
VOLVO	C70 (06-)	2007	Engine control module (ECM)	Special functions	Quick test of fuel tank system (USA/CDN)	V1.10.001
VOLVO	C70 (06-)	2007	Engine control module (ECM)	ECU identification	Quick test of the fuel pump (FF)	V1.10.001
VOLVO	C70 (06-)	2007	Engine control module (ECM)	Read codes	Text/movement of the clutch control, intake	V1.10.001
VOLVO	C70 (06-)	2007	Engine control module (ECM)	Erase codes	Text/movement of caschafit control, exhaust	V1.10.001
VOLVO	C70 (06-)	2007	Engine control module (ECM)	Freeze frame	Adjustation of the throttle module	V1.10.001
VOLVO	C70 (06-)	2007	Engine control module (ECM)	Activation	Adjustation of the air flow meter	V1.10.001
VOLVO	C70 (06-)	2007	Engine control module (ECM)	Special functions	Adjustation of the turbo control motor	V1.10.001
VOLVO	C70 (06-)	2007	Engine control module (ECM)	ECU identification	Adjustation of heated oxygen sensor	V1.10.001
VOLVO	C70 (06-)	2007	Engine control module (ECM)	Read codes	Adjustation of mass airflow sensor	V1.10.001
VOLVO	C70 (06-)	2007	Engine control module (ECM)	Erase codes	Adjustation of mass airflow sensor particle filter	V1.10.001
VOLVO	C70 (06-)	2007	Engine control module (ECM)	Freeze frame	Resetting counter particle filter	V1.10.001
VOLVO	C70 (06-)	2007	Engine control module (ECM)	Activation	Checking injectors	V1.10.001
VOLVO	C70 (06-)	2007	Engine control module (ECM)	Special functions	Checking the oil level	V1.10.001
VOLVO	C70 (06-)	2007	Engine control module (ECM)	ECU identification	Adjusting calculated oil level	V1.10.001
VOLVO	C70 (06-)	2008	Transmission control module (TCM)	ECU identification		V1.10.001
VOLVO	C70 (06-)	2008	Transmission control module (TCM)	Read codes		V1.10.001
VOLVO	C70 (06-)	2008	Transmission control module (TCM)	Erase codes		V1.10.001
VOLVO	C70 (06-)	2008	Transmission control module (TCM)	Freeze frame		V1.10.001
VOLVO	C70 (06-)	2008	Transmission control module (TCM)	Activation		V1.10.001
VOLVO	C70 (06-)	2008	Transmission control module (TCM)	Special functions		V1.10.001
VOLVO	C70 (06-)	2008	Central electronic module (CEM)	ECU identification	Activating components and functions	V1.10.001
VOLVO	C70 (06-)	2008	Central electronic module (CEM)	Read codes	Reseting adaption	V1.10.001
VOLVO	C70 (06-)	2008	Central electronic module (CEM)	Erase codes	Reseting the transmission fluid channel counter	V1.10.001

VOLVO	C70 (06-)	2008	Brake control module (BCM)	Erase codes		
			Brake control module (BCM)	Freeze frame		
			Brake control module (BCM)	Special functions		
			Brake control module (BCM)	Specifications		
			Brake control module (BCM)	Special functions		
		2008	Driver door module (DDM)	ECU identification	Acknowledging components and functions	
			Driver door module (DDM)	Read codes	Calibration (car with DTC)	
			Driver door module (DDM)	Erase codes	Reading off the configuration	
			Driver door module (DDM)	Freeze frame		
			Driver door module (DDM)	Active test	Initializing the window position	
			Driver door module (DDM)	Special functions		
		2008	Passenger door module (PDM)	ECU identification		
			Passenger door module (PDM)	Read codes		
			Passenger door module (PDM)	Erase codes		
			Passenger door module (PDM)	Freeze frame		
			Passenger door module (PDM)	Active test	Initializing the window position	
			Passenger door module (PDM)	Specifications		
		2008	Supplemental restraint system module (SRS)	ECU identification		
			Supplemental restraint system module (SRS)	Read codes		
			Supplemental restraint system module (SRS)	Erase codes		
			Supplemental restraint system module (SRS)	Freeze frame		
			Supplemental restraint system module (SRS)	Special functions		
		2008	Climate control module (CCM)	ECU identification	Resetting crash mode	
			Climate control module (CCM)	Read codes		
			Climate control module (CCM)	Erase codes		
			Climate control module (CCM)	Freeze frame		
			Climate control module (CCM)	Special functions		
			Climate control module (CCM)	Specifications		
		2008	Climate control module (CCM)	Special functions		
			Climate control module (CCM)	ECU identification	Identifying components on the LIN network that belong to the climate control system (CCM)	
			Climate control module (CCM)	Read codes	Preprogrammable set temperature	
			Climate control module (CCM)	Erase codes	Calibrating the climate control module (CCM)	
			Climate control module (CCM)	Freeze frame	Reading out detected/expected control modules/sensors	
			Climate control module (CCM)	Active test	Reading out electronic damper motor, actual/ preset range and tolerance limit	
			Climate control module (CCM)	Special functions		
		2008	Driver information module (DIM)	ECU identification		
			Driver information module (DIM)	Read codes		
			Driver information module (DIM)	Erase codes		
			Driver information module (DIM)	Freeze frame		
			Driver information module (DIM)	Active test		
			Driver information module (DIM)	Special functions		
		2008	Driver information module (DIM)	Specifications		
			Driver information module (DIM)	Special functions		
			Driver information module (DIM)	ECU identification	Identifying components on the LIN network that belong to the driver information module (DIM)	
			Driver information module (DIM)	Read codes	Testing all indicators and lamps in the driver information module (DIM)	
			Driver information module (DIM)	Erase codes	Indicates programmed values	
			Driver information module (DIM)	Freeze frame	Display of DST/ES/ESC message	
			Driver information module (DIM)	Active test	Preprogrammable driver information module (DIM)	
			Driver information module (DIM)	Specifications		
		2008	Driver information module (DIM)	Special functions		
			Driver information module (DIM)	ECU identification	Programming seatbelt reminder in backseat	
			Driver information module (DIM)	Read codes	Programming seatbelt reminder in front seat	
			Driver information module (DIM)	Erase codes		
		2008	Infotainment control module (ICM)	ECU identification		
			Infotainment control module (ICM)	Read codes		
			Infotainment control module (ICM)	Erase codes		
			Infotainment control module (ICM)	Freeze frame		
			Infotainment control module (ICM)	Special functions		
		2008	Infotainment control module (ICM)	Specifications		
			Infotainment control module (ICM)	Special functions		
			Infotainment control module (ICM)	ECU identification	Identifying components on the LIN network that belong to the infotainment control module (ICM)	
			Infotainment control module (ICM)	Read codes	Programming other settings	
			Infotainment control module (ICM)	Erase codes	Programming the clock	
		2008	Keyless vehicle module (KVM)	ECU identification		
			Keyless vehicle module (KVM)	Read codes		
			Keyless vehicle module (KVM)	Erase codes		
			Keyless vehicle module (KVM)	Freeze frame		
			Keyless vehicle module (KVM)	Active test		
			Keyless vehicle module (KVM)	Programmed values		
		2008	Keyless vehicle module (KVM)	Special functions		
			Keyless vehicle module (KVM)	ECU identification	Read out of the number of programmed remote keys	
			Keyless vehicle module (KVM)	Read codes	Read-out of part number and serial number, Remote Keyless Entry (RKE)	
			Keyless vehicle module (KVM)	Erase codes		
		2008	Accessory electronic module (AEM)	ECU identification		
			Accessory electronic module (AEM)	Read codes		
			Accessory electronic module (AEM)	Erase codes		
			Accessory electronic module (AEM)	Freeze frame		
			Accessory electronic module (AEM)	Active test		
			Accessory electronic module (AEM)	Specifications		
		2008	Accessory electronic module (AEM)	ECU identification		
			Accessory electronic module (AEM)	Read codes		
			Accessory electronic module (AEM)	Erase codes		
			Accessory electronic module (AEM)	Freeze frame		
			Accessory electronic module (AEM)	Active test		
		2008	Audio module (AUDI)	ECU identification		
			Audio module (AUDI)	Read codes		
			Audio module (AUDI)	Erase codes		
			Audio module (AUDI)	Freeze frame		
			Audio module (AUDI)	Active test		
			Audio module (AUDI)	Programmed values		
		2008	Power seat module, left (PSL)	ECU identification		
			Power seat module, left (PSL)	Read codes		
			Power seat module, left (PSL)	Erase codes		
			Power seat module, left (PSL)	Freeze frame		
			Power seat module, left (PSL)	Active test		
			Power seat module, left (PSL)	Programmed values		
		2008	Power seat module, right (PSR)	ECU identification		
			Power seat module, right (PSR)	Read codes		
			Power seat module, right (PSR)	Erase codes		
			Power seat module, right (PSR)	Freeze frame		
			Power seat module, right (PSR)	Active test		
			Power seat module, right (PSR)	Programmed values		
		2008	Power seat module, right (PSR)	Special functions		
			Power seat module, right (PSR)	ECU identification		
			Power seat module, right (PSR)	Read codes		
			Power seat module, right (PSR)	Erase codes		
			Power seat module, right (PSR)	Freeze frame		
			Power seat module, right (PSR)	Active test		
			Power seat module, right (PSR)	Programmed values		
		2008	Accessory USB unit (AUU)	ECU identification		
			Accessory USB unit (AUU)	Read codes		
			Accessory USB unit (AUU)	Erase codes		
			Accessory USB unit (AUU)	Freeze frame		
			Accessory USB unit (AUU)	Active test		
			Accessory USB unit (AUU)	Programmed values		
		2008	Trailer module (TRAM)	ECU identification		
			Trailer module (TRAM)	Read codes		
			Trailer module (TRAM)	Erase codes		
			Trailer module (TRAM)	Freeze frame		
			Trailer module (TRAM)	Active test		
			Trailer module (TRAM)	Programmed values		
		2008	Steering wheel module (SWM)	ECU identification		
			Steering wheel module (SWM)	Read codes		
			Steering wheel module (SWM)	Erase codes		
			Steering wheel module (SWM)	Freeze frame		
			Steering wheel module (SWM)	Active test		
			Steering wheel module (SWM)	Programmed values		
		2008	Integrated audio module (IAM)	ECU identification		
			Integrated audio module (IAM)	Read codes		
			Integrated audio module (IAM)	Erase codes		
			Integrated audio module (IAM)	Freeze frame		
			Integrated audio module (IAM)	Active test		
			Integrated audio module (IAM)	Programmed values		
		2008	Integrated audio module (IAM)	ECU identification		
			Integrated audio module (IAM)	Read codes		
			Integrated audio module (IAM)	Erase codes		
			Integrated audio module (IAM)	Freeze frame		
			Integrated audio module (IAM)	Active test		
			Integrated audio module (IAM)	Programmed values		
		2008	Subwoofer module (SUB)	ECU identification		
			Subwoofer module (SUB)	Read codes		
			Subwoofer module (SUB)	Erase codes		
			Subwoofer module (SUB)	Freeze frame		
			Subwoofer module (SUB)	Active test		
			Subwoofer module (SUB)	Programmed values		
		2008	Phone module (PHM)	ECU identification		
			Phone module (PHM)	Read codes		
			Phone module (PHM)	Erase codes		
			Phone module (PHM)	Freeze frame		
			Phone module (PHM)	Active test		
			Phone module (PHM)	Programmed values		
		2008	Remote digital audio receiver (RDAR)	ECU identification		
			Remote digital audio receiver (RDAR)	Read codes		
			Remote digital audio receiver (RDAR)	Erase codes		
			Remote digital audio receiver (RDAR)	Freeze frame		
			Remote digital audio receiver (RDAR)	Active test		
			Remote digital audio receiver (RDAR)	Programmed values		
		2008	Multimedia module (MMM)	ECU identification		
			Multimedia module (MMM)	Read codes		
			Multimedia module (MMM)	Erase codes		
			Multimedia module (MMM)	Freeze frame		
			Multimedia module (MMM)	Active test		
			Multimedia module (MMM)	Programmed values		
		2008	Combustion preheater module (CPM)	ECU identification		
			Combustion preheater module (CPM)	Read codes		
			Combustion preheater module (CPM)	Erase codes		
			Combustion preheater module (CPM)	Freeze frame		
			Combustion preheater module (CPM)	Active test		
			Combustion preheater module (CPM)	Programmed values		
		2008	Convertible roof module (CRM)	ECU identification		
			Convertible roof module (CRM)	Read codes		
			Convertible roof module (CRM)	Erase codes		
			Convertible roof module (CRM)	Freeze frame		
			Convertible roof module (CRM)	Active test		
			Convertible roof module (CRM)	Programmed values		
		2008	Engine control module (ECM)	ECU identification		
			Engine control module (ECM)	Read codes		
			Engine control module (ECM)	Erase codes		
			Engine control module (ECM)	Freeze frame		
			Engine control module (ECM)	Active test		
			Engine control module (ECM)	Programmed values		
		2008	Additive dosing module (ADM)	ECU identification		
			Additive dosing module (ADM)	Read codes		
			Additive dosing module (ADM)	Erase codes		
			Additive dosing module (ADM)	Freeze frame		
			Additive dosing module (ADM)	Active test		
			Additive dosing module (ADM)	Programmed values		
		2008	Combustion preheater module (CPM)	ECU identification		
			Combustion preheater module (CPM)	Read codes		
			Combustion preheater module (CPM)	Erase codes		
			Combustion preheater module (CPM)	Freeze frame		
			Combustion preheater module (CPM)	Active test		
			Combustion preheater module (CPM)	Programmed values		
		2008	Engine control module (ECM)	ECU identification		
			Engine control module (ECM)	Read codes		
			Engine control module (ECM)	Erase codes		
			Engine control module (ECM)	Freeze frame		
			Engine control module (ECM)	Active test		
			Engine control module (ECM)	Programmed values		
		2008	Engine control module (ECM)	ECU identification		
			Engine control module (ECM)	Read codes		
			Engine control module (ECM)	Erase codes		
			Engine control module (ECM)	Freeze frame		
			Engine control module (ECM)	Active test		
			Engine control module (ECM)	Programmed values		
		2008	Engine control module (ECM)	ECU identification		
			Engine control module (ECM)	Read codes		
			Engine control module (ECM)	Erase codes		
			Engine control module (ECM)	Freeze frame		
			Engine control module (ECM)	Active test		
			Engine control module (ECM)	Programmed values		
		2008	Transmission control module (TCM)	ECU identification		
			Transmission control module (TCM)	Read codes		
			Transmission control module (TCM)	Erase codes		
			Transmission control module (TCM)	Freeze frame		
			Transmission control module (TCM)	Active test		
			Transmission control module (TCM)	Programmed values		
		2008	Transmission control module (TCM)	ECU identification		
			Transmission control module (TCM)	Read codes		
			Transmission control module (TCM)	Erase codes		
			Transmission control module (TCM)	Freeze frame		
			Transmission control module (TCM)	Active test		
			Transmission control module (TCM)	Programmed values		
		2008	Central electronic module (CEM)	ECU identification		
			Central electronic module (CEM)	Read codes		
			Central electronic module (CEM)	Erase codes		
			Central electronic module (CEM)	Freeze frame		
			Central electronic module (CEM)	Active test		
			Central electronic module (CEM)	Programmed values		
		2008	Fuel pump (FP)	ECU identification		
			Fuel pump (FP)	Read codes		
			Fuel pump (FP)	Erase codes		
			Fuel pump (FP)	Freeze frame		
			Fuel pump (FP)	Active test		
			Fuel pump (FP)	Programmed values		
		2008	Readiness diagnosis	ECU identification		
			Readiness diagnosis	Read codes		
			Readiness diagnosis	Erase codes		
			Readiness diagnosis	Freeze frame		
			Readiness diagnosis	Active test		
			Readiness diagnosis	Programmed values		
		2008	Resetting adaptation	ECU identification		
			Resetting adaptation	Read codes		
			Resetting adaptation	Erase codes		
			Resetting adaptation	Freeze frame		
			Resetting adaptation	Active test		
			Resetting adaptation	Programmed values		
		2008	Resetting the transmission fluid change counter	ECU identification		
			Resetting the transmission fluid change counter	Read codes		
			Resetting the transmission fluid change counter	Erase codes		
			Resetting the transmission fluid change counter	Freeze frame		
			Resetting the transmission fluid change counter	Active test		
			Resetting the transmission fluid change counter	Programmed values		
		2008	Calibration of position sensor	ECU identification		
			Calibration of position sensor	Read codes		
			Calibration of position sensor	Erase codes		
			Calibration of position sensor	Freeze frame		
			Calibration of position sensor	Active test		
			Calibration of position sensor	Programmed values		
		2008	Activating TEST MODE	ECU identification		
			Activating TEST MODE	Read codes		
			Activating TEST MODE	Erase codes		
			Activating TEST MODE	Freeze frame		
			Activating TEST MODE	Active test		
			Activating TEST MODE	Programmed values		
		2008	Activating gear indicator	ECU identification		
			Activating gear indicator	Read codes		
			Activating gear indicator	Erase codes		
			Activating gear indicator	Freeze frame		
			Activating gear indicator	Active test		
			Activating gear indicator	Programmed values		
		2008	Control module saturation	ECU identification		
			Control module saturation	Read codes		
			Control module saturation	Erase codes		

VOLVO	C70 (06-)	2009	Engine control module (ECM)	Special functions	Checkline injectors	V1.10.001
VOLVO	C70 (06-)	2009	Engine control module (ECM)	Special functions	Checkline oil level	V1.10.001
VOLVO	C70 (06-)	2009	Engine control module (ECM)	Special functions	Adjusting calculated oil level	V1.10.001
VOLVO	C70 (06-)	2010	Engine control module (ECM)	ECU identification		V1.10.001
VOLVO	C70 (06-)	2010	Engine control module (ECM)	Read codes		V1.10.001
VOLVO	C70 (06-)	2010	Engine control module (ECM)	Erase codes		V1.10.001
VOLVO	C70 (06-)	2010	Engine control module (ECM)	Freeze frame		V1.10.001
VOLVO	C70 (06-)	2010	Engine control module (ECM)	Active test		V1.10.001
VOLVO	C70 (06-)	2010	Engine control module (ECM)	Special functions		V1.10.001
VOLVO	C70 (06-)	2010	Engine control module (ECM)	Special functions	Technical fault tracing (PFP)	V1.10.001
VOLVO	C70 (06-)	2010	Engine control module (ECM)	Special functions	Readiness code (USA/CA/US)	V1.10.001
VOLVO	C70 (06-)	2010	Engine control module (ECM)	Special functions	UIMPR read out (USA/CA/US)	V1.10.001
VOLVO	C70 (06-)	2010	Engine control module (ECM)	Special functions	Resetting the adaptation value	V1.10.001
VOLVO	C70 (06-)	2010	Engine control module (ECM)	Special functions	Extended fault tracing for the diagnostic trouble code (DTC), Engine control module (ECM)	V1.10.001
VOLVO	C70 (06-)	2010	Transmission control module (TCM)	ECU identification	Quick test of the fuel tank system	V1.10.001
VOLVO	C70 (06-)	2010	Transmission control module (TCM)	Read codes		V1.10.001
VOLVO	C70 (06-)	2010	Transmission control module (TCM)	Erase codes		V1.10.001
VOLVO	C70 (06-)	2010	Transmission control module (TCM)	Freeze frame		V1.10.001
VOLVO	C70 (06-)	2010	Transmission control module (TCM)	Active test		V1.10.001
VOLVO	C70 (06-)	2010	Transmission control module (TCM)	Special functions	Activating components and functions	V1.10.001
VOLVO	C70 (06-)	2010	Transmission control module (TCM)	Special functions	Resetting adaptation	V1.10.001
VOLVO	C70 (06-)	2010	Transmission control module (TCM)	Special functions	Resetting the transmission fluid change counter	V1.10.001
VOLVO	C70 (06-)	2010	Transmission control module (TCM)	Special functions	Calibrating position sensor	V1.10.001
VOLVO	C70 (06-)	2010	Transmission control module (TCM)	Special functions	Activating TPS	V1.10.001
VOLVO	C70 (06-)	2010	Transmission control module (TCM)	Special functions	Activating gear indication	V1.10.001
VOLVO	C70 (06-)	2010	Central electronic module (CEM)	ECU identification	Control module adaptation	V1.10.001
VOLVO	C70 (06-)	2010	Central electronic module (CEM)	Read codes		V1.10.001
VOLVO	C70 (06-)	2010	Central electronic module (CEM)	Erase codes		V1.10.001
VOLVO	C70 (06-)	2010	Central electronic module (CEM)	Freeze frame		V1.10.001
VOLVO	C70 (06-)	2010	Central electronic module (CEM)	Active test		V1.10.001
VOLVO	C70 (06-)	2010	Central electronic module (CEM)	Special functions	Activating components and functions	V1.10.001
VOLVO	C70 (06-)	2010	Central electronic module (CEM)	Special functions	Resetting the service reminder indicator (SRI)	V1.10.001
VOLVO	C70 (06-)	2010	Central electronic module (CEM)	Special functions	Preventive service for new car	V1.10.001
VOLVO	C70 (06-)	2010	Central electronic module (CEM)	Special functions	Calibrating seat monitor, GDL lamps	V1.10.001
VOLVO	C70 (06-)	2010	Central electronic module (CEM)	Special functions	Reading off the alarm cause	V1.10.001
VOLVO	C70 (06-)	2010	Central electronic module (CEM)	Special functions	Reading off and programming vehicle mode	V1.10.001
VOLVO	C70 (06-)	2010	Central electronic module (CEM)	Special functions	Reseting low voltage counter	V1.10.001
VOLVO	C70 (06-)	2010	Central electronic module (CEM)	Special functions	Activation of alarm function	V1.10.001
VOLVO	C70 (06-)	2010	Central electronic module (CEM)	Special functions	Programming of rear window wiper when reversing	V1.10.001
VOLVO	C70 (06-)	2010	Central electronic module (CEM)	Special functions	Setting clock deviation	V1.10.001
VOLVO	C70 (06-)	2010	Central electronic module (CEM)	Special functions	Resetting	V1.10.001
VOLVO	C70 (06-)	2010	Central electronic module (CEM)	Special functions	Read out of part number for Remote Receiver Module (RRX) and siren (SCM)	V1.10.001
VOLVO	C70 (06-)	2010	Central electronic module (CEM)	Special functions	Programming by passing unlock.	V1.10.001
VOLVO	C70 (06-)	2010	Central electronic module (CEM)	Special functions	Quick test of alternator function	V1.10.001
VOLVO	C70 (06-)	2010	Central electronic module (CEM)	Special functions	Setting day and night mode for the instrumentation	V1.10.001
VOLVO	C70 (06-)	2010	Brake control module (BCM)	ECU identification		V1.10.001
VOLVO	C70 (06-)	2010	Brake control module (BCM)	Read codes		V1.10.001
VOLVO	C70 (06-)	2010	Brake control module (BCM)	Erase codes		V1.10.001
VOLVO	C70 (06-)	2010	Brake control module (BCM)	Freeze frame		V1.10.001
VOLVO	C70 (06-)	2010	Brake control module (BCM)	Active test		V1.10.001
VOLVO	C70 (06-)	2010	Brake control module (BCM)	Special functions	Activating components and functions	V1.10.001
VOLVO	C70 (06-)	2010	Brake control module (BCM)	Special functions	Calibration (cars with DSTC)	V1.10.001
VOLVO	C70 (06-)	2010	Brake control module (BCM)	Special functions	Reading off the configuration	V1.10.001
VOLVO	C70 (06-)	2010	Driver door module (DDM)	ECU identification		V1.10.001
VOLVO	C70 (06-)	2010	Driver door module (DDM)	Read codes		V1.10.001
VOLVO	C70 (06-)	2010	Driver door module (DDM)	Erase codes		V1.10.001
VOLVO	C70 (06-)	2010	Driver door module (DDM)	Freeze frame		V1.10.001
VOLVO	C70 (06-)	2010	Driver door module (DDM)	Active test		V1.10.001
VOLVO	C70 (06-)	2010	Driver door module (DDM)	Special functions	Activating components and functions	V1.10.001
VOLVO	C70 (06-)	2010	Driver door module (DDM)	Special functions	Calibration (cars with DSTC)	V1.10.001
VOLVO	C70 (06-)	2010	Driver door module (DDM)	Special functions	Reading off the configuration	V1.10.001
VOLVO	C70 (06-)	2010	Passenger door module (PDM)	ECU identification		V1.10.001
VOLVO	C70 (06-)	2010	Passenger door module (PDM)	Read codes		V1.10.001
VOLVO	C70 (06-)	2010	Passenger door module (PDM)	Erase codes		V1.10.001
VOLVO	C70 (06-)	2010	Passenger door module (PDM)	Freeze frame		V1.10.001
VOLVO	C70 (06-)	2010	Passenger door module (PDM)	Active test		V1.10.001
VOLVO	C70 (06-)	2010	Passenger restraint system module (SRS)	ECU identification	Initializing the window position	V1.10.001
VOLVO	C70 (06-)	2010	Passenger restraint system module (SRS)	Read codes		V1.10.001
VOLVO	C70 (06-)	2010	Passenger restraint system module (SRS)	Erase codes		V1.10.001
VOLVO	C70 (06-)	2010	Passenger restraint system module (SRS)	Freeze frame		V1.10.001
VOLVO	C70 (06-)	2010	Passenger restraint system module (SRS)	Active test		V1.10.001
VOLVO	C70 (06-)	2010	Infotainment control module (ICM)	ECU identification	Resetting crash mode	V1.10.001
VOLVO	C70 (06-)	2010	Infotainment control module (ICM)	Read codes		V1.10.001
VOLVO	C70 (06-)	2010	Infotainment control module (ICM)	Erase codes		V1.10.001
VOLVO	C70 (06-)	2010	Infotainment control module (ICM)	Freeze frame		V1.10.001
VOLVO	C70 (06-)	2010	Infotainment control module (ICM)	Active test		V1.10.001
VOLVO	C70 (06-)	2010	Infotainment control module (ICM)	Special functions	Activating components and functions	V1.10.001
VOLVO	C70 (06-)	2010	Infotainment control module (ICM)	Special functions	Calibration (seats temperature)	V1.10.001
VOLVO	C70 (06-)	2010	Infotainment control module (ICM)	Special functions	Programming the seat temperature	V1.10.001
VOLVO	C70 (06-)	2010	Driver information module (DIM)	ECU identification		V1.10.001
VOLVO	C70 (06-)	2010	Driver information module (DIM)	Read codes		V1.10.001
VOLVO	C70 (06-)	2010	Driver information module (DIM)	Erase codes		V1.10.001
VOLVO	C70 (06-)	2010	Driver information module (DIM)	Freeze frame		V1.10.001
VOLVO	C70 (06-)	2010	Driver information module (DIM)	Active test		V1.10.001
VOLVO	C70 (06-)	2010	Driver information module (DIM)	Special functions	Activating components and functions	V1.10.001
VOLVO	C70 (06-)	2010	Driver information module (DIM)	Special functions	Display of DTC/ESC message	V1.10.001
VOLVO	C70 (06-)	2010	Driver information module (DIM)	Special functions	Programming of driver information module (DIM)	V1.10.001
VOLVO	C70 (06-)	2010	Driver information module (DIM)	Special functions	Programming cabin belt reminder in backseat	V1.10.001
VOLVO	C70 (06-)	2010	Climate control module (CCM)	ECU identification	Programming the axar shift indicator	V1.10.001
VOLVO	C70 (06-)	2010	Climate control module (CCM)	Read codes		V1.10.001
VOLVO	C70 (06-)	2010	Climate control module (CCM)	Erase codes		V1.10.001
VOLVO	C70 (06-)	2010	Climate control module (CCM)	Freeze frame		V1.10.001
VOLVO	C70 (06-)	2010	Climate control module (CCM)	Active test		V1.10.001
VOLVO	C70 (06-)	2010	Climate control module (CCM)	Special functions	Identifying components on the LIN network that belong to the climate control system (CCM)	V1.10.001
VOLVO	C70 (06-)	2010	Keyless vehicle module (KVM)	ECU identification	Programming the seat temperature	V1.10.001
VOLVO	C70 (06-)	2010	Keyless vehicle module (KVM)	Read codes		V1.10.001
VOLVO	C70 (06-)	2010	Keyless vehicle module (KVM)	Erase codes		V1.10.001
VOLVO	C70 (06-)	2010	Keyless vehicle module (KVM)	Freeze frame		V1.10.001
VOLVO	C70 (06-)	2010	Keyless vehicle module (KVM)	Active test		V1.10.001
VOLVO	C70 (06-)	2010	Accessory electronic module (AEM)	ECU identification	Resetting the service reminder indicator (SRI)	V1.10.001
VOLVO	C70 (06-)	2010	Accessory electronic module (AEM)	Read codes		V1.10.001
VOLVO	C70 (06-)	2010	Accessory electronic module (AEM)	Erase codes		V1.10.001
VOLVO	C70 (06-)	2010	Accessory electronic module (AEM)	Freeze frame		V1.10.001
VOLVO	C70 (06-)	2010	Accessory electronic module (AEM)	Active test		V1.10.001
VOLVO	C70 (06-)	2010	Accessory electronic module (AEM)	Special functions	Activating components and functions	V1.10.001
VOLVO	C70 (06-)	2010	Electrical power steering module (EPS)	ECU identification	Calibrating the climate control module (CCM)	V1.10.001
VOLVO	C70 (06-)	2010	Electrical power steering module (EPS)	Read codes		V1.10.001
VOLVO	C70 (06-)	2010	Electrical power steering module (EPS)	Erase codes		V1.10.001
VOLVO	C70 (06-)	2010	Electrical power steering module (EPS)	Freeze frame		V1.10.001
VOLVO	C70 (06-)	2010	Electrical power steering module (EPS)	Active test		V1.10.001
VOLVO	C70 (06-)	2010	Parking assistance module (PAM)	ECU identification	Reading out detected/expected control modules/seasons	V1.10.001
VOLVO	C70 (06-)	2010	Parking assistance module (PAM)	Read codes		V1.10.001
VOLVO	C70 (06-)	2010	Parking assistance module (PAM)	Erase codes		V1.10.001
VOLVO	C70 (06-)	2010	Parking assistance module (PAM)	Freeze frame		V1.10.001
VOLVO	C70 (06-)	2010	Audio module (AUD)	ECU identification	Reading out electronic damper motor, actual/preset range and tolerance limit	V1.10.001
VOLVO	C70 (06-)	2010	Audio module (AUD)	Read codes		V1.10.001
VOLVO	C70 (06-)	2010	Audio module (AUD)	Erase codes		V1.10.001
VOLVO	C70 (06-)	2010	Audio module (AUD)	Freeze frame		V1.10.001
VOLVO	C70 (06-)	2010	Power seat module, left (PSL)	ECU identification	Initiation of the TCS switch by the tunnel console	V1.10.001
VOLVO	C70 (06-)	2010	Power seat module, left (PSL)	Read codes		V1.10.001
VOLVO	C70 (06-)	2010	Power seat module, left (PSL)	Erase codes		V1.10.001
VOLVO	C70 (06-)	2010	Power seat module, left (PSL)	Freeze frame		V1.10.001
VOLVO	C70 (06-)	2010	Power seat module, left (PSL)	Active test		V1.10.001
VOLVO	C70 (06-)	2010	Power seat module, right (PSR)	ECU identification	Programming remote control setting	V1.10.001
VOLVO	C70 (06-)	2010	Power seat module, right (PSR)	Read codes		V1.10.001
VOLVO	C70 (06-)	2010	Power seat module, right (PSR)	Erase codes		V1.10.001
VOLVO	C70 (06-)	2010	Power seat module, right (PSR)	Freeze frame		V1.10.001
VOLVO	C70 (06-)	2010	Power seat module, right (PSR)	Active test		V1.10.001
VOLVO	C70 (06-)	2010	Power seat module, right (PSR)	Special functions	Activating front seat position	V1.10.001
VOLVO	C70 (06-)	2010	Power seat module, right (PSR)	Special functions	Activation	V1.10.001
VOLVO	C70 (06-)	2010	Accessory USB unit (AUU)	ECU identification		V1.10.001
VOLVO	C70 (06-)	2010	Accessory USB unit (AUU)	Read codes		V1.10.001
VOLVO	C70 (06-)	2010	Accessory USB unit (AUU)	Erase codes		V1.10.001
VOLVO	C70 (06-)	2010	Accessory USB unit (AUU)	Freeze frame		V1.10.001
VOLVO	C70 (06-)	2010	Trailer module (TRM)	ECU identification		V1.10.001
VOLVO	C70 (06-)	2010	Trailer module (TRM)	Read codes		V1.10.001
VOLVO	C70 (06-)	2010	Trailer module (TRM)	Erase codes		V1.10.001
VOLVO	C70 (06-)	2010	Trailer module (TRM)	Freeze frame		V1.10.001
VOLVO	C70 (06-)	2010	Steering wheel module (SWM)	ECU identification		V1.10.001
VOLVO	C70 (06-)	2010	Steering wheel module (SWM)	Read codes		V1.10.001
VOLVO	C70 (06-)	2010	Steering wheel module (SWM)	Erase codes		V1.10.001
VOLVO	C70 (06-)	2010	Steering wheel module (SWM)	Freeze frame		V1.10.001
VOLVO	C70 (06-)	2010	Integrated audio module (IAM)	ECU identification		V1.10.001
VOLVO	C70 (06-)	2010	Integrated audio module (IAM)	Read codes		V1.10.001
VOLVO	C70 (06-)	2010	Integrated audio module (IAM)	Erase codes		V1.10.001
VOLVO	C70 (06-)	2010	Integrated audio module (IAM)	Freeze frame		V1.10.001
VOLVO	C70 (06-)	2010	Integrated audio module (IAM)	Active test		V1.10.001
VOLVO	C70 (06-)	2010	Integrated audio module (IAM)	Special functions	Activating components	V1.10.001
VOLVO	C70 (06-)	2010	Bluetooth phone module (BPM)	ECU identification		V1.10.001
VOLVO	C70 (06-)	2010	Bluetooth phone module (BPM)	Read codes		V1.10.001
VOLVO	C70 (06-)	2010	Bluetooth phone module (BPM)	Erase codes		V1.10.001
VOLVO	C70 (06-)	2010	Bluetooth phone module (BPM)	Freeze frame		V1.10.001
VOLVO	C70 (06-)	2010	Combustion preheater module (CPM)	ECU identification		V1.10.001
VOLVO	C70 (06-)	2010	Combustion preheater module (CPM)	Read codes		V1.10.001
VOLVO	C70 (06-)	2010	Combustion preheater module (CPM)	Erase codes		V1.10.001
VOLVO	C70 (06-)	2010	Combustion preheater module (CPM)	Freeze frame		V1.10.001
VOLVO	C70 (06-)	2010	Convertible roof module (CRM)	ECU identification		V1.1

VOLVO	C70 (06-)	2011A Power seat module, left (PSL)	Freeze frame		V1.10.001
		2011A Power seat module, left (PSL)	Active test		V1.10.001
		2011A Power seat module, left (PSL)	Special functions		V1.10.001
		2011A Power seat module, left (PSL)	Special functions		V1.10.001
		2011A Power seat module, right (PSR)	ECU identification		V1.10.001
		2011A Power seat module, right (PSR)	Read codes		V1.10.001
		2011A Power seat module, right (PSR)	Erase codes		V1.10.001
		2011A Power seat module, right (PSR)	Freeze frame		V1.10.001
		2011A Power seat module, right (PSR)	Active name		V1.10.001
		2011A Power seat module, right (PSR)	Special functions		V1.10.001
		2011A Power seat module, right (PSR)	Special functions		V1.10.001
		2011A Power seat module, right (PSR)	ECU identification		V1.10.001
		2011A Accessory USB unit (AUU)	ECU identification		V1.10.001
		2011A Accessory USB unit (AUU)	Read codes		V1.10.001
		2011A Accessory USB unit (AUU)	Erase codes		V1.10.001
		2011A Accessory USB unit (AUU)	Freeze frame		V1.10.001
		2011A Accessory USB unit (AUU)	ECU identification		V1.10.001
		2011A Trailer module (TRM)	ECU identification		V1.10.001
		2011A Trailer module (TRM)	Read codes		V1.10.001
		2011A Trailer module (TRM)	Erase codes		V1.10.001
		2011A Trailer module (TRM)	Freeze frame		V1.10.001
		2011A Trailer module (TRM)	Active name		V1.10.001
		2011A Steering wheel module (SWM)	ECU identification		V1.10.001
		2011A Steering wheel module (SWM)	Read codes		V1.10.001
		2011A Steering wheel module (SWM)	Erase codes		V1.10.001
		2011A Steering wheel module (SWM)	Freeze frame		V1.10.001
		2011A Integrated audio module (IAM)	ECU identification		V1.10.001
		2011A Integrated audio module (IAM)	Read codes		V1.10.001
		2011A Integrated audio module (IAM)	Erase codes		V1.10.001
		2011A Integrated audio module (IAM)	Freeze frame		V1.10.001
		2011A Integrated audio module (IAM)	Active test		V1.10.001
		2011A Integrated audio module (IAM)	Special functions		V1.10.001
		2011A Integrated audio module (IAM)	ECU identification		V1.10.001
		2011A Subwoofer module (SUB)	ECU identification		V1.10.001
		2011A Subwoofer module (SUB)	Read codes		V1.10.001
		2011A Subwoofer module (SUB)	Erase codes		V1.10.001
		2011A Subwoofer module (SUB)	Freeze frame		V1.10.001
		2011A Remote digital audio receiver (RDAR)	ECU identification		V1.10.001
		2011A Remote digital audio receiver (RDAR)	Read codes		V1.10.001
		2011A Remote digital audio receiver (RDAR)	Erase codes		V1.10.001
		2011A Remote digital audio receiver (RDAR)	Freeze frame		V1.10.001
		2011A Bluetooth phone module (BPM)	ECU identification		V1.10.001
		2011A Bluetooth phone module (BPM)	Read codes		V1.10.001
		2011A Bluetooth phone module (BPM)	Erase codes		V1.10.001
		2011A Bluetooth phone module (BPM)	Freeze frame		V1.10.001
		2011A Combustion preheater module (CPM)	ECU identification		V1.10.001
		2011A Combustion preheater module (CPM)	Read codes		V1.10.001
		2011A Combustion preheater module (CPM)	Erase codes		V1.10.001
		2011A Combustion preheater module (CPM)	Freeze frame		V1.10.001
		2011A Convertible roof module (CRM)	ECU identification		V1.10.001
		2011A Convertible roof module (CRM)	Read codes		V1.10.001
		2011A Convertible roof module (CRM)	Erase codes		V1.10.001
		2011A Convertible roof module (CRM)	Freeze frame		V1.10.001
		2011A Multimedia module (MMM)	ECU identification		V1.10.001
		2011A Multimedia module (MMM)	Read codes		V1.10.001
		2011A Multimedia module (MMM)	Erase codes		V1.10.001
		2011A Phone module (PHM)	ECU identification		V1.10.001
		2011A Phone module (PHM)	Read codes		V1.10.001
		2011A Phone module (PHM)	Erase codes		V1.10.001
		2011A Phone module (PHM)	Freeze frame		V1.10.001
		2011A Headlamp control module (HCM)	ECU identification		V1.10.001
		2011A Headlamp control module (HCM)	Read codes		V1.10.001
		2011A Headlamp control module (HCM)	Erase codes		V1.10.001
		2011A Headlamp control module (HCM)	Freeze frame		V1.10.001
		2011A Engine control module (ECM)	ECU identification		V1.10.001
		2011A Engine control module (ECM)	Read codes		V1.10.001
		2011A Engine control module (ECM)	Erase codes		V1.10.001
		2011A Engine control module (ECM)	Freeze frame		V1.10.001
		2011A Engine control module (ECM)	Active test		V1.10.001
		2011A Engine control module (ECM)	Special functions		V1.10.001
		2011A Engine control module (ECM)	ECU identification		V1.10.001
		2011A Engine control module (ECM)	Read codes		V1.10.001
		2011A Transmission control module (TCM)	ECU identification		V1.10.001
		2011A Transmission control module (TCM)	Read codes		V1.10.001
		2011A Transmission control module (TCM)	Erase codes		V1.10.001
		2011A Transmission control module (TCM)	Freeze frame		V1.10.001
		2011A Central electronic module (CEM)	ECU identification		V1.10.001
		2011A Central electronic module (CEM)	Read codes		V1.10.001
		2011A Central electronic module (CEM)	Erase codes		V1.10.001
		2011A Central electronic module (CEM)	Freeze frame		V1.10.001
		2011A Central electronic module (CEM)	Active test		V1.10.001
		2011A Central electronic module (CEM)	Special functions		V1.10.001
		2011A Central electronic module (CEM)	ECU identification		V1.10.001
		2011A Central electronic module (CEM)	Read codes		V1.10.001
		2011A Central electronic module (CEM)	Erase codes		V1.10.001
		2011A Central electronic module (CEM)	Freeze frame		V1.10.001
		2011A Central electronic module (CEM)	Active test		V1.10.001
		2011A Central electronic module (CEM)	Special functions		V1.10.001
		2011A Central electronic module (CEM)	ECU identification		V1.10.001
		2011A Central electronic module (CEM)	Read codes		V1.10.001
		2011A Central electronic module (CEM)	Erase codes		V1.10.001
		2011A Central electronic module (CEM)	Freeze frame		V1.10.001
		2011A Central electronic module (CEM)	Active test		V1.10.001
		2011A Central electronic module (CEM)	Special functions		V1.10.001
		2011A Central electronic module (CEM)	ECU identification		V1.10.001
		2011A Central electronic module (CEM)	Read codes		V1.10.001
		2011A Central electronic module (CEM)	Erase codes		V1.10.001
		2011A Central electronic module (CEM)	Freeze frame		V1.10.001
		2011A Central electronic module (CEM)	Active test		V1.10.001
		2011A Central electronic module (CEM)	Special functions		V1.10.001
		2011A Central electronic module (CEM)	ECU identification		V1.10.001
		2011A Central electronic module (CEM)	Read codes		V1.10.001
		2011A Central electronic module (CEM)	Erase codes		V1.10.001
		2011A Central electronic module (CEM)	Freeze frame		V1.10.001
		2011A Central electronic module (CEM)	Active test		V1.10.001
		2011A Central electronic module (CEM)	Special functions		V1.10.001
		2011A Central electronic module (CEM)	ECU identification		V1.10.001
		2011A Central electronic module (CEM)	Read codes		V1.10.001
		2011A Central electronic module (CEM)	Erase codes		V1.10.001
		2011A Central electronic module (CEM)	Freeze frame		V1.10.001
		2011A Central electronic module (CEM)	Active test		V1.10.001
		2011A Central electronic module (CEM)	Special functions		V1.10.001
		2011A Central electronic module (CEM)	ECU identification		V1.10.001
		2011A Central electronic module (CEM)	Read codes		V1.10.001
		2011A Central electronic module (CEM)	Erase codes		V1.10.001
		2011A Central electronic module (CEM)	Freeze frame		V1.10.001
		2011A Central electronic module (CEM)	Active test		V1.10.001
		2011A Central electronic module (CEM)	Special functions		V1.10.001
		2011A Central electronic module (CEM)	ECU identification		V1.10.001
		2011A Central electronic module (CEM)	Read codes		V1.10.001
		2011A Central electronic module (CEM)	Erase codes		V1.10.001
		2011A Central electronic module (CEM)	Freeze frame		V1.10.001
		2011A Central electronic module (CEM)	Active test		V1.10.001
		2011A Central electronic module (CEM)	Special functions		V1.10.001
		2011A Central electronic module (CEM)	ECU identification		V1.10.001
		2011A Central electronic module (CEM)	Read codes		V1.10.001
		2011A Central electronic module (CEM)	Erase codes		V1.10.001
		2011A Central electronic module (CEM)	Freeze frame		V1.10.001
		2011A Central electronic module (CEM)	Active test		V1.10.001
		2011A Central electronic module (CEM)	Special functions		V1.10.001
		2011A Central electronic module (CEM)	ECU identification		V1.10.001
		2011A Central electronic module (CEM)	Read codes		V1.10.001
		2011A Central electronic module (CEM)	Erase codes		V1.10.001
		2011A Central electronic module (CEM)	Freeze frame		V1.10.001
		2011A Climate control module (CCM)	ECU identification		V1.10.001
		2011A Climate control module (CCM)	Read codes		V1.10.001
		2011A Climate control module (CCM)	Erase codes		V1.10.001
		2011A Climate control module (CCM)	Freeze frame		V1.10.001
		2011A Climate control module (CCM)	Active test		V1.10.001
		2011A Climate control module (CCM)	Special functions		V1.10.001
		2011A Climate control module (CCM)	ECU identification		V1.10.001
		2011A Climate control module (CCM)	Read codes		V1.10.001
		2011A Climate control module (CCM)	Erase codes		V1.10.001
		2011A Climate control module (CCM)	Freeze frame		V1.10.001
		2011A Climate control module (CCM)	Active test		V1.10.001
		2011A Climate control module (CCM)	Special functions		V1.10.001
		2011A Climate control module (CCM)	ECU identification		V1.10.001
		2011A Keyless vehicle module (KVM)	ECU identification		V1.10.001
		2011A Keyless vehicle module (KVM)	Read codes		V1.10.001
		2011A Keyless vehicle module (KVM)	Erase codes		V1.10.001
		2011A Keyless vehicle module (KVM)	Freeze frame		V1.10.001
		2011A Keyless vehicle module (KVM)	Active test		V1.10.001
		2011A Keyless vehicle module (KVM)	Programmed value		V1.10.001
		2011A Keyless vehicle module (KVM)	Special functions		V1.10.001
		2011A Keyless vehicle module (KVM)	ECU identification		V1.10.001
		2011A Accessory electronic module (AEM)	Read codes		V1.10.001
		2011A Accessory electronic module (AEM)	Erase codes		V1.10.001
		2011A Accessory electronic module (AEM)	Freeze frame		V1.10.001
		2011A Accessory electronic module (AEM)	Active test		V1.10.001
		2011A Accessory electronic module (AEM)	Special functions		V1.10.001
		2011A Electrical power steering module (EPS)	ECU identification		V1.10.001
		2011A Electrical power steering module (EPS)	Read codes		V1.10.001
		2011A Electrical power steering module (EPS)	Erase codes		V1.10.001
		2011A Electrical power steering module (EPS)	Freeze frame		V1.10.001
		2011A Programming remote control setting			V1.10.001
		2011A Initializing the front seat position			V1.10.001
		2011A Activation			V1.10.001
		2011A Programming remote control setting			V1.10.001
		2011A Initializing the front seat position			V1.10.001
		2011A Activation			V1.10.001
		2011A Programming remote control setting			V1.10.001
		2011A Initializing the front seat position			V1.10.001
		2011A Activation			V1.10.001
		2011A Activating components			V1.10.001
		2011A Resetting catches			V1.10.001
		2011A Resetting the transmission fluid change counter			V1.10.001
		2011A Calibration of position sensor			V1.10.001
		2011A Adaptation of the throttle unit			V1.10.001
		2011A Resetting the fuel tank system (USA/CDN)			V1.10.001
		2011A Quick test of the fuel pump (FP)			V1.10.001
		2011A Quick test of the fuel pump (FP)			V1.10.001
		2011A Test/movement of camshaft control, intake			V1.10.001
		2011A Test/movement of camshaft control, exhaust			V1.10.001
		2011A Activating the service reminder indicator (SRI)			V1.10.001
		2011A Pre-setting indicators for new car			V1.10.001
		2011A Resetting off and programming vehicle mode			V1.10.001
		2011A Resetting low voltage counters			V1.10.001
		2011A Ignition switch key position			V1.10.001
		2011A Programmed window lifter when reversing			V1.10.001
		2011A Setting clock deviation			V1.10.001
		2011A Resetting crash mode			V1.10.001
		2011A Resetting cruise control			V1.10.001
		2011A Resetting counter for passing lock			V1.10.001
		2011A Resetting counter for alarm function			V1.10.001
		2011A Quick test of alternator function status			V1.10.001
		2011A Remote controlled methods - status			V1.10.001
		2011A Resetting counter for immobilizer			V1.10.001
		2011A Setting date and night mode for the instrumentation			V1.10.001
		2011A Setting day and night mode for the instrumentation			V1.10.001
		2011A Resetting the service reminder indicator (SRI)			V1.10.001
		2011A Resetting all indicators and lamps in the driver information module (DIM)			V1.10.001
		2011A Indicating programmed values			V1.10.001
		2011A Display of DTC/ESC message			V1.10.001
		2011A Programming or deleting of the driver information module (DIM)			V1.10.001
		2011A Programming seatbelt reminder in backrest			V1.10.001
		2011A Programming the park shift indicator			V1.10.001
		2011A Identifying components on the LIN network that belong to the climate control system (CCM)			V1.10.001
		2011A Programming the seat temperature			V1.10.001
		2011A Calibrating the climate control module (CCM)			V1.10.001
		2011A Reading out detected/selected climate control function			V1.1

VOLVO	C70 (06-)	2013 Climate control module (CCM)	Read codes	V1.10.001
VOLVO	C70 (06-)	2013 Climate control module (CCM)	Erase codes	V1.10.001
VOLVO	C70 (06-)	2013 Climate control module (CCM)	Freeze frame	V1.10.001
VOLVO	C70 (06-)	2013 Climate control module (CCM)	Special functions	V1.10.001
VOLVO	C70 (06-)	2013 Climate control module (CCM)	Programmed value	V1.10.001
VOLVO	C70 (06-)	2013 Climate control module (CCM)	Special functions	V1.10.001
VOLVO	C70 (06-)	2013 Climate control module (CCM)	Special functions	V1.10.001
VOLVO	C70 (06-)	2013 Climate control module (CCM)	Special functions	V1.10.001
VOLVO	C70 (06-)	2013 Climate control module (CCM)	ECU identification	V1.10.001
VOLVO	C70 (06-)	2013 Keyless vehicle module (KVM)	Read codes	V1.10.001
VOLVO	C70 (06-)	2013 Keyless vehicle module (KVM)	Erase codes	V1.10.001
VOLVO	C70 (06-)	2013 Keyless vehicle module (KVM)	Freeze frame	V1.10.001
VOLVO	C70 (06-)	2013 Keyless vehicle module (KVM)	Active test	V1.10.001
VOLVO	C70 (06-)	2013 Keyless vehicle module (KVM)	Programmed value	V1.10.001
VOLVO	C70 (06-)	2013 Keyless vehicle module (KVM)	Special functions	V1.10.001
VOLVO	C70 (06-)	2013 Keyless vehicle module (KVM)	Special functions	V1.10.001
VOLVO	C70 (06-)	2013 Keyless vehicle module (KVM)	ECU identification	V1.10.001
VOLVO	C70 (06-)	2013 Accessory electronic module (AEM)	Read codes	V1.10.001
VOLVO	C70 (06-)	2013 Accessory electronic module (AEM)	Erase codes	V1.10.001
VOLVO	C70 (06-)	2013 Accessory electronic module (AEM)	Freeze frame	V1.10.001
VOLVO	C70 (06-)	2013 Accessory electronic module (AEM)	Special functions	V1.10.001
VOLVO	C70 (06-)	2013 Accessory electronic module (AEM)	ECU identification	V1.10.001
VOLVO	C70 (06-)	2013 Electrical power steering module (EPS)	Read codes	V1.10.001
VOLVO	C70 (06-)	2013 Electrical power steering module (EPS)	Erase codes	V1.10.001
VOLVO	C70 (06-)	2013 Electrical power steering module (EPS)	Freeze frame	V1.10.001
VOLVO	C70 (06-)	2013 Parking assistance module (PAM)	ECU identification	V1.10.001
VOLVO	C70 (06-)	2013 Parking assistance module (PAM)	Read codes	V1.10.001
VOLVO	C70 (06-)	2013 Parking assistance module (PAM)	Erase codes	V1.10.001
VOLVO	C70 (06-)	2013 Parking assistance module (PAM)	Freeze frame	V1.10.001
VOLVO	C70 (06-)	2013 Parking assistance module (PAM)	Special functions	V1.10.001
VOLVO	C70 (06-)	2013 Parking assistance module (PAM)	ECU identification	V1.10.001
VOLVO	C70 (06-)	2013 Audio module (AUD)	Read codes	V1.10.001
VOLVO	C70 (06-)	2013 Audio module (AUD)	Erase codes	V1.10.001
VOLVO	C70 (06-)	2013 Audio module (AUD)	Freeze frame	V1.10.001
VOLVO	C70 (06-)	2013 Audio module (AUD)	Special functions	V1.10.001
VOLVO	C70 (06-)	2013 Audio module (AUD)	ECU identification	V1.10.001
VOLVO	C70 (06-)	2013 Accessory USB unit (AUU)	Read codes	V1.10.001
VOLVO	C70 (06-)	2013 Accessory USB unit (AUU)	Erase codes	V1.10.001
VOLVO	C70 (06-)	2013 Accessory USB unit (AUU)	Freeze frame	V1.10.001
VOLVO	C70 (06-)	2013 Accessory USB unit (AUU)	Special functions	V1.10.001
VOLVO	C70 (06-)	2013 Accessory USB unit (AUU)	ECU identification	V1.10.001
VOLVO	C70 (06-)	2013 Steering wheel module (SWM)	Read codes	V1.10.001
VOLVO	C70 (06-)	2013 Steering wheel module (SWM)	Erase codes	V1.10.001
VOLVO	C70 (06-)	2013 Steering wheel module (SWM)	Freeze frame	V1.10.001
VOLVO	C70 (06-)	2013 Steering wheel module (SWM)	Special functions	V1.10.001
VOLVO	C70 (06-)	2013 Steering wheel module (SWM)	ECU identification	V1.10.001
VOLVO	C70 (06-)	2013 Power seat module, left (PSL)	Read codes	V1.10.001
VOLVO	C70 (06-)	2013 Power seat module, left (PSL)	Erase codes	V1.10.001
VOLVO	C70 (06-)	2013 Power seat module, left (PSL)	Freeze frame	V1.10.001
VOLVO	C70 (06-)	2013 Power seat module, left (PSL)	Special functions	V1.10.001
VOLVO	C70 (06-)	2013 Power seat module, left (PSL)	ECU identification	V1.10.001
VOLVO	C70 (06-)	2013 Power seat module, right (PSR)	Read codes	V1.10.001
VOLVO	C70 (06-)	2013 Power seat module, right (PSR)	Erase codes	V1.10.001
VOLVO	C70 (06-)	2013 Power seat module, right (PSR)	Freeze frame	V1.10.001
VOLVO	C70 (06-)	2013 Power seat module, right (PSR)	Special functions	V1.10.001
VOLVO	C70 (06-)	2013 Power seat module, right (PSR)	ECU identification	V1.10.001
VOLVO	C70 (06-)	2013 Convertible roof module (CRM)	Read codes	V1.10.001
VOLVO	C70 (06-)	2013 Convertible roof module (CRM)	Erase codes	V1.10.001
VOLVO	C70 (06-)	2013 Convertible roof module (CRM)	Freeze frame	V1.10.001
VOLVO	C70 (06-)	2013 Convertible roof module (CRM)	Special functions	V1.10.001
VOLVO	C70 (06-)	2013 Convertible roof module (CRM)	ECU identification	V1.10.001
VOLVO	C70 (06-)	2013 Headlight control module (HCM)	Read codes	V1.10.001
VOLVO	C70 (06-)	2013 Headlight control module (HCM)	Erase codes	V1.10.001
VOLVO	C70 (06-)	2013 Headlight control module (HCM)	Freeze frame	V1.10.001
VOLVO	C70 (06-)	2013 Headlight control module (HCM)	Special functions	V1.10.001
VOLVO	C70 (06-)	2013 Headlight control module (HCM)	ECU identification	V1.10.001
VOLVO	C70 (06-)	2013 Combustion preheater module (CPM)	Read codes	V1.10.001
VOLVO	C70 (06-)	2013 Combustion preheater module (CPM)	Erase codes	V1.10.001
VOLVO	C70 (06-)	2013 Combustion preheater module (CPM)	Freeze frame	V1.10.001
VOLVO	C70 (06-)	2013 Combustion preheater module (CPM)	Special functions	V1.10.001
VOLVO	C70 (06-)	2013 Combustion preheater module (CPM)	ECU identification	V1.10.001
VOLVO	C70 (06-)	2013 Bluetooth phone module (BPM)	Read codes	V1.10.001
VOLVO	C70 (06-)	2013 Bluetooth phone module (BPM)	Erase codes	V1.10.001
VOLVO	C70 (06-)	2013 Bluetooth phone module (BPM)	Freeze frame	V1.10.001
VOLVO	C70 (06-)	2013 Multimedia module (MMMI)	ECU identification	V1.10.001
VOLVO	C70 (06-)	2013 Multimedia module (MMMI)	Read codes	V1.10.001
VOLVO	C70 (06-)	2013 Multimedia module (MMMI)	Erase codes	V1.10.001
VOLVO	C70 (06-)	2013 Multimedia module (MMMI)	Freeze frame	V1.10.001
VOLVO	C70 (06-)	2013 Multimedia module (MMMI)	Special functions	V1.10.001
VOLVO	C70 (06-)	2013 Engine control module (ECM)	Read codes	V1.10.001
VOLVO	C70 (06-)	2013 Engine control module (ECM)	Erase codes	V1.10.001
VOLVO	C70 (06-)	2013 Engine control module (ECM)	Freeze frame	V1.10.001
VOLVO	C70 (06-)	2013 Engine control module (ECM)	Special functions	V1.10.001
VOLVO	C70 (06-)	2013 Engine control module (ECM)	ECU identification	V1.10.001
VOLVO	C70 (06-)	2013 Remote digital radio receiver (RDAR)	ECU identification	V1.10.001
VOLVO	C70 (06-)	2013 Remote digital radio receiver (RDAR)	Read codes	V1.10.001
VOLVO	C70 (06-)	2013 Remote digital radio receiver (RDAR)	Erase codes	V1.10.001
VOLVO	C70 (06-)	2013 Remote digital radio receiver (RDAR)	Freeze frame	V1.10.001
VOLVO	C70 (06-)	2013 Ersine control module (ECM)	Special functions	V1.10.001
VOLVO	C70 (06-)	2013 Ersine control module (ECM)	ECU identification	V1.10.001
VOLVO	C70 (06-)	2013 Engine control module (ECM)	Read codes	V1.10.001
VOLVO	C70 (06-)	2013 Engine control module (ECM)	Erase codes	V1.10.001
VOLVO	C70 (06-)	2013 Engine control module (ECM)	Freeze frame	V1.10.001
VOLVO	C70 (06-)	2013 Engine control module (ECM)	Special functions	V1.10.001
VOLVO	C70 (06-)	2013 Engine control module (ECM)	ECU identification	V1.10.001
VOLVO	C70 (06-)	2013 Headlight control module (HCM)	Read codes	V1.10.001
VOLVO	C70 (06-)	2013 Headlight control module (HCM)	Erase codes	V1.10.001
VOLVO	C70 (06-)	2013 Headlight control module (HCM)	Freeze frame	V1.10.001
VOLVO	C70 (06-)	2013 Headlight control module (HCM)	Special functions	V1.10.001
VOLVO	C70 (06-)	2013 Headlight control module (HCM)	ECU identification	V1.10.001
VOLVO	C70 (06-)	2013 Transmission control module (TCM)	Read codes	V1.10.001
VOLVO	C70 (06-)	2013 Transmission control module (TCM)	Erase codes	V1.10.001
VOLVO	S40 (04-)	2006 Engine control module (ECM)	ECU identification	V1.10.001
VOLVO	S40 (04-)	2006 Engine control module (ECM)	Read codes	V1.10.001
VOLVO	S40 (04-)	2006 Engine control module (ECM)	Erase codes	V1.10.001
VOLVO	S40 (04-)	2006 Engine control module (ECM)	Freeze frame	V1.10.001
VOLVO	S40 (04-)	2006 Engine control module (ECM)	Special functions	V1.10.001
VOLVO	S40 (04-)	2006 Engine control module (ECM)	ECU identification	V1.10.001
VOLVO	S40 (04-)	2006 Steering angle sensor module (SAS)	ECU identification	V1.10.001
VOLVO	S40 (04-)	2006 Steering angle sensor module (SAS)	Read codes	V1.10.001
VOLVO	S40 (04-)	2006 Steering angle sensor module (SAS)	Erase codes	V1.10.001
VOLVO	S40 (04-)	2006 Steering angle sensor module (SAS)	Freeze frame	V1.10.001
VOLVO	S40 (04-)	2006 Brake control module (BCM)	Special functions	V1.10.001
VOLVO	S40 (04-)	2006 Brake control module (BCM)	ECU identification	V1.10.001
VOLVO	S40 (04-)	2006 Brake control module (BCM)	Read codes	V1.10.001
VOLVO	S40 (04-)	2006 Brake control module (BCM)	Erase codes	V1.10.001
VOLVO	S40 (04-)	2006 Brake control module (BCM)	Freeze frame	V1.10.001
VOLVO	S40 (04-)	2006 Brake control module (BCM)	Special functions	V1.10.001
VOLVO	S40 (04-)	2006 Brake control module (BCM)	ECU identification	V1.10.001
VOLVO	S40 (04-)	2006 Transmission control module (TCM)	Read codes	V1.10.001
VOLVO	S40 (04-)	2006 Transmission control module (TCM)	Erase codes	V1.10.001
VOLVO	S40 (04-)	2006 Transmission control module (TCM)	Freeze frame	V1.10.001
VOLVO	S40 (04-)	2006 Transmission control module (TCM)	Special functions	V1.10.001
VOLVO	S40 (04-)	2006 Transmission control module (TCM)	ECU identification	V1.10.001
VOLVO	S40 (04-)	2006 Driver door module (DDM)	ECU identification	V1.10.001
VOLVO	S40 (04-)	2006 Driver door module (DDM)	Read codes	V1.10.001
VOLVO	S40 (04-)	2006 Driver door module (DDM)	Erase codes	V1.10.001
VOLVO	S40 (04-)	2006 Driver door module (DDM)	Freeze frame	V1.10.001
VOLVO	S40 (04-)	2006 Driver door module (DDM)	Special functions	V1.10.001
VOLVO	S40 (04-)	2006 Driver door module (DDM)	ECU identification	V1.10.001
VOLVO	S40 (04-)	2006 Passenger door module (PDM)	ECU identification	V1.10.001
VOLVO	S40 (04-)	2006 Passenger door module (PDM)	Read codes	V1.10.001
VOLVO	S40 (04-)	2006 Passenger door module (PDM)	Erase codes	V1.10.001
VOLVO	S40 (04-)	2006 Passenger door module (PDM)	Freeze frame	V1.10.001
VOLVO	S40 (04-)	2006 Passenger door module (PDM)	Special functions	V1.10.001
VOLVO	S40 (04-)	2006 Passenger door module (PDM)	ECU identification	V1.10.001
VOLVO	S40 (04-)	2006 Infotainment control module (ICM)	ECU identification	V1.10.001
VOLVO	S40 (04-)	2006 Infotainment control module (ICM)	Read codes	V1.10.001
VOLVO	S40 (04-)	2006 Infotainment control module (ICM)	Erase codes	V1.10.001
VOLVO	S40 (04-)	2006 Infotainment control module (ICM)	Freeze frame	V1.10.001
VOLVO	S40 (04-)	2006 Infotainment control module (ICM)	Special functions	V1.10.001
VOLVO	S40 (04-)	2006 Infotainment control module (ICM)	ECU identification	V1.10.001
VOLVO	S40 (04-)	2006 Climate control module (CCM)	ECU identification	V1.10.001
VOLVO	S40 (04-)	2006 Climate control module (CCM)	Read codes	V1.10.001
VOLVO	S40 (04-)	2006 Climate control module (CCM)	Erase codes	V1.10.001
VOLVO	S40 (04-)	2006 Climate control module (CCM)	Freeze frame	V1.10.001
VOLVO	S40 (04-)	2006 Climate control module (CCM)	Special functions	V1.10.001
VOLVO	S40 (04-)	2006 Climate control module (CCM)	ECU identification	V1.10.001
VOLVO	S40 (04-)	2006 Supplemental restraint system module (SRS)	ECU identification	V1.10.001
VOLVO	S40 (04-)	2006 Supplemental restraint system module (SRS)	Read codes	V1.10.001
VOLVO	S40 (04-)	2006 Supplemental restraint system module (SRS)	Erase codes	V1.10.001
VOLVO	S40 (04-)	2006 Supplemental restraint system module (SRS)	Freeze frame	V1.10.001
VOLVO	S40 (04-)	2006 Supplemental restraint system module (SRS)	Special functions	V1.10.001
VOLVO	S40 (04-)	2006 Supplemental restraint system module (SRS)	ECU identification	V1.10.001
VOLVO	S40 (04-)	2006 Driver information module (DIM)	ECU identification	V1.10.001
VOLVO	S40 (04-)	2006 Driver information module (DIM)	Read codes	V1.10.001
VOLVO	S40 (04-)	2006 Driver information module (DIM)	Erase codes	V1.10.001
VOLVO	S40 (04-)	2006 Driver information module (DIM)	Freeze frame	V1.10.001
VOLVO	S40 (04-)	2006 Driver information module (DIM)	Special functions	V1.10.001
VOLVO	S40 (04-)	2006 Driver information module (DIM)	ECU identification	V1.10.001
Identifying components on the LIN network that belong to the climate control system (CCM)				
Programming the seat temperature				
Calibrating the climate control module (CCM)				
Reading out electronic damper motor, actual/preset range and tolerance limit				
Initiation of the TCS switch by the tunnel console				
Identifying the number of programmed remote keyfobs				
Read-out of part number and serial number, Remote Keyless Entry (RKE)				
Reading off the configuration				
Programming remote control setting				
Initialization of the front seat position				
Activating the front seat position				
Finding the predefined service position				
Using the gear selector				
Calibration of position sensor				
Loading assistance adjustment				
Restarting the convertible roof module (CRM)				
Reading off diagnostic data				
Calibration of position sensor				
Resetting the particle filter				
Combustion of soot particles				
Checking the particle filter				
Actuating turbo control valve (VNT regulator)				
Adjusting calculated oil level/oil quality				
Checking the oil level				
Adjusting oil pressure				
Read-out of current from battery monitoring sensor				
Readout of information stand-by current				
Resetting the zero-to-a-new-sensor value when replacing the battery				
Reset				

VOLVO	S40 (04)	2006	Driver information module (DIM)	Freeze frame		Resetting the service reminder indicator (SR8)
VOLVO	S40 (04)	2006	Driver information module (DIM)	Active test		Testing all indicators and lamps in the driver information module (DIM)
VOLVO	S40 (04)	2006	Driver information module (DIM)	Special functions		Indicates programmed values
VOLVO	S40 (04)	2006	Driver information module (DIM)	Specifications		Programming the driver information module (DIM)
VOLVO	S40 (04)	2006	Driver information module (DIM)	Special functions		
VOLVO	S40 (04)	2006	Driver information module (DIM)	ECU identification		
VOLVO	S40 (04)	2006	Power seat module (PSM)	Read codes		Programming remote control setting
VOLVO	S40 (04)	2006	Power seat module (PSM)	Erase codes		
VOLVO	S40 (04)	2006	Power seat module (PSM)	Freeze frame		
VOLVO	S40 (04)	2006	Power seat module (PSM)	Active test		
VOLVO	S40 (04)	2006	Power seat module (PSM)	Special functions		
VOLVO	S40 (04)	2006	Power seat module (PSM)	ECU identification		
VOLVO	S40 (04)	2006	Keyless vehicle module (KVM)	Read codes		Readout of the number of programmed remote keys.
VOLVO	S40 (04)	2006	Keyless vehicle module (KVM)	Erase codes		
VOLVO	S40 (04)	2006	Keyless vehicle module (KVM)	Freeze frame		
VOLVO	S40 (04)	2006	Keyless vehicle module (KVM)	Active test		
VOLVO	S40 (04)	2006	Keyless vehicle module (KVM)	Programmed values		
VOLVO	S40 (04)	2006	Keyless vehicle module (KVM)	Special functions		
VOLVO	S40 (04)	2006	Keyless vehicle module (KVM)	ECU identification		
VOLVO	S40 (04)	2006	Global positioning system module (GPS)	Read codes		
VOLVO	S40 (04)	2006	Global positioning system module (GPS)	Erase codes		
VOLVO	S40 (04)	2006	Global positioning system module (GPS)	Freeze frame		
VOLVO	S40 (04)	2006	Global positioning system module (GPS)	Active test		
VOLVO	S40 (04)	2006	Traffic message channel module (TMC)	Read codes		
VOLVO	S40 (04)	2006	Traffic message channel module (TMC)	Erase codes		
VOLVO	S40 (04)	2006	Traffic message channel module (TMC)	Freeze frame		
VOLVO	S40 (04)	2006	Traffic message channel module (TMC)	Active test		
VOLVO	S40 (04)	2006	Steering wheel module (SWM)	Read codes		
VOLVO	S40 (04)	2006	Steering wheel module (SWM)	Erase codes		
VOLVO	S40 (04)	2006	Steering wheel module (SWM)	Freeze frame		
VOLVO	S40 (04)	2006	Subwoofer module (SUB)	ECU identification		
VOLVO	S40 (04)	2006	Subwoofer module (SUB)	Read codes		
VOLVO	S40 (04)	2006	Subwoofer module (SUB)	Erase codes		
VOLVO	S40 (04)	2006	Subwoofer module (SUB)	Freeze frame		
VOLVO	S40 (04)	2006	Accessory electronic module (AEM)	ECU identification		
VOLVO	S40 (04)	2006	Accessory electronic module (AEM)	Read codes		
VOLVO	S40 (04)	2006	Accessory electronic module (AEM)	Erase codes		
VOLVO	S40 (04)	2006	Accessory electronic module (AEM)	Freeze frame		
VOLVO	S40 (04)	2006	Accessory electronic module (AEM)	Active test		
VOLVO	S40 (04)	2006	Accessory electronic module (AEM)	Special functions		
VOLVO	S40 (04)	2006	Accessory electronic module (AEM)	ECU identification		
VOLVO	S40 (04)	2006	Integrated audio module (IAM)	Read codes		Reading off the configuration
VOLVO	S40 (04)	2006	Integrated audio module (IAM)	Erase codes		
VOLVO	S40 (04)	2006	Integrated audio module (IAM)	Freeze frame		
VOLVO	S40 (04)	2006	Phone module (PHM)	Active test		
VOLVO	S40 (04)	2006	Phone module (PHM)	ECU identification		
VOLVO	S40 (04)	2006	Phone module (PHM)	Read codes		
VOLVO	S40 (04)	2006	Phone module (PHM)	Erase codes		
VOLVO	S40 (04)	2006	Phone module (PHM)	Freeze frame		
VOLVO	S40 (04)	2006	Phone module (PHM)	Specifications		
VOLVO	S40 (04)	2006	Phone module (PHM)	ECU identification		
VOLVO	S40 (04)	2006	Trailer module (TRM)	Read codes		Reinstalling the reserve battery
VOLVO	S40 (04)	2006	Trailer module (TRM)	Erase codes		
VOLVO	S40 (04)	2006	Trailer module (TRM)	Freeze frame		
VOLVO	S40 (04)	2006	Parking assistance module (PAM)	ECU identification		
VOLVO	S40 (04)	2006	Parking assistance module (PAM)	Read codes		
VOLVO	S40 (04)	2006	Parking assistance module (PAM)	Erase codes		
VOLVO	S40 (04)	2006	Parking assistance module (PAM)	Freeze frame		
VOLVO	S40 (04)	2006	Multimedia module (MMM)	ECU identification		
VOLVO	S40 (04)	2006	Multimedia module (MMM)	Read codes		
VOLVO	S40 (04)	2006	Multimedia module (MMM)	Erase codes		
VOLVO	S40 (04)	2006	Multimedia module (MMM)	Freeze frame		
VOLVO	S40 (04)	2006	Multimedia module (MMM)	Active test		
VOLVO	S40 (04)	2006	Electrical power steering module (EPS)	ECU identification		
VOLVO	S40 (04)	2006	Electrical power steering module (EPS)	Read codes		
VOLVO	S40 (04)	2006	Electrical power steering module (EPS)	Erase codes		
VOLVO	S40 (04)	2006	Electrical power steering module (EPS)	Freeze frame		
VOLVO	S40 (04)	2006	Electrical power steering module (EPS)	Special functions		
VOLVO	S40 (04)	2006	Electrical power steering module (EPS)	ECU identification		
VOLVO	S40 (04)	2006	Engine control module (ECM)	Read codes		Activating components
VOLVO	S40 (04)	2006	Engine control module (ECM)	Erase codes		Testing the fuel pump (FP)
VOLVO	S40 (04)	2006	Engine control module (ECM)	Freeze frame		Resetting the fuel pump (FP)
VOLVO	S40 (04)	2006	Engine control module (ECM)	Specifications		Calibration of position sensor
VOLVO	S40 (04)	2006	Engine control module (ECM)	ECU identification		UIMPI read out (USA/CN)
VOLVO	S40 (04)	2006	Combustion preheater module (CPM)	Read codes		Extended fault-trace for the diagnostic trouble code (DTC).
VOLVO	S40 (04)	2006	Combustion preheater module (CPM)	Erase codes		Enigne control module (ECM)
VOLVO	S40 (04)	2006	Combustion preheater module (CPM)	Freeze frame		Quick test of the fuel tank system
VOLVO	S40 (04)	2006	Combustion preheater module (CPM)	Special functions		
VOLVO	S40 (04)	2006	Transmission control module (TCM)	ECU identification		
VOLVO	S40 (04)	2006	Transmission control module (TCM)	Read codes		Activating components and functions
VOLVO	S40 (04)	2006	Transmission control module (TCM)	Erase codes		Resetting adaption
VOLVO	S40 (04)	2006	Transmission control module (TCM)	Freeze frame		Resetting the transmission fluid change counter
VOLVO	S40 (04)	2006	Transmission control module (TCM)	Specifications		Calibration of position sensor
VOLVO	S40 (04)	2006	Transmission control module (TCM)	ECU identification		Activating TEST MODE
VOLVO	S40 (04)	2006	Transmission control module (TCM)	Read codes		Control module adaption
VOLVO	S40 (04)	2006	Transmission control module (TCM)	Erase codes		Adatation of the throttle unit
VOLVO	S40 (04)	2006	Transmission control module (TCM)	Freeze frame		Quick test of the fuel pump (FP)
VOLVO	S40 (04)	2006	Transmission control module (TCM)	Special functions		Resetting code
VOLVO	S40 (04)	2006	Transmission control module (TCM)	ECU identification		Quick test of fuel tank system (USA/CN)
VOLVO	S40 (04)	2006	Transmission control module (TCM)	Read codes		Test/movement of camshaft control, intake
VOLVO	S40 (04)	2006	Transmission control module (TCM)	Erase codes		Test/movement of camshaft control, exhaust
VOLVO	S40 (04)	2006	Differential electronic module (DEM)	ECU identification		
VOLVO	S40 (04)	2006	Differential electronic module (DEM)	Read codes		
VOLVO	S40 (04)	2006	Differential electronic module (DEM)	Erase codes		
VOLVO	S40 (04)	2006	Differential electronic module (DEM)	Freeze frame		
VOLVO	S40 (04)	2006	Engine control module (ECM)	Special functions		
VOLVO	S40 (04)	2006	Engine control module (ECM)	Specifications		
VOLVO	S40 (04)	2006	Engine control module (ECM)	ECU identification		
VOLVO	S40 (04)	2006	Engine control module (ECM)	Read codes		Activating components and functions
VOLVO	S40 (04)	2006	Engine control module (ECM)	Erase codes		Resetting adaption
VOLVO	S40 (04)	2006	Engine control module (ECM)	Freeze frame		Resetting the transmission fluid change counter
VOLVO	S40 (04)	2006	Engine control module (ECM)	Specifications		Calibration of position sensor
VOLVO	S40 (04)	2006	Engine control module (ECM)	ECU identification		Activating TEST MODE
VOLVO	S40 (04)	2006	Engine control module (ECM)	Read codes		Control module adaption
VOLVO	S40 (04)	2006	Engine control module (ECM)	Erase codes		Adatation of the throttle unit
VOLVO	S40 (04)	2006	Engine control module (ECM)	Freeze frame		Quick test of the fuel pump (FP)
VOLVO	S40 (04)	2006	Engine control module (ECM)	Special functions		Resetting code
VOLVO	S40 (04)	2006	Engine control module (ECM)	ECU identification		Quick test of fuel tank system (USA/CN)
VOLVO	S40 (04)	2006	Engine control module (ECM)	Read codes		Test/movement of camshaft control, intake
VOLVO	S40 (04)	2006	Engine control module (ECM)	Erase codes		Test/movement of camshaft control, exhaust
VOLVO	S40 (04)	2006	Central electronic module (CEM)	ECU identification		
VOLVO	S40 (04)	2006	Central electronic module (CEM)	Read codes		
VOLVO	S40 (04)	2006	Central electronic module (CEM)	Erase codes		
VOLVO	S40 (04)	2006	Central electronic module (CEM)	Freeze frame		
VOLVO	S40 (04)	2006	Central electronic module (CEM)	Active test		
VOLVO	S40 (04)	2006	Central electronic module (CEM)	Special functions		
VOLVO	S40 (04)	2006	Central electronic module (CEM)	ECU identification		
VOLVO	S40 (04)	2006	Central electronic module (CEM)	Read codes		Activating components
VOLVO	S40 (04)	2006	Central electronic module (CEM)	Erase codes		Testing the fuel pump (FP)
VOLVO	S40 (04)	2006	Central electronic module (CEM)	Freeze frame		Resetting counter particle filter
VOLVO	S40 (04)	2006	Central electronic module (CEM)	Specifications		Combustion of soot particles
VOLVO	S40 (04)	2006	Central electronic module (CEM)	ECU identification		Checking the oil level
VOLVO	S40 (04)	2006	Central electronic module (CEM)	Read codes		Adjusting calculated oil level
VOLVO	S40 (04)	2006	Central electronic module (CEM)	Erase codes		
VOLVO	S40 (04)	2006	Central electronic module (CEM)	Freeze frame		
VOLVO	S40 (04)	2006	Central electronic module (CEM)	Active test		
VOLVO	S40 (04)	2006	Central electronic module (CEM)	Special functions		
VOLVO	S40 (04)	2006	Central electronic module (CEM)	ECU identification		
VOLVO	S40 (04)	2006	Central electronic module (CEM)	Read codes		Activating components and functions
VOLVO	S40 (04)	2006	Central electronic module (CEM)	Erase codes		Calibration (cars with DTC)
VOLVO	S40 (04)	2006	Central electronic module (CEM)	Freeze frame		Resetting adaption
VOLVO	S40 (04)	2006	Brake control module (BCM)	ECU identification		
VOLVO	S40 (04)	2006	Brake control module (BCM)	Read codes		
VOLVO	S40 (04)	2006	Brake control module (BCM)	Erase codes		
VOLVO	S40 (04)	2006	Brake control module (BCM)	Freeze frame		
VOLVO	S40 (04)	2006	Brake control module (BCM)	Specifications		
VOLVO	S40 (04)	2006	Brake control module (BCM)	ECU identification		
VOLVO	S40 (04)	2006	Brake control module (BCM)	Read codes		Activating TEST MODE
VOLVO	S40 (04)	2006	Brake control module (BCM)	Erase codes		Control module adaption
VOLVO	S40 (04)	2006	Brake control module (BCM)	Freeze frame		Adatation of the throttle unit
VOLVO	S40 (04)	2006	Brake control module (BCM)	Special functions		Quick test of the fuel pump (FP)
VOLVO	S40 (04)	2006	Brake control module (BCM)	ECU identification		Resetting code
VOLVO	S40 (04)	2006	Brake control module (BCM)	Read codes		Quick test of fuel tank system (USA/CN)
VOLVO	S40 (04)	2006	Brake control module (BCM)	Erase codes		Test/movement of camshaft control, intake
VOLVO	S40 (04)	2006	Brake control module (BCM)	Freeze frame		Test/movement of camshaft control, exhaust
VOLVO	S40 (04)	2006	Driver door module (DDM)	ECU identification		
VOLVO	S40 (04)	2006	Driver door module (DDM)	Read codes		
VOLVO	S40 (04)	2006	Driver door module (DDM)	Erase codes		
VOLVO	S40 (04)	2006	Driver door module (DDM)	Freeze frame		
VOLVO	S40 (04)	2006	Driver door module (DDM)	Active test		
VOLVO	S40 (04)	2006	Driver door module (DDM)	Special functions		
VOLVO	S40 (04)	2006	Driver door module (DDM)	ECU identification		
VOLVO	S40 (04)	2006	Supplemental restraint system module (SRS)	Read codes		Activating components and functions
VOLVO	S40 (04)	2006	Supplemental restraint system module (SRS)	Erase codes		Calibration (cars with DTC)
VOLVO	S40 (04)	2006	Supplemental restraint system module (SRS)	Freeze frame		Resetting adaption
VOLVO	S40 (04)	2006	Supplemental restraint system module (SRS)	Specifications		
VOLVO	S40 (04)	2006	Supplemental restraint system module (SRS)	ECU identification		
VOLVO	S40 (04)	2006	Supplemental restraint system module (SRS)	Read codes		Activating TEST MODE
VOLVO	S40 (04)	2006	Supplemental restraint system module (SRS)	Erase codes		Control module adaption
VOLVO	S40 (04)	2006	Supplemental restraint system module (SRS)	Freeze frame		Adatation of the throttle unit
VOLVO	S40 (04)	2006	Supplemental restraint system module (SRS)	Special functions		Quick test of the fuel pump (FP)
VOLVO	S40 (04)	2006	Supplemental restraint system module (SRS)	ECU identification		Resetting code
VOLVO	S40 (04)	2006	Supplemental restraint system module (SRS)	Read codes		Quick test of fuel tank system (USA/CN)
VOLVO	S40 (04)	2006	Supplemental restraint system module (SRS)	Erase codes		Test/movement of camshaft control, intake
VOLVO	S40 (04)	2006	Supplemental restraint system module (SRS)	Freeze frame		Test/movement of camshaft control, exhaust
VOLVO	S40 (04)	2006	Infotainment control module (ICM)	ECU identification		
VOLVO	S40 (04)	2006	Infotainment control module (ICM)	Read codes		
VOLVO	S40 (04)	2006	Infotainment control module (ICM)	Erase codes		
VOLVO	S40 (04)	2006	Infotainment control module (ICM)	Freeze frame		
VOLVO	S40 (04)	2006	Infotainment control module (ICM)	Active test		
VOLVO	S40 (04)	2006	Infotainment control module (ICM)	Special functions		
VOLVO	S40 (04)	2006	Infotainment control module (ICM)	ECU identification		
VOLVO	S40 (04)	2006	Infotainment control module (ICM)	Read codes		Activating components and functions
VOLVO	S40 (04)	2006	Infotainment control module (ICM)	Erase codes		Calibration (cars with DTC)
VOLVO	S40 (04)	2006	Infotainment control module (ICM)	Freeze frame		Resetting adaption
VOLVO	S40 (04)	2006	Infotainment control module (ICM)	Specifications		
VOLVO	S40 (04)	2006	Infotainment control module (ICM)	ECU identification		
VOLVO	S40 (04)	2006	Infotainment control module (ICM)	Read codes		Activating TEST MODE
VOLVO	S40 (04)	2006	Infotainment control module (ICM)	Erase codes		Control module adaption
VOLVO	S40 (04)	2006	Infotainment control module (ICM)	Freeze frame		Adatation of the throttle unit
VOLVO	S40 (04)	2006	Infotainment control module (ICM)	Special functions		Quick test of the fuel pump (FP)
VOLVO	S40 (04)	2006	Infotainment control module (ICM)	ECU identification		Resetting code
VOLVO	S40 (04)	2006	Infotainment control module (ICM)	Read codes		Quick test of fuel tank system (USA/CN)
VOLVO	S40 (04)	2006	Infotainment control module (ICM)	Erase codes		Test/movement of camshaft control, intake
VOLVO	S40 (04)	2006	Infotainment control module (ICM)	Freeze frame		Test/movement of camshaft control, exhaust
VOLVO	S40 (04)	2006	Driver information module (DIM)	ECU identification		
VOLVO	S40 (04)	2006	Driver information module (DIM)	Read codes		
VOLVO	S40 (04)	2006	Driver information module (DIM)	Erase codes		
VOLVO	S40 (04)	2006	Driver information module (DIM)	Freeze frame		
VOLVO	S40 (04)	2006	Driver information module (DIM)	Active test		
VOLVO	S40 (04)	2006	Driver information module (DIM)	Special functions		
VOLVO	S40 (04)	2006	Driver information module (DIM)	ECU identification		
VOLVO	S40 (04)	2006	Driver information module (DIM)	Read codes		Activating components and functions
VOLVO	S40 (04)	2006	Driver information module (DIM)	Erase codes		Calibration (cars with DTC)
VOLVO	S40 (04)	2006	Driver information module (DIM)	Freeze frame		Resetting adaption
VOLVO	S40 (04)	2006	Driver information module (DIM)	Specifications		
VOLVO	S40 (04)	2006	Driver information module (DIM)	ECU identification		
VOLVO	S40 (04)	2006	Driver information module (DIM)	Read codes		Activating TEST MODE
VOLVO	S40 (04)	2006	Driver information module (DIM)	Erase codes		Control module adaption
VOLVO	S40 (04)	2006	Driver information module (DIM)	Freeze frame		Adatation of the throttle unit
VOLVO	S40 (04)	2006	Driver information module (DIM)	Special functions		Quick test of the fuel pump (FP)
VOLVO	S40 (04)	2006	Driver information module (DIM)	ECU identification		Resetting code
VOLVO	S40 (04)</					

VOLVO	S80 (07)	2007	Headlamo control module (HCM)	Erase codes		V1.10.001
VOLVO	S80 (07)	2007	Headlamo control module (HCM)	Freeze frame	Activation	V1.10.001
VOLVO	S80 (07)	2007	Headlamo control module (HCM)	Special functions	Calibration of position sensor	V1.10.001
VOLVO	S80 (07)	2007	Forward sensing module (FSM)	ECU identification		V1.10.001
VOLVO	S80 (07)	2007	Forward sensing module (FSM)	Read codes		V1.10.001
VOLVO	S80 (07)	2007	Forward sensing module (FSM)	Erase codes		V1.10.001
VOLVO	S80 (07)	2007	Forward sensing module (FSM)	Freeze frame		V1.10.001
VOLVO	S80 (07)	2007	Forward sensing module (FSM)	Special functions		V1.10.001
VOLVO	S80 (07)	2007	Forward sensing module (FSM)	ECU identification	Activating the internal test procedures	V1.10.001
VOLVO	S80 (07)	2007	Forward sensing module (FSM)	Read codes	Activating heating coil, PSM	V1.10.001
VOLVO	S80 (07)	2007	Forward sensing module (FSM)	Erase codes	Calibration of radar and camera	V1.10.001
VOLVO	S80 (07)	2007	Parking assistance module (PAM)	ECU identification		V1.10.001
VOLVO	S80 (07)	2007	Parking assistance module (PAM)	Read codes		V1.10.001
VOLVO	S80 (07)	2007	Parking assistance module (PAM)	Erase codes		V1.10.001
VOLVO	S80 (07)	2007	Parking assistance module (PAM)	Freeze frame		V1.10.001
VOLVO	S80 (07)	2007	Parking assistance module (PAM)	Special functions		V1.10.001
VOLVO	S80 (07)	2007	Parking assistance module (PAM)	ECU identification	Programming of parking assistance module (PAM)	V1.10.001
VOLVO	S80 (07)	2007	Parking assistance module (PAM)	Read codes		V1.10.001
VOLVO	S80 (07)	2007	High level display front (HDF)	ECU identification		V1.10.001
VOLVO	S80 (07)	2007	High level display front (HDF)	Read codes		V1.10.001
VOLVO	S80 (07)	2007	High level display front (HDF)	Erase codes		V1.10.001
VOLVO	S80 (07)	2007	High level display front (HDF)	Freeze frame		V1.10.001
VOLVO	S80 (07)	2007	High level display front (HDF)	Special functions		V1.10.001
VOLVO	S80 (07)	2007	Remote digital audio receiver (RDAIR)	ECU identification	Activation	V1.10.001
VOLVO	S80 (07)	2007	Remote digital audio receiver (RDAIR)	Read codes		V1.10.001
VOLVO	S80 (07)	2007	Remote digital audio receiver (RDAIR)	Erase codes		V1.10.001
VOLVO	S80 (07)	2007	Remote digital audio receiver (RDAIR)	Freeze frame		V1.10.001
VOLVO	S80 (07)	2007	Bluetooth phone module (BPM)	ECU identification		V1.10.001
VOLVO	S80 (07)	2007	Bluetooth phone module (BPM)	Read codes		V1.10.001
VOLVO	S80 (07)	2007	Bluetooth phone module (BPM)	Erase codes		V1.10.001
VOLVO	S80 (07)	2007	Bluetooth phone module (BPM)	Freeze frame		V1.10.001
VOLVO	S80 (07)	2007	Trailer module (TRM)	ECU identification		V1.10.001
VOLVO	S80 (07)	2007	Trailer module (TRM)	Read codes		V1.10.001
VOLVO	S80 (07)	2007	Trailer module (TRM)	Erase codes		V1.10.001
VOLVO	S80 (07)	2007	Trailer module (TRM)	Freeze frame		V1.10.001
VOLVO	S80 (07)	2007	Multimedia module (MMM)	ECU identification		V1.10.001
VOLVO	S80 (07)	2007	Multimedia module (MMM)	Read codes		V1.10.001
VOLVO	S80 (07)	2007	Multimedia module (MMM)	Erase codes		V1.10.001
VOLVO	S80 (07)	2007	Multimedia module (MMM)	Freeze frame		V1.10.001
VOLVO	S80 (07)	2007	Integrated audio module (IAM)	ECU identification		V1.10.001
VOLVO	S80 (07)	2007	Integrated audio module (IAM)	Read codes		V1.10.001
VOLVO	S80 (07)	2007	Integrated audio module (IAM)	Erase codes		V1.10.001
VOLVO	S80 (07)	2007	Integrated audio module (IAM)	Freeze frame		V1.10.001
VOLVO	S80 (07)	2007	Parking assistance camera (PAC)	ECU identification		V1.10.001
VOLVO	S80 (07)	2007	Parking assistance camera (PAC)	Read codes		V1.10.001
VOLVO	S80 (07)	2007	Parking assistance camera (PAC)	Erase codes		V1.10.001
VOLVO	S80 (07)	2007	Parking assistance camera (PAC)	Freeze frame		V1.10.001
VOLVO	S80 (07)	2007	Phone module (PHM)	ECU identification	Activation of installation image	V1.10.001
VOLVO	S80 (07)	2007	Phone module (PHM)	Read codes		V1.10.001
VOLVO	S80 (07)	2007	Phone module (PHM)	Erase codes		V1.10.001
VOLVO	S80 (07)	2007	Phone module (PHM)	Freeze frame		V1.10.001
VOLVO	S80 (07)	2007	Phone module (PHM)	Special functions		V1.10.001
VOLVO	S80 (07)	2007	Accessory USB unit (AUU)	ECU identification	Reinstalling the reserve battery	V1.10.001
VOLVO	S80 (07)	2007	Accessory USB unit (AUU)	Read codes		V1.10.001
VOLVO	S80 (07)	2007	Accessory USB unit (AUU)	Erase codes		V1.10.001
VOLVO	S80 (07)	2007	Accessory USB unit (AUU)	Freeze frame		V1.10.001
VOLVO	S80 (07)	2007	Transmission control module (TCM)	ECU identification	Resetting adaptation	V1.10.001
VOLVO	S80 (07)	2007	Transmission control module (TCM)	Read codes	Resetting the Transmission fluid change counter	V1.10.001
VOLVO	S80 (07)	2007	Transmission control module (TCM)	Erase codes	Calibration of gear position sensor	V1.10.001
VOLVO	S80 (07)	2007	Transmission control module (TCM)	Freeze frame	Activating gear indication	V1.10.001
VOLVO	S80 (07)	2007	Transmission control module (TCM)	Active test	Calibration of transmission sensors	V1.10.001
VOLVO	S80 (07)	2007	Transmission control module (TCM)	Special functions	Readiness code (USA/CDN)	V1.10.001
VOLVO	S80 (07)	2007	Transmission control module (TCM)	ECU identification	Resetting the adatation value	V1.10.001
VOLVO	S80 (07)	2007	Transmission control module (TCM)	Read codes	Readline off UMPR (USA/CDN)	V1.10.001
VOLVO	S80 (07)	2007	Transmission control module (TCM)	Erase codes	Quick test of fuel tank system (USA/CDN)	V1.10.001
VOLVO	S80 (07)	2007	Engine control module (ECM)	ECU identification	Adaptation of the exhaust gas recirculation (EGR) valve	V1.10.001
VOLVO	S80 (07)	2007	Engine control module (ECM)	Read codes	Adaptation of the throttle module	V1.10.001
VOLVO	S80 (07)	2007	Engine control module (ECM)	Erase codes	Adaptation of swivel channel throttle	V1.10.001
VOLVO	S80 (07)	2007	Engine control module (ECM)	Freeze frame	Adaptation of the control motor	V1.10.001
VOLVO	S80 (07)	2007	Engine control module (ECM)	Special functions	Adaptation of the heated oxygen sensor	V1.10.001
VOLVO	S80 (07)	2007	Differential electronic module (DEM)	ECU identification	Adaptation of mass airflow sensor	V1.10.001
VOLVO	S80 (07)	2007	Differential electronic module (DEM)	Read codes	Adaptation of differential pressure sensor/capacitor filter	V1.10.001
VOLVO	S80 (07)	2007	Differential electronic module (DEM)	Erase codes	Adaptation of the particle filter	V1.10.001
VOLVO	S80 (07)	2007	Differential electronic module (DEM)	Freeze frame	Resetting the counter for the particle filter	V1.10.001
VOLVO	S80 (07)	2007	Differential electronic module (DEM)	Special functions	Combustion of soot particles	V1.10.001
VOLVO	S80 (07)	2007	Differential electronic module (DEM)	ECU identification	Checking the oil level	V1.10.001
VOLVO	S80 (07)	2007	Differential electronic module (DEM)	Read codes	Checking the oil level	V1.10.001
VOLVO	S80 (07)	2007	Differential electronic module (DEM)	Erase codes	Adjusting calculated oil level	V1.10.001
VOLVO	S80 (07)	2007	Differential electronic module (DEM)	Freeze frame	Fuel pump activation for vehicles without fuel pump module (PEM)	V1.10.001
VOLVO	S80 (07)	2008	Central electronic module (CEM)	ECU identification		V1.10.001
VOLVO	S80 (07)	2008	Central electronic module (CEM)	Read codes		V1.10.001
VOLVO	S80 (07)	2008	Central electronic module (CEM)	Erase codes		V1.10.001
VOLVO	S80 (07)	2008	Central electronic module (CEM)	Freeze frame		V1.10.001
VOLVO	S80 (07)	2008	Engine control module (ECM)	ECU identification	Resettling the adatation values	V1.10.001
VOLVO	S80 (07)	2008	Engine control module (ECM)	Read codes	Resettling the oil quality counter	V1.10.001
VOLVO	S80 (07)	2008	Engine control module (ECM)	Erase codes		V1.10.001
VOLVO	S80 (07)	2008	Engine control module (ECM)	Freeze frame		V1.10.001
VOLVO	S80 (07)	2008	Engine control module (ECM)	Special functions		V1.10.001
VOLVO	S80 (07)	2008	Central electronic module (CEM)	ECU identification	Pre-delivery service for new car	V1.10.001
VOLVO	S80 (07)	2008	Central electronic module (CEM)	Read codes	Reseting supplemental restraint system	V1.10.001
VOLVO	S80 (07)	2008	Central electronic module (CEM)	Erase codes	Reseting off alarm cause	V1.10.001
VOLVO	S80 (07)	2008	Central electronic module (CEM)	Freeze frame	Workshop tool test (PMS)	V1.10.001
VOLVO	S80 (07)	2008	Central electronic module (CEM)	Special functions	Checking inclination, brake light switch, and brake pedal position switch	V1.10.001
VOLVO	S80 (07)	2008	Central electronic module (CEM)	ECU identification	Deactivating airbag function	V1.10.001
VOLVO	S80 (07)	2008	Central electronic module (CEM)	Read codes	Read-out and resetting auto-lock	V1.10.001
VOLVO	S80 (07)	2008	Central electronic module (CEM)	Erase codes	Read-out off power suv/od position	V1.10.001
VOLVO	S80 (07)	2008	Central electronic module (CEM)	Freeze frame	Read-out for vehicles without fuel pump module (PEM)	V1.10.001
VOLVO	S80 (07)	2008	Central electronic module (CEM)	Special functions	Ejection of key	V1.10.001
VOLVO	S80 (07)	2008	Central electronic module (CEM)	ECU identification	Setting day and night mode for the instrumentation	V1.10.001
VOLVO	S80 (07)	2008	Central electronic module (CEM)	Read codes	Activating wipers, front/rear	V1.10.001
VOLVO	S80 (07)	2008	Passenger door module (PDM)	ECU identification		V1.10.001
VOLVO	S80 (07)	2008	Passenger door module (PDM)	Read codes		V1.10.001
VOLVO	S80 (07)	2008	Passenger door module (PDM)	Erase codes		V1.10.001
VOLVO	S80 (07)	2008	Passenger door module (PDM)	Freeze frame		V1.10.001
VOLVO	S80 (07)	2008	Passenger door module (PDM)	Special functions		V1.10.001
VOLVO	S80 (07)	2008	Passenger door module (PDM)	ECU identification	Installing the window in the front door	V1.10.001
VOLVO	S80 (07)	2008	Passenger door module (PDM)	Read codes	Installing the window in the rear door	V1.10.001
VOLVO	S80 (07)	2008	Passenger door module (PDM)	Erase codes	Central lock motors, activating	V1.10.001
VOLVO	S80 (07)	2008	Brake control module (BCM)	ECU identification		V1.10.001
VOLVO	S80 (07)	2008	Brake control module (BCM)	Read codes		V1.10.001
VOLVO	S80 (07)	2008	Brake control module (BCM)	Erase codes		V1.10.001
VOLVO	S80 (07)	2008	Brake control module (BCM)	Freeze frame		V1.10.001
VOLVO	S80 (07)	2008	Steering angle sensor module (SAS)	ECU identification	Calibration	V1.10.001
VOLVO	S80 (07)	2008	Steering angle sensor module (SAS)	Read codes	Restart of the brake control module (BCM)	V1.10.001
VOLVO	S80 (07)	2008	Steering angle sensor module (SAS)	Erase codes		V1.10.001
VOLVO	S80 (07)	2008	Steering angle sensor module (SAS)	Freeze frame		V1.10.001
VOLVO	S80 (07)	2008	Brake control module (BCM)	ECU identification		V1.10.001
VOLVO	S80 (07)	2008	Brake control module (BCM)	Read codes		V1.10.001
VOLVO	S80 (07)	2008	Brake control module (BCM)	Erase codes		V1.10.001
VOLVO	S80 (07)	2008	Brake control module (BCM)	Freeze frame		V1.10.001
VOLVO	S80 (07)	2008	Brake control module (BCM)	Special functions		V1.10.001
VOLVO	S80 (07)	2008	Park brake module (PBM)	ECU identification	Calibrating the occupant weight sensor (OWS)	V1.10.001
VOLVO	S80 (07)	2008	Park brake module (PBM)	Read codes	Powering the SRS system	V1.10.001
VOLVO	S80 (07)	2008	Park brake module (PBM)	Erase codes	Checking the PAD-light	V1.10.001
VOLVO	S80 (07)	2008	Park brake module (PBM)	Freeze frame		V1.10.001
VOLVO	S80 (07)	2008	Park brake module (PBM)	Special functions		V1.10.001
VOLVO	S80 (07)	2008	Park brake module (PBM)	ECU identification	Resetting the odometer setting	V1.10.001
VOLVO	S80 (07)	2008	Park brake module (PBM)	Read codes	Reseting in the service indicator - car (SII)	V1.10.001
VOLVO	S80 (07)	2008	Park brake module (PBM)	Erase codes	Testing in the service indicator in the driver information module (DIM)	V1.10.001
VOLVO	S80 (07)	2008	Park brake module (PBM)	Freeze frame	Programming (loud) audible signal, seat belt reminder	V1.10.001
VOLVO	S80 (07)	2008	Park brake module (PBM)	Special functions	Programming seatbelt reminder in backseat	V1.10.001
VOLVO	S80 (07)	2008	Park brake module (PBM)	ECU identification	Programming text message, seatbelt reminder	V1.10.001
VOLVO	S80 (07)	2008	Park brake module (PBM)	Read codes	Programming driver information module (DIM)	V1.10.001
VOLVO	S80 (07)	2008	Park brake module (PBM)	Erase codes	Read-out of fuel volume,	V1.10.001
VOLVO	S80 (07)	2008	Park brake module (PBM)	Freeze frame	Display of oil check	V1.10.001
VOLVO	S80 (07)	2008	Infotainment control module (ICM)	ECU identification		V1.10.001
VOLVO	S80 (07)	2008	Infotainment control module (ICM)	Read codes		V1.10.001
VOLVO	S80 (07)	2008	Infotainment control module (ICM)	Erase codes		V1.10.001
VOLVO	S80 (07)	2008	Infotainment control module (ICM)	Freeze frame		V1.10.001
VOLVO	S80 (07)	2008	Infotainment control module (ICM)	Special functions		V1.10.001
VOLVO	S80 (07)	2008	Infotainment control module (ICM)	ECU identification	Calibration angle sensor	V1.10.001
VOLVO	S80 (07)	2008	Infotainment control module (ICM)	Read codes	Activation and service	V1.10.001
VOLVO	S80 (07)	2008	Infotainment control module (ICM)	Erase codes	Reseting the clutch pedal counter	V1.10.001
VOLVO	S80 (07)	2008	Infotainment control module (ICM)	Freeze frame		V1.10.001
VOLVO	S80 (07)	2008	Infotainment control module (ICM)	Special functions		V1.10.001
VOLVO	S80 (07)	2008	Climate control module (CCM)	ECU identification	Calibrating the climate control module (CCM)	V1.10.001
VOLVO	S80 (07)	2008	Climate control module (CCM)	Read codes	Identifying components on the LIN network that belong to the climate control system (CCM)	V1.10.001
VOLVO	S80 (07)	2008	Climate control module (CCM)	Erase codes	Reading off programmed values	V1.10.001
VOLVO	S80 (07)	2008	Climate control module (CCM)	Freeze frame	Reading out electronic actuator, actual / present range and tolerance limit	V1.10.001
VOLVO	S80 (07)	2008	Climate control module (CCM)	Special functions	Programming evaporator, climate control module (CCM)	V1.10.001
VOLVO	S80 (07)	2008	Climate control module (CCM)	ECU identification	Activation of blower fan run-on	V1.10.001
VOLVO	S80 (07)	2008	Climate control module (CCM)	Read codes	Airflow setting in rear passenger compartment	V1.10.001
VOLVO	S80 (07)	2008	Climate control module (CCM)	Erase codes	Programmng temperature setpoint	V1.10.001
VOLVO	S80 (07)	2008	Power seat module (PSM)	ECU identification	Action for failing temperature and cold draught in passenger compartment	V1.10.001
VOLVO	S80 (07)	2008	Power seat module (PSM)	Read codes		V1.10.001
VOLVO	S80 (07)	2008	Power seat module (PSM)	Erase codes		V1.10.001
VOLVO	S80 (07)	2008	Power seat module (PSM)	Freeze frame		V1.

VOLVO	S80 (07)	2008	Keyless vehicle module (KVM)	Erase codes		
			Keyless vehicle module (KVM)	Freeze frame		
			Keyless vehicle module (KVM)	Special functions		
			Keyless vehicle module (KVM)	Specifications		
			Keyless vehicle module (KVM)	Special functions		
			Keyless vehicle module (KVM)	Special functions		
			Keyless vehicle module (KVM)	ECU identification		
			Combination preheater module (CPM)	Read codes		
			Combination preheater module (CPM)	Erase codes		
			Combination preheater module (CPM)	Freeze codes		
			Combination preheater module (CPM)	Special functions		
			Combination preheater module (CPM)	Active test		
			Combination preheater module (CPM)	Specifications		
			Combination preheater module (CPM)	Identification		
			Audio module (AUD)	Read codes		
			Audio module (AUD)	Erase codes		
			Audio module (AUD)	Freeze frame		
			Audio module (AUD)	Special functions		
			Suspension module (SUM)	ECU identification		
			Suspension module (SUM)	Read codes		
			Suspension module (SUM)	Erase codes		
			Suspension module (SUM)	Freeze frame		
			Suspension module (SUM)	Active test		
			Suspension module (SUM)	Specifications		
			Headlight control module (HCM)	ECU identification		
			Headlight control module (HCM)	Read codes		
			Headlight control module (HCM)	Erase codes		
			Headlight control module (HCM)	Freeze frame		
			Headlight control module (HCM)	Special functions		
			Headlight control module (HCM)	ECU identification		
			Parking assistance module (PAM)	Read codes		
			Parking assistance module (PAM)	Erase codes		
			Parking assistance module (PAM)	Freeze frame		
			Parking assistance module (PAM)	Active test		
			Parking assistance module (PAM)	Specifications		
			High level display front (HLDF)	ECU identification		
			High level display front (HLDF)	Read codes		
			High level display front (HLDF)	Erase codes		
			High level display front (HLDF)	Freeze frame		
			High level display front (HLDF)	Special functions		
			Trailer module (TRM)	ECU identification		
			Trailer module (TRM)	Read codes		
			Trailer module (TRM)	Erase codes		
			Phone module (PHM)	ECU identification		
			Phone module (PHM)	Read codes		
			Phone module (PHM)	Erase codes		
			Phone module (PHM)	Freeze frame		
			Accessory USB unit (AUU)	ECU identification		
			Accessory USB unit (AUU)	Read codes		
			Accessory USB unit (AUU)	Erase codes		
			Accessory USB unit (AUU)	Freeze frame		
			Forward sensing module (FSM)	ECU identification		
			Forward sensing module (FSM)	Read codes		
			Forward sensing module (FSM)	Erase codes		
			Forward sensing module (FSM)	Freeze frame		
			Forward sensing module (FSM)	Special functions		
			Forward sensing module (FSM)	ECU identification		
			Remote digital audio receiver (RDA4)	ECU identification		
			Remote digital audio receiver (RDA4)	Read codes		
			Remote digital audio receiver (RDA4)	Erase codes		
			Remote digital audio receiver (RDA4)	Freeze frame		
			Multimedia module (MMMM)	ECU identification		
			Multimedia module (MMMM)	Read codes		
			Multimedia module (MMMM)	Erase codes		
			Multimedia module (MMMM)	Freeze frame		
			Bluetooth phone module (BPM)	ECU identification		
			Bluetooth phone module (BPM)	Read codes		
			Bluetooth phone module (BPM)	Erase codes		
			Bluetooth phone module (BPM)	Freeze frame		
			Parking assistance camera (PAC)	ECU identification		
			Parking assistance camera (PAC)	Read codes		
			Parking assistance camera (PAC)	Erase codes		
			Parking assistance camera (PAC)	Freeze frame		
			Parking assistance camera (PAC)	Special functions		
			Integrated audio module (IAM)	ECU identification		
			Integrated audio module (IAM)	Read codes		
			Integrated audio module (IAM)	Erase codes		
			Integrated audio module (IAM)	Freeze frame		
			Central electronic module (CEM)	ECU identification		
			Central electronic module (CEM)	Read codes		
			Central electronic module (CEM)	Erase codes		
			Central electronic module (CEM)	Freeze frame		
			Engine control module (ECM)	ECU identification		
			Engine control module (ECM)	Read codes		
			Engine control module (ECM)	Erase codes		
			Engine control module (ECM)	Freeze frame		
			Transmission control module (TCM)	ECU identification		
			Transmission control module (TCM)	Read codes		
			Transmission control module (TCM)	Erase codes		
			Transmission control module (TCM)	Freeze frame		
			Transmission control module (TCM)	Active test		
			Transmission control module (TCM)	Specifications		
			Transmission control module (TCM)	Identification		
			Transmission control module (TCM)	Read codes		
			Transmission control module (TCM)	Erase codes		
			Transmission control module (TCM)	Freeze frame		
			Engine control module (ECM)	ECU identification		
			Engine control module (ECM)	Read codes		
			Engine control module (ECM)	Erase codes		
			Engine control module (ECM)	Freeze frame		
			Differential electronic module (DEM)	ECU identification		
			Differential electronic module (DEM)	Read codes		
			Differential electronic module (DEM)	Erase codes		
			Differential electronic module (DEM)	Freeze frame		
			Differential electronic module (DEM)	Active test		
			Differential electronic module (DEM)	Specifications		
			Differential electronic module (DEM)	Identification		
			Engine control module (ECM)	ECU identification		
			Engine control module (ECM)	Read codes		
			Engine control module (ECM)	Erase codes		
			Engine control module (ECM)	Freeze frame		
			Central electronic module (CEM)	ECU identification		
			Central electronic module (CEM)	Read codes		
			Central electronic module (CEM)	Erase codes		
			Central electronic module (CEM)	Freeze frame		
			Central electronic module (CEM)	Active test		
			Central electronic module (CEM)	Specifications		
			Central electronic module (CEM)	Identification		
			Central electronic module (CEM)	Read codes		
			Central electronic module (CEM)	Erase codes		
			Central electronic module (CEM)	Freeze frame		
			Central electronic module (CEM)	Special functions		
			Central electronic module (CEM)	ECU identification		
			Central electronic module (CEM)	Read codes		
			Central electronic module (CEM)	Erase codes		
			Central electronic module (CEM)	Freeze frame		
			Passenger door module (PDM)	ECU identification		
			Passenger door module (PDM)	Read codes		
			Passenger door module (PDM)	Erase codes		
			Passenger door module (PDM)	Freeze frame		
			Passenger door module (PDM)	Active test		
			Passenger door module (PDM)	Specifications		
			Passenger door module (PDM)	Identification		
			Passenger door module (PDM)	Read codes		
			Passenger door module (PDM)	Erase codes		
			Passenger door module (PDM)	Freeze frame		
			Steering angle sensor module (SAS)	ECU identification		
			Steering angle sensor module (SAS)	Read codes		
			Steering angle sensor module (SAS)	Erase codes		
			Steering angle sensor module (SAS)	Freeze frame		
			Park brake module (PBM)	ECU identification		
			Park brake module (PBM)	Read codes		
			Park brake module (PBM)	Erase codes		
			Park brake module (PBM)	Freeze frame		
			Park brake module (PBM)	Active test		
			Park brake module (PBM)	Specifications		
			Park brake module (PBM)	Identification		
			Park brake module (PBM)	Read codes		
			Park brake module (PBM)	Erase codes		
			Park brake module (PBM)	Freeze frame		
			Supplemental restraint system module (SRS)	ECU identification		
			Supplemental restraint system module (SRS)	Read codes		
			Supplemental restraint system module (SRS)	Erase codes		
			Supplemental restraint system module (SRS)	Freeze frame		
			Supplemental restraint system module (SRS)	Active test		
			Supplemental restraint system module (SRS)	Specifications		
			Supplemental restraint system module (SRS)	Identification		
			Brake control module (BCM)	ECU identification		
			Brake control module (BCM)	Read codes		
			Brake control module (BCM)	Erase codes		
			Brake control module (BCM)	Freeze frame		
			Brake control module (BCM)	Active test		
			Brake control module (BCM)	Specifications		
			Brake control module (BCM)	Identification		
			Climate control module (CCM)	ECU identification		
			Climate control module (CCM)	Read codes		
			Climate control module (CCM)	Erase codes		
			Climate control module (CCM)	Freeze frame		
			Climate control module (CCM)	Active test		
			Climate control module (CCM)	Specifications		
			Climate control module (CCM)	Identification		
			Check air bantennas			
			Check the communication with the remote control receiver			
			Remote control			
			Test of internal memory			
			Activation of quick-lock motors			
			Quick test of the function of the additional/parking heater			
			Cooling of the cooling system			
			Accessories			
			Fillings of fuel system auxiliary heater			
			Identification of the heater			
			Request for self-test.			
			Calibration			
			Activation			
			Calibration of position sensor			
			Programming of parking assistance module (PAM)			
			Activation			
			Reinstalling the reserve battery			
			Activating the internal test procedures			
			Activating heating coil, PSM			
			Calibration of radar and camera			
			Activation			
			Activation of installation image			
			Activation of the fuel tank system			
			Checking the DC/AC converter			
			Readiness code			
			Adjustment of the throttle unit			
			Checking the fuel pump unit			
			Test/movement of fuel pump control, intake			
			Test/movement of camshaft control, exhaust			
			Resetting adaptation			
			Resetting the 'Transmission fluid change' counter			
			Calibration of gear position sensor			
			Activating gear position			
			Calibration of gear position sensor			
			Readiness code (USA/CN)			
			Reading off JUMPR (USA/CN)			
			Quick test of the fuel tank system			
			Quick test of fuel tank system (USA/CDN)			
			Quick test of injectors			
			Combustion of soot particles, particle trap			
			Adaptation of the exhaust gas recirculation (EGR) valve			
			Programming of the optimizing parameter			
			Adjustment of the intake manifold			
			Adaptation of the swivel channel throttle			
			Adaptation of turbo control module			
			Adaptation of the intake air temperature			
			Adaptation of mass airflow sensor			
			Adaptation of differential pressure sensor filter			
			Adaptation of fuel pressure control valve			
			Combustion of soot particles			
			Resetting injectors			
			Checking oil level			
			Adjusting crankcase oil level			
			Resetting the adaption values			
			Resetting the oil quality counter			
			Pre-delivery service for new car			
			Restoring supplemental restraint system			
			Resting off alarm cause			
			Vehicle status (VCI)			
			Checking installation, brake light switch, and brake pedal position switch			
			Quick test of alternator function			
			Read-out and setting airlock			
			Reading powertrain position			
			Fuel economy activation for vehicles without fuel pump module (PEMP)			
			Ejection of key			
			Setting day and night mode for the instrumentation			
			Activating wipers, front/rear			
			Initializing the window in the front door			
			Initializing the window in the rear door			
			Central lock motors, activating			
			Calibration			
			Activation and service			
			Resetting oil clutch pedal counter			
			Calibrating angle sensor			
			Activation and service			
			Calibrating the occupant weight sensor (OWS)			
			Powering the SRS system			
			Checking the PWS light			
			Calibration			
			Restart of the brake control module (BCM)			
			Calibrating the climate control module (CCM)			

VOLVO	S80 I071	2009	Climate control module (CCM)	Special functions	Identifying components on the LIN network that belong to the climate control system (CCM)	V1.10.001
VOLVO	S80 I071	2009	Climate control module (CCM)	Special functions	Reading out measured values	V1.10.001
VOLVO	S80 I071	2009	Climate control module (CCM)	Special functions	Reading out measured damper, actual pressure and tolerance limit	V1.10.001
VOLVO	S80 I071	2009	Climate control module (CCM)	Special functions	Programming the evaporator, climate control module (CCM)	V1.10.001
VOLVO	S80 I071	2009	Climate control module (CCM)	Special functions	Activation of blower fan run-on	V1.10.001
VOLVO	S80 I071	2009	Climate control module (CCM)	Special functions	Airflow setting in rear passenger compartment	V1.10.001
VOLVO	S80 I071	2009	Climate control module (CCM)	Special functions	Programmable climate control module (CCM)	V1.10.001
VOLVO	S80 I071	2009	Climate control module (CCM)	Special functions	Action for failing temperature and cold draught in passenger compartment	V1.10.001
VOLVO	S80 I071	2009	Climate control module (CCM)	Special functions	Resetting the temperature sensor	V1.10.001
VOLVO	S80 I071	2009	Indentalment control module (ICM)	ECU identification	Resetting the light sensitivity	V1.10.001
VOLVO	S80 I071	2009	Indentalment control module (ICM)	Read codes	V1.10.001	
VOLVO	S80 I071	2009	Indentalment control module (ICM)	Erase codes	V1.10.001	
VOLVO	S80 I071	2009	Indentalment control module (ICM)	Freeze frame	V1.10.001	
VOLVO	S80 I071	2009	Indentalment control module (ICM)	Active test	V1.10.001	
VOLVO	S80 I071	2009	Indentalment control module (ICM)	Special functions	V1.10.001	
VOLVO	S80 I071	2009	Indentalment control module (ICM)	Special functions	Programming control module	V1.10.001
VOLVO	S80 I071	2009	Indentalment control module (ICM)	Special functions	Open-circuit in the MOST cable.	V1.10.001
VOLVO	S80 I071	2009	Indentalment control module (ICM)	Special functions	Checking MOST communication	V1.10.001
VOLVO	S80 I071	2009	Driver information module (DIM)	ECU identification	V1.10.001	
VOLVO	S80 I071	2009	Driver information module (DIM)	Read codes	V1.10.001	
VOLVO	S80 I071	2009	Driver information module (DIM)	Erase codes	V1.10.001	
VOLVO	S80 I071	2009	Driver information module (DIM)	Freeze frame	V1.10.001	
VOLVO	S80 I071	2009	Driver information module (DIM)	Special functions	V1.10.001	
VOLVO	S80 I071	2009	Driver information module (DIM)	Special functions	Reseting the odometer setting	V1.10.001
VOLVO	S80 I071	2009	Driver information module (DIM)	Special functions	Resetting the service indicator (SII)	V1.10.001
VOLVO	S80 I071	2009	Driver information module (DIM)	Special functions	Testing all indicators and lamps in the driver information module (DIM)	V1.10.001
VOLVO	S80 I071	2009	Driver information module (DIM)	Special functions	Programming loudest audible signal, seat belt reminder	V1.10.001
VOLVO	S80 I071	2009	Driver information module (DIM)	Special functions	Programming seatbelt reminder in broadcast	V1.10.001
VOLVO	S80 I071	2009	Driver information module (DIM)	Special functions	Programming test message, seatbelt reminder	V1.10.001
VOLVO	S80 I071	2009	Driver information module (DIM)	Special functions	Programming driver information module (DIM)	V1.10.001
VOLVO	S80 I071	2009	Driver information module (DIM)	Special functions	Read-out of fuel volume.	V1.10.001
VOLVO	S80 I071	2009	Driver information module (DIM)	Special functions	Display of oil check	V1.10.001
VOLVO	S80 I071	2009	Power seat module (PSM)	ECU identification	V1.10.001	
VOLVO	S80 I071	2009	Power seat module (PSM)	Read codes	V1.10.001	
VOLVO	S80 I071	2009	Power seat module (PSM)	Erase codes	V1.10.001	
VOLVO	S80 I071	2009	Power seat module (PSM)	Freeze frame	V1.10.001	
VOLVO	S80 I071	2009	Power seat module (PSM)	Special functions	V1.10.001	
VOLVO	S80 I071	2009	Combustion preheater module (CPM)	ECU identification	Checking all antennas	V1.10.001
VOLVO	S80 I071	2009	Combustion preheater module (CPM)	Read codes	Checking the communication with the remote control receiver.	V1.10.001
VOLVO	S80 I071	2009	Combustion preheater module (CPM)	Erase codes	Remote control	V1.10.001
VOLVO	S80 I071	2009	Combustion preheater module (CPM)	Freeze frame	Test of internal memory	V1.10.001
VOLVO	S80 I071	2009	Combustion preheater module (CPM)	Special functions	Activation of quick-lock motors	V1.10.001
VOLVO	S80 I071	2009	Combustion preheater module (CPM)	Special functions	V1.10.001	
VOLVO	S80 I071	2009	Combustion preheater module (CPM)	Special functions	Identification of the heater	V1.10.001
VOLVO	S80 I071	2009	Audio module (AUDI)	ECU identification	Guard test of the function of the additional/parking heater	V1.10.001
VOLVO	S80 I071	2009	Audio module (AUDI)	Read codes	Cooling of the cooling system	V1.10.001
VOLVO	S80 I071	2009	Audio module (AUDI)	Erase codes	Activating components	V1.10.001
VOLVO	S80 I071	2009	Audio module (AUDI)	Freeze frame	Filling of fuel system auxiliary heater	V1.10.001
VOLVO	S80 I071	2009	Suspension module (SUM)	ECU identification	Identification of the heater	V1.10.001
VOLVO	S80 I071	2009	Suspension module (SUM)	Read codes	V1.10.001	
VOLVO	S80 I071	2009	Suspension module (SUM)	Erase codes	V1.10.001	
VOLVO	S80 I071	2009	Suspension module (SUM)	Freeze frame	V1.10.001	
VOLVO	S80 I071	2009	Suspension module (SUM)	Special functions	Calibration	V1.10.001
VOLVO	S80 I071	2009	Headlamp control module (HCM)	ECU identification	V1.10.001	
VOLVO	S80 I071	2009	Headlamp control module (HCM)	Read codes	V1.10.001	
VOLVO	S80 I071	2009	Headlamp control module (HCM)	Erase codes	V1.10.001	
VOLVO	S80 I071	2009	Headlamp control module (HCM)	Freeze frame	V1.10.001	
VOLVO	S80 I071	2009	Headlamp control module (HCM)	Special functions	Activation	V1.10.001
VOLVO	S80 I071	2009	Headlamp control module (HCM)	Special functions	Calibration of position sensor	V1.10.001
VOLVO	S80 I071	2009	Parking assistance module (PAM)	Read codes	V1.10.001	
VOLVO	S80 I071	2009	Parking assistance module (PAM)	Erase codes	V1.10.001	
VOLVO	S80 I071	2009	Parking assistance module (PAM)	Freeze frame	V1.10.001	
VOLVO	S80 I071	2009	Parking assistance module (PAM)	Special functions	Programming of parking assistance module (PAM)	V1.10.001
VOLVO	S80 I071	2009	High level display front (DF)	ECU identification	V1.10.001	
VOLVO	S80 I071	2009	High level display front (DF)	Read codes	V1.10.001	
VOLVO	S80 I071	2009	High level display front (DF)	Erase codes	V1.10.001	
VOLVO	S80 I071	2009	High level display front (DF)	Freeze frame	V1.10.001	
VOLVO	S80 I071	2009	High level display front (HDF)	ECU identification	V1.10.001	
VOLVO	S80 I071	2009	High level display front (HDF)	Read codes	V1.10.001	
VOLVO	S80 I071	2009	High level display front (HDF)	Erase codes	V1.10.001	
VOLVO	S80 I071	2009	High level display front (HDF)	Freeze frame	V1.10.001	
VOLVO	S80 I071	2009	Trailer module (TRM)	ECU identification	Activation	V1.10.001
VOLVO	S80 I071	2009	Trailer module (TRM)	Read codes	V1.10.001	
VOLVO	S80 I071	2009	Trailer module (TRM)	Erase codes	V1.10.001	
VOLVO	S80 I071	2009	Trailer module (TRM)	Freeze frame	V1.10.001	
VOLVO	S80 I071	2009	Accessory USB unit (AUU)	ECU identification	Programming of parking assistance module (PAM)	V1.10.001
VOLVO	S80 I071	2009	Accessory USB unit (AUU)	Read codes	V1.10.001	
VOLVO	S80 I071	2009	Accessory USB unit (AUU)	Erase codes	V1.10.001	
VOLVO	S80 I071	2009	Accessory USB unit (AUU)	Freeze frame	V1.10.001	
VOLVO	S80 I071	2009	Forward sensing module (FSM)	ECU identification	V1.10.001	
VOLVO	S80 I071	2009	Forward sensing module (FSM)	Read codes	V1.10.001	
VOLVO	S80 I071	2009	Forward sensing module (FSM)	Erase codes	V1.10.001	
VOLVO	S80 I071	2009	Forward sensing module (FSM)	Freeze frame	V1.10.001	
VOLVO	S80 I071	2009	Forward sensing module (FSM)	Special functions	V1.10.001	
VOLVO	S80 I071	2009	Forward sensing module (FSM)	Special functions	Activation of the internal test procedures	V1.10.001
VOLVO	S80 I071	2009	Forward sensing module (FSM)	Special functions	Activation heating coil, FSM	V1.10.001
VOLVO	S80 I071	2009	Forward sensing module (FSM)	Special functions	Calibration of radar and camera	V1.10.001
VOLVO	S80 I071	2009	Bluetooth phone module (BPM)	ECU identification	V1.10.001	
VOLVO	S80 I071	2009	Bluetooth phone module (BPM)	Read codes	V1.10.001	
VOLVO	S80 I071	2009	Bluetooth phone module (BPM)	Erase codes	V1.10.001	
VOLVO	S80 I071	2009	Bluetooth phone module (BPM)	Freeze frame	V1.10.001	
VOLVO	S80 I071	2009	Bluetooth phone module (BPM)	Special functions	V1.10.001	
VOLVO	S80 I071	2009	Parking assistance camera (PAC)	ECU identification	Activation of installation image	V1.10.001
VOLVO	S80 I071	2009	Parking assistance camera (PAC)	Read codes	V1.10.001	
VOLVO	S80 I071	2009	Parking assistance camera (PAC)	Erase codes	V1.10.001	
VOLVO	S80 I071	2009	Parking assistance camera (PAC)	Freeze frame	V1.10.001	
VOLVO	S80 I071	2009	Parking assistance camera (PAC)	Special functions	V1.10.001	
VOLVO	S80 I071	2009	Multimedia module (MMMI)	ECU identification	V1.10.001	
VOLVO	S80 I071	2009	Multimedia module (MMMI)	Read codes	V1.10.001	
VOLVO	S80 I071	2009	Multimedia module (MMMI)	Erase codes	V1.10.001	
VOLVO	S80 I071	2009	Multimedia module (MMMI)	Freeze frame	V1.10.001	
VOLVO	S80 I071	2009	Digital audio broadcast module (DABM)	ECU identification	V1.10.001	
VOLVO	S80 I071	2009	Digital audio broadcast module (DABM)	Read codes	V1.10.001	
VOLVO	S80 I071	2009	Digital audio broadcast module (DABM)	Erase codes	V1.10.001	
VOLVO	S80 I071	2009	Digital audio broadcast module (DABM)	Freeze frame	V1.10.001	
VOLVO	S80 I071	2009	Remote digital audio receiver (RDAIR)	ECU identification	V1.10.001	
VOLVO	S80 I071	2009	Remote digital audio receiver (RDAIR)	Read codes	V1.10.001	
VOLVO	S80 I071	2009	Remote digital audio receiver (RDAIR)	Erase codes	V1.10.001	
VOLVO	S80 I071	2009	Remote digital audio receiver (RDAIR)	Freeze frame	V1.10.001	
VOLVO	S80 I071	2009	Integrated audio module (IAM)	ECU identification	V1.10.001	
VOLVO	S80 I071	2009	Integrated audio module (IAM)	Read codes	V1.10.001	
VOLVO	S80 I071	2009	Integrated audio module (IAM)	Erase codes	V1.10.001	
VOLVO	S80 I071	2009	Integrated audio module (IAM)	Freeze frame	V1.10.001	
VOLVO	S80 I071	2009	Phone module (PHM)	ECU identification	V1.10.001	
VOLVO	S80 I071	2009	Phone module (PHM)	Read codes	V1.10.001	
VOLVO	S80 I071	2009	Phone module (PHM)	Erase codes	V1.10.001	
VOLVO	S80 I071	2009	Phone module (PHM)	Freeze frame	V1.10.001	
VOLVO	S80 I071	2009	Transmission control module (TCM)	ECU identification	V1.10.001	
VOLVO	S80 I071	2009	Transmission control module (TCM)	Read codes	V1.10.001	
VOLVO	S80 I071	2009	Transmission control module (TCM)	Erase codes	V1.10.001	
VOLVO	S80 I071	2009	Transmission control module (TCM)	Freeze frame	V1.10.001	
VOLVO	S80 I071	2009	Central electronic module (CEM)	ECU identification	V1.10.001	
VOLVO	S80 I071	2009	Central electronic module (CEM)	Read codes	V1.10.001	
VOLVO	S80 I071	2009	Central electronic module (CEM)	Erase codes	V1.10.001	
VOLVO	S80 I071	2009	Central electronic module (CEM)	Freeze frame	V1.10.001	
VOLVO	S80 I071	2009	Engine control module (ECM)	ECU identification	V1.10.001	
VOLVO	S80 I071	2009	Engine control module (ECM)	Read codes	V1.10.001	
VOLVO	S80 I071	2009	Engine control module (ECM)	Erase codes	V1.10.001	
VOLVO	S80 I071	2009	Engine control module (ECM)	Freeze frame	V1.10.001	
VOLVO	S80 I071	2009	Differential electronic module (DEM)	ECU identification	V1.10.001	
VOLVO	S80 I071	2009	Differential electronic module (DEM)	Read codes	V1.10.001	
VOLVO	S80 I071	2009	Differential electronic module (DEM)	Erase codes	V1.10.001	
VOLVO	S80 I071	2009	Differential electronic module (DEM)	Freeze frame	V1.10.001	
VOLVO	S80 I071	2009	Differential electronic module (DEM)	Special functions	V1.10.001	
VOLVO	S80 I071	2009	Differential electronic module (DEM)	Special functions	Restoring adaptation	V1.10.001
VOLVO	S80 I071	2009	Differential electronic module (DEM)	Special functions	Restoring the transmission fluid change	V1.10.001
VOLVO	S80 I071	2009	Differential electronic module (DEM)	Special functions	Calibration of gear position sensor	V1.10.001
VOLVO	S80 I071	2009	Differential electronic module (DEM)	Special functions	Activating gear lubrication	V1.10.001
VOLVO	S80 I071	2009	Differential electronic module (DEM)	Special functions	Calibration of oil pressure	V1.10.001
VOLVO	S80 I071	2009	Differential electronic module (DEM)	Special functions	Checking and adjusting calculated ethanol content	V1.10.001
VOLVO	S80 I071	2009	Diesel particulate filter (DPF)	ECU identification	V1.10.001	
VOLVO	S80 I071	2009	Diesel particulate filter (DPF)	Read codes	V1.10.001	
VOLVO	S80 I071	2009	Diesel particulate filter (DPF)	Erase codes	V1.10.001	
VOLVO	S80 I071	2009	Diesel particulate filter (DPF)	Freeze frame	V1.10.001	
VOLVO	S80 I071	2009	Exhaust gas recirculation (EGR) valve	ECU identification	V1.10.001	
VOLVO	S80 I071	2009	Exhaust gas recirculation (EGR) valve	Readout of trim parameters	V1.10.001	
VOLVO	S80 I071	2009	Exhaust gas recirculation (EGR) valve	Adaptation of the throttle module	V1.10.001	
VOLVO	S80 I071	2009	Exhaust gas recirculation (EGR) valve	Adaptation of differential pressure sensor/canister filter	V1.10.001	
VOLVO	S80 I071	2009	Exhaust gas recirculation (EGR) valve	Restring the counter for the particle filter	V1.10.001	
VOLVO	S80 I071	2009	Exhaust gas recirculation (EGR) valve	Controlling exhaust particles	V1.10.001	
VOLVO	S80 I071	2009	Exhaust gas recirculation (EGR) valve	Checking injectors	V1.10.001	
VOLVO	S80 I071	2009	Exhaust gas recirculation (EGR) valve	Checking the oil level	V1.10.001	
VOLVO	S80 I071	2009	Exhaust gas recirculation (EGR) valve	Adjusting oil level/channel throat	V1.10.001	
VOLVO	S80 I071	2009	Exhaust gas recirculation (EGR) valve	Adjusting of turbo channel control	V1.10.001	
VOLVO	S80 I071	2009	Exhaust gas recirculation (EGR) valve	Adjusting mass air flow sensor	V1.10.001	
VOLVO	S80 I071	2009	Exhaust gas recirculation (EGR) valve	Adjusting of mass air flow sensor	V1.10.001	
VOLVO	S80 I071	2009	Exhaust gas recirculation (EGR) valve	Adjusting fuel pressure control valve	V1.10.001	
VOLVO	S80 I071	2009	Exhaust gas recirculation (EGR) valve	Adjusting calculated oil level	V1.10.001	
VOLVO	S80 I071	2010	Central electronic module (CEM)	ECU identification	V1.10.001	
VOLVO	S80 I071	2010	Central electronic module (CEM)	Read codes	V1.10.001	
VOLVO	S80 I071	2010	Central electronic module (CEM)	Erase codes	V1.10.001	
VOLVO	S80 I071	2010	Central electronic module (CEM)	Freeze frame	V1.10.001	
VOLVO	S80 I071	2010	Central electronic module (CEM)	Special functions	V1.10.001	
VOLVO	S80 I071	2010	Central			

VOLVO	S80 (07)	2010	Transmission control module (TCM)	Special functions	Resetting the 'Transmission fluid change' counter	V1.10.001
VOLVO	S80 (07)	2010	Transmission control module (TCM)	Special functions	Calling the rear position sensor	V1.10.001
VOLVO	S80 (07)	2010	Transmission control module (TCM)	Special functions	Activation of airbag	V1.10.001
VOLVO	S80 (07)	2010	Transmission control module (TCM)	Special functions	Control module adaptation	V1.10.001
VOLVO	S80 (07)	2010	Engine control module (ECM)	Special functions	Checking and adjusting calculated ethanol content	V1.10.001
VOLVO	S80 (07)	2010	Engine control module (ECM)	Special functions	Reading mode (USA/CN)	V1.10.001
VOLVO	S80 (07)	2010	Engine control module (ECM)	Special functions	Reading off permanent diagnostic trouble codes (USA/CN)	V1.10.001
VOLVO	S80 (07)	2010	Engine control module (ECM)	Special functions	Quick test of the fuel tank system	V1.10.001
VOLVO	S80 (07)	2010	Engine control module (ECM)	Special functions	Reading out permanent diagnostic trouble codes (USA/CN)	V1.10.001
VOLVO	S80 (07)	2010	Differential electronic module (DEM)	ECU identification	Resetting the 'Transmission fluid change' counter	V1.10.001
VOLVO	S80 (07)	2010	Differential electronic module (DEM)	Read codes	Calling the rear position sensor	V1.10.001
VOLVO	S80 (07)	2010	Differential electronic module (DEM)	Erase codes	Activation of airbag	V1.10.001
VOLVO	S80 (07)	2010	Differential electronic module (DEM)	Freeze frame	Control module adaptation	V1.10.001
VOLVO	S80 (07)	2010	Differential electronic module (DEM)	Special functions	Checking and adjusting calculated ethanol content	V1.10.001
VOLVO	S80 (07)	2010	Engine control module (ECM)	Special functions	Reading mode (USA/CN)	V1.10.001
VOLVO	S80 (07)	2010	Engine control module (ECM)	Special functions	Reading off permanent diagnostic trouble codes (USA/CN)	V1.10.001
VOLVO	S80 (07)	2010	Engine control module (ECM)	Special functions	Quick test of the fuel tank system	V1.10.001
VOLVO	S80 (07)	2010	Engine control module (ECM)	Special functions	Reading out permanent diagnostic trouble codes (USA/CN)	V1.10.001
VOLVO	S80 (07)	2010	Engine control module (ECM)	Special functions	Resetting the counter for the particle filter	V1.10.001
VOLVO	S80 (07)	2010	Engine control module (ECM)	Special functions	Combustion of soot particles	V1.10.001
VOLVO	S80 (07)	2010	Engine control module (ECM)	ECU identification	Accumulator draining	V1.10.001
VOLVO	S80 (07)	2010	Additive dosing module (ADM)	Read codes	Quick test of the function of the exhaust gas recirculation (EGR) valve	V1.10.001
VOLVO	S80 (07)	2010	Additive dosing module (ADM)	Erase codes	Adjustment of the exhaust gas recirculation (EGR) valve	V1.10.001
VOLVO	S80 (07)	2010	Additive dosing module (ADM)	Freeze frame	Adaptation of the throttle module	V1.10.001
VOLVO	S80 (07)	2010	Additive dosing module (ADM)	Special functions	Resetting the counter for the particle filter	V1.10.001
VOLVO	S80 (07)	2010	Additive dosing module (ADM)	Special functions	Combustion of soot particles	V1.10.001
VOLVO	S80 (07)	2010	Power steering control module (PSCM)	ECU identification	Refilling the feed hose with additive	V1.10.001
VOLVO	S80 (07)	2010	Power steering control module (PSCM)	Read codes	Resetting the tank level gauge	V1.10.001
VOLVO	S80 (07)	2010	Power steering control module (PSCM)	Erase codes	Checking the additive level	V1.10.001
VOLVO	S80 (07)	2010	Power steering control module (PSCM)	Freeze frame	V1.10.001	
VOLVO	S80 (07)	2010	Power steering control module (PSCM)	Special functions	Quick-test injectors	V1.10.001
VOLVO	S80 (07)	2010	Power steering control module (PSCM)	Special functions	Combustion of soot particles, particle trap	V1.10.001
VOLVO	S80 (07)	2010	Power steering control module (PSCM)	Special functions	Pre-programming the optimising parameters	V1.10.001
VOLVO	S80 (07)	2010	Power steering control module (PSCM)	Special functions	Adjustation of differential pressure sensor particle filter	V1.10.001
VOLVO	S80 (07)	2010	Power steering control module (PSCM)	Special functions	Checking the oil level	V1.10.001
VOLVO	S80 (07)	2010	Power steering control module (PSCM)	Special functions	Adjusting calculated oil level/oil quality	V1.10.001
VOLVO	S80 (07)	2010	Power steering control module (PSCM)	Special functions	Adaptation of turbo control motor	V1.10.001
VOLVO	S80 (07)	2011	Engine control module (ECM)	ECU identification	V1.10.001	
VOLVO	S80 (07)	2011	Engine control module (ECM)	Read codes	Adjustment of the throttle unit	V1.10.001
VOLVO	S80 (07)	2011	Engine control module (ECM)	Erase codes	Adjustment of camshafts	V1.10.001
VOLVO	S80 (07)	2011	Engine control module (ECM)	Freeze frame	Adjustment of oil level sensor	V1.10.001
VOLVO	S80 (07)	2011	Engine control module (ECM)	Special functions	Resetting the adaption values	V1.10.001
VOLVO	S80 (07)	2011	Engine control module (ECM)	Special functions	Checking injectors	V1.10.001
VOLVO	S80 (07)	2011	Central electronic module (ECM)	ECU identification	Adjustation of neutral position sensor	V1.10.001
VOLVO	S80 (07)	2011	Central electronic module (ECM)	Read codes	V1.10.001	
VOLVO	S80 (07)	2011	Central electronic module (ECM)	Erase codes	Active test	V1.10.001
VOLVO	S80 (07)	2011	Central electronic module (ECM)	Freeze frame	Pre-delivery service for new car	V1.10.001
VOLVO	S80 (07)	2011	Central electronic module (ECM)	Special functions	Renting supplemental restraint system	V1.10.001
VOLVO	S80 (07)	2011	Central electronic module (ECM)	Special functions	Reading off cause	V1.10.001
VOLVO	S80 (07)	2011	Central electronic module (ECM)	Special functions	Vehicle fault code (VFC)	V1.10.001
VOLVO	S80 (07)	2011	Central electronic module (ECM)	Special functions	Read-out and resetting a/c-lock	V1.10.001
VOLVO	S80 (07)	2011	Central electronic module (ECM)	Special functions	Reading off power supply	V1.10.001
VOLVO	S80 (07)	2011	Central electronic module (ECM)	Special functions	Checking the front/rear, brake light switch, and brake pedal position switch	V1.10.001
VOLVO	S80 (07)	2011	Central electronic module (ECM)	Special functions	Readout of current battery monitoring sensor	V1.10.001
VOLVO	S80 (07)	2011	Central electronic module (ECM)	Special functions	Readout of information stand-by current	V1.10.001
VOLVO	S80 (07)	2011	Central electronic module (ECM)	Special functions	Resetting the information to stand-by current	V1.10.001
VOLVO	S80 (07)	2011	Central electronic module (ECM)	Special functions	Replacing the battery monitoring sensor (BMS) when replacing the battery	V1.10.001
VOLVO	S80 (07)	2011	Central electronic module (ECM)	Special functions	Ejection of key	V1.10.001
VOLVO	S80 (07)	2011	Central electronic module (ECM)	Special functions	Remote control immobiliser, cause	V1.10.001
VOLVO	S80 (07)	2011	Central electronic module (ECM)	Special functions	Remote controlled immobiliser, cause	V1.10.001
VOLVO	S80 (07)	2011	Central electronic module (ECM)	Special functions	Deactivating and installing the roof hatch	V1.10.001
VOLVO	S80 (07)	2011	Central electronic module (ECM)	Special functions	Setting day and night mode for the instrumentation	V1.10.001
VOLVO	S80 (07)	2011	Central electronic module (ECM)	Special functions	Activating wipers, front/rear	V1.10.001
VOLVO	S80 (07)	2011	Central electronic module (ECM)	Special functions	Manual battery test	V1.10.001
VOLVO	S80 (07)	2011	Supplemental restraint system module (SR5)	ECU identification	Calibrating the occupant weight sensor (OWS)	V1.10.001
VOLVO	S80 (07)	2011	Supplemental restraint system module (SR5)	Read codes	Powering the SR5 system	V1.10.001
VOLVO	S80 (07)	2011	Supplemental restraint system module (SR5)	Erase codes	Checking the PADD-light	V1.10.001
VOLVO	S80 (07)	2011	Infotainment control module (ICM)	ECU identification	Programming control module	V1.10.001
VOLVO	S80 (07)	2011	Infotainment control module (ICM)	Read codes	Open-circuit in the MOST cable	V1.10.001
VOLVO	S80 (07)	2011	Infotainment control module (ICM)	Erase codes	Activation and service	V1.10.001
VOLVO	S80 (07)	2011	Infotainment control module (ICM)	Freeze frame	Resetting the clutch pedal counter	V1.10.001
VOLVO	S80 (07)	2011	Infotainment control module (ICM)	Special functions	V1.10.001	
VOLVO	S80 (07)	2011	Steering angle sensor module (SAS)	ECU identification	Calibration angle sensor	V1.10.001
VOLVO	S80 (07)	2011	Steering angle sensor module (SAS)	Read codes	Activation and service	V1.10.001
VOLVO	S80 (07)	2011	Steering angle sensor module (SAS)	Erase codes	Resetting the clutch pedal counter	V1.10.001
VOLVO	S80 (07)	2011	Steering angle sensor module (SAS)	Freeze frame	V1.10.001	
VOLVO	S80 (07)	2011	Park brake module (PBM)	ECU identification	Calibration angle sensor	V1.10.001
VOLVO	S80 (07)	2011	Park brake module (PBM)	Read codes	Activation and service	V1.10.001
VOLVO	S80 (07)	2011	Park brake module (PBM)	Erase codes	Resetting the clutch pedal counter	V1.10.001
VOLVO	S80 (07)	2011	Park brake module (PBM)	Freeze frame	V1.10.001	
VOLVO	S80 (07)	2011	Park brake module (PBM)	Special functions	Calibration angle sensor	V1.10.001
VOLVO	S80 (07)	2011	Park brake module (PBM)	Special functions	Activation and service	V1.10.001
VOLVO	S80 (07)	2011	Park brake module (PBM)	ECU identification	Resetting the clutch pedal counter	V1.10.001
VOLVO	S80 (07)	2011	Park brake module (PBM)	Read codes	V1.10.001	
VOLVO	S80 (07)	2011	Park brake module (PBM)	Erase codes	Calibration angle sensor	V1.10.001
VOLVO	S80 (07)	2011	Park brake module (PBM)	Freeze frame	Activation and service	V1.10.001
VOLVO	S80 (07)	2011	Park brake module (PBM)	Special functions	Resetting the clutch pedal counter	V1.10.001
VOLVO	S80 (07)	2011	Park brake module (PBM)	Special functions	V1.10.001	
VOLVO	S80 (07)	2011	Park brake module (PBM)	ECU identification	Calibration angle sensor	V1.10.001
VOLVO	S80 (07)	2011	Park brake module (PBM)	Read codes	Activation and service	V1.10.001
VOLVO	S80 (07)	2011	Park brake module (PBM)	Erase codes	Resetting the clutch pedal counter	V1.10.001
VOLVO	S80 (07)	2011	Park brake module (PBM)	Freeze frame	V1.10.001	
VOLVO	S80 (07)	2011	Park brake module (PBM)	Special functions	Calibration angle sensor	V1.10.001
VOLVO	S80 (07)	2011	Passenger door module (PDM)	ECU identification	Activation and service	V1.10.001
VOLVO	S80 (07)	2011	Passenger door module (PDM)	Read codes	Resetting the clutch pedal counter	V1.10.001
VOLVO	S80 (07)	2011	Passenger door module (PDM)	Erase codes	V1.10.001	
VOLVO	S80 (07)	2011	Passenger door module (PDM)	Freeze frame	Calibration angle sensor	V1.10.001
VOLVO	S80 (07)	2011	Passenger door module (PDM)	Special functions	Activation and service	V1.10.001
VOLVO	S80 (07)	2011	Passenger door module (PDM)	ECU identification	Resetting the clutch pedal counter	V1.10.001
VOLVO	S80 (07)	2011	Passenger door module (PDM)	Read codes	V1.10.001	
VOLVO	S80 (07)	2011	Passenger door module (PDM)	Erase codes	Calibration angle sensor	V1.10.001
VOLVO	S80 (07)	2011	Passenger door module (PDM)	Freeze frame	Activation and service	V1.10.001
VOLVO	S80 (07)	2011	Passenger door module (PDM)	Special functions	Resetting the clutch pedal counter	V1.10.001
VOLVO	S80 (07)	2011	Climate control module (CCM)	ECU identification	V1.10.001	
VOLVO	S80 (07)	2011	Climate control module (CCM)	Read codes	Calibration angle sensor	V1.10.001
VOLVO	S80 (07)	2011	Climate control module (CCM)	Erase codes	Activation and service	V1.10.001
VOLVO	S80 (07)	2011	Climate control module (CCM)	Freeze frame	Resetting the clutch pedal counter	V1.10.001
VOLVO	S80 (07)	2011	Climate control module (CCM)	Special functions	V1.10.001	
VOLVO	S80 (07)	2011	Climate control module (CCM)	ECU identification	Calibration angle sensor	V1.10.001
VOLVO	S80 (07)	2011	Climate control module (CCM)	Read codes	Activation and service	V1.10.001
VOLVO	S80 (07)	2011	Climate control module (CCM)	Erase codes	Resetting the clutch pedal counter	V1.10.001
VOLVO	S80 (07)	2011	Climate control module (CCM)	Freeze frame	V1.10.001	
VOLVO	S80 (07)	2011	Climate control module (CCM)	Special functions	Calibration angle sensor	V1.10.001
VOLVO	S80 (07)	2011	Brake control module (BCM)	ECU identification	Activation and service	V1.10.001
VOLVO	S80 (07)	2011	Brake control module (BCM)	Read codes	Resetting the odometer setting	V1.10.001
VOLVO	S80 (07)	2011	Brake control module (BCM)	Erase codes	Resetting the seat reminder (SR)	V1.10.001
VOLVO	S80 (07)	2011	Brake control module (BCM)	Freeze frame	Testing all indicators and lamps in the information module (DIM)	V1.10.001
VOLVO	S80 (07)	2011	Brake control module (BCM)	Special functions	Programme seat belt reminder in backseat	V1.10.001
VOLVO	S80 (07)	2011	Brake control module (BCM)	ECU identification	Programme test message: seatbelt reminder	V1.10.001
VOLVO	S80 (07)	2011	Brake control module (BCM)	Read codes	Programme information module (DIM)	V1.10.001
VOLVO	S80 (07)	2011	Brake control module (BCM)	Erase codes	Read-out of fuel volume	V1.10.001
VOLVO	S80 (07)	2011	Brake control module (BCM)	Freeze frame	Display of oil check	V1.10.001
VOLVO	S80 (07)	2011	Keyless vehicle module (KVM)	ECU identification	V1.10.001	
VOLVO	S80 (07)	2011	Keyless vehicle module (KVM)	Read codes	Initializing the window in the front door	V1.10.001
VOLVO	S80 (07)	2011	Keyless vehicle module (KVM)	Erase codes	Initializing the window in the rear door	V1.10.001
VOLVO	S80 (07)	2011	Keyless vehicle module (KVM)	Freeze frame	Central lock motors, activating	V1.10.001
VOLVO	S80 (07)	2011	Power seat module (PSM)	ECU identification	V1.10.001	
VOLVO	S80 (07)	2011	Power seat module (PSM)	Read codes	Calibration	V1.10.001
VOLVO	S80 (07)	2011	Power seat module (PSM)	Erase codes	Restart of the brake control module (BCM)	V1.10.001
VOLVO	S80 (07)	2011	Power seat module (PSM)	Freeze frame	V1.10.001	
VOLVO	S80 (07)	2011	Power seat module (PSM)	Special functions	Checking all antennas	V1.10.001
VOLVO	S80 (07)	2011	Power seat module (PSM)	ECU identification	Check for communication with the remote control receiver.	V1.10.001
VOLVO	S80 (07)	2011	Power seat module (PSM)	Read codes	Remote control	V1.10.001
VOLVO	S80 (07)	2011	Power seat module (PSM)	Erase codes	Test of internal memory	V1.10.001
VOLVO	S80 (07)	2011	Power seat module (PSM)	Freeze frame	Activation of quick-lock motors	V1.10.001
VOLVO	S80 (07)	2011	Combustion preheater module (CPM)	ECU identification	V1.10.001	
VOLVO	S80 (07)	2011	Combustion preheater module (CPM)	Read codes	Programming the seat memory's delay time and acknowledgement	V1.10.001
VOLVO	S80 (07)	2011	Combustion preheater module (CPM)	Erase codes	V1.10.001	
VOLVO	S80 (07)	2011	Combustion preheater module (CPM)	Freeze frame	V1.10.001	
VOLVO	S80 (07)	2011	Combustion preheater module (CPM)	Special functions	Quick test of the function of the additional/parking heater	V1.10.001
VOLVO	S80 (07)	2011	Combustion preheater module (CPM)	ECU identification	Cooling of the cooling system	V1.10.001
VOLVO	S80 (07)	2011	Combustion preheater module (CPM)	Read codes	Activation of components	V1.10.001
VOLVO	S80 (07)	2011	Combustion preheater module (CPM)	Erase codes	Fillings of fuel system auxiliaries/heater	V1.10.001
VOLVO	S80 (07)	2011	Combustion preheater module (CPM)	Freeze frame	Identification of the heater	V1.10.001
VOLVO	S80 (07)	2011	Audio module (AUD)	ECU identification	V1.10.001	
VOLVO	S80 (07)	2011	Audio module (AUD)	Read codes	Calibration	V1.10.001
VOLVO	S80 (07)	2011	Audio module (AUD)	Erase codes	Activation	V1.10.001
VOLVO	S80 (07)	2011	Audio module (AUD)	Freeze frame	Calibration of position sensor	V1.10.001
VOLVO	S80 (07)	2011	Suspension module (SUM)	ECU identification	V1.10.001	
VOLVO	S80 (07)	2011	Suspension module (SUM)	Read codes	V1.10.001	
VOLVO	S80 (07)	2011	Suspension module (SUM)	Erase codes	V1.10.001	
VOLVO	S80 (07)	2011	Suspension module (SUM)	Freeze frame	V1.10.001	
VOLVO	S80 (07)	2011	Suspension module (SUM)	Special functions	V1.10.001	
VOLVO	S80 (07)	2011	Headlight control module (HCM)	ECU identification	V1.10.001	

VOLVO	S80	I071	2012	Driver information module (DIM)	Special functions	Programming seatbelt reminder in backseat Programme test message, seatbelt reminder Programme the driver information module (DIM) Read-out of fuel volume. Display of oil check	V1.10.001
VOLVO	S80	I071	2012	Driver information module (DIM)	Special functions		V1.10.001
VOLVO	S80	I071	2012	Driver information module (DIM)	Special functions		V1.10.001
VOLVO	S80	I071	2012	Driver information module (DIM)	Special functions		V1.10.001
VOLVO	S80	I071	2012	Driver information module (DIM)	Special functions		V1.10.001
VOLVO	S80	I071	2012	Brake control module (BCM)	ECU identification Read codes		V1.10.001
VOLVO	S80	I071	2012	Brake control module (BCM)	Erase codes		V1.10.001
VOLVO	S80	I071	2012	Brake control module (BCM)	Freeze frame		V1.10.001
VOLVO	S80	I071	2012	Brake control module (BCM)	Active test		V1.10.001
VOLVO	S80	I071	2012	Brake control module (BCM)	Special functions	Calibration Restart of the brake control module (BCM)	V1.10.001
VOLVO	S80	I071	2012	Brake control module (BCM)	Special functions		V1.10.001
VOLVO	S80	I071	2012	Brake control module (BCM)	Special functions		V1.10.001
VOLVO	S80	I071	2012	Infotainment control module (ICM)	ECU identification Read codes		V1.10.001
VOLVO	S80	I071	2012	Infotainment control module (ICM)	Erase codes		V1.10.001
VOLVO	S80	I071	2012	Infotainment control module (ICM)	Freeze frame		V1.10.001
VOLVO	S80	I071	2012	Infotainment control module (ICM)	Special functions		V1.10.001
VOLVO	S80	I071	2012	Infotainment control module (ICM)	Special functions		V1.10.001
VOLVO	S80	I071	2012	Keyless vehicle module (KVM)	ECU identification Read codes	Open circuit on MOST cable (only vehicles with infotainment control module (ICM)) Communication on MOST Checking video signal (only applies vehicles with infotainment control module, ICM)	V1.10.001
VOLVO	S80	I071	2012	Keyless vehicle module (KVM)	Erase codes		V1.10.001
VOLVO	S80	I071	2012	Keyless vehicle module (KVM)	Freeze frame		V1.10.001
VOLVO	S80	I071	2012	Keyless vehicle module (KVM)	Special functions		V1.10.001
VOLVO	S80	I071	2012	Keyless vehicle module (KVM)	Special functions		V1.10.001
VOLVO	S80	I071	2012	Keyless vehicle module (KVM)	Special functions		V1.10.001
VOLVO	S80	I071	2012	Television module (TVM)	ECU identification Read codes	Activation of quick shift motors.	V1.10.001
VOLVO	S80	I071	2012	Television module (TVM)	Erase codes		V1.10.001
VOLVO	S80	I071	2012	Television module (TVM)	Freeze frame		V1.10.001
VOLVO	S80	I071	2012	Power seat module (PSM)	ECU identification Read codes		V1.10.001
VOLVO	S80	I071	2012	Power seat module (PSM)	Erase codes		V1.10.001
VOLVO	S80	I071	2012	Power seat module (PSM)	Freeze frame		V1.10.001
VOLVO	S80	I071	2012	Power seat module (PSM)	Active test		V1.10.001
VOLVO	S80	I071	2012	Combustion preheater module (CPM)	ECU identification Read codes	Programming the seat memory's delay time and acknowledgement	V1.10.001
VOLVO	S80	I071	2012	Combustion preheater module (CPM)	Erase codes		V1.10.001
VOLVO	S80	I071	2012	Combustion preheater module (CPM)	Freeze frame		V1.10.001
VOLVO	S80	I071	2012	Parkline assistance module (PAM)	ECU identification Read codes	Quick start function of the additional/parking heater	V1.10.001
VOLVO	S80	I071	2012	Parkline assistance module (PAM)	Erase codes	Booking of the cooling system	V1.10.001
VOLVO	S80	I071	2012	Parkline assistance module (PAM)	Freeze frame	Activating components	V1.10.001
VOLVO	S80	I071	2012	Parkline assistance module (PAM)	Special functions	Filling of fuel system auxiliary heater	V1.10.001
VOLVO	S80	I071	2012	Parkline assistance module (PAM)	ECU identification	Identification of the heater	V1.10.001
VOLVO	S80	I071	2012	Suspension module (SUM)	Read codes		V1.10.001
VOLVO	S80	I071	2012	Suspension module (SUM)	Erase codes	Calibration	V1.10.001
VOLVO	S80	I071	2012	Suspension module (SUM)	Freeze frame		V1.10.001
VOLVO	S80	I071	2012	Suspension module (SUM)	Active test		V1.10.001
VOLVO	S80	I071	2012	Suspension module (SUM)	Special functions		V1.10.001
VOLVO	S80	I071	2012	Parkline assistance module (PAM)	ECU identification Read codes		V1.10.001
VOLVO	S80	I071	2012	Parkline assistance module (PAM)	Erase codes		V1.10.001
VOLVO	S80	I071	2012	Parkline assistance module (PAM)	Freeze frame		V1.10.001
VOLVO	S80	I071	2012	High level display front (HDF)	ECU identification Read codes		V1.10.001
VOLVO	S80	I071	2012	High level display front (HDF)	Erase codes		V1.10.001
VOLVO	S80	I071	2012	High level display front (HDF)	Freeze frame		V1.10.001
VOLVO	S80	I071	2012	Digital audio broadcast module (DABM)	ECU identification Read codes	Programming of parking assistance module (PAM)	V1.10.001
VOLVO	S80	I071	2012	Digital audio broadcast module (DABM)	Erase codes		V1.10.001
VOLVO	S80	I071	2012	Digital audio broadcast module (DABM)	Freeze frame		V1.10.001
VOLVO	S80	I071	2012	Forward looking radar (FLR)	ECU identification Read codes		V1.10.001
VOLVO	S80	I071	2012	Forward looking radar (FLR)	Erase codes		V1.10.001
VOLVO	S80	I071	2012	Forward looking radar (FLR)	Freeze frame		V1.10.001
VOLVO	S80	I071	2012	Trailer module (TRM)	ECU identification Read codes		V1.10.001
VOLVO	S80	I071	2012	Trailer module (TRM)	Erase codes		V1.10.001
VOLVO	S80	I071	2012	Trailer module (TRM)	Freeze frame		V1.10.001
VOLVO	S80	I071	2012	Audio module (AUD)	ECU identification Read codes		V1.10.001
VOLVO	S80	I071	2012	Audio module (AUD)	Erase codes		V1.10.001
VOLVO	S80	I071	2012	Audio module (AUD)	Freeze frame		V1.10.001
VOLVO	S80	I071	2012	Audio module (AUD)	Special functions		V1.10.001
VOLVO	S80	I071	2012	Phone module (PHM)	ECU identification Read codes	Checking headphone socket, Checkline loudspeaker element Checkline loudspeakers	V1.10.001
VOLVO	S80	I071	2012	Phone module (PHM)	Erase codes		V1.10.001
VOLVO	S80	I071	2012	Phone module (PHM)	Freeze frame		V1.10.001
VOLVO	S80	I071	2012	Phone module (PHM)	Special functions		V1.10.001
VOLVO	S80	I071	2012	Phone module (PHM)	ECU identification Read codes	Reinstalling the reserve battery Check whether PHM has Volvo On Call Set lighting/pre-activation of Volvo On Call Activation/pre-activation of Volvo On Call	V1.10.001
VOLVO	S80	I071	2012	Forward sensing module (FSM)	ECU identification Read codes	Activation heating coil. FSM Calibration of radar and camera	V1.10.001
VOLVO	S80	I071	2012	Forward sensing module (FSM)	Erase codes		V1.10.001
VOLVO	S80	I071	2012	Forward sensing module (FSM)	Freeze frame		V1.10.001
VOLVO	S80	I071	2012	Forward sensing module (FSM)	Special functions		V1.10.001
VOLVO	S80	I071	2012	Forward sensing module (FSM)	ECU identification Read codes	Activation of installation image	V1.10.001
VOLVO	S80	I071	2012	Forward sensing module (FSM)	Erase codes		V1.10.001
VOLVO	S80	I071	2012	Forward sensing module (FSM)	Freeze frame		V1.10.001
VOLVO	S80	I071	2012	Forward sensing module (FSM)	Special functions		V1.10.001
VOLVO	S80	I071	2012	Closing velocity module (CVM)	Read codes		V1.10.001
VOLVO	S80	I071	2012	Closing velocity module (CVM)	Erase codes		V1.10.001
VOLVO	S80	I071	2012	Closing velocity module (CVM)	Freeze frame		V1.10.001
VOLVO	S80	I071	2012	Parking assistance camera (PAC)	ECU identification Read codes		V1.10.001
VOLVO	S80	I071	2012	Parking assistance camera (PAC)	Erase codes		V1.10.001
VOLVO	S80	I071	2012	Parking assistance camera (PAC)	Freeze frame		V1.10.001
VOLVO	S80	I071	2012	Parking assistance camera (PAC)	Special functions		V1.10.001
VOLVO	S80	I071	2012	Rear seat entertainment module (RSE)	ECU identification Read codes		V1.10.001
VOLVO	S80	I071	2012	Rear seat entertainment module (RSE)	Erase codes		V1.10.001
VOLVO	S80	I071	2012	Rear seat entertainment module (RSE)	Freeze frame		V1.10.001
VOLVO	S80	I071	2012	Rear seat entertainment module (RSE)	Special functions		V1.10.001
VOLVO	S80	I071	2012	Integrated audio module (IAM)	ECU identification Read codes		V1.10.001
VOLVO	S80	I071	2012	Integrated audio module (IAM)	Erase codes		V1.10.001
VOLVO	S80	I071	2012	Integrated audio module (IAM)	Freeze frame		V1.10.001
VOLVO	S80	I071	2012	Power steering control module (PCM)	ECU identification Read codes		V1.10.001
VOLVO	S80	I071	2012	Power steering control module (PCM)	Erase codes		V1.10.001
VOLVO	S80	I071	2012	Power steering control module (PCM)	Freeze frame		V1.10.001
VOLVO	S80	I071	2012	Remote digital audio receiver (RDA)	ECU identification Read codes		V1.10.001
VOLVO	S80	I071	2012	Remote digital audio receiver (RDA)	Erase codes		V1.10.001
VOLVO	S80	I071	2012	Remote digital audio receiver (RDA)	Freeze frame		V1.10.001
VOLVO	S80	I071	2012	Transmission control module (TCM)	ECU identification Read codes		V1.10.001
VOLVO	S80	I071	2012	Transmission control module (TCM)	Erase codes		V1.10.001
VOLVO	S80	I071	2012	Transmission control module (TCM)	Freeze frame		V1.10.001
VOLVO	S80	I071	2012	Engine control module (ECM)	ECU identification Read codes		V1.10.001
VOLVO	S80	I071	2012	Engine control module (ECM)	Erase codes		V1.10.001
VOLVO	S80	I071	2012	Engine control module (ECM)	Freeze frame		V1.10.001
VOLVO	S80	I071	2012	Engine control module (ECM)	Special functions		V1.10.001
VOLVO	S80	I071	2012	Engine control module (ECM)	ECU identification Read codes	Initial adaptation Checking and adjusting calculated ethanol content Readiness code	V1.10.001
VOLVO	S80	I071	2012	Engine control module (ECM)	Erase codes		V1.10.001
VOLVO	S80	I071	2012	Engine control module (ECM)	Freeze frame		V1.10.001
VOLVO	S80	I071	2012	Engine control module (ECM)	Special functions		V1.10.001
VOLVO	S80	I071	2012	Engine control module (ECM)	ECU identification Read codes	Checking fuel pump (FP) Test/movement of camshift control, intake Test/movement of camshift control, exhaust	V1.10.001
VOLVO	S80	I071	2012	Engine control module (ECM)	Erase codes		V1.10.001
VOLVO	S80	I071	2012	Engine control module (ECM)	Freeze frame		V1.10.001
VOLVO	S80	I071	2012	Transmission control module (TCM)	ECU identification Read codes	Resetting adatation Calibrating the position fluid change' counter Activating gear position sensor	V1.10.001
VOLVO	S80	I071	2012	Transmission control module (TCM)	Erase codes		V1.10.001
VOLVO	S80	I071	2012	Transmission control module (TCM)	Freeze frame		V1.10.001
VOLVO	S80	I071	2012	Engine control module (ECM)	ECU identification Read codes	Control module adatation Readiness code (USA/CDN)	V1.10.001
VOLVO	S80	I071	2012	Engine control module (ECM)	Erase codes		V1.10.001
VOLVO	S80	I071	2012	Engine control module (ECM)	Freeze frame		V1.10.001
VOLVO	S80	I071	2012	Engine control module (ECM)	Special functions		V1.10.001
VOLVO	S80	I071	2012	Engine control module (ECM)	ECU identification Read codes	Resetting adaptastion Resetting adaptations for the EGR valve Resetting adaptations for the throttle Resetting adaptations for the camshift control Resetting adaptations for air flow measurement	V1.10.001
VOLVO	S80	I071	2012	Engine control module (ECM)	Erase codes		V1.10.001
VOLVO	S80	I071	2012	Engine control module (ECM)	Freeze frame		V1.10.001
VOLVO	S80	I071	2012	Engine control module (ECM)	Special functions		V1.10.001
VOLVO	S80	I071	2012	Engine control module (ECM)	ECU identification Read codes	Resetting adaptastion Resetting adaptations for the intake Resetting adaptations for the camshift control Resetting adaptations for air flow measurement	V1.10.001
VOLVO	S80	I071	2012	Engine control module (ECM)	Erase codes		V1.10.001
VOLVO	S80	I071	2012	Engine control module (ECM)	Freeze frame		V1.10.001
VOLVO	S80	I071	2012	Engine control module (ECM)	Special functions		V1.10.001
VOLVO	S80	I071	2012	Central electronic module (CEM)	ECU identification Read codes	Adatation of the particulate unit Adatation of camshifts Adatation of oil level sensor	V1.10.001
VOLVO	S80	I071	2012	Central electronic module (CEM)	Erase codes		V1.10.001
VOLVO	S80	I071	2012	Central electronic module (CEM)	Freeze frame		V1.10.001
VOLVO	S80	I071	2012	Central electronic module (CEM)	Active test		V1.10.001
VOLVO	S80	I071	2012	Engine control module (ECM)	ECU identification Read codes	Resetting the adatation value Checking inadaptation	V1.10.001
VOLVO	S80	I071	2012	Engine control module (ECM)	Erase codes		V1.10.001
VOLVO	S80	I071	2012	Engine control module (ECM)	Freeze frame		V1.10.001
VOLVO	S80	I071	2012	Central electronic module (CEM)	Special functions		V1.10.001
VOLVO	S80	I071	2012	Central electronic module (CEM)	ECU identification Read codes	Resetting the information to zero on power supply when replacing the battery monitoring sensor (BMS) Eventlog Remote controlled immobilising, status	V1.10.001
VOLVO	S80	I071	2012	Central electronic module (CEM)	Erase codes		V1.10.001
VOLVO	S80	I071	2012	Central electronic module (CEM)	Freeze frame		V1.10.001
VOLVO	S80	I071	2012	Central electronic module (CEM)	Special functions		V1.10.001
VOLVO	S80	I071	2012	Central electronic module (CEM)	ECU identification Read codes	Checkinng the position of the neutral position switch Resetout of current battery monitoring sensor Resetout of information stand by current Resetting the information to zero on power supply when replacing the battery monitoring sensor (BMS)	V1.10.001
VOLVO	S80	I071	2012	Central electronic module (CEM)	Erase codes		V1.10.001
VOLVO	S80	I071	2012	Central electronic module (CEM)	Freeze frame		V1.10.001
VOLVO	S80	I071	2012	Central electronic module (CEM)	Special functions		V1.10.001
VOLVO	S80	I071	2012	Central electronic module (CEM)	ECU identification Read codes	Pre-delivery service for new car Restoring supplemental restraint system Readine off alarm cause Worlwide product (PMWS)	V1.10.001
VOLVO	S80	I071	2012	Central electronic module (CEM)	Erase codes		V1.10.001
VOLVO	S80	I071	2012	Central electronic module (CEM)	Freeze frame		V1.10.001
VOLVO	S80	I071	2012	Central electronic module (CEM)	Special functions		V1.1

VOLVO	S80	I071	2013	Central electronic module (CEM)	Special functions	Operating and initiating the roof hatch	V1.10.001
VOLVO	S80	I071	2013	Central electronic module (CEM)	Special functions	Calibrating the position sensor	V1.10.001
VOLVO	S80	I071	2013	Central electronic module (CEM)	Special functions	Setting the zero point mode for the instrumentation	V1.10.001
VOLVO	S80	I071	2013	Central electronic module (CEM)	Special functions	Checking All function	V1.10.001
VOLVO	S80	I071	2013	Central electronic module (CEM)	Special functions	Activating wipers, front/rear	V1.10.001
VOLVO	S80	I071	2013	Central electronic module (CEM)	Special functions	Deactivation/activation of engine remote start ERS	V1.10.001
VOLVO	S80	I071	2013	Steering angle sensor module (SAS)	Read codes		V1.10.001
VOLVO	S80	I071	2013	Steering angle sensor module (SAS)	Erase codes		V1.10.001
VOLVO	S80	I071	2013	Park brake module (PBM)	ECU identification		V1.10.001
VOLVO	S80	I071	2013	Park brake module (PBM)	Read codes		V1.10.001
VOLVO	S80	I071	2013	Park brake module (PBM)	Erase codes		V1.10.001
VOLVO	S80	I071	2013	Park brake module (PBM)	Freeze frame		V1.10.001
VOLVO	S80	I071	2013	Park brake module (PBM)	Special functions		V1.10.001
VOLVO	S80	I071	2013	Park brake module (PBM)	Special functions		V1.10.001
VOLVO	S80	I071	2013	Driver door module (DDM)	ECU identification		V1.10.001
VOLVO	S80	I071	2013	Driver door module (DDM)	Read codes		V1.10.001
VOLVO	S80	I071	2013	Driver door module (DDM)	Erase codes		V1.10.001
VOLVO	S80	I071	2013	Driver door module (DDM)	Freeze frame		V1.10.001
VOLVO	S80	I071	2013	Driver door module (DDM)	Special functions		V1.10.001
VOLVO	S80	I071	2013	Passenger door module (PDM)	ECU identification		V1.10.001
VOLVO	S80	I071	2013	Passenger door module (PDM)	Read codes		V1.10.001
VOLVO	S80	I071	2013	Passenger door module (PDM)	Erase codes		V1.10.001
VOLVO	S80	I071	2013	Passenger door module (PDM)	Freeze frame		V1.10.001
VOLVO	S80	I071	2013	Passenger door module (PDM)	Special functions		V1.10.001
VOLVO	S80	I071	2013	Passenger door module (PDM)	Active test		V1.10.001
VOLVO	S80	I071	2013	Brake control module (BCM)	ECU identification		V1.10.001
VOLVO	S80	I071	2013	Brake control module (BCM)	Read codes		V1.10.001
VOLVO	S80	I071	2013	Brake control module (BCM)	Erase codes		V1.10.001
VOLVO	S80	I071	2013	Brake control module (BCM)	Freeze frame		V1.10.001
VOLVO	S80	I071	2013	Brake control module (BCM)	Special functions		V1.10.001
VOLVO	S80	I071	2013	Climate control module (CCM)	ECU identification		V1.10.001
VOLVO	S80	I071	2013	Climate control module (CCM)	Read codes		V1.10.001
VOLVO	S80	I071	2013	Climate control module (CCM)	Erase codes		V1.10.001
VOLVO	S80	I071	2013	Climate control module (CCM)	Freeze frame		V1.10.001
VOLVO	S80	I071	2013	Climate control module (CCM)	Special functions		V1.10.001
VOLVO	S80	I071	2013	Climate control module (CCM)	Active test		V1.10.001
VOLVO	S80	I071	2013	Supplemental restraint system module (SRS)	ECU identification		V1.10.001
VOLVO	S80	I071	2013	Supplemental restraint system module (SRS)	Read codes		V1.10.001
VOLVO	S80	I071	2013	Supplemental restraint system module (SRS)	Erase codes		V1.10.001
VOLVO	S80	I071	2013	Supplemental restraint system module (SRS)	Freeze frame		V1.10.001
VOLVO	S80	I071	2013	Supplemental restraint system module (SRS)	Special functions		V1.10.001
VOLVO	S80	I071	2013	Supplemental restraint system module (SRS)	Special functions		V1.10.001
VOLVO	S80	I071	2013	Driver information module (DIM)	ECU identification		V1.10.001
VOLVO	S80	I071	2013	Driver information module (DIM)	Read codes		V1.10.001
VOLVO	S80	I071	2013	Driver information module (DIM)	Erase codes		V1.10.001
VOLVO	S80	I071	2013	Driver information module (DIM)	Freeze frame		V1.10.001
VOLVO	S80	I071	2013	Driver information module (DIM)	Special functions		V1.10.001
VOLVO	S80	I071	2013	Driver information module (DIM)	Active test		V1.10.001
VOLVO	S80	I071	2013	Infotainment control module (ICM)	ECU identification		V1.10.001
VOLVO	S80	I071	2013	Infotainment control module (ICM)	Read codes		V1.10.001
VOLVO	S80	I071	2013	Infotainment control module (ICM)	Erase codes		V1.10.001
VOLVO	S80	I071	2013	Infotainment control module (ICM)	Freeze frame		V1.10.001
VOLVO	S80	I071	2013	Infotainment control module (ICM)	Special functions		V1.10.001
VOLVO	S80	I071	2013	Infotainment control module (ICM)	Active test		V1.10.001
VOLVO	S80	I071	2013	Keyless vehicle module (KVM)	ECU identification		V1.10.001
VOLVO	S80	I071	2013	Keyless vehicle module (KVM)	Read codes		V1.10.001
VOLVO	S80	I071	2013	Keyless vehicle module (KVM)	Erase codes		V1.10.001
VOLVO	S80	I071	2013	Keyless vehicle module (KVM)	Freeze frame		V1.10.001
VOLVO	S80	I071	2013	Keyless vehicle module (KVM)	Special functions		V1.10.001
VOLVO	S80	I071	2013	Keyless vehicle module (KVM)	Active test		V1.10.001
VOLVO	S80	I071	2013	Television module (TVM)	ECU identification		V1.10.001
VOLVO	S80	I071	2013	Television module (TVM)	Read codes		V1.10.001
VOLVO	S80	I071	2013	Television module (TVM)	Erase codes		V1.10.001
VOLVO	S80	I071	2013	Television module (TVM)	Freeze frame		V1.10.001
VOLVO	S80	I071	2013	Television module (TVM)	Special functions		V1.10.001
VOLVO	S80	I071	2013	Television module (TVM)	Active test		V1.10.001
VOLVO	S80	I071	2013	Suspension module (SUM)	ECU identification		V1.10.001
VOLVO	S80	I071	2013	Suspension module (SUM)	Read codes		V1.10.001
VOLVO	S80	I071	2013	Suspension module (SUM)	Erase codes		V1.10.001
VOLVO	S80	I071	2013	Suspension module (SUM)	Freeze frame		V1.10.001
VOLVO	S80	I071	2013	Suspension module (SUM)	Special functions		V1.10.001
VOLVO	S80	I071	2013	Suspension module (SUM)	Active test		V1.10.001
VOLVO	S80	I071	2013	Power seat module (PSM)	ECU identification		V1.10.001
VOLVO	S80	I071	2013	Power seat module (PSM)	Read codes		V1.10.001
VOLVO	S80	I071	2013	Power seat module (PSM)	Erase codes		V1.10.001
VOLVO	S80	I071	2013	Power seat module (PSM)	Freeze frame		V1.10.001
VOLVO	S80	I071	2013	Power seat module (PSM)	Special functions		V1.10.001
VOLVO	S80	I071	2013	Power seat module (PSM)	Active test		V1.10.001
VOLVO	S80	I071	2013	Parking assistance module (PAM)	ECU identification		V1.10.001
VOLVO	S80	I071	2013	Parking assistance module (PAM)	Read codes		V1.10.001
VOLVO	S80	I071	2013	Parking assistance module (PAM)	Erase codes		V1.10.001
VOLVO	S80	I071	2013	Parking assistance module (PAM)	Freeze frame		V1.10.001
VOLVO	S80	I071	2013	Parking assistance module (PAM)	Special functions		V1.10.001
VOLVO	S80	I071	2013	Parking assistance module (PAM)	Active test		V1.10.001
VOLVO	S80	I071	2013	High level display front (HDF)	ECU identification		V1.10.001
VOLVO	S80	I071	2013	High level display front (HDF)	Read codes		V1.10.001
VOLVO	S80	I071	2013	High level display front (HDF)	Erase codes		V1.10.001
VOLVO	S80	I071	2013	High level display front (HDF)	Freeze frame		V1.10.001
VOLVO	S80	I071	2013	Forward looking radar (FLR)	ECU identification		V1.10.001
VOLVO	S80	I071	2013	Forward looking radar (FLR)	Read codes		V1.10.001
VOLVO	S80	I071	2013	Forward looking radar (FLR)	Erase codes		V1.10.001
VOLVO	S80	I071	2013	Forward looking radar (FLR)	Freeze frame		V1.10.001
VOLVO	S80	I071	2013	Audio module (AUD)	ECU identification		V1.10.001
VOLVO	S80	I071	2013	Audio module (AUD)	Read codes		V1.10.001
VOLVO	S80	I071	2013	Audio module (AUD)	Erase codes		V1.10.001
VOLVO	S80	I071	2013	Audio module (AUD)	Freeze frame		V1.10.001
VOLVO	S80	I071	2013	Phone module (PHM)	ECU identification		V1.10.001
VOLVO	S80	I071	2013	Phone module (PHM)	Read codes		V1.10.001
VOLVO	S80	I071	2013	Phone module (PHM)	Erase codes		V1.10.001
VOLVO	S80	I071	2013	Phone module (PHM)	Freeze frame		V1.10.001
VOLVO	S80	I071	2013	Phone module (PHM)	Special functions		V1.10.001
VOLVO	S80	I071	2013	Phone module (PHM)	Active test		V1.10.001
VOLVO	S80	I071	2013	Parking assistance camera (PAC)	ECU identification		V1.10.001
VOLVO	S80	I071	2013	Parking assistance camera (PAC)	Read codes		V1.10.001
VOLVO	S80	I071	2013	Parking assistance camera (PAC)	Erase codes		V1.10.001
VOLVO	S80	I071	2013	Parking assistance camera (PAC)	Freeze frame		V1.10.001
VOLVO	S80	I071	2013	Parking assistance camera (PAC)	Special functions		V1.10.001
VOLVO	S80	I071	2013	Parking assistance camera (PAC)	Active test		V1.10.001
VOLVO	S80	I071	2013	Rear seat entertainment module (RSE)	ECU identification		V1.10.001
VOLVO	S80	I071	2013	Rear seat entertainment module (RSE)	Read codes		V1.10.001
VOLVO	S80	I071	2013	Rear seat entertainment module (RSE)	Erase codes		V1.10.001
VOLVO	S80	I071	2013	Rear seat entertainment module (RSE)	Freeze frame		V1.10.001
VOLVO	S80	I071	2013	Rear seat entertainment module (RSE)	Special functions		V1.10.001
VOLVO	S80	I071	2013	Rear seat entertainment module (RSE)	Active test		V1.10.001
VOLVO	S80	I071	2013	Integrated audio module (IAM)	ECU identification		V1.10.001
VOLVO	S80	I071	2013	Integrated audio module (IAM)	Read codes		V1.10.001
VOLVO	S80	I071	2013	Integrated audio module (IAM)	Erase codes		V1.10.001
VOLVO	S80	I071	2013	Integrated audio module (IAM)	Freeze frame		V1.10.001
VOLVO	S80	I071	2013	Integrated audio module (IAM)	Special functions		V1.10.001
VOLVO	S80	I071	2013	Integrated audio module (IAM)	Active test		V1.10.001
VOLVO	S80	I071	2013	Power steering control module (PCM)	ECU identification		V1.10.001
VOLVO	S80	I071	2013	Power steering control module (PCM)	Read codes		V1.10.001
VOLVO	S80	I071	2013	Power steering control module (PCM)	Erase codes		V1.10.001
VOLVO	S80	I071	2013	Power steering control module (PCM)	Freeze frame		V1.10.001
VOLVO	S80	I071	2013	Power steering control module (PCM)	Special functions		V1.10.001
VOLVO	S80	I071	2013	Power steering control module (PCM)	Active test		V1.10.001
VOLVO	S80	I071	2013	Forward sensing module (FSM)	ECU identification		V1.10.001
VOLVO	S80	I071	2013	Forward sensing module (FSM)	Read codes		V1.10.001
VOLVO	S80	I071	2013	Forward sensing module (FSM)	Erase codes		V1.10.001
VOLVO	S80	I071	2013	Forward sensing module (FSM)	Freeze frame		V1.10.001
VOLVO	S80	I071	2013	Forward sensing module (FSM)	Special functions		V1.10.001
VOLVO	S80	I071	2013	Forward sensing module (FSM)	Active test		V1.10.001
VOLVO	S80	I071	2013	Forward sensing module (FSM)	Resetting the camera		V1.10.001
VOLVO	S80	I071	2013	Closing velocity module (CVM)	ECU identification		V1.10.001
VOLVO	S80	I071	2013	Closing velocity module (CVM)	Read codes		V1.10.001
VOLVO	S80	I071	2013	Closing velocity module (CVM)	Erase codes		V1.10.001
VOLVO	S80	I071	2013	Closing velocity module (CVM)	Freeze frame		V1.10.001
VOLVO	S80	I071	2013	Closing velocity module (CVM)	Special functions		V1.10.001
VOLVO	S80	I071	2013	Closing velocity module (CVM)	Active test		V1.10.001
VOLVO	S80	I071	2013	Trailer module (TRM)	ECU identification		V1.10.001
VOLVO	S80	I071	2013	Trailer module (TRM)	Read codes		V1.10.001
VOLVO	S80	I071	2013	Trailer module (TRM)	Erase codes		V1.10.001
VOLVO	S80	I071	2013	Trailer module (TRM)	Freeze frame		V1.10.001
VOLVO	S80	I071	2013	Forward sensing module (FSM)	ECU identification		V1.10.001
VOLVO	S80	I071	2013	Forward sensing module (FSM)	Read codes		V1.10.001
VOLVO	S80	I071	2013	Forward sensing module (FSM)	Erase codes		V1.10.001
VOLVO	S80	I071	2013	Forward sensing module (FSM)	Freeze frame		V1.10.001
VOLVO	S80	I071	2013	Forward sensing module (FSM)	Special functions		V1.10.001
VOLVO	S80	I071	2013	Forward sensing module (FSM)	Active test		V1.10.001
VOLVO	S80	I071	2013	Digital audio broadcast module (DABM)	ECU identification		V1.10.001
VOLVO	S80	I071	2013	Digital audio broadcast module (DABM)	Read codes		V1.10.001
VOLVO	S80	I071	2013	Digital audio broadcast module (DABM)	Erase codes		V1.10.001
VOLVO	S80	I071	2013	Digital audio broadcast module (DABM)	Freeze frame		V1.10.001
VOLVO	S80	I071	2013	Digital audio broadcast module (DABM)	Special functions		

VOLVO	S80	I071	2014	Combustion preheater module (CPM)	Special functions	Qual test of the function of the additional/banking heater	V1.10.001
VOLVO	S80	I071	2014	Combustion preheater module (CPM)	Special functions	Control of the cooling system	V1.10.001
VOLVO	S80	I071	2014	Combustion preheater module (CPM)	Special functions	Activating components	V1.10.001
VOLVO	S80	I071	2014	Combustion preheater module (CPM)	Special functions	Filling of fuel system auxiliary heater	V1.10.001
VOLVO	S80	I071	2014	Combustion preheater module (CPM)	Special functions	Identification of the heater	V1.10.001
VOLVO	S80	I071	2014	Parking assistance camera (PAC)	Read codes		V1.10.001
VOLVO	S80	I071	2014	Parking assistance camera (PAC)	Erase codes		V1.10.001
VOLVO	S80	I071	2014	Parking assistance camera (PAC)	Freeze frame		V1.10.001
VOLVO	S80	I071	2014	Parking assistance camera (PAC)	Special functions	Activation of installation image	V1.10.001
VOLVO	S80	I071	2014	Rear seat entertainment module (RSE)	ECU identification		V1.10.001
VOLVO	S80	I071	2014	Rear seat entertainment module (RSE)	Read codes		V1.10.001
VOLVO	S80	I071	2014	Rear seat entertainment module (RSE)	Erase codes		V1.10.001
VOLVO	S80	I071	2014	Rear seat entertainment module (RSE)	Freeze frame		V1.10.001
VOLVO	S80	I071	2014	Rear seat entertainment module (RSE)	Special functions	Checking AUX-panel	V1.10.001
VOLVO	S80	I071	2014	Rear seat entertainment module (RSE)	ECU identification		V1.10.001
VOLVO	S80	I071	2014	Integrated audio module (IAM)	Read codes		V1.10.001
VOLVO	S80	I071	2014	Integrated audio module (IAM)	Erase codes		V1.10.001
VOLVO	S80	I071	2014	Integrated audio module (IAM)	Freeze frame		V1.10.001
VOLVO	S80	I071	2014	Integrated audio module (IAM)	Special functions	Deleting phone book	V1.10.001
VOLVO	S80	I071	2014	Power steering control module (PSCM)	ECU identification		V1.10.001
VOLVO	S80	I071	2014	Power steering control module (PSCM)	Read codes		V1.10.001
VOLVO	S80	I071	2014	Power steering control module (PSCM)	Erase codes		V1.10.001
VOLVO	S80	I071	2014	Power steering control module (PSCM)	Freeze frame		V1.10.001
VOLVO	S80	I071	2014	Remote digital audio receiver (RDAIR)	ECU identification		V1.10.001
VOLVO	S80	I071	2014	Remote digital audio receiver (RDAIR)	Read codes		V1.10.001
VOLVO	S80	I071	2014	Remote digital audio receiver (RDAIR)	Erase codes		V1.10.001
VOLVO	S80	I071	2014	Remote digital audio receiver (RDAIR)	Freeze frame		V1.10.001
VOLVO	S80	I071	2014	Closing velocity module (CVM)	ECU identification		V1.10.001
VOLVO	S80	I071	2014	Closing velocity module (CVM)	Read codes		V1.10.001
VOLVO	S80	I071	2014	Closing velocity module (CVM)	Erase codes		V1.10.001
VOLVO	S80	I071	2014	Closing velocity module (CVM)	Freeze frame		V1.10.001
VOLVO	S80	I071	2014	Trailer module (TRM)	Read codes		V1.10.001
VOLVO	S80	I071	2014	Trailer module (TRM)	Erase codes		V1.10.001
VOLVO	S80	I071	2014	Trailer module (TRM)	Freeze frame		V1.10.001
VOLVO	S80	I071	2014	Audio module (AUD)	ECU identification		V1.10.001
VOLVO	S80	I071	2014	Audio module (AUD)	Read codes		V1.10.001
VOLVO	S80	I071	2014	Audio module (AUD)	Erase codes		V1.10.001
VOLVO	S80	I071	2014	Audio module (AUD)	Freeze frame		V1.10.001
VOLVO	S80	I071	2014	Audio module (AUD)	Special functions	Checking headphone socket,	V1.10.001
VOLVO	S80	I071	2014	Audio module (AUD)	Special functions	Checking loudspeaker element	V1.10.001
VOLVO	S80	I071	2014	Audio module (AUD)	Special functions	Checking loudspeakers	V1.10.001
VOLVO	S80	I071	2014	Parking assistance module (PAM)	ECU identification		V1.10.001
VOLVO	S80	I071	2014	Parking assistance module (PAM)	Read codes		V1.10.001
VOLVO	S80	I071	2014	Parking assistance module (PAM)	Erase codes		V1.10.001
VOLVO	S80	I071	2014	Parking assistance module (PAM)	Freeze frame		V1.10.001
VOLVO	S80	I071	2014	Forward sensing module (FSM)	ECU identification		V1.10.001
VOLVO	S80	I071	2014	Forward sensing module (FSM)	Read codes		V1.10.001
VOLVO	S80	I071	2014	Forward sensing module (FSM)	Erase codes		V1.10.001
VOLVO	S80	I071	2014	Forward sensing module (FSM)	Freeze frame		V1.10.001
VOLVO	S80	I071	2014	Forward sensing module (FSM)	Special functions	Calibration of radar and camera	V1.10.001
VOLVO	S80	I071	2014	Forward sensing module (FSM)	Special functions	Activating heating coil, FSW	V1.10.001
VOLVO	S80	I071	2014	Digital audiobroadcast module (DABM)	ECU identification	Activation of the indicator for visual collision warning	V1.10.001
VOLVO	S80	I071	2014	Digital audiobroadcast module (DABM)	Read codes	Activating the internal test procedures	V1.10.001
VOLVO	S80	I071	2014	Digital audio broadcast module (DABM)	Erase codes		V1.10.001
VOLVO	S80	I071	2014	Digital audio broadcast module (DABM)	Freeze frame		V1.10.001
VOLVO	S80	I071	2014	Thermometer control module (TCM)	Special functions	Initial adaptation	V1.10.001
VOLVO	S80	I071	2014	Thermometer control module (TCM)	Special functions	Checking and adjusting calculated ethanol content	V1.10.001
VOLVO	S80	I071	2014	Engine control module (ECM)	ECU identification	Readout	V1.10.001
VOLVO	S80	I071	2014	Engine control module (ECM)	Read codes	Test of fuel pressure regulation, low pressure side	V1.10.001
VOLVO	S80	I071	2014	Engine control module (ECM)	Erase codes	Resetting adaptations and wear counter for supercharger	V1.10.001
VOLVO	S80	I071	2014	Engine control module (ECM)	Freeze frame	Resetting adaptations for fuel/fair mix fuel trim	V1.10.001
VOLVO	S80	I071	2014	Engine control module (ECM)	Special functions	Resetting adaptations for camshaft regulation, intake	V1.10.001
VOLVO	S80	I071	2014	Engine control module (ECM)	Special functions	Resetting adaptations for camshaft regulation, exhaust	V1.10.001
VOLVO	S80	I071	2014	Engine control module (ECM)	Special functions	Resetting adaptations for the pump, low pressure side	V1.10.001
VOLVO	S80	I071	2014	Engine control module (ECM)	Special functions	Resetting adaptations for the pump, high pressure side	V1.10.001
VOLVO	S80	I071	2014	Engine control module (ECM)	Special functions	Resetting adaptations for the pump, priming	V1.10.001
VOLVO	S80	I071	2014	Engine control module (ECM)	Special functions	Resetting adaptations for the pump, start	V1.10.001
VOLVO	S80	I071	2014	Transmission control module (TCM)	ECU identification	Quick test of fuel tank system (USA/CND)	V1.10.001
VOLVO	S80	I071	2014	Transmission control module (TCM)	Read codes	Reading of diagnostic trouble codes (USA/CND)	V1.10.001
VOLVO	S80	I071	2014	Transmission control module (TCM)	Erase codes	Quick test of the fuel tank system	V1.10.001
VOLVO	S80	I071	2014	Transmission control module (TCM)	Freeze frame		V1.10.001
VOLVO	S80	I071	2014	Engine control module (ECM)	Special functions	Calibration of differential electronic module (DEM)	V1.10.001
VOLVO	S80	I071	2014	Engine control module (ECM)	Special functions	Blending the oil pressure pump	V1.10.001
VOLVO	S80	I071	2014	Engine control module (ECM)	Special functions	Resetting the transmission fluid change counter	V1.10.001
VOLVO	S80	I071	2014	Engine control module (ECM)	Special functions	Checking current soot quantity and combustion of soot in particle filter	V1.10.001
VOLVO	S80	I071	2014	Engine control module (ECM)	Special functions	Resetting counter for oil quality	V1.10.001
VOLVO	S80	I071	2014	Engine control module (ECM)	Special functions	Resetting counter of soot in the particle filter	V1.10.001
VOLVO	S80	I071	2014	Engine control module (ECM)	Special functions	Resetting adaptions for the EGR valve	V1.10.001
VOLVO	S80	I071	2014	Engine control module (ECM)	Special functions	Resetting adaptions for turbocharger control	V1.10.001
VOLVO	S80	I071	2014	Engine control module (ECM)	Special functions	Resetting adaptions for air flow measurement	V1.10.001
VOLVO	S80	I071	2014	Engine control module (ECM)	Special functions	Resetting adaptions for the glow plugs	V1.10.001
VOLVO	S80	I071	2014	Engine control module (ECM)	Special functions	Resetting fuel trim for control module pump	V1.10.001
VOLVO	S80	I071	2014	Engine control module (ECM)	Special functions	Adaptation of the exhaust gas recirculation (EGR) valve	V1.10.001
VOLVO	S80	I071	2014	Engine control module (ECM)	Special functions	Adaptation of throttle module	V1.10.001
VOLVO	S80	I071	2014	Engine control module (ECM)	Special functions	Adaptation of different pressure sensor particle filter	V1.10.001
VOLVO	S80	I071	2014	Engine control module (ECM)	Special functions	Resetting the sensor for the particle filter	V1.10.001
VOLVO	S80	I071	2014	Central electronic module (CEM)	ECU identification	Combustion of soot cartridges	V1.10.001
VOLVO	S80	I071	2014	Central electronic module (CEM)	Read codes	Checking the oil level	V1.10.001
VOLVO	S80	I071	2014	Central electronic module (CEM)	Erase codes	Activating the oil level valve	V1.10.001
VOLVO	S80	I071	2014	Central electronic module (CEM)	Freeze frame	Adjusting calculated oil level/oil quality	V1.10.001
VOLVO	S80	I071	2014	Central electronic module (CEM)	Special functions	Adaption turbo system	V1.10.001
VOLVO	S80	I071	2014	Central electronic module (CEM)	Special functions		V1.10.001
VOLVO	S80	I071	2014	Central electronic module (CEM)	Special functions	Adaption of the throttle unit	V1.10.001
VOLVO	S80	I071	2014	Central electronic module (CEM)	Special functions	Adaption of camshafts	V1.10.001
VOLVO	S80	I071	2014	Central electronic module (CEM)	Special functions	Resetting the adatuation values	V1.10.001
VOLVO	S80	I071	2014	Central electronic module (CEM)	Special functions	Checking injectors	V1.10.001
VOLVO	S80	I071	2014	Central electronic module (CEM)	Special functions	Adaption of neutral position sensor	V1.10.001
VOLVO	S80	I071	2014	Central electronic module (CEM)	Special functions		V1.10.001
VOLVO	S80	I071	2014	Central electronic module (CEM)	Special functions	Pre-delivery service for new car	V1.10.001
VOLVO	S80	I071	2014	Central electronic module (CEM)	Special functions	Resetting supplemental restraint system	V1.10.001
VOLVO	S80	I071	2014	Central electronic module (CEM)	Special functions	Readling off alarm cause	V1.10.001
VOLVO	S80	I071	2014	Central electronic module (CEM)	Special functions	Workshop test (TPMS)	V1.10.001
VOLVO	S80	I071	2014	Central electronic module (CEM)	Special functions	Read-out of the parking brake	V1.10.001
VOLVO	S80	I071	2014	Central electronic module (CEM)	Special functions	Resetting the clutch pedal counter	V1.10.001
VOLVO	S80	I071	2014	Central electronic module (CEM)	Special functions	Calibration of position sensor	V1.10.001
VOLVO	S80	I071	2014	Central electronic module (CEM)	Special functions	Setting day and night mode for the instrumentation	V1.10.001
VOLVO	S80	I071	2014	Central electronic module (CEM)	Special functions	Checking ABL function	V1.10.001
VOLVO	S80	I071	2014	Central electronic module (CEM)	Special functions	Activating front/rear	V1.10.001
VOLVO	S80	I071	2014	Central electronic module (CEM)	Special functions	Activating steering wheel heating	V1.10.001
VOLVO	S80	I071	2014	Central electronic module (CEM)	Special functions	Deactivation/activation of engine remote start ERS	V1.10.001
VOLVO	S80	I071	2014	Passenger door module (PDM)	ECU identification		V1.10.001
VOLVO	S80	I071	2014	Passenger door module (PDM)	Read codes		V1.10.001
VOLVO	S80	I071	2014	Passenger door module (PDM)	Erase codes		V1.10.001
VOLVO	S80	I071	2014	Passenger door module (PDM)	Freeze frame		V1.10.001
VOLVO	S80	I071	2014	Passenger door module (PDM)	Special functions	Calibration angle sensor	V1.10.001
VOLVO	S80	I071	2014	Passenger door module (PDM)	Special functions	Activation and service	V1.10.001
VOLVO	S80	I071	2014	Passenger door module (PDM)	Special functions	Resetting the clutch pedal counter	V1.10.001
VOLVO	S80	I071	2014	Passenger door module (PDM)	Special functions		V1.10.001
VOLVO	S80	I071	2014	Driver door module (DDM)	ECU identification	Installing the window in the front door	V1.10.001
VOLVO	S80	I071	2014	Driver door module (DDM)	Read codes	Installing the window in the front door	V1.10.001
VOLVO	S80	I071	2014	Driver door module (DDM)	Erase codes	Installing the window in the rear door	V1.10.001
VOLVO	S80	I071	2014	Driver door module (DDM)	Freeze frame	Central lock motors, activating	V1.10.001
VOLVO	S80	I071	2014	Driver door module (DDM)	Special functions		V1.10.001
VOLVO	S80	I071	2014	Passenger door module (PDM)	ECU identification		V1.10.001
VOLVO	S80	I071	2014	Passenger door module (PDM)	Read codes		V1.10.001
VOLVO	S80	I071	2014	Passenger door module (PDM)	Erase codes		V1.10.001
VOLVO	S80	I071	2014	Passenger door module (PDM)	Freeze frame		V1.10.001
VOLVO	S80	I071	2014	Supplemental restraint system module (SR5)	ECU identification		V1.10.001
VOLVO	S80	I071	2014	Supplemental restraint system module (SR5)	Read codes		V1.10.001
VOLVO	S80	I071	2014	Supplemental restraint system module (SR5)	Erase codes		V1.10.001
VOLVO	S80	I071	2014	Supplemental restraint system module (SR5)	Freeze frame		V1.10.001

VOLVO	SBL	2010	Central electronic module (CEM)	Special functions	Checkline installation, brake light switch, and brake pedal position switch	V1.10.001
VOLVO	SBL	2010	Central electronic module (CEM)	Special functions	Readout of information based on current battery monitoring sensor	V1.10.001
VOLVO	SBL	2010	Central electronic module (CEM)	Special functions	Readout of information based on current battery monitoring sensor	V1.10.001
VOLVO	SBL	2010	Central electronic module (CEM)	Special functions	Restoring the information to zero on power supply when replacing the battery	V1.10.001
VOLVO	SBL	2010	Central electronic module (CEM)	Special functions	Restoring the information to zero on power supply when replacing the battery monitoring sensor (BMS)	V1.10.001
VOLVO	SBL	2010	Central electronic module (CEM)	Special functions	Ejection of key	V1.10.001
VOLVO	SBL	2010	Central electronic module (CEM)	Special functions	Opening and initiating the roof hatch	V1.10.001
VOLVO	SBL	2010	Central electronic module (CEM)	Special functions	Setting day and night mode for the instrumentation	V1.10.001
VOLVO	SBL	2010	Central electronic module (CEM)	Special functions	Activating openers, front/rear	V1.10.001
VOLVO	SBL	2010	Central electronic module (CEM)	Special functions	Manual battery test	V1.10.001
VOLVO	SBL	2010	Driver door module (DDM)	ECU identification	Initialization of the window in the front door	V1.10.001
VOLVO	SBL	2010	Driver door module (DDM)	Read codes	Initialization of the window in the rear door	V1.10.001
VOLVO	SBL	2010	Driver door module (DDM)	Erase codes	Central lock motors, activating	V1.10.001
VOLVO	SBL	2010	Driver door module (DDM)	Freeze frame	Initialization of the window in the front door	V1.10.001
VOLVO	SBL	2010	Driver door module (DDM)	Active test	Initialization of the window in the rear door	V1.10.001
VOLVO	SBL	2010	Driver door module (DDM)	Special functions	Central lock motors, activating	V1.10.001
VOLVO	SBL	2010	Driver door module (DDM)	Special functions	Initialization of the window in the front door	V1.10.001
VOLVO	SBL	2010	Driver door module (DDM)	Special functions	Initialization of the window in the rear door	V1.10.001
VOLVO	SBL	2010	Passenger door module (PDM)	ECU identification	Central lock motors, activating	V1.10.001
VOLVO	SBL	2010	Passenger door module (PDM)	Read codes	Initialization of the window in the front door	V1.10.001
VOLVO	SBL	2010	Passenger door module (PDM)	Erase codes	Initialization of the window in the rear door	V1.10.001
VOLVO	SBL	2010	Passenger door module (PDM)	Freeze frame	Central lock motors, activating	V1.10.001
VOLVO	SBL	2010	Passenger door module (PDM)	Active test	Initialization of the window in the front door	V1.10.001
VOLVO	SBL	2010	Passenger door module (PDM)	Special functions	Initialization of the window in the rear door	V1.10.001
VOLVO	SBL	2010	Passenger door module (PDM)	Special functions	Central lock motors, activating	V1.10.001
VOLVO	SBL	2010	Park brake module (PBM)	ECU identification	Calibration angle sensor	V1.10.001
VOLVO	SBL	2010	Park brake module (PBM)	Read codes	Activation and service	V1.10.001
VOLVO	SBL	2010	Park brake module (PBM)	Erase codes	Calibrating the occupant weight sensor (OWS)	V1.10.001
VOLVO	SBL	2010	Park brake module (PBM)	Freeze frame	Powering the SRS system	V1.10.001
VOLVO	SBL	2010	Park brake module (PBM)	Active test	Checking the PAD-light	V1.10.001
VOLVO	SBL	2010	Park brake module (PBM)	Special functions	Calibration	V1.10.001
VOLVO	SBL	2010	Park brake module (PBM)	Special functions	Programming control module	V1.10.001
VOLVO	SBL	2010	Park brake module (PBM)	Special functions	Open-circuit in the MOST cable.	V1.10.001
VOLVO	SBL	2010	Park brake module (PBM)	Special functions	Checking MOST communication	V1.10.001
VOLVO	SBL	2010	Supplemental restraint system module (SRS)	ECU identification	Calibration	V1.10.001
VOLVO	SBL	2010	Supplemental restraint system module (SRS)	Read codes	Resetting the odometer setting	V1.10.001
VOLVO	SBL	2010	Supplemental restraint system module (SRS)	Erase codes	Resetting the service reminder indicator (SRI)	V1.10.001
VOLVO	SBL	2010	Supplemental restraint system module (SRS)	Freeze frame	Testing all indicators and lamps in the driver information module (DIM)	V1.10.001
VOLVO	SBL	2010	Supplemental restraint system module (SRS)	Special functions	Programming seatbelt reminder in backseat	V1.10.001
VOLVO	SBL	2010	Supplemental restraint system module (SRS)	Special functions	Programming text message, seatbelt reminder	V1.10.001
VOLVO	SBL	2010	Supplemental restraint system module (SRS)	Special functions	Programming driver information module (DIM)	V1.10.001
VOLVO	SBL	2010	Brake control module (BCM)	ECU identification	Read out of fuel volume.	V1.10.001
VOLVO	SBL	2010	Brake control module (BCM)	Read codes	Display of oil check	V1.10.001
VOLVO	SBL	2010	Brake control module (BCM)	Erase codes	Calibrating the climate control module (CCM)	V1.10.001
VOLVO	SBL	2010	Brake control module (BCM)	Freeze frame	Identifying components on the LIN network that belong to the climate control system (CCM)	V1.10.001
VOLVO	SBL	2010	Infotainment control module (ICM)	ECU identification	Readout of all electronic damper motor, actual/ preset range and tolerance limit	V1.10.001
VOLVO	SBL	2010	Infotainment control module (ICM)	Read codes	Programming the evaporator, climate control module (CCM)	V1.10.001
VOLVO	SBL	2010	Infotainment control module (ICM)	Erase codes	Activating air flow in rear passenger compartment	V1.10.001
VOLVO	SBL	2010	Infotainment control module (ICM)	Freeze frame	Airflow setting in rear passenger compartment	V1.10.001
VOLVO	SBL	2010	Infotainment control module (ICM)	Active test	Programming the climate control module (CCM)	V1.10.001
VOLVO	SBL	2010	Infotainment control module (ICM)	Special functions	Action for failing temperature and cold draught in passenger compartment	V1.10.001
VOLVO	SBL	2010	Infotainment control module (ICM)	Special functions	Reactive mirror light sensitivity	V1.10.001
VOLVO	SBL	2010	Steering angle sensor module (SAS)	ECU identification	Calibrating the climate control module (CCM)	V1.10.001
VOLVO	SBL	2010	Steering angle sensor module (SAS)	Read codes	Identifying components on the LIN network that belong to the climate control system (CCM)	V1.10.001
VOLVO	SBL	2010	Steering angle sensor module (SAS)	Erase codes	Readout of all electronic damper motor, actual/ preset range and tolerance limit	V1.10.001
VOLVO	SBL	2010	Steering angle sensor module (SAS)	Freeze frame	Programming the evaporator, climate control module (CCM)	V1.10.001
VOLVO	SBL	2010	Steering angle sensor module (SAS)	Special functions	Activating air flow in rear passenger compartment	V1.10.001
VOLVO	SBL	2010	Steering angle sensor module (SAS)	Special functions	Airflow setting in rear passenger compartment	V1.10.001
VOLVO	SBL	2010	Driver information module (DIM)	ECU identification	Programming the climate control module (CCM)	V1.10.001
VOLVO	SBL	2010	Driver information module (DIM)	Read codes	Action for failing temperature and cold draught in passenger compartment	V1.10.001
VOLVO	SBL	2010	Driver information module (DIM)	Erase codes	Reactive mirror light sensitivity	V1.10.001
VOLVO	SBL	2010	Driver information module (DIM)	Freeze frame	Calibrating the climate control module (CCM)	V1.10.001
VOLVO	SBL	2010	Driver information module (DIM)	Special functions	Identifying components on the LIN network that belong to the climate control system (CCM)	V1.10.001
VOLVO	SBL	2010	Driver information module (DIM)	Special functions	Readout of all electronic damper motor, actual/ preset range and tolerance limit	V1.10.001
VOLVO	SBL	2010	Driver information module (DIM)	ECU identification	Programming seatbelt reminder in backseat	V1.10.001
VOLVO	SBL	2010	Driver information module (DIM)	Read codes	Programming seat text message, seatbelt reminder	V1.10.001
VOLVO	SBL	2010	Driver information module (DIM)	Erase codes	Programming driver information module (DIM)	V1.10.001
VOLVO	SBL	2010	Driver information module (DIM)	Freeze frame	Read out of fuel volume.	V1.10.001
VOLVO	SBL	2010	Driver information module (DIM)	Active test	Display of oil check	V1.10.001
VOLVO	SBL	2010	Keyless vehicle module (KVM)	ECU identification	Calibrating the climate control module (CCM)	V1.10.001
VOLVO	SBL	2010	Keyless vehicle module (KVM)	Read codes	Identifying components on the LIN network that belong to the climate control system (CCM)	V1.10.001
VOLVO	SBL	2010	Keyless vehicle module (KVM)	Erase codes	Readout of all electronic damper motor, actual/ preset range and tolerance limit	V1.10.001
VOLVO	SBL	2010	Keyless vehicle module (KVM)	Freeze frame	Programming the evaporator, climate control module (CCM)	V1.10.001
VOLVO	SBL	2010	Keyless vehicle module (KVM)	Special functions	Activating air flow in rear passenger compartment	V1.10.001
VOLVO	SBL	2010	Keyless vehicle module (KVM)	Special functions	Airflow setting in rear passenger compartment	V1.10.001
VOLVO	SBL	2010	Keyless vehicle module (KVM)	ECU identification	Programming the climate control module (CCM)	V1.10.001
VOLVO	SBL	2010	Keyless vehicle module (KVM)	Read codes	Action for failing temperature and cold draught in passenger compartment	V1.10.001
VOLVO	SBL	2010	Keyless vehicle module (KVM)	Erase codes	Reactive mirror light sensitivity	V1.10.001
VOLVO	SBL	2010	Keyless vehicle module (KVM)	Freeze frame	Calibrating all antennas	V1.10.001
VOLVO	SBL	2010	Keyless vehicle module (KVM)	Special functions	Check the communication with the remote control receiver.	V1.10.001
VOLVO	SBL	2010	Combustion preheater module (CPM)	ECU identification	Remote control	V1.10.001
VOLVO	SBL	2010	Combustion preheater module (CPM)	Read codes	Test of internal memory	V1.10.001
VOLVO	SBL	2010	Combustion preheater module (CPM)	Erase codes	Activation of quick-light motors	V1.10.001
VOLVO	SBL	2010	Combustion preheater module (CPM)	Freeze frame	Programming the seat memory's delay time and acknowledgement	V1.10.001
VOLVO	SBL	2010	Combustion preheater module (CPM)	Active test	Programming the seat memory's delay time and acknowledgement	V1.10.001
VOLVO	SBL	2010	Combustion preheater module (CPM)	Special functions	Request for self test.	V1.10.001
VOLVO	SBL	2010	Combustion preheater module (CPM)	Special functions	Activation	V1.10.001
VOLVO	SBL	2010	Combustion preheater module (CPM)	ECU identification	Calibration	V1.10.001
VOLVO	SBL	2010	Combustion preheater module (CPM)	Read codes	Calibration of position sensor	V1.10.001
VOLVO	SBL	2010	Combustion preheater module (CPM)	Erase codes	Activation	V1.10.001
VOLVO	SBL	2010	Combustion preheater module (CPM)	Freeze frame	Activation	V1.10.001
VOLVO	SBL	2010	Combustion preheater module (CPM)	Active test	Activation	V1.10.001
VOLVO	SBL	2010	Combustion preheater module (CPM)	Special functions	Activation	V1.10.001
VOLVO	SBL	2010	Suspension module (SUM)	ECU identification	Activation	V1.10.001
VOLVO	SBL	2010	Suspension module (SUM)	Read codes	Activation	V1.10.001
VOLVO	SBL	2010	Suspension module (SUM)	Erase codes	Activation	V1.10.001
VOLVO	SBL	2010	Suspension module (SUM)	Freeze frame	Activation	V1.10.001
VOLVO	SBL	2010	Suspension module (SUM)	Active test	Activation	V1.10.001
VOLVO	SBL	2010	Suspension module (SUM)	Special functions	Activation	V1.10.001
VOLVO	SBL	2010	Headlight control module (HCM)	ECU identification	Programming of parking assistance module (PAM)	V1.10.001
VOLVO	SBL	2010	Headlight control module (HCM)	Read codes	Programming of parking assistance module (PAM)	V1.10.001
VOLVO	SBL	2010	Headlight control module (HCM)	Erase codes	Programming of parking assistance module (PAM)	V1.10.001
VOLVO	SBL	2010	Headlight control module (HCM)	Freeze frame	Programming of parking assistance module (PAM)	V1.10.001
VOLVO	SBL	2010	Headlight control module (HCM)	Special functions	Programming of parking assistance module (PAM)	V1.10.001
VOLVO	SBL	2010	Headlight control module (HCM)	ECU identification	Activation	V1.10.001
VOLVO	SBL	2010	Headlight control module (HCM)	Read codes	Calibration	V1.10.001
VOLVO	SBL	2010	Headlight control module (HCM)	Erase codes	Activation	V1.10.001
VOLVO	SBL	2010	Headlight control module (HCM)	Freeze frame	Activation	V1.10.001
VOLVO	SBL	2010	Headlight control module (HCM)	Active test	Activation	V1.10.001
VOLVO	SBL	2010	Headlight control module (HCM)	Special functions	Activation	V1.10.001
VOLVO	SBL	2010	Forward sensing module (FSM)	ECU identification	Activation	V1.10.001
VOLVO	SBL	2010	Forward sensing module (FSM)	Read codes	Activation	V1.10.001
VOLVO	SBL	2010	Forward sensing module (FSM)	Erase codes	Activation	V1.10.001
VOLVO	SBL	2010	Forward sensing module (FSM)	Freeze frame	Activation	V1.10.001
VOLVO	SBL	2010	Forward sensing module (FSM)	Active test	Activation	V1.10.001
VOLVO	SBL	2010	Forward sensing module (FSM)	Special functions	Activation	V1.10.001
VOLVO	SBL	2010	Forward sensing module (FSM)	ECU identification	Activating the internal test procedures	V1.10.001
VOLVO	SBL	2010	Forward sensing module (FSM)	Read codes	Activating heating coil, PSM	V1.10.001
VOLVO	SBL	2010	Forward sensing module (FSM)	Erase codes	Calibration of radar and camera	V1.10.001
VOLVO	SBL	2010	Forward sensing module (FSM)	Freeze frame	Activation of installation image	V1.10.001
VOLVO	SBL	2010	Parking assistance camera (PAC)	ECU identification	Bonitstalling the reserve battery	V1.10.001
VOLVO	SBL	2010	Parking assistance camera (PAC)	Read codes	Check whether PSM has Volvo On Call	V1.10.001
VOLVO	SBL	2010	Parking assistance camera (PAC)	Erase codes	Set lighting on buttons to Volvo On Call	V1.10.001
VOLVO	SBL	2010	Parking assistance camera (PAC)	Freeze frame	Activation/pre-activation of Volvo On Call	V1.10.001
VOLVO	SBL	2010	Forward digital audio receiver (RDR)	ECU identification	Readiness code	V1.10.001
VOLVO	SBL	2010	Forward digital audio receiver (RDR)	Read codes	Check the fueling pump	V1.10.001
VOLVO	SBL	2010	Forward digital audio receiver (RDR)	Erase codes	Test/movement of camshaft control, intake	V1.10.001
VOLVO	SBL	2010	Forward digital audio receiver (RDR)	Freeze frame	Test/movement of camshaft control, exhaust	V1.10.001
VOLVO	SBL	2010	Forward parking radar (FPR)	ECU identification	Resuming adaption	V1.10.001
VOLVO	SBL	2010	Forward parking radar (FPR)	Read codes	Resuming the transmission fluid change	V1.10.001
VOLVO	SBL	2010	Forward parking radar (FPR)	Erase codes	Calibration of gear position sensor	V1.10.001
VOLVO	SBL	2010	Forward parking radar (FPR)	Freeze frame	Activating gear position	V1.10.001
VOLVO	SBL	2010	Engine control module (ECM)	ECU identification	Readiness code	V1.10.001
VOLVO	SBL	2010	Engine control module (ECM)	Read codes	Check the fueling pump	V1.10.001
VOLVO	SBL	2010	Engine control module (ECM)	Erase codes	Test/movement of camshaft control, intake	V1.10.001
VOLVO	SBL	2010	Engine control module (ECM)	Freeze frame	Test/movement of camshaft control, exhaust	V1.10.001
VOLVO	SBL	2010	Transmission control module (TCM)	ECU identification	Resuming adaption	V1.10.001
VOLVO	SBL	2010	Transmission control module (TCM)	Read codes	Resuming the transmission fluid change	V1.10.001
VOLVO	SBL	2010	Transmission control module (TCM)	Erase codes	Calibration of gear position sensor	V1.10.001
VOLVO	SBL	2010	Transmission control module (TCM)	Freeze frame	Activating gear position	V1.10.001

VOLVO	SBL	2014	Climate control module (CCM)	Special functions	Calibrating the climate control module (CCM) Identifying the modules in the LIN network that belong to the climate control system (CCM) Reading out of programmed values Reading out electronic damper motor, actual/preset range and tolerance limit	V1.10.001
VOLVO	SBL	2014	Climate control module (CCM)	Special functions	Programing the evaporator, climate control module (CCM)	V1.10.001
VOLVO	SBL	2014	Climate control module (CCM)	Special functions	Activation of blower fan run-on	V1.10.001
VOLVO	SBL	2014	Climate control module (CCM)	Special functions	Activation of blower fan in rear compartment	V1.10.001
VOLVO	SBL	2014	Climate control module (CCM)	Special functions	Read view mirror light sensitivity	V1.10.001
VOLVO	SBL	2014	Brake control module (BCM)	ECU identification	ECU identification	V1.10.001
VOLVO	SBL	2014	Brake control module (BCM)	Read codes	Read codes	V1.10.001
VOLVO	SBL	2014	Brake control module (BCM)	Erase codes	Erase codes	V1.10.001
VOLVO	SBL	2014	Brake control module (BCM)	Freeze frame	Freeze frame	V1.10.001
VOLVO	SBL	2014	Brake control module (BCM)	Active test	Active test	V1.10.001
VOLVO	SBL	2014	Driver door module (DDM)	Special functions	Special functions	V1.10.001
VOLVO	SBL	2014	Driver door module (DDM)	ECU identification	ECU identification	V1.10.001
VOLVO	SBL	2014	Driver door module (DDM)	Read codes	Read codes	V1.10.001
VOLVO	SBL	2014	Driver door module (DDM)	Erase codes	Erase codes	V1.10.001
VOLVO	SBL	2014	Driver door module (DDM)	Freeze frame	Freeze frame	V1.10.001
VOLVO	SBL	2014	Driver door module (DDM)	Active test	Active test	V1.10.001
VOLVO	SBL	2014	Driver door module (DDM)	Special functions	Special functions	V1.10.001
VOLVO	SBL	2014	Passenger door module (PDM)	ECU identification	ECU identification	V1.10.001
VOLVO	SBL	2014	Passenger door module (PDM)	Read codes	Read codes	V1.10.001
VOLVO	SBL	2014	Passenger door module (PDM)	Erase codes	Erase codes	V1.10.001
VOLVO	SBL	2014	Passenger door module (PDM)	Freeze frame	Freeze frame	V1.10.001
VOLVO	SBL	2014	Passenger door module (PDM)	Active test	Active test	V1.10.001
VOLVO	SBL	2014	Passenger door module (PDM)	Special functions	Special functions	V1.10.001
VOLVO	SBL	2014	Passenger door module (PDM)	ECU identification	ECU identification	V1.10.001
VOLVO	SBL	2014	Supplemental restraint system module (SRS)	Read codes	Read codes	V1.10.001
VOLVO	SBL	2014	Supplemental restraint system module (SRS)	Erase codes	Erase codes	V1.10.001
VOLVO	SBL	2014	Supplemental restraint system module (SRS)	Freeze frame	Freeze frame	V1.10.001
VOLVO	SBL	2014	Supplemental restraint system module (SRS)	Special functions	Special functions	V1.10.001
VOLVO	SBL	2014	Supplemental restraint system module (SRS)	ECU identification	ECU identification	V1.10.001
VOLVO	SBL	2014	Infotainment control module (ICM)	Read codes	Read codes	V1.10.001
VOLVO	SBL	2014	Infotainment control module (ICM)	Erase codes	Erase codes	V1.10.001
VOLVO	SBL	2014	Infotainment control module (ICM)	Freeze frame	Freeze frame	V1.10.001
VOLVO	SBL	2014	Infotainment control module (ICM)	Special functions	Special functions	V1.10.001
VOLVO	SBL	2014	Infotainment control module (ICM)	ECU identification	ECU identification	V1.10.001
VOLVO	SBL	2014	Driver information module (DIM)	Read codes	Open circuit on KML cable (only vehicles with Infotainment control module (ICM))	V1.10.001
VOLVO	SBL	2014	Driver information module (DIM)	Erase codes	Communication on MOST	V1.10.001
VOLVO	SBL	2014	Driver information module (DIM)	Freeze frame	Checking video signal (only applies vehicles with Infotainment control module (ICM))	V1.10.001
VOLVO	SBL	2014	Driver information module (DIM)	Special functions	Check the owner's manual in the vehicle	V1.10.001
VOLVO	SBL	2014	Driver information module (DIM)	ECU identification	Check seatbelt-related components at collision	V1.10.001
VOLVO	SBL	2014	Driver information module (DIM)	Read codes	Calibrating the occupant weight sensor (OWS)	V1.10.001
VOLVO	SBL	2014	Driver information module (DIM)	Erase codes	Powering the SRS system	V1.10.001
VOLVO	SBL	2014	Driver information module (DIM)	Freeze frame	Checking the PAD light	V1.10.001
VOLVO	SBL	2014	Driver information module (DIM)	Special functions	Check seatbelt-related components at collision	V1.10.001
VOLVO	SBL	2014	Driver information module (DIM)	ECU identification	Calibrating the occupant weight sensor (OWS)	V1.10.001
VOLVO	SBL	2014	Driver information module (DIM)	Read codes	Powering the SRS system	V1.10.001
VOLVO	SBL	2014	Driver information module (DIM)	Erase codes	Checking the PAD light	V1.10.001
VOLVO	SBL	2014	Driver information module (DIM)	Freeze frame	Check seatbelt-related components at collision	V1.10.001
VOLVO	SBL	2014	Driver information module (DIM)	Special functions	Calibrating the occupant weight sensor (OWS)	V1.10.001
VOLVO	SBL	2014	Driver information module (DIM)	ECU identification	Powering the SRS system	V1.10.001
VOLVO	SBL	2014	Driver information module (DIM)	Read codes	Checking the PAD light	V1.10.001
VOLVO	SBL	2014	Driver information module (DIM)	Erase codes	Check seatbelt-related components at collision	V1.10.001
VOLVO	SBL	2014	Driver information module (DIM)	Freeze frame	Calibrating the occupant weight sensor (OWS)	V1.10.001
VOLVO	SBL	2014	Driver information module (DIM)	Special functions	Powering the SRS system	V1.10.001
VOLVO	SBL	2014	Driver information module (DIM)	ECU identification	Checking the PAD light	V1.10.001
VOLVO	SBL	2014	Keyless vehicle module (KVM)	Read codes	Check seatbelt-related components at collision	V1.10.001
VOLVO	SBL	2014	Keyless vehicle module (KVM)	Erase codes	Calibrating the occupant weight sensor (OWS)	V1.10.001
VOLVO	SBL	2014	Keyless vehicle module (KVM)	Freeze frame	Powering the SRS system	V1.10.001
VOLVO	SBL	2014	Keyless vehicle module (KVM)	Special functions	Checking the PAD light	V1.10.001
VOLVO	SBL	2014	Keyless vehicle module (KVM)	ECU identification	Check seatbelt-related components at collision	V1.10.001
VOLVO	SBL	2014	Television module (TVM)	Read codes	Testing all indicators and lamps in the driver information module (DIM)	V1.10.001
VOLVO	SBL	2014	Television module (TVM)	Erase codes	Programming seatbelt reminder in backseat	V1.10.001
VOLVO	SBL	2014	Television module (TVM)	Freeze frame	Programming text message; seatbelt reminder	V1.10.001
VOLVO	SBL	2014	Television module (TVM)	Special functions	Programming memory in information module (DIM)	V1.10.001
VOLVO	SBL	2014	Television module (TVM)	ECU identification	Read-out of fuel volume.	V1.10.001
VOLVO	SBL	2014	Power seat module (PSM)	Read codes	Resetting the service reminder indicator (SRI)	V1.10.001
VOLVO	SBL	2014	Power seat module (PSM)	Erase codes	Display of fuel consumption	V1.10.001
VOLVO	SBL	2014	Power seat module (PSM)	Freeze frame	Programming the seat memory's delay time and acknowledgement	V1.10.001
VOLVO	SBL	2014	Power seat module (PSM)	Special functions	Change volume on LDW	V1.10.001
VOLVO	SBL	2014	Power seat module (PSM)	ECU identification	Calibration	V1.10.001
VOLVO	SBL	2014	Power seat module (PSM)	Read codes	Programming the seat memory's delay time and acknowledgement	V1.10.001
VOLVO	SBL	2014	Power seat module (PSM)	Erase codes	Check the communication with the remote control receiver.	V1.10.001
VOLVO	SBL	2014	Power seat module (PSM)	Freeze frame	Remote control	V1.10.001
VOLVO	SBL	2014	Power seat module (PSM)	Special functions	Test of internal memory	V1.10.001
VOLVO	SBL	2014	Power seat module (PSM)	ECU identification	Activation of quick-lock motors.	V1.10.001
VOLVO	SBL	2014	Television module (TVM)	Read codes	Calibration	V1.10.001
VOLVO	SBL	2014	Television module (TVM)	Erase codes	Programming the seat memory's delay time and acknowledgement	V1.10.001
VOLVO	SBL	2014	Television module (TVM)	Freeze frame	Check all antennas	V1.10.001
VOLVO	SBL	2014	Television module (TVM)	Special functions	Check the communication with the remote control receiver.	V1.10.001
VOLVO	SBL	2014	Television module (TVM)	ECU identification	Remote control	V1.10.001
VOLVO	SBL	2014	Television module (TVM)	Read codes	Test of internal memory	V1.10.001
VOLVO	SBL	2014	Television module (TVM)	Erase codes	Activation of quick-lock motors.	V1.10.001
VOLVO	SBL	2014	Integrated audio module (IAM)	ECU identification	Calibration	V1.10.001
VOLVO	SBL	2014	Integrated audio module (IAM)	Read codes	Programming the seat memory's delay time and acknowledgement	V1.10.001
VOLVO	SBL	2014	Integrated audio module (IAM)	Erase codes	Check the communication with the remote control receiver.	V1.10.001
VOLVO	SBL	2014	Integrated audio module (IAM)	Freeze frame	Remote control	V1.10.001
VOLVO	SBL	2014	Integrated audio module (IAM)	Special functions	Test of internal memory	V1.10.001
VOLVO	SBL	2014	Integrated audio module (IAM)	ECU identification	Activation of quick-lock motors.	V1.10.001
VOLVO	SBL	2014	Power steering control module (PCM)	Read codes	Calibration	V1.10.001
VOLVO	SBL	2014	Combustion preheater module (CPM)	Erase codes	Programming the seat memory's delay time and acknowledgement	V1.10.001
VOLVO	SBL	2014	Combustion preheater module (CPM)	Freeze frame	Check the communication with the remote control receiver.	V1.10.001
VOLVO	SBL	2014	Combustion preheater module (CPM)	Special functions	Remote control	V1.10.001
VOLVO	SBL	2014	Combustion preheater module (CPM)	ECU identification	Test of internal memory	V1.10.001
VOLVO	SBL	2014	Combustion preheater module (CPM)	Read codes	Activation of quick-lock motors.	V1.10.001
VOLVO	SBL	2014	Power seat module (PSM)	ECU identification	Calibration	V1.10.001
VOLVO	SBL	2014	Power seat module (PSM)	Read codes	Programming the seat memory's delay time and acknowledgement	V1.10.001
VOLVO	SBL	2014	Power seat module (PSM)	Erase codes	Check the communication with the remote control receiver.	V1.10.001
VOLVO	SBL	2014	Power seat module (PSM)	Freeze frame	Remote control	V1.10.001
VOLVO	SBL	2014	Power seat module (PSM)	Special functions	Test of internal memory	V1.10.001
VOLVO	SBL	2014	Power seat module (PSM)	ECU identification	Activation of quick-lock motors.	V1.10.001
VOLVO	SBL	2014	Integrated audio module (IAM)	Read codes	Calibration	V1.10.001
VOLVO	SBL	2014	Integrated audio module (IAM)	Erase codes	Programming the seat memory's delay time and acknowledgement	V1.10.001
VOLVO	SBL	2014	Integrated audio module (IAM)	Freeze frame	Check the communication with the remote control receiver.	V1.10.001
VOLVO	SBL	2014	Integrated audio module (IAM)	Special functions	Remote control	V1.10.001
VOLVO	SBL	2014	Integrated audio module (IAM)	ECU identification	Test of internal memory	V1.10.001
VOLVO	SBL	2014	Integrated audio module (IAM)	Read codes	Activation of quick-lock motors.	V1.10.001
VOLVO	SBL	2014	Closing velocity module (CVM)	Read codes	Calibration	V1.10.001
VOLVO	SBL	2014	Closing velocity module (CVM)	Erase codes	Programming components	V1.10.001
VOLVO	SBL	2014	Closing velocity module (CVM)	Freeze frame	Filling of fuel system auxiliary heater	V1.10.001
VOLVO	SBL	2014	Closing velocity module (CVM)	Special functions	Identification of the heater	V1.10.001
VOLVO	SBL	2014	Power steering control module (PSCM)	Read codes	Calibration test of the function of the additional/parking heater	V1.10.001
VOLVO	SBL	2014	Combustion preheater module (CPM)	Erase codes	Activating components	V1.10.001
VOLVO	SBL	2014	Combustion preheater module (CPM)	Freeze frame	Activating components	V1.10.001
VOLVO	SBL	2014	Combustion preheater module (CPM)	Special functions	Activating components	V1.10.001
VOLVO	SBL	2014	Combustion preheater module (CPM)	ECU identification	Activating components	V1.10.001
VOLVO	SBL	2014	Combustion preheater module (CPM)	Read codes	Identifying the heater	V1.10.001
VOLVO	SBL	2014	Integrated audio module (IAM)	Erase codes	Calibration	V1.10.001
VOLVO	SBL	2014	Integrated audio module (IAM)	Freeze frame	Check whether PMS has Volvo On Call	V1.10.001
VOLVO	SBL	2014	Integrated audio module (IAM)	Special functions	Set lighting on buttons to Volvo On Call	V1.10.001
VOLVO	SBL	2014	Integrated audio module (IAM)	ECU identification	Activation/ore-activation of Volvo On Call	V1.10.001
VOLVO	SBL	2014	Integrated audio module (IAM)	Read codes	Calibration	V1.10.001
VOLVO	SBL	2014	Integrated audio module (IAM)	Erase codes	Programming the seat memory's delay time and acknowledgement	V1.10.001
VOLVO	SBL	2014	Integrated audio module (IAM)	Freeze frame	Check the communication with the remote control receiver.	V1.10.001
VOLVO	SBL	2014	Integrated audio module (IAM)	Special functions	Remote control	V1.10.001
VOLVO	SBL	2014	Integrated audio module (IAM)	ECU identification	Test of internal memory	V1.10.001
VOLVO	SBL	2014	Integrated audio module (IAM)	Read codes	Activation of quick-lock motors.	V1.10.001
VOLVO	SBL	2014	Forward sensing module (FSM)	Read codes	Calibration	V1.10.001
VOLVO	SBL	2014	Forward sensing module (FSM)	Erase codes	Programming components	V1.10.001
VOLVO	SBL	2014	Forward sensing module (FSM)	Freeze frame	Filling of fuel system auxiliary heater	V1.10.001
VOLVO	SBL	2014	Forward sensing module (FSM)	Special functions	Identification of the heater	V1.10.001
VOLVO	SBL	2014	Forward sensing module (FSM)	ECU identification	Calibration	V1.10.001
VOLVO	SBL	2014	Forward sensing module (FSM)	Read codes	Activating components	V1.10.001
VOLVO	SBL	2014	Forward sensing module (FSM)	Erase codes	Activating components	V1.10.001
VOLVO	SBL	2014	Forward sensing module (FSM)	Freeze frame	Activating components	V1.10.001
VOLVO	SBL	2014	Forward sensing module (FSM)	Special functions	Activating components	V1.10.001
VOLVO	SBL	2014	Forward sensing module (FSM)	ECU identification	Activating components	V1.10.001
VOLVO	SBL	2014	Forward sensing module (FSM)	Read codes	Identifying the heater	V1.10.001
VOLVO	SBL	2014	Forward sensing module (FSM)	Erase codes	Calibration	V1.10.001
VOLVO	SBL	2014	Forward sensing module (FSM)	Freeze frame	Check whether PMS has Volvo On Call	V1.10.001
VOLVO	SBL	2014	Forward sensing module (FSM)	Special functions	Set lighting on buttons to Volvo On Call	V1.10.001
VOLVO	SBL	2014	Forward sensing module (FSM)	ECU identification	Activation/ore-activation of Volvo On Call	V1.10.001
VOLVO	SBL	2014	Forward sensing module (FSM)	Read codes	Calibration	V1.10.001
VOLVO	SBL	2014	Forward sensing module (FSM)	Erase codes	Programming the seat memory's delay time and acknowledgement	V1.10.001
VOLVO	SBL	2014	Forward sensing module (FSM)	Freeze frame	Check the communication with the remote control receiver.	V1.10.001
VOLVO	SBL	2014	Forward sensing module (FSM)	Special functions	Remote control	V1.10.001
VOLVO	SBL	2014	Forward sensing module (FSM)	ECU identification	Test of internal memory	V1.10.001
VOLVO	SBL	2014	Forward sensing module (FSM)	Read codes	Activation of quick-lock motors.	V1.10.001
VOLVO	SBL	2014	Forward sensing module (FSM)	Erase codes	Calibration	V1.10.001
VOLVO	SBL	2014	Forward sensing module (FSM)	Freeze frame	Programming components	V1.10.001
VOLVO	SBL	2014	Forward sensing module (FSM)	Special functions	Filling of fuel system auxiliary heater	V1.10.001
VOLVO	SBL	2014	Forward sensing module (FSM)	ECU identification	Identification of the heater	V1.10.001
VOLVO	SBL	2014	Forward sensing module (FSM)	Read codes	Calibration	V1.10.001
VOLVO	SBL	2014	Forward sensing module (FSM)	Erase codes	Activating components	V1.10.001
VOLVO	SBL	2014	Forward sensing module (FSM)	Freeze frame	Activating components	V1.10.001
VOLVO	SBL	2014	Forward sensing module (FSM)	Special functions	Activating components	V1.10.001
VOLVO	SBL	2014	Forward sensing module (FSM)	ECU identification	Activating components	V1.10.001
VOLVO	SBL	2014	Forward sensing module (FSM)	Read codes	Identifying the heater	V1.10.001
VOLVO	SBL	2014	Forward sensing module (FSM)	Erase codes	Calibration	V1.10.001
VOLVO	SBL	2014	Forward sensing module (FSM)	Freeze frame	Check whether PMS has Volvo On Call	V1.10.001
VOLVO	SBL	2014	Forward sensing module (FSM)	Special functions	Set lighting on buttons to Volvo On Call	V1.10.001
VOLVO	SBL	2014	Forward sensing module (FSM)	ECU identification	Activation/ore-activation of Volvo On Call	V1.10.0

VOLVO	S80L	2015	Central electronic module (CEM)	Active test		Pre-delivery service for new car
VOLVO	S80L	2015	Central electronic module (CEM)	Special functions		Restraint system/restraint system
VOLVO	S80L	2015	Central electronic module (CEM)	Special functions		Read-out of alarm message
VOLVO	S80L	2015	Central electronic module (CEM)	Special functions		Workshop test (TPMS)
VOLVO	S80L	2015	Central electronic module (CEM)	Special functions		Read-out and reset fault codes
VOLVO	S80L	2015	Central electronic module (CEM)	Special functions		Read-out of driver seat position
VOLVO	S80L	2015	Central electronic module (CEM)	Special functions		Checking installation, brake light switch, and brake pedal position switch
VOLVO	S80L	2015	Central electronic module (CEM)	Special functions		Readout of current from battery monitoring sensor
VOLVO	S80L	2015	Central electronic module (CEM)	Special functions		Readout of information stored by component
VOLVO	S80L	2015	Central electronic module (CEM)	Special functions		Requesting information to be stored on power supply when replacing the battery
VOLVO	S80L	2015	Central electronic module (CEM)	Special functions		Resetting the information to zero on power supply when replacing the battery monitoring sensor (BMS)
VOLVO	S80L	2015	Central electronic module (CEM)	Special functions		Ejection of key
VOLVO	S80L	2015	Central electronic module (CEM)	Special functions		Removed controlled immobilizer: status
VOLVO	S80L	2015	Central electronic module (CEM)	Special functions		Operating and initiating the roof hatch
VOLVO	S80L	2015	Central electronic module (CEM)	Special functions		Calibration of steering angle sensor
VOLVO	S80L	2015	Central electronic module (CEM)	Special functions		Setting calibration of night mode for the instrumentation
VOLVO	S80L	2015	Central electronic module (CEM)	Special functions		Checking ABS function
VOLVO	S80L	2015	Central electronic module (CEM)	Special functions		Activating wipers, front/rear
VOLVO	S80L	2015	Central electronic module (CEM)	Special functions		Activating front/rear wheel heating
VOLVO	S80L	2015	Central electronic module (CEM)	Special functions		Deactivation/activation of engine remote start ERS
VOLVO	S80L	2015	Park brake module (PBM)	ECU identification		Calibration angle sensor
VOLVO	S80L	2015	Park brake module (PBM)	Read codes		Activation and service
VOLVO	S80L	2015	Park brake module (PBM)	Erase codes		
VOLVO	S80L	2015	Park brake module (PBM)	Freeze frame		
VOLVO	S80L	2015	Park brake module (PBM)	Special functions		
VOLVO	S80L	2015	Park brake module (PBM)	Standard values		
VOLVO	S80L	2015	Steering angle sensor module (SAS)	ECU identification		Calibrating the climate control module (CCM)
VOLVO	S80L	2015	Steering angle sensor module (SAS)	Read codes		Identifying components on the LIN network that belong to the climate control system (CCM)
VOLVO	S80L	2015	Steering angle sensor module (SAS)	Erase codes		Read-out of self-diagnosed faults
VOLVO	S80L	2015	Steering angle sensor module (SAS)	Freeze frame		Reading out the electronic damper motor actual/creset values and tolerance limit
VOLVO	S80L	2015	Climate control module (CCM)	ECU identification		Programming the evaporator, climate control module (CCM)
VOLVO	S80L	2015	Climate control module (CCM)	Read codes		Activation of blower fan run-on
VOLVO	S80L	2015	Climate control module (CCM)	Erase codes		Antifreeze setting in rear passenger compartment
VOLVO	S80L	2015	Climate control module (CCM)	Freeze frame		Rear view mirror (light) sensitivity
VOLVO	S80L	2015	Climate control module (CCM)	Special functions		
VOLVO	S80L	2015	Brake control module (BCM)	ECU identification		
VOLVO	S80L	2015	Brake control module (BCM)	Read codes		
VOLVO	S80L	2015	Brake control module (BCM)	Erase codes		
VOLVO	S80L	2015	Brake control module (BCM)	Freeze frame		
VOLVO	S80L	2015	Brake control module (BCM)	Special functions		
VOLVO	S80L	2015	Brake control module (BCM)	Standard values		
VOLVO	S80L	2015	Driver door module (DDM)	ECU identification		Calibration
VOLVO	S80L	2015	Driver door module (DDM)	Read codes		
VOLVO	S80L	2015	Driver door module (DDM)	Erase codes		
VOLVO	S80L	2015	Driver door module (DDM)	Freeze frame		
VOLVO	S80L	2015	Driver door module (DDM)	Special functions		
VOLVO	S80L	2015	Passenger door module (PDM)	ECU identification		
VOLVO	S80L	2015	Passenger door module (PDM)	Read codes		
VOLVO	S80L	2015	Passenger door module (PDM)	Erase codes		
VOLVO	S80L	2015	Passenger door module (PDM)	Freeze frame		
VOLVO	S80L	2015	Passenger door module (PDM)	Special functions		
VOLVO	S80L	2015	Passenger door module (PDM)	Standard values		
VOLVO	S80L	2015	Infotainment control module (ICM)	ECU identification		
VOLVO	S80L	2015	Infotainment control module (ICM)	Read codes		
VOLVO	S80L	2015	Infotainment control module (ICM)	Erase codes		
VOLVO	S80L	2015	Infotainment control module (ICM)	Freeze frame		
VOLVO	S80L	2015	Infotainment control module (ICM)	Special functions		
VOLVO	S80L	2015	Infotainment control module (ICM)	Standard values		
VOLVO	S80L	2015	Supplemental restraint system module (SRS)	ECU identification		
VOLVO	S80L	2015	Supplemental restraint system module (SRS)	Read codes		
VOLVO	S80L	2015	Supplemental restraint system module (SRS)	Erase codes		
VOLVO	S80L	2015	Supplemental restraint system module (SRS)	Freeze frame		
VOLVO	S80L	2015	Supplemental restraint system module (SRS)	Special functions		
VOLVO	S80L	2015	Supplemental restraint system module (SRS)	Standard values		
VOLVO	S80L	2015	Infotainment control module (ICM)	ECU identification		
VOLVO	S80L	2015	Infotainment control module (ICM)	Read codes		
VOLVO	S80L	2015	Infotainment control module (ICM)	Erase codes		
VOLVO	S80L	2015	Infotainment control module (ICM)	Freeze frame		
VOLVO	S80L	2015	Infotainment control module (ICM)	Special functions		
VOLVO	S80L	2015	Infotainment control module (ICM)	Standard values		
VOLVO	S80L	2015	Driver information module (DIM)	ECU identification		
VOLVO	S80L	2015	Driver information module (DIM)	Read codes		
VOLVO	S80L	2015	Driver information module (DIM)	Erase codes		
VOLVO	S80L	2015	Driver information module (DIM)	Freeze frame		
VOLVO	S80L	2015	Driver information module (DIM)	Special functions		
VOLVO	S80L	2015	Driver information module (DIM)	Standard values		
VOLVO	S80L	2015	Passenger seat module (PSM)	ECU identification		
VOLVO	S80L	2015	Passenger seat module (PSM)	Read codes		
VOLVO	S80L	2015	Passenger seat module (PSM)	Erase codes		
VOLVO	S80L	2015	Passenger seat module (PSM)	Freeze frame		
VOLVO	S80L	2015	Passenger seat module (PSM)	Special functions		
VOLVO	S80L	2015	Passenger seat module (PSM)	Standard values		
VOLVO	S80L	2015	Keyless vehicle module (KVM)	ECU identification		
VOLVO	S80L	2015	Keyless vehicle module (KVM)	Read codes		
VOLVO	S80L	2015	Keyless vehicle module (KVM)	Erase codes		
VOLVO	S80L	2015	Keyless vehicle module (KVM)	Freeze frame		
VOLVO	S80L	2015	Keyless vehicle module (KVM)	Special functions		
VOLVO	S80L	2015	Keyless vehicle module (KVM)	Standard values		
VOLVO	S80L	2015	Television module (TVN)	ECU identification		
VOLVO	S80L	2015	Television module (TVN)	Read codes		
VOLVO	S80L	2015	Television module (TVN)	Erase codes		
VOLVO	S80L	2015	Television module (TVN)	Freeze frame		
VOLVO	S80L	2015	Television module (TVN)	Special functions		
VOLVO	S80L	2015	Television module (TVN)	Standard values		
VOLVO	S80L	2015	Power seat module (PSM)	ECU identification		
VOLVO	S80L	2015	Power seat module (PSM)	Read codes		
VOLVO	S80L	2015	Power seat module (PSM)	Erase codes		
VOLVO	S80L	2015	Power seat module (PSM)	Freeze frame		
VOLVO	S80L	2015	Power seat module (PSM)	Special functions		
VOLVO	S80L	2015	Power seat module (PSM)	Standard values		
VOLVO	S80L	2015	Suspension module (SUM)	ECU identification		
VOLVO	S80L	2015	Suspension module (SUM)	Read codes		
VOLVO	S80L	2015	Suspension module (SUM)	Erase codes		
VOLVO	S80L	2015	Suspension module (SUM)	Freeze frame		
VOLVO	S80L	2015	Suspension module (SUM)	Special functions		
VOLVO	S80L	2015	Suspension module (SUM)	Standard values		
VOLVO	S80L	2015	Forward looking radar (FLR)	ECU identification		
VOLVO	S80L	2015	Forward looking radar (FLR)	Read codes		
VOLVO	S80L	2015	Forward looking radar (FLR)	Erase codes		
VOLVO	S80L	2015	Forward looking radar (FLR)	Freeze frame		
VOLVO	S80L	2015	Forward looking radar (FLR)	Special functions		
VOLVO	S80L	2015	Forward looking radar (FLR)	Standard values		
VOLVO	S80L	2015	Audio module (AUDI)	ECU identification		
VOLVO	S80L	2015	Audio module (AUDI)	Read codes		
VOLVO	S80L	2015	Audio module (AUDI)	Erase codes		
VOLVO	S80L	2015	Audio module (AUDI)	Freeze frame		
VOLVO	S80L	2015	Audio module (AUDI)	Special functions		
VOLVO	S80L	2015	Audio module (AUDI)	Standard values		
VOLVO	S80L	2015	Keyless vehicle module (KVM)	ECU identification		
VOLVO	S80L	2015	Keyless vehicle module (KVM)	Read codes		
VOLVO	S80L	2015	Keyless vehicle module (KVM)	Erase codes		
VOLVO	S80L	2015	Keyless vehicle module (KVM)	Freeze frame		
VOLVO	S80L	2015	Keyless vehicle module (KVM)	Special functions		
VOLVO	S80L	2015	Keyless vehicle module (KVM)	Standard values		
VOLVO	S80L	2015	High level display front (HLDf)	ECU identification		
VOLVO	S80L	2015	High level display front (HLDf)	Read codes		
VOLVO	S80L	2015	High level display front (HLDf)	Erase codes		
VOLVO	S80L	2015	High level display front (HLDf)	Freeze frame		
VOLVO	S80L	2015	High level display front (HLDf)	Special functions		
VOLVO	S80L	2015	High level display front (HLDf)	Standard values		
VOLVO	S80L	2015	Forward looking radar (FLR)	ECU identification		
VOLVO	S80L	2015	Forward looking radar (FLR)	Read codes		
VOLVO	S80L	2015	Forward looking radar (FLR)	Erase codes		
VOLVO	S80L	2015	Forward looking radar (FLR)	Freeze frame		
VOLVO	S80L	2015	Forward looking radar (FLR)	Special functions		
VOLVO	S80L	2015	Forward looking radar (FLR)	Standard values		
VOLVO	S80L	2015	Audio module (AUDI)	ECU identification		
VOLVO	S80L	2015	Audio module (AUDI)	Read codes		
VOLVO	S80L	2015	Audio module (AUDI)	Erase codes		
VOLVO	S80L	2015	Audio module (AUDI)	Freeze frame		
VOLVO	S80L	2015	Audio module (AUDI)	Special functions		
VOLVO	S80L	2015	Audio module (AUDI)	Standard values		
VOLVO	S80L	2015	Combustion preheater module (CPM)	ECU identification		
VOLVO	S80L	2015	Combustion preheater module (CPM)	Read codes		
VOLVO	S80L	2015	Combustion preheater module (CPM)	Erase codes		
VOLVO	S80L	2015	Combustion preheater module (CPM)	Freeze frame		
VOLVO	S80L	2015	Combustion preheater module (CPM)	Special functions		
VOLVO	S80L	2015	Combustion preheater module (CPM)	Standard values		
VOLVO	S80L	2015	Combustion preheater module (CPM)	ECU identification		
VOLVO	S80L	2015	Combustion preheater module (CPM)	Read codes		
VOLVO	S80L	2015	Combustion preheater module (CPM)	Erase codes		
VOLVO	S80L	2015	Combustion preheater module (CPM)	Freeze frame		
VOLVO	S80L	2015	Combustion preheater module (CPM)	Special functions		
VOLVO	S80L	2015	Combustion preheater module (CPM)	Standard values		
VOLVO	S80L	2015	Parking assistance camera (PAC)	ECU identification		
VOLVO	S80L	2015	Parking assistance camera (PAC)	Read codes		
VOLVO	S80L	2015	Parking assistance camera (PAC)	Erase codes		
VOLVO	S80L	2015	Parking assistance camera (PAC)	Freeze frame		
VOLVO	S80L	2015	Parking assistance camera (PAC)	Special functions		
VOLVO	S80L	2015	Parking assistance camera (PAC)	Standard values		
VOLVO	S80L	2015	Rear seat entertainment module (RSE)	ECU identification		
VOLVO	S80L	2015	Rear seat entertainment module (RSE)	Read codes		
VOLVO	S80L	2015	Rear seat entertainment module (RSE)	Erase codes		
VOLVO	S80L	2015	Rear seat entertainment module (RSE)	Freeze frame		
VOLVO	S80L	2015	Rear seat entertainment module (RSE)	Special functions		
VOLVO	S80L	2015	Rear seat entertainment module (RSE)	Standard values		
VOLVO	S80L	2015	Integrated audio module (IAM)	ECU identification		
VOLVO	S80L	2015	Integrated audio module (IAM)	Read codes		
VOLVO	S80L	2015	Integrated audio module (IAM)	Erase codes		
VOLVO	S80L	2015	Integrated audio module (IAM)	Freeze frame		
VOLVO	S80L	2015	Integrated audio module (IAM)	Special functions		
VOLVO	S80L	2015	Integrated audio module (IAM)	Standard values		
VOLVO	S80L	2015	Power steering control module (PSCM)	ECU identification		
VOLVO	S80L	2015	Power steering control module (PSCM)	Read codes		
VOLVO	S80L	2015	Power steering control module (PSCM)	Erase codes		
VOLVO	S80L	2015	Power steering control module (PSCM)	Freeze frame		
VOLVO	S80L	2015	Power steering control module (PSCM)	Special functions		
VOLVO	S80L	2015	Power steering control module (PSCM)	Standard values		
VOLVO	S80L	2015	Remote digital audio receiver (RDAr)	ECU identification		
VOLVO	S80L	2015	Remote digital audio receiver (RDAr)	Read codes		
VOLVO	S80L	2015	Remote digital audio receiver (RDAr)	Erase codes		
VOLVO	S80L	2015	Remote digital audio receiver (RDAr)	Freeze frame		
VOLVO	S80L	2015	Remote digital audio receiver (RDAr)	Special functions		
VOLVO	S80L	2015	Remote digital audio receiver (RDAr)	Standard values		
VOLVO	S80L	2015	Closing velocity module (CVM)	ECU identification		
VOLVO	S80L	2015	Closing velocity module (CVM)	Read codes		
VOLVO	S80L	2015	Closing velocity module (CVM)	Erase codes		
VOLVO	S80L	2015	Closing velocity module (CVM)	Freeze frame		
VOLVO	S80L	2015	Closing velocity module (CVM)	Special functions		
VOLVO	S80L	2015	Closing velocity module (CVM)	Standard values		
VOLVO	S80L	2015	Forward sensing module (FSM)	ECU identification		
VOLVO	S80L	2015	Forward sensing module (FSM)	Read codes		
VOLVO	S80L	2015	Forward sensing module (FSM)	Erase codes		
VOLVO	S80L	2015	Forward sensing module (FSM)	Freeze frame		
VOLVO	S80L	2015	Forward sensing module (FSM)	Special functions		
VOLVO	S80L	2015	Forward sensing module (FSM)	Standard values		
VOLVO	S80L	2015	Forward sensing module (FSM)	ECU identification		
VOLVO	S80L	2015	Forward sensing module (FSM)	Read codes		
VOLVO	S80L	2015	Forward sensing module (FSM)	Erase codes		
VOLVO	S80L	2015	Forward sensing module (FSM)	Freeze frame		
VOLVO	S80L	2015	Forward sensing module (FSM)	Special functions		
VOLVO	S80L	2015	Forward sensing module (FSM)	Standard values		
VOLVO	S80L	2015	Forward sensing module (FSM)	ECU identification		
VOLVO	S80L	2015	Forward sensing module (FSM)	Read codes		
VOLVO	S80L	2015	Forward sensing module (FSM)	Erase codes		
VOLVO	S80L	2015	Forward sensing module (FSM)	Freeze frame		
VOLVO	S80L	2015	Forward sensing module (FSM)	Special functions		
VOLVO	S80L	2015	Forward sensing module (FSM)	Standard values		
VOLVO	S80L	2015	Trailer module (TRM)	ECU identification		
VOLVO	S80L	2015	Trailer module (TRM)	Read codes		
VOLVO	S80L	2015	Trailer module (TRM)	Erase codes		
VOLVO	S80L	2015	Trailer module (TRM)	Freeze frame		
VOLVO	S80L	2015	Trailer module (TRM)	Special functions		
VOLVO	S80L	2015	Trailer module (TRM)	Standard values		
VOLVO	S80L	2015	Forward assistance module (PAM)	ECU identification		
VOLVO	S80L	2015	Forward			

VOLVO	V40 (13-)	2015	Television module (TVMI)	Read codes	
VOLVO	V40 (13-)	2015	Television module (TVMI)	Erase codes	
VOLVO	V40 (13-)	2015	Television module (TVMI)	Freeze frame	
VOLVO	V40 (13-)	2015	Forward looking radar (FLR)	ECU identification	
VOLVO	V40 (13-)	2015	Forward looking radar (FLR)	Read codes	
VOLVO	V40 (13-)	2015	Forward looking radar (FLR)	Erase codes	
VOLVO	V40 (13-)	2015	Forward looking radar (FLR)	Freeze frame	
VOLVO	V40 (13-)	2015	Audio module (AUDI)	ECU identification	
VOLVO	V40 (13-)	2015	Audio module (AUDI)	Read codes	
VOLVO	V40 (13-)	2015	Audio module (AUDI)	Erase codes	
VOLVO	V40 (13-)	2015	Audio module (AUDI)	Special functions	
VOLVO	V40 (13-)	2015	Audio module (AUDI)	Special functions	
VOLVO	V40 (13-)	2015	Integrated audio module (IAM)	Read codes	
VOLVO	V40 (13-)	2015	Integrated audio module (IAM)	Erase codes	
VOLVO	V40 (13-)	2015	Integrated audio module (IAM)	Freeze frame	
VOLVO	V40 (13-)	2015	Integrated audio module (IAM)	ECU identification	
VOLVO	V40 (13-)	2015	Closing velocity module (CVM)	Read codes	
VOLVO	V40 (13-)	2015	Closing velocity module (CVM)	Erase codes	
VOLVO	V40 (13-)	2015	Closing velocity module (CVM)	Freeze frame	
VOLVO	V40 (13-)	2015	Power steering control module (PSCM)	ECU identification	
VOLVO	V40 (13-)	2015	Power steering control module (PSCM)	Read codes	
VOLVO	V40 (13-)	2015	Power steering control module (PSCM)	Erase codes	
VOLVO	V40 (13-)	2015	Power steering control module (PSCM)	Freeze frame	
VOLVO	V40 (13-)	2015	Power steering control module (PSCM)	Special functions	
VOLVO	V40 (13-)	2015	Combustion preheater module (CPM)	ECU identification	
VOLVO	V40 (13-)	2015	Combustion preheater module (CPM)	Read codes	
VOLVO	V40 (13-)	2015	Combustion preheater module (CPM)	Erase codes	
VOLVO	V40 (13-)	2015	Combustion preheater module (CPM)	Freeze frame	
VOLVO	V40 (13-)	2015	Side obstacle detection control module left (SODL)	ECU identification	
VOLVO	V40 (13-)	2015	Side obstacle detection control module left (SODL)	Read codes	
VOLVO	V40 (13-)	2015	Side obstacle detection control module left (SODL)	Erase codes	
VOLVO	V40 (13-)	2015	Side obstacle detection control module left (SODL)	Freeze frame	
VOLVO	V40 (13-)	2015	Side obstacle detection control module left (SODL)	Special functions	
VOLVO	V40 (13-)	2015	Side obstacle detection control module right (SODR)	ECU identification	
VOLVO	V40 (13-)	2015	Side obstacle detection control module right (SODR)	Read codes	
VOLVO	V40 (13-)	2015	Side obstacle detection control module right (SODR)	Erase codes	
VOLVO	V40 (13-)	2015	Side obstacle detection control module right (SODR)	Freeze frame	
VOLVO	V40 (13-)	2015	Side obstacle detection control module right (SODR)	Special functions	
VOLVO	V40 (13-)	2015	Parking assistance camera (PAC)	ECU identification	
VOLVO	V40 (13-)	2015	Parking assistance camera (PAC)	Read codes	
VOLVO	V40 (13-)	2015	Parking assistance camera (PAC)	Erase codes	
VOLVO	V40 (13-)	2015	Parking assistance camera (PAC)	Freeze frame	
VOLVO	V40 (13-)	2015	Parking assistance camera (PAC)	Special functions	
VOLVO	V40 (13-)	2015	Forward sensing module (FSM)	ECU identification	
VOLVO	V40 (13-)	2015	Forward sensing module (FSM)	Read codes	
VOLVO	V40 (13-)	2015	Forward sensing module (FSM)	Erase codes	
VOLVO	V40 (13-)	2015	Forward sensing module (FSM)	Freeze frame	
VOLVO	V40 (13-)	2015	Forward sensing module (FSM)	Special functions	
VOLVO	V40 (13-)	2015	Forward sensing module (FSM)	Activation/deactivation	
VOLVO	V40 (13-)	2015	Forward sensing module (FSM)	Activation/deactivation	
VOLVO	V40 (13-)	2015	Trailer module (TRM)	ECU identification	
VOLVO	V40 (13-)	2015	Trailer module (TRM)	Read codes	
VOLVO	V40 (13-)	2015	Trailer module (TRM)	Erase codes	
VOLVO	V40 (13-)	2015	Trailer module (TRM)	Freeze frame	
VOLVO	V40 (13-)	2015	Parking assistance module (PAM)	ECU identification	
VOLVO	V40 (13-)	2015	Parking assistance module (PAM)	Read codes	
VOLVO	V40 (13-)	2015	Parking assistance module (PAM)	Erase codes	
VOLVO	V40 (13-)	2015	Parking assistance module (PAM)	Freeze frame	
VOLVO	V40 (13-)	2015	Phone module (PHM)	ECU identification	
VOLVO	V40 (13-)	2015	Phone module (PHM)	Read codes	
VOLVO	V40 (13-)	2015	Phone module (PHM)	Erase codes	
VOLVO	V40 (13-)	2015	Phone module (PHM)	Freeze frame	
VOLVO	V40 (13-)	2015	Digital audio broadcast module (DABM)	ECU identification	
VOLVO	V40 (13-)	2015	Digital audio broadcast module (DABM)	Read codes	
VOLVO	V40 (13-)	2015	Digital audio broadcast module (DABM)	Erase codes	
VOLVO	V40 (13-)	2015	Digital audio broadcast module (DABM)	Freeze frame	
VOLVO	V40 (13-)	2015	Pedestrian protection module (PPM)	ECU identification	
VOLVO	V40 (13-)	2015	Pedestrian protection module (PPM)	Read codes	
VOLVO	V40 (13-)	2015	Pedestrian protection module (PPM)	Erase codes	
VOLVO	V40 (13-)	2015	Pedestrian protection module (PPM)	Freeze frame	
VOLVO	V40 (13-)	2015	Transmission control module (TCM)	ECU identification	
VOLVO	V40 (13-)	2015	Transmission control module (TCM)	Read codes	
VOLVO	V40 (13-)	2015	Transmission control module (TCM)	Erase codes	
VOLVO	V40 (13-)	2015	Transmission control module (TCM)	Freeze frame	
VOLVO	V40 (13-)	2015	Engine control module (ECM)	ECU identification	
VOLVO	V40 (13-)	2015	Engine control module (ECM)	Read codes	
VOLVO	V40 (13-)	2015	Engine control module (ECM)	Erase codes	
VOLVO	V40 (13-)	2015	Engine control module (ECM)	Freeze frame	
VOLVO	V40 (13-)	2015	Engine control module (ECM)	Special functions	
VOLVO	V40 (13-)	2015	Engine control module (ECM)	Activation/deactivation	
VOLVO	V40 (13-)	2015	Engine control module (ECM)	Activation/deactivation	
VOLVO	V40 (13-)	2015	Transmission control module (TCM)	Active test	
VOLVO	V40 (13-)	2015	Transmission control module (TCM)	Special functions	
VOLVO	V40 (13-)	2015	Transmission control module (TCM)	Activation/deactivation	
VOLVO	V40 (13-)	2015	Transmission control module (TCM)	Activation/deactivation	
VOLVO	V40 (13-)	2015	Transmission control module (TCM)	Resetting	
VOLVO	V40 (13-)	2015	Transmission control module (TCM)	Test of fuel pressure regulation, low pressure side	
VOLVO	V40 (13-)	2015	Transmission control module (TCM)	Test of fuel pressure regulation, high pressure side	
VOLVO	V40 (13-)	2015	Transmission control module (TCM)	Resetting adaptations for the wastegate counter for supercharger	
VOLVO	V40 (13-)	2015	Transmission control module (TCM)	Resetting adaptations for the fuel pump for air intake	
VOLVO	V40 (13-)	2015	Transmission control module (TCM)	Resetting adaptations for rear heated oxygen sensor regulation	
VOLVO	V40 (13-)	2015	Transmission control module (TCM)	Resetting adaptations for torque management, intake	
VOLVO	V40 (13-)	2015	Transmission control module (TCM)	Resetting adaptations for the camshaft regulation, intake	
VOLVO	V40 (13-)	2015	Transmission control module (TCM)	Resetting adaptations for the cylinder balance	
VOLVO	V40 (13-)	2015	Transmission control module (TCM)	Resetting adaptations for the thermostat	
VOLVO	V40 (13-)	2015	Transmission control module (TCM)	Quick test of the tank level (USA/CDN)	
VOLVO	V40 (13-)	2015	Transmission control module (TCM)	Reading out permanent diagnostic trouble codes (USA/CDN)	
VOLVO	V40 (13-)	2015	Transmission control module (TCM)	Quick test of the EVAP valve	
VOLVO	V40 (13-)	2015	Transmission control module (TCM)	Quick test of the fuel tank	
VOLVO	V40 (13-)	2015	Transmission control module (TCM)	Resetting the "Transmission fluid change" counter	
VOLVO	V40 (13-)	2015	Transmission control module (TCM)	Checking counter, soot quantity and combustion of soot in particle filter	
VOLVO	V40 (13-)	2015	Transmission control module (TCM)	Resetting counter for oil quality	
VOLVO	V40 (13-)	2015	Transmission control module (TCM)	Resetting counter for soot amount in diesel particulate filter	
VOLVO	V40 (13-)	2015	Transmission control module (TCM)	Resetting adaptation for EGR valve	
VOLVO	V40 (13-)	2015	Transmission control module (TCM)	Resetting adaptations for the particle filter's differential pressure sensor	
VOLVO	V40 (13-)	2015	Transmission control module (TCM)	Resetting adaptations for front heated oxygen sensor	
VOLVO	V40 (13-)	2015	Transmission control module (TCM)	Resetting adaptations for the heated oxygen sensor	
VOLVO	V40 (13-)	2015	Transmission control module (TCM)	Resetting adaptations for the injectors	
VOLVO	V40 (13-)	2015	Transmission control module (TCM)	Checking active erlcrill filter	
VOLVO	V40 (13-)	2015	Transmission control module (TCM)	Complaints of soot in the particle filter	
VOLVO	V40 (13-)	2015	Transmission control module (TCM)	Total of fuel consumption value	
VOLVO	V40 (13-)	2015	Transmission control module (TCM)	Testing the fuel pressure control valve	
VOLVO	V40 (13-)	2015	Transmission control module (TCM)	Resetting adaptations for fuel flow regulation valve	
VOLVO	V40 (13-)	2015	Transmission control module (TCM)	Resetting adaptations for the diesel particle filter	
VOLVO	V40 (13-)	2015	Transmission control module (TCM)	Resetting adaptations for the particle filter's differential pressure sensor	
VOLVO	V40 (13-)	2015	Transmission control module (TCM)	Resetting adaptations for front heated oxygen sensor	
VOLVO	V40 (13-)	2015	Transmission control module (TCM)	Resetting adaptations for the heated oxygen sensor	
VOLVO	V40 (13-)	2015	Transmission control module (TCM)	Resetting adaptations for the injectors	
VOLVO	V40 (13-)	2015	Transmission control module (TCM)	Resetting fuel trim for control module preheating and the glow plugs	
VOLVO	V40 (13-)	2015	Transmission control module (TCM)	Resetting fuel trim for the glow plug system	
VOLVO	V40 (13-)	2015	Transmission control module (TCM)	Adaptation of the exhaust gas recirculation (EGR) valve	
VOLVO	V40 (13-)	2015	Transmission control module (TCM)	Adaptation of the throttle module	
VOLVO	V40 (13-)	2015	Transmission control module (TCM)	Adjusting the particle sensor	
VOLVO	V40 (13-)	2015	Transmission control module (TCM)	Resetting the counter for the particle filter	
VOLVO	V40 (13-)	2015	Transmission control module (TCM)	Combustion of soot particles	
VOLVO	V40 (13-)	2015	Transmission control module (TCM)	Checking the oil level	
VOLVO	V40 (13-)	2015	Transmission control module (TCM)	Adjusting calculated oil level/oil quality	
VOLVO	V40 (13-)	2016	Park brake module (PBM)	ECU identification	
VOLVO	V40 (13-)	2016	Park brake module (PBM)	Read codes	
VOLVO	V40 (13-)	2016	Park brake module (PBM)	Erase codes	
VOLVO	V40 (13-)	2016	Park brake module (PBM)	Freeze frame	
VOLVO	V40 (13-)	2016	Steering angle sensor module (SAS)	ECU identification	
VOLVO	V40 (13-)	2016	Steering angle sensor module (SAS)	Read codes	
VOLVO	V40 (13-)	2016	Steering angle sensor module (SAS)	Erase codes	
VOLVO	V40 (13-)	2016	Steering angle sensor module (SAS)	Freeze frame	
VOLVO	V40 (13-)	2016	Driver door module (DDM)	ECU identification	
VOLVO	V40 (13-)	2016	Driver door module (DDM)	Read codes	
VOLVO	V40 (13-)	2016	Driver door module (DDM)	Erase codes	
VOLVO	V40 (13-)	2016	Driver door module (DDM)	Freeze frame	
VOLVO	V40 (13-)	2016	Passenger door module (PDM)	ECU identification	
VOLVO	V40 (13-)	2016	Passenger door module (PDM)	Read codes	
VOLVO	V40 (13-)	2016	Passenger door module (PDM)	Erase codes	
VOLVO	V40 (13-)	2016	Passenger door module (PDM)	Freeze frame	
VOLVO	V40 (13-)	2016	Climate control module (CCM)	ECU identification	
VOLVO	V40 (13-)	2016	Climate control module (CCM)	Read codes	
VOLVO	V40 (13-)	2016	Climate control module (CCM)	Erase codes	
VOLVO	V40 (13-)	2016	Climate control module (CCM)	Freeze frame	
VOLVO	V40 (13-)	2016	Information control module (ICM)	ECU identification	
VOLVO	V40 (13-)	2016	Information control module (ICM)	Read codes	
VOLVO	V40 (13-)	2016	Information control module (ICM)	Erase codes	
VOLVO	V40 (13-)	2016	Information control module (ICM)	Freeze frame	
VOLVO	V40 (13-)	2016	Brake control module (BCM)	ECU identification	
VOLVO	V40 (13-)	2016	Brake control module (BCM)	Read codes	
VOLVO	V40 (13-)	2016	Brake control module (BCM)	Erase codes	
VOLVO	V40 (13-)	2016	Brake control module (BCM)	Freeze frame	
VOLVO	V40 (13-)	2016	Keypad vehicle module (KVM)	ECU identification	
VOLVO	V40 (13-)	2016	Keypad vehicle module (KVM)	Read codes	
VOLVO	V40 (13-)	2016	Keypad vehicle module (KVM)	Erase codes	
VOLVO	V40 (13-)	2016	Keypad vehicle module (KVM)	Freeze frame	
VOLVO	V40 (13-)	2016	Power seat module (PSM)	ECU identification	
VOLVO	V40 (13-)	2016	Power seat module (PSM)	Read codes	
VOLVO	V40 (13-)	2016	Power seat module (PSM)	Erase codes	
VOLVO	V40 (13-)	2016	Power seat module (PSM)	Freeze frame	
VOLVO	V40 (13-)	2016	Forward looking radar (FLR)	ECU identification	
VOLVO	V40 (13-)	2016	Forward looking radar (FLR)	Read codes	
VOLVO	V40 (13-)	2016	Forward looking radar (FLR)	Erase codes	
VOLVO	V40 (13-)	2016	Forward looking radar (FLR)	Freeze frame	
VOLVO	V40 (13-)	2016	Television module (TVMI)	ECU identification	
VOLVO	V40 (13-)	2016	Television module (TVMI)	Read codes	
VOLVO	V40 (13-)	2016	Television module (TVMI)	Erase codes	
VOLVO	V40 (13-)	2016	Television module (TVMI)	Freeze frame	
VOLVO	V40 (13-)	2016	Forward looking radar (FLR)	ECU identification	

VOLVO	V50	2008	Driver door module (DDM)	Special functions ECU identification	Checkin the window in the rear door	V1.10.001
VOLVO	V50	2008	Passenger door module (PDM)	Read codes Erase codes	Initiating the window position	V1.10.001
VOLVO	V50	2008	Passenger door module (PDM)	Read codes Erase codes	Checking the window in the rear door	V1.10.001
VOLVO	V50	2008	Passenger door module (PDM)	Freeze frame	Identifying components on the LIN network that belong to the climate control system (CCM)	V1.10.001
VOLVO	V50	2008	Passenger door module (PDM)	Active test	Programme the seat temperature	V1.10.001
VOLVO	V50	2008	Passenger door module (PDM)	Special functions	Calibrating the climate control module (CCM)	V1.10.001
VOLVO	V50	2008	Passenger door module (PDM)	Special functions	Reading out detected/exected control modules/sensors	V1.10.001
VOLVO	V50	2008	Passenger door module (PDM)	Special functions	Reading out electronic damper motor, actual/preset range and tolerance limit	V1.10.001
VOLVO	V50	2008	Passenger door module (PDM)	Special functions	Resetting the service reminder indicator (SRI)	V1.10.001
VOLVO	V50	2008	Passenger door module (PDM)	ECU identification	Testing all indicators and lamps in the driver information module (DIM)	V1.10.001
VOLVO	V50	2008	Driver information module (DIM)	Read codes	Indicates programmed values	V1.10.001
VOLVO	V50	2008	Driver information module (DIM)	Erase codes	Display of DTC/ESC message	V1.10.001
VOLVO	V50	2008	Driver information module (DIM)	Freeze frame	Programming the driver information module (DIM)	V1.10.001
VOLVO	V50	2008	Driver information module (DIM)	Special functions	Programme seatbelt reminder in background	V1.10.001
VOLVO	V50	2008	Driver information module (DIM)	Special functions	Programme seatbelt reminder in front seat	V1.10.001
VOLVO	V50	2008	Driver information module (DIM)	ECU identification	Resetting the service reminder indicator (SRI)	V1.10.001
VOLVO	V50	2008	Driver information module (DIM)	Read codes	Testing all indicators and lamps in the driver information module (DIM)	V1.10.001
VOLVO	V50	2008	Driver information module (DIM)	Erase codes	Indicates programmed values	V1.10.001
VOLVO	V50	2008	Driver information module (DIM)	Freeze frame	Display of DTC/ESC message	V1.10.001
VOLVO	V50	2008	Driver information module (DIM)	Special functions	Programming the driver information module (DIM)	V1.10.001
VOLVO	V50	2008	Driver information module (DIM)	Special functions	Programme seatbelt reminder in background	V1.10.001
VOLVO	V50	2008	Driver information module (DIM)	Special functions	Programme seatbelt reminder in front seat	V1.10.001
VOLVO	V50	2008	Infotainment control module (ICM)	ECU identification	Resetting the service reminder indicator (SRI)	V1.10.001
VOLVO	V50	2008	Infotainment control module (ICM)	Read codes	Testing all indicators and lamps in the driver information module (DIM)	V1.10.001
VOLVO	V50	2008	Infotainment control module (ICM)	Erase codes	Indicates programmed values	V1.10.001
VOLVO	V50	2008	Infotainment control module (ICM)	Freeze frame	Display of DTC/ESC message	V1.10.001
VOLVO	V50	2008	Infotainment control module (ICM)	Special functions	Programming the infotainment control module (ICM)	V1.10.001
VOLVO	V50	2008	Infotainment control module (ICM)	Special functions	Programme seatbelt reminder in background	V1.10.001
VOLVO	V50	2008	Infotainment control module (ICM)	Special functions	Programme seatbelt reminder in front seat	V1.10.001
VOLVO	V50	2008	Power seat module (PSM)	ECU identification	Resetting the service reminder indicator (SRI)	V1.10.001
VOLVO	V50	2008	Power seat module (PSM)	Read codes	Testing all indicators and lamps in the driver information module (DIM)	V1.10.001
VOLVO	V50	2008	Power seat module (PSM)	Erase codes	Indicates programmed values	V1.10.001
VOLVO	V50	2008	Power seat module (PSM)	Freeze frame	Display of DTC/ESC message	V1.10.001
VOLVO	V50	2008	Power seat module (PSM)	Special functions	Programming the infotainment control module (ICM)	V1.10.001
VOLVO	V50	2008	Power seat module (PSM)	Special functions	Programme seatbelt reminder in background	V1.10.001
VOLVO	V50	2008	Power seat module (PSM)	Special functions	Programme seatbelt reminder in front seat	V1.10.001
VOLVO	V50	2008	Power seat module (PSM)	ECU identification	Resetting the service reminder indicator (SRI)	V1.10.001
VOLVO	V50	2008	Power seat module (PSM)	Read codes	Testing all indicators and lamps in the driver information module (DIM)	V1.10.001
VOLVO	V50	2008	Power seat module (PSM)	Erase codes	Indicates programmed values	V1.10.001
VOLVO	V50	2008	Power seat module (PSM)	Freeze frame	Display of DTC/ESC message	V1.10.001
VOLVO	V50	2008	Power seat module (PSM)	Special functions	Programming the infotainment control module (ICM)	V1.10.001
VOLVO	V50	2008	Power seat module (PSM)	Special functions	Programme seatbelt reminder in background	V1.10.001
VOLVO	V50	2008	Power seat module (PSM)	Special functions	Programme seatbelt reminder in front seat	V1.10.001
VOLVO	V50	2008	Subwoofer module (SUB)	ECU identification	Resetting the service reminder indicator (SRI)	V1.10.001
VOLVO	V50	2008	Subwoofer module (SUB)	Read codes	Testing all indicators and lamps in the driver information module (DIM)	V1.10.001
VOLVO	V50	2008	Subwoofer module (SUB)	Erase codes	Indicates programmed values	V1.10.001
VOLVO	V50	2008	Subwoofer module (SUB)	Freeze frame	Display of DTC/ESC message	V1.10.001
VOLVO	V50	2008	Accessory electronic module (AEM)	ECU identification	Programming the infotainment control module (ICM)	V1.10.001
VOLVO	V50	2008	Accessory electronic module (AEM)	Read codes	Programme seatbelt reminder in background	V1.10.001
VOLVO	V50	2008	Accessory electronic module (AEM)	Erase codes	Programme seatbelt reminder in front seat	V1.10.001
VOLVO	V50	2008	Accessory electronic module (AEM)	Freeze frame	Resetting the service reminder indicator (SRI)	V1.10.001
VOLVO	V50	2008	Accessory electronic module (AEM)	Special functions	Testing all indicators and lamps in the driver information module (DIM)	V1.10.001
VOLVO	V50	2008	Accessory electronic module (AEM)	Special functions	Indicates programmed values	V1.10.001
VOLVO	V50	2008	Accessory electronic module (AEM)	ECU identification	Display of DTC/ESC message	V1.10.001
VOLVO	V50	2008	Accessory power steering module (EPS)	Read codes	Programming the other settings	V1.10.001
VOLVO	V50	2008	Accessory power steering module (EPS)	Erase codes	Programming the clock	V1.10.001
VOLVO	V50	2008	Accessory power steering module (EPS)	Freeze frame	Programming remote control setting	V1.10.001
VOLVO	V50	2008	Accessory power steering module (EPS)	Special functions	Read out of the number of programmed remote keys.	V1.10.001
VOLVO	V50	2008	Accessory power steering module (EPS)	Special functions	Read-out of part number and serial number, Remote Keyless Entry (RKE)	V1.10.001
VOLVO	V50	2008	Parking assistance module (PAM)	ECU identification	Reading off the configuration	V1.10.001
VOLVO	V50	2008	Parking assistance module (PAM)	Read codes	Resetting the configuration	V1.10.001
VOLVO	V50	2008	Parking assistance module (PAM)	Erase codes	Reading off the configuration	V1.10.001
VOLVO	V50	2008	Parking assistance module (PAM)	Freeze frame	Resetting the configuration	V1.10.001
VOLVO	V50	2008	Audio module (AUD)	ECU identification	Calibration of position sensor	V1.10.001
VOLVO	V50	2008	Audio module (AUD)	Read codes	Activating components	V1.10.001
VOLVO	V50	2008	Audio module (AUD)	Erase codes	Testing the fuel pump (FP)	V1.10.001
VOLVO	V50	2008	Audio module (AUD)	Freeze frame	Readiness code (LSA/CDN)	V1.10.001
VOLVO	V50	2008	Accessory USB unit (AUU)	ECU identification	Calibration of the transmission fluid change counter	V1.10.001
VOLVO	V50	2008	Accessory USB unit (AUU)	Read codes	Calibration of position sensor	V1.10.001
VOLVO	V50	2008	Accessory USB unit (AUU)	Erase codes	Activating TEST MODE	V1.10.001
VOLVO	V50	2008	Accessory USB unit (AUU)	Freeze frame	Activating gear indication	V1.10.001
VOLVO	V50	2008	Integrated audio module (IAM)	ECU identification	Conducting initial adaptations	V1.10.001
VOLVO	V50	2008	Integrated audio module (IAM)	Read codes	Adaptation of the particulate unit	V1.10.001
VOLVO	V50	2008	Integrated audio module (IAM)	Erase codes	Readiness code	V1.10.001
VOLVO	V50	2008	Integrated audio module (IAM)	Freeze frame	Calibration of the transmission fluid change counter	V1.10.001
VOLVO	V50	2008	Remote digital audio receiver (RDR)	ECU identification	Calibration of position sensor	V1.10.001
VOLVO	V50	2008	Remote digital audio receiver (RDR)	Read codes	Activating TEST MODE	V1.10.001
VOLVO	V50	2008	Remote digital audio receiver (RDR)	Erase codes	Activating gear indication	V1.10.001
VOLVO	V50	2008	Multimedia module (MMM)	ECU identification	Conducting initial adaptations	V1.10.001
VOLVO	V50	2008	Multimedia module (MMM)	Read codes	Adaptation of the particulate unit	V1.10.001
VOLVO	V50	2008	Multimedia module (MMM)	Erase codes	Readiness code	V1.10.001
VOLVO	V50	2008	Multimedia module (MMM)	Freeze frame	Calibration of the transmission fluid change counter	V1.10.001
VOLVO	V50	2008	Multimedia module (MMM)	Special functions	Calibration of position sensor	V1.10.001
VOLVO	V50	2008	Multimedia module (MMM)	ECU identification	Activating TEST MODE	V1.10.001
VOLVO	V50	2008	Multimedia module (MMM)	Read codes	Activating gear indication	V1.10.001
VOLVO	V50	2008	Multimedia module (MMM)	Erase codes	Conducting initial adaptations	V1.10.001
VOLVO	V50	2008	Multimedia module (MMM)	Freeze frame	Adaptation of the exhaust gas recirculation (EGR) valve	V1.10.001
VOLVO	V50	2008	Combustion preheater module (CPM)	ECU identification	Resetting the transmission fluid change counter	V1.10.001
VOLVO	V50	2008	Combustion preheater module (CPM)	Read codes	Calibration of position sensor	V1.10.001
VOLVO	V50	2008	Combustion preheater module (CPM)	Erase codes	Activating TEST MODE	V1.10.001
VOLVO	V50	2008	Combustion preheater module (CPM)	Freeze frame	Activating gear indication	V1.10.001
VOLVO	V50	2008	Engine control module (ECM)	ECU identification	Conducting initial adaptations	V1.10.001
VOLVO	V50	2008	Engine control module (ECM)	Read codes	Adaptation of the particulate unit	V1.10.001
VOLVO	V50	2008	Engine control module (ECM)	Erase codes	Readiness code	V1.10.001
VOLVO	V50	2008	Engine control module (ECM)	Freeze frame	Calibration of the transmission fluid change counter	V1.10.001
VOLVO	V50	2008	Engine control module (ECM)	Special functions	Calibration of position sensor	V1.10.001
VOLVO	V50	2008	Engine control module (ECM)	ECU identification	Activating TEST MODE	V1.10.001
VOLVO	V50	2008	Engine control module (ECM)	Read codes	Activating gear indication	V1.10.001
VOLVO	V50	2008	Engine control module (ECM)	Erase codes	Conducting initial adaptations	V1.10.001
VOLVO	V50	2008	Transmission control module (TCM)	ECU identification	Adaptation of the exhaust gas recirculation (EGR) valve	V1.10.001
VOLVO	V50	2008	Transmission control module (TCM)	Read codes	Resetting the transmission fluid change counter	V1.10.001
VOLVO	V50	2008	Transmission control module (TCM)	Erase codes	Calibration of position sensor	V1.10.001
VOLVO	V50	2008	Transmission control module (TCM)	Freeze frame	Activating TEST MODE	V1.10.001
VOLVO	V50	2008	Transmission control module (TCM)	Special functions	Activating gear indication	V1.10.001
VOLVO	V50	2008	Transmission control module (TCM)	ECU identification	Conducting initial adaptations	V1.10.001
VOLVO	V50	2008	Engine control module (ECM)	ECU identification	Adapting calculated oil level	V1.10.001
VOLVO	V50	2008	Engine control module (ECM)	Read codes	Refilling the feed lines with additive	V1.10.001
VOLVO	V50	2008	Engine control module (ECM)	Erase codes	Resetting the tank level gauge	V1.10.001
VOLVO	V50	2008	Engine control module (ECM)	Freeze frame	Checking the additive level	V1.10.001
VOLVO	V50	2008	Engine control module (ECM)	Special functions	Programming the optimizing parameters	V1.10.001
VOLVO	V50	2008	Engine control module (ECM)	ECU identification	Quick test of injectors	V1.10.001
VOLVO	V50	2008	Engine control module (ECM)	Read codes	Resetting counter particle filter	V1.10.001
VOLVO	V50	2008	Engine control module (ECM)	Erase codes	Checking injectors	V1.10.001
VOLVO	V50	2008	Engine control module (ECM)	Freeze frame	Checking the oil level	V1.10.001
VOLVO	V50	2008	Central electronic module (CEM)	ECU identification	Adjusting calculated oil level	V1.10.001
VOLVO	V50	2008	Central electronic module (CEM)	Read codes	Refilling the feed lines with additive	V1.10.001
VOLVO	V50	2008	Central electronic module (CEM)	Erase codes	Resetting the tank level gauge	V1.10.001
VOLVO	V50	2008	Central electronic module (CEM)	Freeze frame	Checking the additive level	V1.10.001
VOLVO	V50	2008	Central electronic module (CEM)	Special functions	Programming the optimizing parameters	V1.10.001
VOLVO	V50	2008	Central electronic module (CEM)	ECU identification	Quick test of alternator function	V1.10.001
VOLVO	V50	2008	Central electronic module (CEM)	Read codes	Resetting low voltage counters	V1.10.001
VOLVO	V50	2008	Central electronic module (CEM)	Erase codes	Resetting counter particle filter	V1.10.001
VOLVO	V50	2008	Central electronic module (CEM)	Freeze frame	Checking injectors	V1.10.001
VOLVO	V50	2008	Central electronic module (CEM)	Special functions	Checking the oil level	V1.10.001
VOLVO	V50	2008	Central electronic module (CEM)	ECU identification	Resetting the service reminder indicator (SRI)	V1.10.001
VOLVO	V50	2008	Central electronic module (CEM)	Read codes	Pre-delivery service for new car	V1.10.001
VOLVO	V50	2008	Central electronic module (CEM)	Erase codes	Resetting off	V1.10.001
VOLVO	V50	2008	Central electronic module (CEM)	Freeze frame	Reading off and programming vehicle mode	V1.10.001
VOLVO	V50	2008	Central electronic module (CEM)	Special functions	Quick test of alternator function	V1.10.001
VOLVO	V50	2008	Central electronic module (CEM)	ECU identification	Resetting low voltage counters	V1.10.001
VOLVO	V50	2008	Central electronic module (CEM)	Read codes	Resetting counter particle filter	V1.10.001
VOLVO	V50	2008	Central electronic module (CEM)	Erase codes	Checking injectors	V1.10.001
VOLVO	V50	2008	Central electronic module (CEM)	Freeze frame	Checking the oil level	V1.10.001
VOLVO	V50	2008	Central electronic module (CEM)	Special functions	Resetting the service reminder indicator (SRI)	V1.10.001
VOLVO	V50	2008	Central electronic module (CEM-HS)	ECU identification	Pre-delivery service for new car	V1.10.001
VOLVO	V50	2008	Central electronic module (CEM-HS)	Read codes	Resetting off	V1.10.001
VOLVO	V50	2008	Central electronic module (CEM-HS)	Erase codes	Reading off and programming vehicle mode	V1.10.001
VOLVO	V50	2008	Supplemental restraint system (SRS)	Active test	Quick test of alternator function	V1.10.001
VOLVO	V50	2008	Supplemental restraint system (SRS)	ECU identification	Resetting low voltage counters	V1.10.001
VOLVO	V50	2008	Supplemental restraint system (SRS)	Read codes	Resetting counter particle filter	V1.10.001
VOLVO	V50	2008	Supplemental restraint system (SRS)	Erase codes	Checking injectors	V1.10.001
VOLVO	V50	2008	Supplemental restraint system (SRS)	Freeze frame	Checking the oil level	V1.10.001
VOLVO	V50	2008	Supplemental restraint system (SRS)	Special functions	Resetting the service reminder indicator (SRI)	V1.10.001
VOLVO	V50	2009	Driver door module (DDM)	ECU identification	Pre-delivery service for new car	V1.10.001
VOLVO	V50	2009	Driver door module (DDM)	Read codes	Resetting off	V1.10.001
VOLVO	V50	2009	Driver door module (DDM)	Erase codes	Reading off and programming vehicle mode	V1.10.001
VOLVO	V50	2009	Driver door module (DDM)	Freeze frame	Quick test of alternator function	V1.10.001
VOLVO	V50	2009	Driver door module (DDM)	Special functions	Resetting low voltage counters	V1.10.001
VOLVO	V50	2009	Driver door module (DDM)	ECU identification	Resetting counter particle filter	V1.10.001
VOLVO	V50	2009	Driver door module (DDM)	Read codes	Checking injectors	V1.10.001
VOLVO	V50	2009	Driver door module (DDM)	Erase codes	Checking the oil level	V1.10.001
VOLVO	V50	2009	Driver door module (DDM)	Freeze frame	Resetting the service reminder indicator (SRI)	V1.10.001
VOLVO	V50	2009	Passenger door module (PDM)	ECU identification	Pre-delivery service for new car	V1.10.001
VOLVO	V50	2009	Passenger door module (PDM)	Read codes	Resetting off	V1.10.001
VOLVO	V50	2009	Passenger door module (PDM)	Erase codes	Reading off and programming vehicle mode	V1.10.001
VOLVO	V50	2009				

VOLVO	V50	2010	Central electronic module (CEM)	Special functions	Read/dina off the alarm cause	V1.10.001
VOLVO	V50	2010	Central electronic module (CEM)	Special functions	Read/dina off the alarm mode	V1.10.001
VOLVO	V50	2010	Central electronic module (CEM)	Special functions	Resetting low voltage counters	V1.10.001
VOLVO	V50	2010	Central electronic module (CEM)	Special functions	Ignition switch key position	V1.10.001
VOLVO	V50	2010	Central electronic module (CEM)	Special functions	Programming of rear window wiper when reversing	V1.10.001
VOLVO	V50	2010	Central electronic module (CEM)	Special functions	Setting clock deviation	V1.10.001
VOLVO	V50	2010	Central electronic module (CEM)	Special functions	Resetting alarm	V1.10.001
VOLVO	V50	2010	Central electronic module (CEM)	Special functions	Read/out of part number for Remote Receiver Module (RRX) and siren (SCM)	V1.10.001
VOLVO	V50	2010	Central electronic module (CEM)	Special functions	Resetting counter by-passing alclock.	V1.10.001
VOLVO	V50	2010	Central electronic module (CEM)	Special functions	Quick test of alternator function	V1.10.001
VOLVO	V50	2010	Central electronic module (CEM)	Special functions	Setting day and night mode for the instrumentation	V1.10.001
VOLVO	V50	2010	Central electronic module (CEM)	Special functions	Resetting crash mode	V1.10.001
VOLVO	V50	2010	Central electronic module (CEM)	Special functions	Driver door module (DDM)	V1.10.001
VOLVO	V50	2010	Central electronic module (CEM)	Special functions	ECU identification	V1.10.001
VOLVO	V50	2010	Central electronic module B (CEMB)	Special functions	Read codes	V1.10.001
VOLVO	V50	2010	Central electronic module B (CEMB-HS)	Special functions	Erase codes	V1.10.001
VOLVO	V50	2010	Central electronic module B (CEMB-HS)	Special functions	Freeze frame	V1.10.001
VOLVO	V50	2010	Central electronic module B (CEMB-HS)	Special functions	Active test	V1.10.001
VOLVO	V50	2010	Central electronic module B (CEMB-HS)	Special functions	ECU identification	V1.10.001
VOLVO	V50	2010	Supplemental restraint system module (SRS)	Special functions	Read codes	V1.10.001
VOLVO	V50	2010	Supplemental restraint system module (SRS)	Special functions	Erase codes	V1.10.001
VOLVO	V50	2010	Supplemental restraint system module (SRS)	Special functions	Freeze frame	V1.10.001
VOLVO	V50	2010	Supplemental restraint system module (SRS)	Special functions	Resetting crash mode	V1.10.001
VOLVO	V50	2010	Driver door module (DDM)	Special functions	Driver door module (DDM)	V1.10.001
VOLVO	V50	2010	Driver door module (DDM)	Special functions	ECU identification	V1.10.001
VOLVO	V50	2010	Driver door module (DDM)	Special functions	Read codes	V1.10.001
VOLVO	V50	2010	Driver door module (DDM)	Special functions	Erase codes	V1.10.001
VOLVO	V50	2010	Driver door module (DDM)	Special functions	Freeze frame	V1.10.001
VOLVO	V50	2010	Driver door module (DDM)	Special functions	Active test	V1.10.001
VOLVO	V50	2010	Driver door module (DDM)	Special functions	ECU identification	V1.10.001
VOLVO	V50	2010	Passenger door module (PDM)	Special functions	Read codes	V1.10.001
VOLVO	V50	2010	Passenger door module (PDM)	Special functions	Erase codes	V1.10.001
VOLVO	V50	2010	Passenger door module (PDM)	Special functions	Freeze frame	V1.10.001
VOLVO	V50	2010	Passenger door module (PDM)	Special functions	Resetting crash mode	V1.10.001
VOLVO	V50	2010	Brake control module (BCM)	Special functions	Brake control module (BCM)	V1.10.001
VOLVO	V50	2010	Brake control module (BCM)	Special functions	ECU identification	V1.10.001
VOLVO	V50	2010	Brake control module (BCM)	Special functions	Read codes	V1.10.001
VOLVO	V50	2010	Brake control module (BCM)	Special functions	Erase codes	V1.10.001
VOLVO	V50	2010	Brake control module (BCM)	Special functions	Freeze frame	V1.10.001
VOLVO	V50	2010	Brake control module (BCM)	Special functions	Brake control module (BCM)	V1.10.001
VOLVO	V50	2010	Brake control module (BCM)	Special functions	ECU identification	V1.10.001
VOLVO	V50	2010	Brake control module (BCM)	Special functions	Read codes	V1.10.001
VOLVO	V50	2010	Brake control module (BCM)	Special functions	Erase codes	V1.10.001
VOLVO	V50	2010	Brake control module (BCM)	Special functions	Freeze frame	V1.10.001
VOLVO	V50	2010	Infotainment control module (ICM)	Special functions	Infotainment control module (ICM)	V1.10.001
VOLVO	V50	2010	Infotainment control module (ICM)	Special functions	ECU identification	V1.10.001
VOLVO	V50	2010	Infotainment control module (ICM)	Special functions	Read codes	V1.10.001
VOLVO	V50	2010	Infotainment control module (ICM)	Special functions	Erase codes	V1.10.001
VOLVO	V50	2010	Infotainment control module (ICM)	Special functions	Freeze frame	V1.10.001
VOLVO	V50	2010	Infotainment control module (ICM)	Special functions	Infotainment control module (ICM)	V1.10.001
VOLVO	V50	2010	Infotainment control module (ICM)	Special functions	ECU identification	V1.10.001
VOLVO	V50	2010	Driver information module (DIM)	Special functions	Read codes	V1.10.001
VOLVO	V50	2010	Driver information module (DIM)	Special functions	Erase codes	V1.10.001
VOLVO	V50	2010	Driver information module (DIM)	Special functions	Freeze frame	V1.10.001
VOLVO	V50	2010	Driver information module (DIM)	Special functions	Resetting the service reminder indicator (SRI)	V1.10.001
VOLVO	V50	2010	Driver information module (DIM)	Special functions	Testing all indicators and lamps in the driver information module (DIM)	V1.10.001
VOLVO	V50	2010	Driver information module (DIM)	Special functions	Indicates programmed values	V1.10.001
VOLVO	V50	2010	Driver information module (DIM)	Special functions	Display of current value	V1.10.001
VOLVO	V50	2010	Driver information module (DIM)	Special functions	Programming the driver information module (DIM)	V1.10.001
VOLVO	V50	2010	Driver information module (DIM)	Special functions	Programming seatbelt reminder in backseat	V1.10.001
VOLVO	V50	2010	Driver information module (DIM)	Special functions	Programming the gear shift indicator	V1.10.001
VOLVO	V50	2010	Driver information module (DIM)	Special functions	Programming remote control setting	V1.10.001
VOLVO	V50	2010	Driver seat module (PSM)	Special functions	Identifying components on the LIN network that belong to the climate control system (CCM)	V1.10.001
VOLVO	V50	2010	Driver seat module (PSM)	Special functions	Programming the seat temperature	V1.10.001
VOLVO	V50	2010	Driver seat module (PSM)	Special functions	Calibration for the climate control module (CCM)	V1.10.001
VOLVO	V50	2010	Driver seat module (PSM)	Special functions	Reading out detected/expected control modules/sensors	V1.10.001
VOLVO	V50	2010	Driver seat module (PSM)	Special functions	Reading out electronic damper motor, actual/preset range and tolerance limit	V1.10.001
VOLVO	V50	2010	Power seat module (PSM)	Special functions	Initiation of the TCS switch by the tunnel console	V1.10.001
VOLVO	V50	2010	Power seat module (PSM)	Special functions	Resetting the number of programmed remote keys.	V1.10.001
VOLVO	V50	2010	Power seat module (PSM)	Special functions	Read-out of part number and serial number, Remote Keyless Entry (RKE)	V1.10.001
VOLVO	V50	2010	Subwoofer module (SUB)	Special functions	Read codes	V1.10.001
VOLVO	V50	2010	Subwoofer module (SUB)	Special functions	Erase codes	V1.10.001
VOLVO	V50	2010	Subwoofer module (SUB)	Special functions	Freeze frame	V1.10.001
VOLVO	V50	2010	Accessory electronic module (AEM)	Special functions	Accessory electronic module (AEM)	V1.10.001
VOLVO	V50	2010	Accessory electronic module (AEM)	Special functions	ECU identification	V1.10.001
VOLVO	V50	2010	Accessory electronic module (AEM)	Special functions	Read codes	V1.10.001
VOLVO	V50	2010	Accessory electronic module (AEM)	Special functions	Erase codes	V1.10.001
VOLVO	V50	2010	Accessory electronic module (AEM)	Special functions	Freeze frame	V1.10.001
VOLVO	V50	2010	Accessory electronic module (AEM)	Special functions	Active test	V1.10.001
VOLVO	V50	2010	Accessory electronic module (AEM)	Special functions	ECU identification	V1.10.001
VOLVO	V50	2010	Parking assistance module (PAM)	Special functions	Read codes	V1.10.001
VOLVO	V50	2010	Parking assistance module (PAM)	Special functions	Erase codes	V1.10.001
VOLVO	V50	2010	Parking assistance module (PAM)	Special functions	Freeze frame	V1.10.001
VOLVO	V50	2010	Audio module (AUD)	Special functions	Resetting the number of programmed remote keys.	V1.10.001
VOLVO	V50	2010	Audio module (AUD)	Special functions	Read-out of part number and serial number, Remote Keyless Entry (RKE)	V1.10.001
VOLVO	V50	2010	Audio module (AUD)	Special functions	Read codes	V1.10.001
VOLVO	V50	2010	Audio module (AUD)	Special functions	Erase codes	V1.10.001
VOLVO	V50	2010	Accessory USB unit (AUU)	Special functions	Freeze frame	V1.10.001
VOLVO	V50	2010	Accessory USB unit (AUU)	Special functions	ECU identification	V1.10.001
VOLVO	V50	2010	Accessory USB unit (AUU)	Special functions	Read codes	V1.10.001
VOLVO	V50	2010	Accessory USB unit (AUU)	Special functions	Erase codes	V1.10.001
VOLVO	V50	2010	Accessory USB unit (AUU)	Special functions	Freeze frame	V1.10.001
VOLVO	V50	2010	Trailer module (TRM)	Special functions	Trailer module (TRM)	V1.10.001
VOLVO	V50	2010	Trailer module (TRM)	Special functions	ECU identification	V1.10.001
VOLVO	V50	2010	Trailer module (TRM)	Special functions	Read codes	V1.10.001
VOLVO	V50	2010	Trailer module (TRM)	Special functions	Erase codes	V1.10.001
VOLVO	V50	2010	Trailer module (TRM)	Special functions	Freeze frame	V1.10.001
VOLVO	V50	2010	Steering wheel module (SWM)	Special functions	Resetting the reserve battery	V1.10.001
VOLVO	V50	2010	Steering wheel module (SWM)	Special functions	ECU identification	V1.10.001
VOLVO	V50	2010	Steering wheel module (SWM)	Special functions	Read codes	V1.10.001
VOLVO	V50	2010	Steering wheel module (SWM)	Special functions	Erase codes	V1.10.001
VOLVO	V50	2010	Steering wheel module (SWM)	Special functions	Freeze frame	V1.10.001
VOLVO	V50	2010	Integrated audio module (IAM)	Special functions	Resetting the reserve battery	V1.10.001
VOLVO	V50	2010	Integrated audio module (IAM)	Special functions	ECU identification	V1.10.001
VOLVO	V50	2010	Integrated audio module (IAM)	Special functions	Read codes	V1.10.001
VOLVO	V50	2010	Integrated audio module (IAM)	Special functions	Erase codes	V1.10.001
VOLVO	V50	2010	Integrated audio module (IAM)	Special functions	Freeze frame	V1.10.001
VOLVO	V50	2010	Remote digital audio receiver (RDAR)	Special functions	Activating components	V1.10.001
VOLVO	V50	2010	Remote digital audio receiver (RDAR)	Special functions	Initial adaptation	V1.10.001
VOLVO	V50	2010	Remote digital audio receiver (RDAR)	Special functions	Testing the fuel pump (FP)	V1.10.001
VOLVO	V50	2010	Bluetooth phone module (BPM)	Special functions	Readiness code (USA/CA)	V1.10.001
VOLVO	V50	2010	Bluetooth phone module (BPM)	Special functions	ECU identification	V1.10.001
VOLVO	V50	2010	Bluetooth phone module (BPM)	Special functions	Read codes	V1.10.001
VOLVO	V50	2010	Bluetooth phone module (BPM)	Special functions	Erase codes	V1.10.001
VOLVO	V50	2010	Bluetooth phone module (BPM)	Special functions	Freeze frame	V1.10.001
VOLVO	V50	2010	Combustion preheater module (CPM)	Special functions	Extended fault tracing for the diagnostic trouble code (DTC), Engine control module (ECM)	V1.10.001
VOLVO	V50	2010	Combustion preheater module (CPM)	Special functions	Quick test of the fuel tank system	V1.10.001
VOLVO	V50	2010	Combustion preheater module (CPM)	Special functions	Activating components and functions	V1.10.001
VOLVO	V50	2010	Transmission control module (TCM)	Special functions	Resetting adaptation	V1.10.001
VOLVO	V50	2010	Transmission control module (TCM)	Special functions	Resetting the transmission fluid change counter	V1.10.001
VOLVO	V50	2010	Transmission control module (TCM)	Special functions	Activating TEST MODE	V1.10.001
VOLVO	V50	2010	Transmission control module (TCM)	Special functions	Activating gear indication	V1.10.001
VOLVO	V50	2010	Transmission control module (TCM)	Special functions	Controlling model adaptation	V1.10.001
VOLVO	V50	2010	Transmission control module (TCM)	Special functions	Adjustment of the throttle unit	V1.10.001
VOLVO	V50	2010	Transmission control module (TCM)	Special functions	Readiness code	V1.10.001
VOLVO	V50	2010	Transmission control module (TCM)	Special functions	Quick test of fuel tank system (USA/CDN)	V1.10.001
VOLVO	V50	2010	Transmission control module (TCM)	Special functions	Quick test of the fuel pump (FP)	V1.10.001
VOLVO	V50	2010	Transmission control module (TCM)	Special functions	Test/movement of camshaft control, intake	V1.10.001
VOLVO	V50	2010	Transmission control module (TCM)	Special functions	Test/movement of camshaft control, exhaust	V1.10.001
VOLVO	V50	2010	Differential electronic module (DEM)	Special functions	Adaptation of the exhaust gas recirculation (EGR) valve	V1.10.001
VOLVO	V50	2010	Differential electronic module (DEM)	Special functions	Resetting the odometer particle trap	V1.10.001
VOLVO	V50	2010	Differential electronic module (DEM)	Special functions	Commissioning of seat particles, particle trap	V1.10.001
VOLVO	V50	2010	Differential electronic module (DEM)	Special functions	Adjustment of seat particles via vehicle network	V1.10.001
VOLVO	V50	2010	Differential electronic module (DEM)	Special functions	Retrieving information about current combustion	V1.10.001
VOLVO	V50	2010	Differential electronic module (DEM)	Special functions	Readout of information stand-by current	V1.10.001
VOLVO	V50	2010	Differential electronic module (DEM)	Special functions	Readout of current from battery monitoring sensor	V1.10.001
VOLVO	V50	2010	Differential electronic module (DEM)	Special functions	Adaptation of neutral position sensor	V1.10.001
VOLVO	V50	2010	Additional dosing module (ADM)	Special functions	Read codes	V1.10.001
VOLVO	V50	2010	Additional dosing module (ADM)	Special functions	Erase codes	V1.10.001
VOLVO	V50	2010	Additional dosing module (ADM)	Special functions	Freeze frame	V1.10.001
VOLVO	V50	2010	Additional dosing module (ADM)	Special functions	Resetting counter by-passing alclock.	V1.10.001
VOLVO	V50	2010	Additional dosing module (ADM)	Special functions	Quick test of alternator function	V1.10.001
VOLVO	V50	2010	Additional dosing module (ADM)	Special functions	Setting day and night mode for the instrumentation	V1.10.001
VOLVO	V50	2010	Engine control module (ECM)	Special functions	Resetting crash mode	V1.10.001
VOLVO	V50	2010	Engine control module (ECM)	Special functions	Driver door module (DDM)	V1.10.001
VOLVO	V50	2010	Engine control module (ECM)	Special functions	ECU identification	V1.10.001
VOLVO	V50	2010	Engine control module (ECM)	Special functions	Read codes	V1.10.001
VOLVO	V50	2010	Engine control module (ECM)	Special functions	Erase codes	V1.10.001
VOLVO	V50	2010	Engine control module (ECM)	Special functions	Freeze frame	V1.10.001
VOLVO	V50	2010	Engine control module (ECM)	Special functions	Activating components and functions	V1.10.001
VOLVO	V50	2010	Engine control module (ECM)	Special functions	Resetting adaptation	V1.10.001
VOLVO	V50	2010	Engine control module (ECM)	Special functions	Activating gear indication	V1.10.001
VOLVO	V50	2010	Engine control module (ECM)	Special functions	Controlling model adaptation	V1.10.001
VOLVO	V50	2010	Engine control module (ECM)	Special functions	Adjustment of the throttle unit	V1.10.001
VOLVO	V50	2010	Engine control module (ECM)	Special functions	Readiness code	V1.10.001
VOLVO	V50	2010	Engine control module (ECM)	Special functions	Quick test of the fuel tank system	V1.10.001
VOLVO	V50	2010	Engine control module (ECM)	Special functions	Quick test of the fuel pump	V1.10.001
VOLVO	V50	2010	Engine control module (ECM)	Special functions	Test/movement of camshaft control, intake	V1.10.001
VOLVO	V50	2010	Engine control module (ECM)	Special functions	Test/movement of camshaft control, exhaust	V1.10.001
VOLVO	V50	2010	Refueling nozzles (RNF)	Special functions	Adaptation of the fuel tank level page	V1.10.001

VOLVO	V60	2011	Television module (TVM)	ECU identification	V1.10.001
VOLVO	V60	2011	Television module (TVM)	Read codes	V1.10.001
VOLVO	V60	2011	Television module (TVM)	Erase codes	V1.10.001
VOLVO	V60	2011	Television module (TVM)	Freeze frame	V1.10.001
VOLVO	V60	2011	Power seat module (PSM)	ECU identification	V1.10.001
VOLVO	V60	2011	Power seat module (PSM)	Read codes	V1.10.001
VOLVO	V60	2011	Power seat module (PSM)	Erase codes	V1.10.001
VOLVO	V60	2011	Power seat module (PSM)	Freeze frame	V1.10.001
VOLVO	V60	2011	Power seat module (PSM)	Special functions	V1.10.001
VOLVO	V60	2011	Combustion preheater module (CPM)	ECU identification	V1.10.001
VOLVO	V60	2011	Combustion preheater module (CPM)	Read codes	V1.10.001
VOLVO	V60	2011	Combustion preheater module (CPM)	Erase codes	V1.10.001
VOLVO	V60	2011	Combustion preheater module (CPM)	Freeze frame	V1.10.001
VOLVO	V60	2011	Combustion onheater module (CPM)	Special functions	V1.10.001
VOLVO	V60	2011	Combustion onheater module (CPM)	ECU identification	V1.10.001
VOLVO	V60	2011	Combustion onheater module (CPM)	Read codes	V1.10.001
VOLVO	V60	2011	Combustion onheater module (CPM)	Erase codes	V1.10.001
VOLVO	V60	2011	Combustion onheater module (CPM)	Freeze frame	V1.10.001
VOLVO	V60	2011	Combustion preheater module (CPM)	Special functions	V1.10.001
VOLVO	V60	2011	Combustion preheater module (CPM)	ECU identification	V1.10.001
VOLVO	V60	2011	Suspension module (SUM)	ECU identification	V1.10.001
VOLVO	V60	2011	Suspension module (SUM)	Read codes	V1.10.001
VOLVO	V60	2011	Suspension module (SUM)	Erase codes	V1.10.001
VOLVO	V60	2011	Suspension module (SUM)	Freeze frame	V1.10.001
VOLVO	V60	2011	Suspension module (SUM)	Special functions	V1.10.001
VOLVO	V60	2011	Parking assistance module (PAM)	ECU identification	V1.10.001
VOLVO	V60	2011	Parking assistance module (PAM)	Read codes	V1.10.001
VOLVO	V60	2011	Parking assistance module (PAM)	Erase codes	V1.10.001
VOLVO	V60	2011	Parking assistance module (PAM)	Freeze frame	V1.10.001
VOLVO	V60	2011	Parking assistance module (PAM)	Special functions	V1.10.001
VOLVO	V60	2011	Accessory USB unit (AUU)	ECU identification	V1.10.001
VOLVO	V60	2011	Accessory USB unit (AUU)	Read codes	V1.10.001
VOLVO	V60	2011	Accessory USB unit (AUU)	Erase codes	V1.10.001
VOLVO	V60	2011	Phone module (PHM)	ECU identification	V1.10.001
VOLVO	V60	2011	Phone module (PHM)	Read codes	V1.10.001
VOLVO	V60	2011	Phone module (PHM)	Erase codes	V1.10.001
VOLVO	V60	2011	Phone module (PHM)	Freeze frame	V1.10.001
VOLVO	V60	2011	Phone module (PHM)	Special functions	V1.10.001
VOLVO	V60	2011	Phone module (PHM)	ECU identification	V1.10.001
VOLVO	V60	2011	High level display front (HDF)	ECU identification	V1.10.001
VOLVO	V60	2011	High level display front (HDF)	Read codes	V1.10.001
VOLVO	V60	2011	High level display front (HDF)	Erase codes	V1.10.001
VOLVO	V60	2011	High level display front (HDF)	Freeze frame	V1.10.001
VOLVO	V60	2011	High level display front (HDF)	Special functions	V1.10.001
VOLVO	V60	2011	Remote digital audio receiver (RDAr)	ECU identification	V1.10.001
VOLVO	V60	2011	Remote digital audio receiver (RDAr)	Read codes	V1.10.001
VOLVO	V60	2011	Remote digital audio receiver (RDAr)	Erase codes	V1.10.001
VOLVO	V60	2011	Digital audio broadcast module (DABM)	ECU identification	V1.10.001
VOLVO	V60	2011	Digital audio broadcast module (DABM)	Read codes	V1.10.001
VOLVO	V60	2011	Digital audio broadcast module (DABM)	Erase codes	V1.10.001
VOLVO	V60	2011	Headlamp control module (HCM)	ECU identification	V1.10.001
VOLVO	V60	2011	Headlamp control module (HCM)	Read codes	V1.10.001
VOLVO	V60	2011	Headlamp control module (HCM)	Erase codes	V1.10.001
VOLVO	V60	2011	Headlamp control module (HCM)	Freeze frame	V1.10.001
VOLVO	V60	2011	Headlamp control module (HCM)	Special functions	V1.10.001
VOLVO	V60	2011	Forward looking radar (FLR)	ECU identification	V1.10.001
VOLVO	V60	2011	Forward looking radar (FLR)	Read codes	V1.10.001
VOLVO	V60	2011	Forward looking radar (FLR)	Erase codes	V1.10.001
VOLVO	V60	2011	Forward looking radar (FLR)	Freeze frame	V1.10.001
VOLVO	V60	2011	Forward looking radar (FLR)	Special functions	V1.10.001
VOLVO	V60	2011	Closing velocity module (CVM)	ECU identification	V1.10.001
VOLVO	V60	2011	Closing velocity module (CVM)	Read codes	V1.10.001
VOLVO	V60	2011	Closing velocity module (CVM)	Erase codes	V1.10.001
VOLVO	V60	2011	Closing velocity module (CVM)	Freeze frame	V1.10.001
VOLVO	V60	2011	Power steering control module (PSCM)	ECU identification	V1.10.001
VOLVO	V60	2011	Power steering control module (PSCM)	Read codes	V1.10.001
VOLVO	V60	2011	Power steering control module (PSCM)	Erase codes	V1.10.001
VOLVO	V60	2011	Power steering control module (PSCM)	Freeze frame	V1.10.001
VOLVO	V60	2011	Integrated audio module (IAM)	ECU identification	V1.10.001
VOLVO	V60	2011	Integrated audio module (IAM)	Read codes	V1.10.001
VOLVO	V60	2011	Integrated audio module (IAM)	Erase codes	V1.10.001
VOLVO	V60	2011	Integrated audio module (IAM)	Freeze frame	V1.10.001
VOLVO	V60	2011	Integrated audio module (IAM)	Special functions	V1.10.001
VOLVO	V60	2011	Trailer module (TRM)	ECU identification	V1.10.001
VOLVO	V60	2011	Trailer module (TRM)	Read codes	V1.10.001
VOLVO	V60	2011	Trailer module (TRM)	Erase codes	V1.10.001
VOLVO	V60	2011	Trailer module (TRM)	Freeze frame	V1.10.001
VOLVO	V60	2011	Parking assistance camera (PAC)	ECU identification	V1.10.001
VOLVO	V60	2011	Parking assistance camera (PAC)	Read codes	V1.10.001
VOLVO	V60	2011	Parking assistance camera (PAC)	Erase codes	V1.10.001
VOLVO	V60	2011	Parking assistance camera (PAC)	Freeze frame	V1.10.001
VOLVO	V60	2011	Parking assistance camera (PAC)	Special functions	V1.10.001
VOLVO	V60	2011	Audio module (AUD)	ECU identification	V1.10.001
VOLVO	V60	2011	Audio module (AUD)	Read codes	V1.10.001
VOLVO	V60	2011	Audio module (AUD)	Erase codes	V1.10.001
VOLVO	V60	2011	Audio module (AUD)	Freeze frame	V1.10.001
VOLVO	V60	2011	Audio module (AUD)	Special functions	V1.10.001
VOLVO	V60	2011	Forward sensing module (FSM)	ECU identification	V1.10.001
VOLVO	V60	2011	Forward sensing module (FSM)	Read codes	V1.10.001
VOLVO	V60	2011	Forward sensing module (FSM)	Erase codes	V1.10.001
VOLVO	V60	2011	Forward sensing module (FSM)	Freeze frame	V1.10.001
VOLVO	V60	2011	Forward sensing module (FSM)	Special functions	V1.10.001
VOLVO	V60	2011	Transmission control module (TCM)	ECU identification	V1.10.001
VOLVO	V60	2011	Transmission control module (TCM)	Read codes	V1.10.001
VOLVO	V60	2011	Transmission control module (TCM)	Erase codes	V1.10.001
VOLVO	V60	2011	Transmission control module (TCM)	Freeze frame	V1.10.001
VOLVO	V60	2011	Transmission control module (TCM)	Special functions	V1.10.001
VOLVO	V60	2011	Transmission control module (TCM)	ECU identification	V1.10.001
VOLVO	V60	2011	Transmission control module (TCM)	Read codes	V1.10.001
VOLVO	V60	2011	Transmission control module (TCM)	Erase codes	V1.10.001
VOLVO	V60	2011	Transmission control module (TCM)	Freeze frame	V1.10.001
VOLVO	V60	2011	Transmission control module (TCM)	Special functions	V1.10.001
VOLVO	V60	2011	Engine control module (ECM)	ECU identification	V1.10.001
VOLVO	V60	2011	Engine control module (ECM)	Read codes	V1.10.001
VOLVO	V60	2011	Engine control module (ECM)	Erase codes	V1.10.001
VOLVO	V60	2011	Engine control module (ECM)	Freeze frame	V1.10.001
VOLVO	V60	2011	Engine control module (ECM)	Special functions	V1.10.001
VOLVO	V60	2011	Forward electronic module (DEM)	ECU identification	V1.10.001
VOLVO	V60	2011	Forward electronic module (DEM)	Read codes	V1.10.001
VOLVO	V60	2011	Forward electronic module (DEM)	Erase codes	V1.10.001
VOLVO	V60	2011	Forward electronic module (DEM)	Freeze frame	V1.10.001
VOLVO	V60	2011	Forward electronic module (DEM)	Special functions	V1.10.001
VOLVO	V60	2011	Engine control module (ECM)	ECU identification	V1.10.001
VOLVO	V60	2011	Engine control module (ECM)	Read codes	V1.10.001
VOLVO	V60	2011	Engine control module (ECM)	Erase codes	V1.10.001
VOLVO	V60	2011	Engine control module (ECM)	Freeze frame	V1.10.001
VOLVO	V60	2011	Engine control module (ECM)	Special functions	V1.10.001
VOLVO	V60	2011	Central electronic module (CEM)	ECU identification	V1.10.001
VOLVO	V60	2011	Central electronic module (CEM)	Read codes	V1.10.001
VOLVO	V60	2011	Central electronic module (CEM)	Erase codes	V1.10.001
VOLVO	V60	2011	Central electronic module (CEM)	Freeze frame	V1.10.001
VOLVO	V60	2011	Central electronic module (CEM)	Special functions	V1.10.001
VOLVO	V60	2011	Central electronic module (CEM)	ECU identification	V1.10.001
VOLVO	V60	2011	Central electronic module (CEM)	Read codes	V1.10.001
VOLVO	V60	2011	Central electronic module (CEM)	Erase codes	V1.10.001
VOLVO	V60	2011	Central electronic module (CEM)	Freeze frame	V1.10.001
VOLVO	V60	2011	Central electronic module (CEM)	Special functions	V1.10.001
VOLVO	V60	2011	Central electronic module (CEM)	ECU identification	V1.10.001
VOLVO	V60	2011	Central electronic module (CEM)	Read codes	V1.10.001
VOLVO	V60	2011	Central electronic module (CEM)	Erase codes	V1.10.001
VOLVO	V60	2011	Central electronic module (CEM)	Freeze frame	V1.10.001
VOLVO	V60	2011	Central electronic module (CEM)	Special functions	V1.10.001
VOLVO	V60	2011	Central electronic module (CEM)	ECU identification	V1.10.001
VOLVO	V60	2011	Central electronic module (CEM)	Read codes	V1.10.001
VOLVO	V60	2011	Central electronic module (CEM)	Erase codes	V1.10.001
VOLVO	V60	2011	Central electronic module (CEM)	Freeze frame	V1.10.001
VOLVO	V60	2011	Central electronic module (CEM)	Special functions	V1.10.001
VOLVO	V60	2011	Park brake module (PBM)	ECU identification	V1.10.001
VOLVO	V60	2011	Park brake module (PBM)	Read codes	V1.10.001
VOLVO	V60	2011	Park brake module (PBM)	Erase codes	V1.10.001
VOLVO	V60	2011	Park brake module (PBM)	Freeze frame	V1.10.001
VOLVO	V60	2011	Park brake module (PBM)	Special functions	V1.10.001
VOLVO	V60	2011	Supplemental restraint system module (SRS)	ECU identification	V1.10.001
VOLVO	V60	2011	Supplemental restraint system module (SRS)	Read codes	V1.10.001
VOLVO	V60	2011	Supplemental restraint system module (SRS)	Erase codes	V1.10.001
VOLVO	V60	2011	Supplemental restraint system module (SRS)	Freeze frame	V1.10.001
VOLVO	V60	2011	Supplemental restraint system module (SRS)	Special functions	V1.10.001
VOLVO	V60	2011	Supplemental restraint system module (SRS)	ECU identification	V1.10.001
VOLVO	V60	2011	Steering angle sensor module (SAS)	ECU identification	V1.10.001
VOLVO	V60	2011	Steering angle sensor module (SAS)	Read codes	V1.10.001
VOLVO	V60	2011	Steering angle sensor module (SAS)	Erase codes	V1.10.001
VOLVO	V60	2011	Steering angle sensor module (SAS)	Freeze frame	V1.10.001
VOLVO	V60	2011	Driver door module (DDM)	ECU identification	V1.10.001
VOLVO	V60	2011	Driver door module (DDM)	Read codes	V1.10.001
VOLVO	V60	2011	Driver door module (DDM)	Erase codes	V1.10.001
VOLVO	V60	2011	Driver door module (DDM)	Freeze frame	V1.10.001
VOLVO	V60	2011	Driver door module (DDM)	Special functions	V1.10.001
VOLVO	V60	2011	Driver door module (DDM)	ECU identification	V1.10.001
VOLVO	V60	2011	Driver door module (DDM)	Read codes	V1.10.001
VOLVO	V60	2011	Driver door module (DDM)	Erase codes	V1.10.001
VOLVO	V60	2011	Driver door module (DDM)	Freeze frame	V1.10.001
VOLVO	V60	2011	Driver door module (DDM)	Special functions	V1.10.001
VOLVO	V60	2011	Programming the seat memory's delay time and acknowledgement		V1.10.001
VOLVO	V60	2011	Quick test of the function of the additional/bankine heater		V1.10.001
VOLVO	V60	2011	Calibration of the cooling of the cooling system		V1.10.001
VOLVO	V60	2011	Activation/deactivation of the fuel system		V1.10.001
VOLVO	V60	2011	Identification of the heater		V1.10.001
VOLVO	V60	2011	Calibration		V1.10.001
VOLVO	V60	2011	Programming of parking assistance module (PAM)		V1.10.001
VOLVO	V60	2011	Reinstalling the reserve battery		V1.10.001
VOLVO	V60	2011	Checking the reserve battery		V1.10.001
VOLVO	V60	2011	Activation/deactivation of the Volvo On Call		V1.10.001
VOLVO	V60	2011	Activation/ore activation of Volvo On Call		V1.10.001
VOLVO	V60	2011	Activation		V1.10.001
VOLVO	V60	2011	Calibration of position sensor		V1.10.001
VOLVO	V60	2011	Deleting phone book		V1.10.001
VOLVO	V60	2011	Camera activation, parking aid camera		V1.10.001
VOLVO	V60	2011	Service calibration, parking aid camera		V1.10.001
VOLVO	V60	2011	Checking headphone socket		V1.10.001
VOLVO	V60	2011	Checking loudspeaker element		V1.10.001
VOLVO	V60	2011	Checking loudspeakers		V1.10.001
VOLVO	V60	2011	Initial adaptation		V1.10.001
VOLVO	V60	2011	Activation/deactivation of the brake vacuum pump		V1.10.001
VOLVO	V60	2011	Readiness code (USA/CON)		V1.10.001
VOLVO	V60	2011	Readline off UMPR (USA/CON)		V1.10.001
VOLVO	V60	2011	Quick test of the fuel tank system		V1.10.001
VOLVO	V60	2011	Resetting the adaptive unit		V1.10.001

VOLVO	V60	2013	Engine control module (ECM)	Special functions	Resettling the adaption values	V1.10.001
VOLVO	V60	2013	Engine control module (ECM)	Special functions	Checkin injectors	V1.10.001
VOLVO	V60	2013	Engine control module (ECM)	Special functions	Adaption of neutral position sensor	V1.10.001
VOLVO	V60	2013	Central electronic module (CEM)	ECU identification		
VOLVO	V60	2013	Central electronic module (CEM)	Read codes		
VOLVO	V60	2013	Central electronic module (CEM)	Erase codes		
VOLVO	V60	2013	Central electronic module (CEM)	Freeze frame		
VOLVO	V60	2013	Central electronic module (CEM)	Active test		
VOLVO	V60	2013	Central electronic module (CEM)	Special functions		
VOLVO	V60	2013	Central electronic module (CEM)	Special functions	Pre delivery service for new car	V1.10.001
VOLVO	V60	2013	Central electronic module (CEM)	Special functions	Resetting the information to zero power supply	V1.10.001
VOLVO	V60	2013	Central electronic module (CEM)	Special functions	Replacing the information to zero power supply when replacing the battery monitoring sensor (BMS)	V1.10.001
VOLVO	V60	2013	Central electronic module (CEM)	Special functions	Remote controlled immobilising, status	V1.10.001
VOLVO	V60	2013	Central electronic module (CEM)	Special functions	Workshop test (PMS)	V1.10.001
VOLVO	V60	2013	Central electronic module (CEM)	Special functions	Read-off of the resettable no-lock	V1.10.001
VOLVO	V60	2013	Central electronic module (CEM)	Special functions	Setting of rear window wiper when reversing	V1.10.001
VOLVO	V60	2013	Central electronic module (CEM)	Special functions	Checking installation, brake light switch, and brake pedal position switch	V1.10.001
VOLVO	V60	2013	Central electronic module (CEM)	Special functions	Reading off of information from the rear view camera sensor	V1.10.001
VOLVO	V60	2013	Central electronic module (CEM)	Special functions	Readout of information stand by current	V1.10.001
VOLVO	V60	2013	Central electronic module (CEM)	Special functions	Resetting the information to zero power supply when replacing the battery monitoring sensor (BMS)	V1.10.001
VOLVO	V60	2013	Central electronic module (CEM)	Special functions	Remote controlled immobilising, cause	V1.10.001
VOLVO	V60	2013	Central electronic module (CEM)	Special functions	Remote controlled immobilising, cause	V1.10.001
VOLVO	V60	2013	Central electronic module (CEM)	Special functions	Operating and initiating the roof hatch	V1.10.001
VOLVO	V60	2013	Central electronic module (CEM)	Special functions	Calibrating the steering angle sensor	V1.10.001
VOLVO	V60	2013	Central electronic module (CEM)	Special functions	Setting day and night mode for the instrumentation	V1.10.001
VOLVO	V60	2013	Central electronic module (CEM)	Special functions	Checking ABL function	V1.10.001
VOLVO	V60	2013	Central electronic module (CEM)	Special functions	Activating wipers, front/rear	V1.10.001
VOLVO	V60	2013	Steering angle sensor module (SAS)	ECU identification	Deactivation/activation of engine remote start ERS	V1.10.001
VOLVO	V60	2013	Steering angle sensor module (SAS)	Read codes		
VOLVO	V60	2013	Steering angle sensor module (SAS)	Erase codes		
VOLVO	V60	2013	Steering angle sensor module (SAS)	Freeze frame		
VOLVO	V60	2013	Park brake module (PBM)	ECU identification		
VOLVO	V60	2013	Park brake module (PBM)	Read codes		
VOLVO	V60	2013	Park brake module (PBM)	Erase codes		
VOLVO	V60	2013	Park brake module (PBM)	Freeze frame		
VOLVO	V60	2013	Park brake module (PBM)	Special functions		
VOLVO	V60	2013	Park brake module (PBM)	Special functions		
VOLVO	V60	2013	Driver door module (DDM)	ECU identification		
VOLVO	V60	2013	Driver door module (DDM)	Read codes		
VOLVO	V60	2013	Driver door module (DDM)	Erase codes		
VOLVO	V60	2013	Driver door module (DDM)	Freeze frame		
VOLVO	V60	2013	Driver door module (DDM)	Active test		
VOLVO	V60	2013	Driver door module (DDM)	Special functions		
VOLVO	V60	2013	Passenger door module (PDM)	ECU identification		
VOLVO	V60	2013	Passenger door module (PDM)	Read codes		
VOLVO	V60	2013	Passenger door module (PDM)	Erase codes		
VOLVO	V60	2013	Passenger door module (PDM)	Freeze frame		
VOLVO	V60	2013	Passenger door module (PDM)	Active test		
VOLVO	V60	2013	Passenger door module (PDM)	Special functions		
VOLVO	V60	2013	Passenger door module (PDM)	Special functions	Initializing the window in the front door	V1.10.001
VOLVO	V60	2013	Passenger door module (PDM)	Special functions	Initializing the window in the rear door	V1.10.001
VOLVO	V60	2013	Brake control module (BCM)	ECU identification	Central lock motors, activating	V1.10.001
VOLVO	V60	2013	Brake control module (BCM)	Read codes		
VOLVO	V60	2013	Brake control module (BCM)	Erase codes		
VOLVO	V60	2013	Brake control module (BCM)	Freeze frame		
VOLVO	V60	2013	Brake control module (BCM)	Active test		
VOLVO	V60	2013	Brake control module (BCM)	Special functions		
VOLVO	V60	2013	Climate control module (CCM)	ECU identification		
VOLVO	V60	2013	Climate control module (CCM)	Read codes		
VOLVO	V60	2013	Climate control module (CCM)	Erase codes		
VOLVO	V60	2013	Climate control module (CCM)	Freeze frame		
VOLVO	V60	2013	Climate control module (CCM)	Active test		
VOLVO	V60	2013	Climate control module (CCM)	Special functions		
VOLVO	V60	2013	Supplemental restraint system module (SR5)	ECU identification		
VOLVO	V60	2013	Supplemental restraint system module (SR5)	Read codes		
VOLVO	V60	2013	Supplemental restraint system module (SR5)	Erase codes		
VOLVO	V60	2013	Supplemental restraint system module (SR5)	Freeze frame		
VOLVO	V60	2013	Supplemental restraint system module (SR5)	Special functions		
VOLVO	V60	2013	Supplemental restraint system module (SR5)	Special functions	Calibrating the climate control module (CCM)	V1.10.001
VOLVO	V60	2013	Supplemental restraint system module (SR5)	Special functions	Identifying components on the UN network that belong to the climate control system (CCM)	V1.10.001
VOLVO	V60	2013	Supplemental restraint system module (SR5)	Special functions	Reading off of programmed value	V1.10.001
VOLVO	V60	2013	Supplemental restraint system module (SR5)	Special functions	Program out electric damper motor, actual/preset range and tolerance limit	V1.10.001
VOLVO	V60	2013	Supplemental restraint system module (SR5)	Special functions	Program out electric damper motor, actual/preset range and tolerance limit	V1.10.001
VOLVO	V60	2013	Supplemental restraint system module (SR5)	Special functions	Activation of blower fan run-on	V1.10.001
VOLVO	V60	2013	Supplemental restraint system module (SR5)	Special functions	Airflow setting in rear passenger compartment	V1.10.001
VOLVO	V60	2013	Supplemental restraint system module (SR5)	Special functions	Programmable seat belt reminder module (CBM)	V1.10.001
VOLVO	V60	2013	Supplemental restraint system module (SR5)	Special functions	Rear view mirror light sensitivity	V1.10.001
VOLVO	V60	2013	Driver information module (DIM)	ECU identification		
VOLVO	V60	2013	Driver information module (DIM)	Read codes		
VOLVO	V60	2013	Driver information module (DIM)	Erase codes		
VOLVO	V60	2013	Driver information module (DIM)	Freeze frame		
VOLVO	V60	2013	Driver information module (DIM)	Special functions		
VOLVO	V60	2013	Infotainment control module (ICM)	ECU identification		
VOLVO	V60	2013	Infotainment control module (ICM)	Read codes		
VOLVO	V60	2013	Infotainment control module (ICM)	Erase codes		
VOLVO	V60	2013	Infotainment control module (ICM)	Freeze frame		
VOLVO	V60	2013	Infotainment control module (ICM)	Special functions		
VOLVO	V60	2013	Keyless vehicle module (KVM)	ECU identification		
VOLVO	V60	2013	Keyless vehicle module (KVM)	Read codes		
VOLVO	V60	2013	Keyless vehicle module (KVM)	Erase codes		
VOLVO	V60	2013	Keyless vehicle module (KVM)	Freeze frame		
VOLVO	V60	2013	Keyless vehicle module (KVM)	Active test		
VOLVO	V60	2013	Keyless vehicle module (KVM)	Special functions		
VOLVO	V60	2013	Keyless vehicle module (KVM)	Special functions	Open circuit on MOST cable (only vehicles with infotainment control module (ICM))	V1.10.001
VOLVO	V60	2013	Keyless vehicle module (KVM)	Special functions	Communication on MOST	V1.10.001
VOLVO	V60	2013	Keyless vehicle module (KVM)	Special functions	Checking video signal (only applies vehicles with Infotainment control module, ICM)	V1.10.001
VOLVO	V60	2013	Power seat module (PSM)	ECU identification		
VOLVO	V60	2013	Power seat module (PSM)	Read codes		
VOLVO	V60	2013	Power seat module (PSM)	Erase codes		
VOLVO	V60	2013	Power seat module (PSM)	Freeze frame		
VOLVO	V60	2013	Power seat module (PSM)	Active test		
VOLVO	V60	2013	Power seat module (PSM)	Special functions		
VOLVO	V60	2013	Phone module (PHM)	ECU identification		
VOLVO	V60	2013	Phone module (PHM)	Read codes		
VOLVO	V60	2013	Phone module (PHM)	Erase codes		
VOLVO	V60	2013	Phone module (PHM)	Freeze frame		
VOLVO	V60	2013	Phone module (PHM)	Active test		
VOLVO	V60	2013	Phone module (PHM)	Special functions		
VOLVO	V60	2013	Parking assistance module (PAM)	ECU identification		
VOLVO	V60	2013	Parking assistance module (PAM)	Read codes		
VOLVO	V60	2013	Parking assistance module (PAM)	Erase codes		
VOLVO	V60	2013	Parking assistance module (PAM)	Freeze frame		
VOLVO	V60	2013	Parking assistance module (PAM)	Active test		
VOLVO	V60	2013	Parking assistance module (PAM)	Special functions		
VOLVO	V60	2013	Forward looking radar (FLR)	ECU identification		
VOLVO	V60	2013	Forward looking radar (FLR)	Read codes		
VOLVO	V60	2013	Forward looking radar (FLR)	Erase codes		
VOLVO	V60	2013	Forward looking radar (FLR)	Freeze frame		
VOLVO	V60	2013	Phone module (PHM)	ECU identification		
VOLVO	V60	2013	Phone module (PHM)	Read codes		
VOLVO	V60	2013	Phone module (PHM)	Erase codes		
VOLVO	V60	2013	Phone module (PHM)	Freeze frame		
VOLVO	V60	2013	Phone module (PHM)	Active test		
VOLVO	V60	2013	Phone module (PHM)	Special functions		
VOLVO	V60	2013	Park assist camera (PAC)	ECU identification		
VOLVO	V60	2013	Park assist camera (PAC)	Read codes		
VOLVO	V60	2013	Park assist camera (PAC)	Erase codes		
VOLVO	V60	2013	Park assist camera (PAC)	Freeze frame		
VOLVO	V60	2013	Park assist camera (PAC)	Active test		
VOLVO	V60	2013	Park assist camera (PAC)	Special functions		
VOLVO	V60	2013	Combustion preheater module (CPM)	ECU identification		
VOLVO	V60	2013	Combustion preheater module (CPM)	Read codes		
VOLVO	V60	2013	Combustion preheater module (CPM)	Erase codes		
VOLVO	V60	2013	Combustion preheater module (CPM)	Freeze frame		
VOLVO	V60	2013	Combustion preheater module (CPM)	Active test		
VOLVO	V60	2013	Combustion preheater module (CPM)	Special functions		
VOLVO	V60	2013	Remote digital audio receiver (RDAI)	ECU identification		
VOLVO	V60	2013	Remote digital audio receiver (RDAI)	Read codes		
VOLVO	V60	2013	Remote digital audio receiver (RDAI)	Erase codes		
VOLVO	V60	2013	Remote digital audio receiver (RDAI)	Freeze frame		
VOLVO	V60	2013	Remote digital audio receiver (RDAI)	Active test		
VOLVO	V60	2013	Remote digital audio receiver (RDAI)	Special functions		
VOLVO	V60	2013	Closing velocity module (CVM)	ECU identification		
VOLVO	V60	2013	Closing velocity module (CVM)	Read codes		
VOLVO	V60	2013	Closing velocity module (CVM)	Erase codes		
VOLVO	V60	2013	Closing velocity module (CVM)	Freeze frame		
VOLVO	V60	2013	Closing velocity module (CVM)	Active test		
VOLVO	V60	2013	Closing velocity module (CVM)	Special functions		
VOLVO	V60	2013	Trailer module (TRM)	ECU identification		
VOLVO	V60	2013	Trailer module (TRM)	Read codes		
VOLVO	V60	2013	Trailer module (TRM)	Erase codes		
VOLVO	V60	2013	Trailer module (TRM)	Freeze frame		
VOLVO	V60	2013	Forward sensing module (FSM)	ECU identification		
VOLVO	V60	2013	Forward sensing module (FSM)	Read codes		
VOLVO	V60	2013	Forward sensing module (FSM)	Erase codes		
VOLVO	V60	2013	Forward sensing module (FSM)	Freeze frame		
VOLVO	V60	2013	Forward sensing module (FSM)	Active test		
VOLVO	V60	2013	Forward sensing module (FSM)	Special functions		
VOLVO	V60	2013	Frontal sensor module (FSM)	ECU identification		
VOLVO	V60	2013	Frontal sensor module (FSM)	Read codes		
VOLVO	V60	2013	Frontal sensor module (FSM)	Erase codes		
VOLVO	V60	2013	Frontal sensor module (FSM)	Freeze frame		
VOLVO	V60	2013	Frontal sensor module (FSM)	Activation of the indicator for visual collision warning	V1.10.001	
VOLVO	V60	2013	Frontal sensor module (FSM)	Activating the internal test procedures	V1.10.001	
VOLVO	V60	2013	Digital audio broadcast module (DABM)	ECU identification		
VOLVO	V60	2013	Digital audio broadcast module (DABM)	Read codes		
VOLVO	V60	2013	Digital audio broadcast module (DABM)	Erase codes		
VOLVO	V60	2013	Digital audio broadcast module (DABM)	Freeze frame		
VOLVO	V60	2013	Digital audio broadcast module (DABM)	Activation of heating control, FSM	V1.10.001	
VOLVO	V60	2013	Digital audio broadcast module (DABM)	Activating heating control, FSM	V1.10.001	
VOLVO	V60	2013	Audio module (AUD)	ECU identification		
VOLVO	V60	2013	Audio module (AUD)	Read codes		
VOLVO	V60	2013	Audio module (AUD)	Erase codes		
VOLVO	V60	2013	Audio module (AUD)	Freeze frame		

VOLVO	V70 (08-)	2008	Engine control module (ECM)	Special functions	Adaption of heated control motor
VOLVO	V70 (08-)	2008	Engine control module (ECM)	Special functions	Adaption of heated overheat sensor
VOLVO	V70 (08-)	2008	Engine control module (ECM)	Special functions	Adaption of mass airflow sensor
VOLVO	V70 (08-)	2008	Engine control module (ECM)	Special functions	Adaption of oxygen sensor/sensor particle filter
VOLVO	V70 (08-)	2008	Engine control module (ECM)	Special functions	Adaption of fuel pressure control valve
VOLVO	V70 (08-)	2008	Engine control module (ECM)	Special functions	Resetting the counter for the particle filter
VOLVO	V70 (08-)	2008	Engine control module (ECM)	Special functions	Combustion chamber particles
VOLVO	V70 (08-)	2008	Engine control module (ECM)	Special functions	Checking injectors
VOLVO	V70 (08-)	2008	Engine control module (ECM)	Special functions	Checking the oil level
VOLVO	V70 (08-)	2008	Engine control module (ECM)	Special functions	Adjusting calculated oil level
VOLVO	V70 (08-)	2009	Engine control module (ECM)	ECU identification	
VOLVO	V70 (08-)	2009	Engine control module (ECM)	Read codes	
VOLVO	V70 (08-)	2009	Engine control module (ECM)	Erase codes	
VOLVO	V70 (08-)	2009	Engine control module (ECM)	Freeze frame	
VOLVO	V70 (08-)	2009	Engine control module (ECM)	Active test	
VOLVO	V70 (08-)	2009	Engine control module (ECM)	Specifications	Resetting the adhesion values
VOLVO	V70 (08-)	2009	Central electronic module (CEM)	ECU identification	Resetting the oil quality counter
VOLVO	V70 (08-)	2009	Central electronic module (CEM)	Read codes	
VOLVO	V70 (08-)	2009	Central electronic module (CEM)	Erase codes	
VOLVO	V70 (08-)	2009	Central electronic module (CEM)	Freeze frame	
VOLVO	V70 (08-)	2009	Central electronic module (CEM)	Active test	
VOLVO	V70 (08-)	2009	Central electronic module (CEM)	Specifications	Pre-delivery service for new car
VOLVO	V70 (08-)	2009	Central electronic module (CEM)	Special functions	Resets the supplemental restraint system
VOLVO	V70 (08-)	2009	Central electronic module (CEM)	Special functions	Reading off alarm calls
VOLVO	V70 (08-)	2009	Central electronic module (CEM)	Special functions	Workshop test (PTMS)
VOLVO	V70 (08-)	2009	Central electronic module (CEM)	Special functions	Checking inscription, brake light switch, and pedal position switch
VOLVO	V70 (08-)	2009	Central electronic module (CEM)	Special functions	Quick test of the alternator function
VOLVO	V70 (08-)	2009	Central electronic module (CEM)	Special functions	Read-out and re-setting auto-lock
VOLVO	V70 (08-)	2009	Central electronic module (CEM)	Special functions	Reading off power supply position
VOLVO	V70 (08-)	2009	Central electronic module (CEM)	Special functions	Programmatic control of rear window wiper when reversing
VOLVO	V70 (08-)	2009	Central electronic module (CEM)	Special functions	Fuel pump activation for vehicles without fuel pump module (PEM)
VOLVO	V70 (08-)	2009	Central electronic module (CEM)	Special functions	Ejection of key
VOLVO	V70 (08-)	2009	Central electronic module (CEM)	Special functions	Setting day and night mode for the instrumentation
VOLVO	V70 (08-)	2009	Central electronic module (CEM)	Special functions	Activating wipers, front/rear
VOLVO	V70 (08-)	2009	Driver door module (DDM)	ECU identification	
VOLVO	V70 (08-)	2009	Driver door module (DDM)	Read codes	
VOLVO	V70 (08-)	2009	Driver door module (DDM)	Erase codes	
VOLVO	V70 (08-)	2009	Driver door module (DDM)	Freeze frame	
VOLVO	V70 (08-)	2009	Driver door module (DDM)	Active test	
VOLVO	V70 (08-)	2009	Driver door module (DDM)	Specifications	Initializing the window in the front door
VOLVO	V70 (08-)	2009	Driver door module (DDM)	Special functions	Initializing the window in the rear door
VOLVO	V70 (08-)	2009	Driver door module (DDM)	Special functions	Central lock motors, activating
VOLVO	V70 (08-)	2009	Passenger door module (PDM)	ECU identification	
VOLVO	V70 (08-)	2009	Passenger door module (PDM)	Read codes	
VOLVO	V70 (08-)	2009	Passenger door module (PDM)	Erase codes	
VOLVO	V70 (08-)	2009	Passenger door module (PDM)	Freeze frame	
VOLVO	V70 (08-)	2009	Passenger door module (PDM)	Active test	
VOLVO	V70 (08-)	2009	Passenger door module (PDM)	Specifications	Calibration angle sensor
VOLVO	V70 (08-)	2009	Passenger angle sensor module (SAS)	ECU identification	Activation and service
VOLVO	V70 (08-)	2009	Steering angle sensor module (SAS)	Read codes	Resetting the clutch pedal counter
VOLVO	V70 (08-)	2009	Steering angle sensor module (SAS)	Erase codes	
VOLVO	V70 (08-)	2009	Steering angle sensor module (SAS)	Freeze frame	
VOLVO	V70 (08-)	2009	Steering angle sensor module (SAS)	Active test	
VOLVO	V70 (08-)	2009	Park brake module (PBM)	ECU identification	Calibrating the occupant weight sensor (OWS)
VOLVO	V70 (08-)	2009	Park brake module (PBM)	Read codes	Powering the SRS system
VOLVO	V70 (08-)	2009	Park brake module (PBM)	Erase codes	Checking the PWS light
VOLVO	V70 (08-)	2009	Park brake module (PBM)	Freeze frame	
VOLVO	V70 (08-)	2009	Park brake module (PBM)	Special functions	
VOLVO	V70 (08-)	2009	Park brake module (PBM)	Specifications	
VOLVO	V70 (08-)	2009	Park brake module (PBM)	Special functions	
VOLVO	V70 (08-)	2009	Supplemental restraint system module (SRS)	ECU identification	
VOLVO	V70 (08-)	2009	Supplemental restraint system module (SRS)	Read codes	
VOLVO	V70 (08-)	2009	Supplemental restraint system module (SRS)	Erase codes	
VOLVO	V70 (08-)	2009	Supplemental restraint system module (SRS)	Freeze frame	
VOLVO	V70 (08-)	2009	Supplemental restraint system module (SRS)	Active test	
VOLVO	V70 (08-)	2009	Supplemental restraint system module (SRS)	Specifications	Calibration
VOLVO	V70 (08-)	2009	Supplemental restraint system module (SRS)	Special functions	Restart of the brake control module (BCM)
VOLVO	V70 (08-)	2009	Climate control module (CCM)	ECU identification	
VOLVO	V70 (08-)	2009	Climate control module (CCM)	Read codes	
VOLVO	V70 (08-)	2009	Climate control module (CCM)	Erase codes	
VOLVO	V70 (08-)	2009	Climate control module (CCM)	Freeze frame	
VOLVO	V70 (08-)	2009	Climate control module (CCM)	Active test	
VOLVO	V70 (08-)	2009	Climate control module (CCM)	Programmed values	
VOLVO	V70 (08-)	2009	Climate control module (CCM)	Special functions	Calibrating the climate control module (CCM)
VOLVO	V70 (08-)	2009	Climate control module (CCM)	Specifications	Identifying all modules in the LIN network that belong to the climate control system (CCM)
VOLVO	V70 (08-)	2009	Climate control module (CCM)	Special functions	Reading out programmed values
VOLVO	V70 (08-)	2009	Climate control module (CCM)	Specifications	Reading out electronic damper motor, actual/preset range and tolerance limit
VOLVO	V70 (08-)	2009	Climate control module (CCM)	Special functions	Programming out evaporator, climate control module (CCM)
VOLVO	V70 (08-)	2009	Climate control module (CCM)	Specifications	Activation of blower fan run-on
VOLVO	V70 (08-)	2009	Climate control module (CCM)	Special functions	Action for falling temperature and cold draught in passenger compartment
VOLVO	V70 (08-)	2009	Climate control module (CCM)	Special functions	Rear view mirror light sensitivity.
VOLVO	V70 (08-)	2009	Infotainment control module (ICM)	ECU identification	
VOLVO	V70 (08-)	2009	Infotainment control module (ICM)	Read codes	
VOLVO	V70 (08-)	2009	Infotainment control module (ICM)	Erase codes	
VOLVO	V70 (08-)	2009	Infotainment control module (ICM)	Freeze frame	
VOLVO	V70 (08-)	2009	Infotainment control module (ICM)	Active test	
VOLVO	V70 (08-)	2009	Infotainment control module (ICM)	Specifications	Calibrating the climate control module (CCM)
VOLVO	V70 (08-)	2009	Infotainment control module (ICM)	Special functions	Identifying all modules in the LIN network that belong to the climate control system (CCM)
VOLVO	V70 (08-)	2009	Infotainment control module (ICM)	Special functions	Reading out programmed values
VOLVO	V70 (08-)	2009	Infotainment control module (ICM)	Specifications	Reading out electronic damper motor, actual/preset range and tolerance limit
VOLVO	V70 (08-)	2009	Infotainment control module (ICM)	Special functions	Programming out evaporator, climate control module (CCM)
VOLVO	V70 (08-)	2009	Infotainment control module (ICM)	Specifications	Activation of blower fan run-on
VOLVO	V70 (08-)	2009	Infotainment control module (ICM)	Special functions	Action for falling temperature and cold draught in passenger compartment
VOLVO	V70 (08-)	2009	Driver information module (DIM)	ECU identification	
VOLVO	V70 (08-)	2009	Driver information module (DIM)	Read codes	
VOLVO	V70 (08-)	2009	Driver information module (DIM)	Erase codes	
VOLVO	V70 (08-)	2009	Driver information module (DIM)	Freeze frame	
VOLVO	V70 (08-)	2009	Driver information module (DIM)	Active test	
VOLVO	V70 (08-)	2009	Driver information module (DIM)	Programmed values	
VOLVO	V70 (08-)	2009	Driver information module (DIM)	Special functions	Calibrating the climate control module (CCM)
VOLVO	V70 (08-)	2009	Driver information module (DIM)	Specifications	Identifying all modules in the LIN network that belong to the climate control system (CCM)
VOLVO	V70 (08-)	2009	Driver information module (DIM)	Special functions	Reading out programmed values
VOLVO	V70 (08-)	2009	Driver information module (DIM)	Specifications	Reading out electronic damper motor, actual/preset range and tolerance limit
VOLVO	V70 (08-)	2009	Driver information module (DIM)	Special functions	Programming out evaporator, climate control module (CCM)
VOLVO	V70 (08-)	2009	Driver information module (DIM)	Specifications	Activation of blower fan run-on
VOLVO	V70 (08-)	2009	Driver information module (DIM)	Special functions	Action for falling temperature and cold draught in passenger compartment
VOLVO	V70 (08-)	2009	Keyless vehicle module (KVM)	ECU identification	
VOLVO	V70 (08-)	2009	Keyless vehicle module (KVM)	Read codes	
VOLVO	V70 (08-)	2009	Keyless vehicle module (KVM)	Erase codes	
VOLVO	V70 (08-)	2009	Keyless vehicle module (KVM)	Freeze frame	
VOLVO	V70 (08-)	2009	Keyless vehicle module (KVM)	Active test	
VOLVO	V70 (08-)	2009	Keyless vehicle module (KVM)	Specifications	Calibrating the climate control module (CCM)
VOLVO	V70 (08-)	2009	Keyless vehicle module (KVM)	Special functions	Identifying all modules in the LIN network that belong to the climate control system (CCM)
VOLVO	V70 (08-)	2009	Keyless vehicle module (KVM)	Special functions	Reading out programmed values
VOLVO	V70 (08-)	2009	Keyless vehicle module (KVM)	Specifications	Reading out electronic damper motor, actual/preset range and tolerance limit
VOLVO	V70 (08-)	2009	Keyless vehicle module (KVM)	Special functions	Programming out evaporator, climate control module (CCM)
VOLVO	V70 (08-)	2009	Keyless vehicle module (KVM)	Specifications	Activation of blower fan run-on
VOLVO	V70 (08-)	2009	Keyless vehicle module (KVM)	Special functions	Action for falling temperature and cold draught in passenger compartment
VOLVO	V70 (08-)	2009	Power seat module (PSM)	ECU identification	
VOLVO	V70 (08-)	2009	Power seat module (PSM)	Read codes	
VOLVO	V70 (08-)	2009	Power seat module (PSM)	Erase codes	
VOLVO	V70 (08-)	2009	Power seat module (PSM)	Freeze frame	
VOLVO	V70 (08-)	2009	Power seat module (PSM)	Active test	
VOLVO	V70 (08-)	2009	Power seat module (PSM)	Specifications	Calibrating the climate control module (CCM)
VOLVO	V70 (08-)	2009	Power seat module (PSM)	Special functions	Identifying all modules in the LIN network that belong to the climate control system (CCM)
VOLVO	V70 (08-)	2009	Power seat module (PSM)	Special functions	Reading out programmed values
VOLVO	V70 (08-)	2009	Power seat module (PSM)	Specifications	Reading out electronic damper motor, actual/preset range and tolerance limit
VOLVO	V70 (08-)	2009	Power seat module (PSM)	Special functions	Programming out evaporator, climate control module (CCM)
VOLVO	V70 (08-)	2009	Power seat module (PSM)	Specifications	Activation of blower fan run-on
VOLVO	V70 (08-)	2009	Power seat module (PSM)	Special functions	Action for falling temperature and cold draught in passenger compartment
VOLVO	V70 (08-)	2009	Combustion preheater module (CPM)	ECU identification	
VOLVO	V70 (08-)	2009	Combustion preheater module (CPM)	Read codes	
VOLVO	V70 (08-)	2009	Combustion preheater module (CPM)	Erase codes	
VOLVO	V70 (08-)	2009	Combustion preheater module (CPM)	Freeze frame	
VOLVO	V70 (08-)	2009	Combustion preheater module (CPM)	Active test	
VOLVO	V70 (08-)	2009	Combustion preheater module (CPM)	Specifications	Calibration
VOLVO	V70 (08-)	2009	Combustion preheater module (CPM)	Special functions	Restarting the odometer setting
VOLVO	V70 (08-)	2009	Audio module (AUDI)	ECU identification	
VOLVO	V70 (08-)	2009	Audio module (AUDI)	Read codes	
VOLVO	V70 (08-)	2009	Audio module (AUDI)	Erase codes	
VOLVO	V70 (08-)	2009	Audio module (AUDI)	Freeze frame	
VOLVO	V70 (08-)	2009	Audio module (AUDI)	Active test	
VOLVO	V70 (08-)	2009	Audio module (AUDI)	Programmed values	
VOLVO	V70 (08-)	2009	Audio module (AUDI)	Special functions	Calibrating the audio module
VOLVO	V70 (08-)	2009	Audio module (AUDI)	Specifications	Testing all indicators and lamps in the driver information module (DIM)
VOLVO	V70 (08-)	2009	Accessory USB unit (AUU)	ECU identification	
VOLVO	V70 (08-)	2009	Accessory USB unit (AUU)	Read codes	
VOLVO	V70 (08-)	2009	Accessory USB unit (AUU)	Erase codes	
VOLVO	V70 (08-)	2009	Accessory USB unit (AUU)	Freeze frame	
VOLVO	V70 (08-)	2009	Accessory USB unit (AUU)	Active test	
VOLVO	V70 (08-)	2009	Accessory USB unit (AUU)	Programmed values	
VOLVO	V70 (08-)	2009	Accessory USB unit (AUU)	Special functions	Calibration of position sensor
VOLVO	V70 (08-)	2009	Accessory USB unit (AUU)	Specifications	Request for self test.
VOLVO	V70 (08-)	2009	Forward sensing module (FSM)	ECU identification	
VOLVO	V70 (08-)	2009	Forward sensing module (FSM)	Read codes	
VOLVO	V70 (08-)	2009	Forward sensing module (FSM)	Erase codes	
VOLVO	V70 (08-)	2009	Forward sensing module (FSM)	Freeze frame	
VOLVO	V70 (08-)	2009	Forward sensing module (FSM)	Active test	
VOLVO	V70 (08-)	2009	Forward sensing module (FSM)	Programmed values	
VOLVO	V70 (08-)	2009	Forward sensing module (FSM)	Special functions	Programming of parking assistance module (IPAM)
VOLVO	V70 (08-)	2009	Forward sensing module (FSM)	Specifications	
VOLVO	V70 (08-)	2009	Forward sensing module (FSM)	Special functions	
VOLVO	V70 (08-)	2009	Forward sensing module (FSM)	Specifications	
VOLVO	V70 (08-)	2009	Forward sensing module (FSM)	Special functions	
VOLVO	V70 (08-)	2009	Forward sensing module (FSM)	Specifications	
VOLVO	V70 (08-)	2009	Forward sensing module (FSM)	Special functions	
VOLVO	V70 (08-)	2009	Forward sensing module (FSM)	Specifications	
VOLVO	V70 (08-)	2009	Forward sensing module (FSM)	Special functions	
VOLVO	V70 (08-)	2009	Forward sensing module (FSM)	Specifications	
VOLVO	V70 (08-)	2009	Forward sensing module (FSM)	Special functions	
VOLVO	V70 (08-)	2009	Forward sensing module (FSM)	Specifications	
VOLVO	V70 (08-)	2009	Forward sensing module (FSM)	Special functions	
VOLVO	V70 (08-)	2009	Forward sensing module (FSM)	Specifications	
VOLVO	V70 (08-)	2009	Forward sensing module (FSM)	Special functions	
VOLVO	V70 (08-)	2009	Forward sensing module (FSM)	Specifications	
VOLVO	V70 (08-)	2009	Forward sensing module (FSM)	Special functions	
VOLVO	V70 (08-)	2009	Forward sensing module (FSM)	Specifications	
VOLVO	V70 (08-)	2009	Forward sensing module (FSM)	Special functions	
VOLVO	V70 (08-)	2009	Forward sensing module (FSM)	Specifications	
VOLVO	V70 (08-)	2009	Forward sensing module (FSM)	Special functions	
VOLVO	V70 (08-)	2009	Forward sensing module (FSM)	Specifications	
VOLVO	V70 (08-)	2009	Forward sensing module (FSM)	Special functions	
VOLVO	V70 (08-)	2009	Forward sensing module (FSM)	Specifications	
VOLVO	V70 (08-)	2009	Forward sensing module (FSM)	Special functions	
VOLVO	V70 (08-)	2009	Forward sensing module (FSM)	Specifications	
VOLVO	V70 (08-)	2009	Forward sensing module (FSM)	Special functions	
VOLVO	V70 (08-)	2009	Forward sensing module (FSM)	Specifications	
VOLVO	V70 (08-)	2009	Forward sensing module (FSM)	Special functions	
VOLVO	V70 (08-)	2009	Forward sensing module (FSM)	Specifications	
VOLVO	V70 (08-)	2009	Forward sensing module (FSM)	Special functions	
VOLVO	V70 (08-)	2009	Forward sensing module (FSM)	Specifications	
VOLVO	V70 (08-)	2009	Forward sensing module (FSM)	Special functions	
VOLVO	V70 (08-)	2009	Forward sensing module (FSM)	Specifications	
VOLVO	V70 (08-)	2009	Forward sensing module (FSM)	Special functions	
VOLVO	V70 (08-)	2009	Forward sensing module (FSM)	Specifications	
VOLVO	V70 (08-)	2009	Forward sensing module (FSM)	Special functions	
VOLVO	V70 (08-)	2009	Forward sensing module (FSM)	Specifications	
VOLVO	V70 (08-)	2009	Forward sensing module (FSM)	Special functions	
VOLVO	V70 (08-)	2009	Forward sensing module (FSM)	Specifications	
VOLVO	V70 (08-)	2009	Forward sensing module (FSM)	Special functions	
VOLVO	V70 (08-)	2009	Forward sensing module (FSM)	Specifications	
VOLVO	V70 (08-)	2009	Forward sensing module (FSM)	Special functions	
VOLVO	V70 (08-)	2009	Forward sensing module (FSM)	Specifications	
VOLVO	V70 (08-)	2009	Forward sensing module (FSM)	Special functions	
VOLVO	V70 (08-)	2009	Forward sensing module (FSM)	Specifications	
VOLVO	V70 (08-)	2009	Forward sensing module (FSM)	Special functions	
VOLVO	V70 (08-)	2009	Forward sensing module (FSM)	Specifications	
VOLVO	V70 (08-)	2009	Forward sensing module (FSM)	Special functions	
VOLVO	V70 (08-)	2009	Forward sensing module (FSM)	Specifications	
VOLVO	V70 (08-)	2009	Forward sensing module (FSM)	Special functions	
VOLVO	V70 (08-)	2009	Forward sensing module (FSM)	Specifications	
VOLVO	V70 (08-)	2009	Forward sensing module (FSM)	Special functions	
VOLVO	V70 (08-)	2009	Forward sensing module (FSM)	Specifications	
VOLVO	V70 (08-)	2009			

VOLVO	V70 (08-)	2014	Central electronic module (CEM)	Special functions	Read/dina off power supply position	V1.10.001
VOLVO	V70 (08-)	2014	Central electronic module (CEM)	Special functions	Procedure of window closing - when reversed	V1.10.001
VOLVO	V70 (08-)	2014	Central electronic module (CEM)	Special functions	Checkout indicator, brake light switch, and brake pedal position switch	V1.10.001
VOLVO	V70 (08-)	2014	Central electronic module (CEM)	Special functions	Readout of current fuel battery monitoring sensor	V1.10.001
VOLVO	V70 (08-)	2014	Central electronic module (CEM)	Special functions	Readout of information stand by current	V1.10.001
VOLVO	V70 (08-)	2014	Central electronic module (CEM)	Special functions	Restoring the information to zero on power supply when replacing the battery	V1.10.001
VOLVO	V70 (08-)	2014	Central electronic module (CEM)	Special functions	Restoring the information to zero on power supply when replacing the battery monitoring sensor (BMS)	V1.10.001
VOLVO	V70 (08-)	2014	Central electronic module (CEM)	Special functions	Ejection of key	V1.10.001
VOLVO	V70 (08-)	2014	Central electronic module (CEM)	Special functions	Remote control transmission, status	V1.10.001
VOLVO	V70 (08-)	2014	Central electronic module (CEM)	Special functions	Release controlled immobilizing, easier	V1.10.001
VOLVO	V70 (08-)	2014	Central electronic module (CEM)	Special functions	Operating and initiating the roof hatch	V1.10.001
VOLVO	V70 (08-)	2014	Central electronic module (CEM)	Special functions	Calibration of position sensor	V1.10.001
VOLVO	V70 (08-)	2014	Central electronic module (CEM)	Special functions	Setting day and night mode for the instrumentation	V1.10.001
VOLVO	V70 (08-)	2014	Central electronic module (CEM)	Special functions	Checking the headlight	V1.10.001
VOLVO	V70 (08-)	2014	Central electronic module (CEM)	Special functions	Activating wipers, front/rear	V1.10.001
VOLVO	V70 (08-)	2014	Central electronic module (CEM)	Special functions	Programming safety lights	V1.10.001
VOLVO	V70 (08-)	2014	Central electronic module (CEM)	Special functions	Activating steering wheel heating	V1.10.001
VOLVO	V70 (08-)	2014	Central electronic module (CEM)	Special functions	Deactivation/Activation of engine remote start ERS	V1.10.001
VOLVO	V70 (08-)	2014	Steering angle sensor module (SAS)	ECU identification		V1.10.001
VOLVO	V70 (08-)	2014	Steering angle sensor module (SAS)	Read codes		V1.10.001
VOLVO	V70 (08-)	2014	Steering angle sensor module (SAS)	Erase codes		V1.10.001
VOLVO	V70 (08-)	2014	Park brake module (PBM)	ECU identification		V1.10.001
VOLVO	V70 (08-)	2014	Park brake module (PBM)	Read codes		V1.10.001
VOLVO	V70 (08-)	2014	Park brake module (PBM)	Erase codes		V1.10.001
VOLVO	V70 (08-)	2014	Park brake module (PBM)	Freeze frame		V1.10.001
VOLVO	V70 (08-)	2014	Park brake module (PBM)	Special functions		V1.10.001
VOLVO	V70 (08-)	2014	Park brake module (PBM)	Special functions		V1.10.001
VOLVO	V70 (08-)	2014	Climate control module (CCM)	ECU identification		V1.10.001
VOLVO	V70 (08-)	2014	Climate control module (CCM)	Read codes		V1.10.001
VOLVO	V70 (08-)	2014	Climate control module (CCM)	Erase codes		V1.10.001
VOLVO	V70 (08-)	2014	Climate control module (CCM)	Freeze frame		V1.10.001
VOLVO	V70 (08-)	2014	Climate control module (CCM)	Special functions		V1.10.001
VOLVO	V70 (08-)	2014	Climate control module (CCM)	Programmed value		V1.10.001
VOLVO	V70 (08-)	2014	Climate control module (CCM)	Special functions		V1.10.001
VOLVO	V70 (08-)	2014	Climate control module (CCM)	Special functions		V1.10.001
VOLVO	V70 (08-)	2014	Brake control module (BCM)	ECU identification		V1.10.001
VOLVO	V70 (08-)	2014	Brake control module (BCM)	Read codes		V1.10.001
VOLVO	V70 (08-)	2014	Brake control module (BCM)	Erase codes		V1.10.001
VOLVO	V70 (08-)	2014	Brake control module (BCM)	Freeze frame		V1.10.001
VOLVO	V70 (08-)	2014	Brake control module (BCM)	Special functions		V1.10.001
VOLVO	V70 (08-)	2014	Brake control module (BCM)	Active test		V1.10.001
VOLVO	V70 (08-)	2014	Brake control module (BCM)	Special functions		V1.10.001
VOLVO	V70 (08-)	2014	Driver door module (DDM)	ECU identification		V1.10.001
VOLVO	V70 (08-)	2014	Driver door module (DDM)	Read codes		V1.10.001
VOLVO	V70 (08-)	2014	Driver door module (DDM)	Erase codes		V1.10.001
VOLVO	V70 (08-)	2014	Driver door module (DDM)	Freeze frame		V1.10.001
VOLVO	V70 (08-)	2014	Driver door module (DDM)	Special functions		V1.10.001
VOLVO	V70 (08-)	2014	Passenger door module (PDM)	ECU identification		V1.10.001
VOLVO	V70 (08-)	2014	Passenger door module (PDM)	Read codes		V1.10.001
VOLVO	V70 (08-)	2014	Passenger door module (PDM)	Erase codes		V1.10.001
VOLVO	V70 (08-)	2014	Passenger door module (PDM)	Freeze frame		V1.10.001
VOLVO	V70 (08-)	2014	Passenger door module (PDM)	Special functions		V1.10.001
VOLVO	V70 (08-)	2014	Passenger door module (PDM)	Active test		V1.10.001
VOLVO	V70 (08-)	2014	Passenger door module (PDM)	Special functions		V1.10.001
VOLVO	V70 (08-)	2014	Supplemental restraint system module (SRS)	ECU identification		V1.10.001
VOLVO	V70 (08-)	2014	Supplemental restraint system module (SRS)	Read codes		V1.10.001
VOLVO	V70 (08-)	2014	Supplemental restraint system module (SRS)	Erase codes		V1.10.001
VOLVO	V70 (08-)	2014	Supplemental restraint system module (SRS)	Freeze frame		V1.10.001
VOLVO	V70 (08-)	2014	Supplemental restraint system module (SRS)	Special functions		V1.10.001
VOLVO	V70 (08-)	2014	Supplemental restraint system module (SRS)	Special functions		V1.10.001
VOLVO	V70 (08-)	2014	Infotainment control module (ICM)	ECU identification		V1.10.001
VOLVO	V70 (08-)	2014	Infotainment control module (ICM)	Read codes		V1.10.001
VOLVO	V70 (08-)	2014	Infotainment control module (ICM)	Erase codes		V1.10.001
VOLVO	V70 (08-)	2014	Infotainment control module (ICM)	Freeze frame		V1.10.001
VOLVO	V70 (08-)	2014	Infotainment control module (ICM)	Special functions		V1.10.001
VOLVO	V70 (08-)	2014	Infotainment control module (ICM)	Programmed value		V1.10.001
VOLVO	V70 (08-)	2014	Driver information module (DIM)	ECU identification		V1.10.001
VOLVO	V70 (08-)	2014	Driver information module (DIM)	Read codes		V1.10.001
VOLVO	V70 (08-)	2014	Driver information module (DIM)	Erase codes		V1.10.001
VOLVO	V70 (08-)	2014	Driver information module (DIM)	Freeze frame		V1.10.001
VOLVO	V70 (08-)	2014	Driver information module (DIM)	Special functions		V1.10.001
VOLVO	V70 (08-)	2014	Driver information module (DIM)	Programmed value		V1.10.001
VOLVO	V70 (08-)	2014	Driver information module (DIM)	Special functions		V1.10.001
VOLVO	V70 (08-)	2014	Keyless vehicle module (KVM)	ECU identification		V1.10.001
VOLVO	V70 (08-)	2014	Keyless vehicle module (KVM)	Read codes		V1.10.001
VOLVO	V70 (08-)	2014	Keyless vehicle module (KVM)	Erase codes		V1.10.001
VOLVO	V70 (08-)	2014	Keyless vehicle module (KVM)	Freeze frame		V1.10.001
VOLVO	V70 (08-)	2014	Keyless vehicle module (KVM)	Special functions		V1.10.001
VOLVO	V70 (08-)	2014	Television module (TVM)	ECU identification		V1.10.001
VOLVO	V70 (08-)	2014	Television module (TVM)	Read codes		V1.10.001
VOLVO	V70 (08-)	2014	Television module (TVM)	Erase codes		V1.10.001
VOLVO	V70 (08-)	2014	Television module (TVM)	Freeze frame		V1.10.001
VOLVO	V70 (08-)	2014	Power seat module (PSM)	ECU identification		V1.10.001
VOLVO	V70 (08-)	2014	Power seat module (PSM)	Read codes		V1.10.001
VOLVO	V70 (08-)	2014	Power seat module (PSM)	Erase codes		V1.10.001
VOLVO	V70 (08-)	2014	Power seat module (PSM)	Freeze frame		V1.10.001
VOLVO	V70 (08-)	2014	Power seat module (PSM)	Special functions		V1.10.001
VOLVO	V70 (08-)	2014	Power seat module (PSM)	Active test		V1.10.001
VOLVO	V70 (08-)	2014	Suspension module (SUM)	ECU identification		V1.10.001
VOLVO	V70 (08-)	2014	Suspension module (SUM)	Read codes		V1.10.001
VOLVO	V70 (08-)	2014	Suspension module (SUM)	Erase codes		V1.10.001
VOLVO	V70 (08-)	2014	Suspension module (SUM)	Freeze frame		V1.10.001
VOLVO	V70 (08-)	2014	Suspension module (SUM)	Special functions		V1.10.001
VOLVO	V70 (08-)	2014	HIGH level display front (HDF)	ECU identification		V1.10.001
VOLVO	V70 (08-)	2014	HIGH level display front (HDF)	Read codes		V1.10.001
VOLVO	V70 (08-)	2014	HIGH level display front (HDF)	Erase codes		V1.10.001
VOLVO	V70 (08-)	2014	Subwoofer module (SUB)	ECU identification		V1.10.001
VOLVO	V70 (08-)	2014	Subwoofer module (SUB)	Read codes		V1.10.001
VOLVO	V70 (08-)	2014	Subwoofer module (SUB)	Erase codes		V1.10.001
VOLVO	V70 (08-)	2014	Subwoofer module (SUB)	Freeze frame		V1.10.001
VOLVO	V70 (08-)	2014	Forward looking radar (FLR)	ECU identification		V1.10.001
VOLVO	V70 (08-)	2014	Forward looking radar (FLR)	Read codes		V1.10.001
VOLVO	V70 (08-)	2014	Forward looking radar (FLR)	Erase codes		V1.10.001
VOLVO	V70 (08-)	2014	Forward looking radar (FLR)	Freeze frame		V1.10.001
VOLVO	V70 (08-)	2014	Power assisted steering module (POT)	ECU identification		V1.10.001
VOLVO	V70 (08-)	2014	Power assisted steering module (POT)	Read codes		V1.10.001
VOLVO	V70 (08-)	2014	Power assisted steering module (POT)	Erase codes		V1.10.001
VOLVO	V70 (08-)	2014	Power assisted steering module (POT)	Freeze frame		V1.10.001
VOLVO	V70 (08-)	2014	Phone module (PHM)	ECU identification		V1.10.001
VOLVO	V70 (08-)	2014	Phone module (PHM)	Read codes		V1.10.001
VOLVO	V70 (08-)	2014	Phone module (PHM)	Erase codes		V1.10.001
VOLVO	V70 (08-)	2014	Phone module (PHM)	Freeze frame		V1.10.001
VOLVO	V70 (08-)	2014	Phone module (PHM)	Special functions		V1.10.001
VOLVO	V70 (08-)	2014	Phone module (PHM)	Programmed value		V1.10.001
VOLVO	V70 (08-)	2014	Phone module (PHM)	Special functions		V1.10.001
VOLVO	V70 (08-)	2014	Parking assistance camera (PAC)	ECU identification		V1.10.001
VOLVO	V70 (08-)	2014	Parking assistance camera (PAC)	Read codes		V1.10.001
VOLVO	V70 (08-)	2014	Parking assistance camera (PAC)	Erase codes		V1.10.001
VOLVO	V70 (08-)	2014	Parking assistance camera (PAC)	Freeze frame		V1.10.001
VOLVO	V70 (08-)	2014	Rear seat entertainment module (RSE)	ECU identification		V1.10.001
VOLVO	V70 (08-)	2014	Rear seat entertainment module (RSE)	Read codes		V1.10.001
VOLVO	V70 (08-)	2014	Rear seat entertainment module (RSE)	Erase codes		V1.10.001
VOLVO	V70 (08-)	2014	Rear seat entertainment module (RSE)	Freeze frame		V1.10.001
VOLVO	V70 (08-)	2014	Integrated audio module (IAM)	ECU identification		V1.10.001
VOLVO	V70 (08-)	2014	Integrated audio module (IAM)	Read codes		V1.10.001
VOLVO	V70 (08-)	2014	Integrated audio module (IAM)	Erase codes		V1.10.001
VOLVO	V70 (08-)	2014	Integrated audio module (IAM)	Freeze frame		V1.10.001
VOLVO	V70 (08-)	2014	Power steering control module (PSCM)	ECU identification		V1.10.001
VOLVO	V70 (08-)	2014	Power steering control module (PSCM)	Read codes		V1.10.001
VOLVO	V70 (08-)	2014	Power steering control module (PSCM)	Erase codes		V1.10.001
VOLVO	V70 (08-)	2014	Power steering control module (PSCM)	Freeze frame		V1.10.001
VOLVO	V70 (08-)	2014	Trailer module (TRM)	ECU identification		V1.10.001
VOLVO	V70 (08-)	2014	Trailer module (TRM)	Read codes		V1.10.001
VOLVO	V70 (08-)	2014	Trailer module (TRM)	Erase codes		V1.10.001
VOLVO	V70 (08-)	2014	Trailer module (TRM)	Freeze frame		V1.10.001
VOLVO	V70 (08-)	2014	Audio module (AUD)	ECU identification		V1.10.001
VOLVO	V70 (08-)	2014	Audio module (AUD)	Read codes		V1.10.001
VOLVO	V70 (08-)	2014	Audio module (AUD)	Erase codes		V1.10.001
VOLVO	V70 (08-)	2014	Audio module (AUD)	Freeze frame		V1.10.001
VOLVO	V70 (08-)	2014	Closing velocity module (CVM)	ECU identification		V1.10.001
VOLVO	V70 (08-)	2014	Closing velocity module (CVM)	Read codes		V1.10.001
VOLVO	V70 (08-)	2014	Closing velocity module (CVM)	Erase codes		V1.10.001
VOLVO	V70 (08-)	2014	Closing velocity module (CVM)	Freeze frame		V1.10.001
VOLVO	V70 (08-)	2014	Trailer module (TRM)	ECU identification		V1.10.001
VOLVO	V70 (08-)	2014	Trailer module (TRM)	Read codes		V1.10.001
VOLVO	V70 (08-)	2014	Trailer module (TRM)	Erase codes		V1.10.001
VOLVO	V70 (08-)	2014	Trailer module (TRM)	Freeze frame		V1.10.001
VOLVO	V70 (08-)	2014	Audio module (AUD)	ECU identification		V1.10.001
VOLVO	V70 (08-)	2014	Audio module (AUD)	Read codes		V1.10.001
VOLVO	V70 (08-)	2014	Audio module (AUD)	Erase codes		V1.10.001
VOLVO	V70 (08-)	2014	Audio module (AUD)	Freeze frame		V1.10.001
VOLVO	V70 (08-)	2014	Parking assistance module (PAM)	ECU identification		V1.10.001
VOLVO	V70 (08-)	2014	Parking assistance module (PAM)	Read codes		V1.10.001
VOLVO	V70 (08-)	2014	Parking assistance module (PAM)	Erase codes		V1.10.001
VOLVO	V70 (08-)	2014	Parking assistance module (PAM)	Freeze frame		V1.10.001
VOLVO	V70 (08-)	2014	Calibrating angle sensor		Calibrating the climate control module (CCM)	V1.10.001
VOLVO	V70 (08-)	2014	Activation and service		Identifying components on the LIN network that belong to the climate control system (CCM)	V1.10.001
VOLVO	V70 (08-)	2014	Resetting the clutch pedal counter		Reading off programmed values	V1.10.001
VOLVO	V70 (08-)	2014	Calibration		Reading out electronic damper motor, actual/ preset range and tolerance limit	V1.10.001
VOLVO	V70 (08-)	2014	Activation and service		Programming the evaporator, climate control module (CCM)	V1.10.001
VOLVO	V70 (08-)	2014	Calibration		Activation of air flow	V1.10.001</td

VOLVO	V70 XC (D1-1) / X70 (I-07)	2006	Power seat module (PSM)	Special functions	Checking current values Programming the remote control setting	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2006	Power seat module (PSM)	Special functions		V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2006	Rear electronic module (REM)	ECU identification		V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2006	Rear electronic module (REM)	Read codes		V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2006	Rear electronic module (REM)	Erase codes		V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2006	Rear electronic module (REM)	Freeze frame		V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2006	Rear electronic module (REM)	Action test		V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2006	Rear electronic module (REM)	Special functions		V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2006	Rear electronic module (REM)	ECU identification		V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2006	Suspension module (SUM)	Read codes	Reading off the alarm cause Calibrating the position sensor for Bi-Xenon lamps	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2006	Suspension module (SUM)	Erase codes		V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2006	Suspension module (SUM)	Freeze frame		V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2006	Suspension module (SUM)	Action test		V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2006	Suspension module (SUM)	Special functions		V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2006	Suspension module (SUM)	ECU identification		V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2006	Upper electronic module (AEM)	Read codes	Reading the user information	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2006	Upper electronic module (AEM)	Erase codes		V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2006	Upper electronic module (AEM)	Freeze frame		V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2006	Upper electronic module (AEM)	Action test		V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2006	Upper electronic module (AEM)	Programmed value		V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2006	Upper electronic module (AEM)	Special functions		V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2006	Upper electronic module (AEM)	ECU identification		V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2006	Phone module (PHM)	Read codes	Service check forVolvo On Call	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2006	Phone module (PHM)	Erase codes	Restoring the reserve battery	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2006	Phone module (PHM)	Freeze frame	Resetting the carphone code	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2006	Phone module (PHM)	Action test	Activating/deactivating Volvo On Call	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2006	Phone module (PHM)	Special functions		V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2006	Phone module (PHM)	ECU identification		V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2006	Upper electronic module (UEM)	Read codes	Checking the Four-C (Continuously Controlled Chassis Concept) keypad unit	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2006	Upper electronic module (UEM)	Erase codes		V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2006	Upper electronic module (UEM)	Freeze frame		V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2006	Upper electronic module (UEM)	Action test		V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2006	Upper electronic module (UEM)	Programmed value		V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2006	Upper electronic module (UEM)	Special functions		V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2006	Upper electronic module (UEM)	ECU identification		V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2006	Road traffic information module (RTI)	Read codes	Programming the control unit	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2006	Road traffic information module (RTI)	Erase codes	Restoring the control module	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2006	Road traffic information module (RTI)	Freeze frame	Configuration of the siren	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2006	Road traffic information module (RTI)	Action test	Reading the programmed values	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2006	Road traffic information module (RTI)	Programmed value	Activating and reading off sun roof parameters	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2006	Road traffic information module (RTI)	Special functions	Read out the stored ID numbers for the tyre pressure sensors.	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2006	Road traffic information module (RTI)	ECU identification		V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2006	Combustion preheater module (CPM)	Read codes	Activating components and functions	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2006	Combustion preheater module (CPM)	Erase codes	Programme the additional and auxiliary heater	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2006	Combustion preheater module (CPM)	Freeze frame	Readiness code	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2006	Combustion preheater module (CPM)	Action test	Programming optimising parameter	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2006	Combustion preheater module (CPM)	Programmed value	Checking the throttle	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2006	Combustion preheater module (CPM)	Special functions	Adaptation of the throttle module	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2006	Combustion preheater module (CPM)	ECU identification	Adaptation of swirl chamber module	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2006	Combustion preheater module (CPM)	Read codes	Adaptation of air flow meter	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2006	Combustion preheater module (CPM)	Erase codes	Adaptation of heated oxygen sensor	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2006	Combustion preheater module (CPM)	Freeze frame	Adaptation of differential pressure sensor filter	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2006	Combustion preheater module (CPM)	Action test	Adaptation of differential pressure sensor filter	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2006	Combustion preheater module (CPM)	Programmed value	Resetting counter particle filter	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2006	Combustion preheater module (CPM)	Special functions	Combustion of soot particles	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2006	Combustion preheater module (CPM)	ECU identification	Checking the oil level	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2006	Transmission control module (TCM)	Read codes	Resetting adaption	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2006	Transmission control module (TCM)	Erase codes	Calibration of position sensor	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2006	Transmission control module (TCM)	Freeze frame	Resetting the counter for Transmission oil, change	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Engine control module (ECM)	Action test	Activation of adaption	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Engine control module (ECM)	Programmed value		V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Engine control module (ECM)	Special functions		V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Engine control module (ECM)	ECU identification		V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Transmission control module (TCM)	Read codes	Resetting transmission fluid change counter	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Transmission control module (TCM)	Erase codes	Resetting the adaption	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Transmission control module (TCM)	Freeze frame	Control module adaption	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Transmission control module (TCM)	Action test	Activating TEST MODE	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Differential electronic module (DEM)	ECU identification	Activating rear indicator	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Differential electronic module (DEM)	Read codes		V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Differential electronic module (DEM)	Erase codes		V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Differential electronic module (DEM)	Freeze frame		V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Central electronic module (CEM)	Action test	Adaptation of the throttle	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Central electronic module (CEM)	Programmed value	Readiness code	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Central electronic module (CEM)	Special functions	Quick test of exhaust camshaft control	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Central electronic module (CEM)	ECU identification	Quick test of intake camshaft control	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Central electronic module (CEM)	Read codes	Quick test of fuel tank system (FSA/CDN)	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Central electronic module (CEM)	Erase codes	Quick test of the fuel pump (FP)	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Central electronic module (CEM)	Freeze frame		V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Central electronic module (CEM)	Action test	Resetting transmission fluid change counter	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Central electronic module (CEM)	Programmed value	Resetting the adaption	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Central electronic module (CEM)	Special functions	Control module adaption	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Central electronic module (CEM)	ECU identification	Activating TEST MODE	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Central electronic module (CEM)	Read codes	Activating rear indicator	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Central electronic module (CEM)	Erase codes		V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Central electronic module (CEM)	Freeze frame		V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Central electronic module (CEM)	Action test		V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Central electronic module (CEM)	Programmed value		V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Central electronic module (CEM)	Special functions		V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Central electronic module (CEM)	ECU identification		V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Driver door module (DOM)	Read codes	Resetting off the alarm cause	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Driver door module (DOM)	Erase codes	Resetting facia settings	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Driver door module (DOM)	Freeze frame	Programming carcase module	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Driver door module (DOM)	Action test	Resetting low voltage counters	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Driver door module (DOM)	Programmed value	Quick test of alternator function	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Driver door module (DOM)	Special functions	Resetting the window position	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Driver door module (DOM)	ECU identification	Programming of short flash sequence	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Supplemental restraint system module (SRS)	Read codes	Pre-delivery service for new car	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Supplemental restraint system module (SRS)	Erase codes		V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Supplemental restraint system module (SRS)	Freeze frame		V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Supplemental restraint system module (SRS)	Action test		V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Supplemental restraint system module (SRS)	Programmed value		V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Supplemental restraint system module (SRS)	Special functions		V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Supplemental restraint system module (SRS)	ECU identification		V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Passenger door module (PDM)	Read codes	Calibrating the occupant weight sensor (OWS)	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Passenger door module (PDM)	Erase codes	Storing the ID number for the occupant weight sensor (OWS)	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Passenger door module (PDM)	Freeze frame	Resetting crash mode	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Passenger door module (PDM)	Action test		V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Passenger door module (PDM)	Programmed value		V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Passenger door module (PDM)	Special functions		V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Passenger door module (PDM)	ECU identification		V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Climate control module (CCM)	Read codes	Programming the remote control setting	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Climate control module (CCM)	Erase codes	Programming soft stop	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Climate control module (CCM)	Freeze frame	Initializing the window position	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Climate control module (CCM)	Action test		V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Climate control module (CCM)	Programmed values		V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Climate control module (CCM)	Special functions		V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Climate control module (CCM)	ECU identification		V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Driver information module (DIM)	Read codes	Identifying components on the LIN network that belong to the climate control system (CCM)	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Driver information module (DIM)	Erase codes	Calibrating the climate control module (CCM)	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Driver information module (DIM)	Freeze frame	Programming the climate control module (CCM)	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Driver information module (DIM)	Action test	Reading off the programmed parameters in the climate control module (CCM)	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Driver information module (DIM)	Programmed value	Reading out the current damping mode actual/present range and tolerance limit	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Driver information module (DIM)	Special functions	Compartment fan afterflow status	V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Driver information module (DIM)	ECU identification		V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Driver information module (DIM)	Read codes		V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Driver information module (DIM)	Erase codes		V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Driver information module (DIM)	Freeze frame		V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Driver information module (DIM)	Action test		V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Driver information module (DIM)	Programmed value		V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Driver information module (DIM)	Special functions		V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Driver information module (DIM)	ECU identification		V1.10.001
VOLVO	V70 XC (D1-1) / X70 (I-07)	2007	Power seat module (PSM)	Read codes		

VOLVO	X60	2009	Audio module (ALU)	ECU identification	Request for self test.
VOLVO	X60	2009	Suspension module (SUM)	Read codes	V1.00.001
VOLVO	X60	2009	Suspension module (SUM)	Erase codes	V1.00.001
VOLVO	X60	2009	Suspension module (SUM)	Freeze frame	V1.00.001
VOLVO	X60	2009	Suspension module (SUM)	Active test	V1.00.001
VOLVO	X60	2009	Parking assistance module (PAM)	Special functions	V1.00.001
VOLVO	X60	2009	Parking assistance module (PAM)	ECU identification	V1.00.001
VOLVO	X60	2009	Parking assistance module (PAM)	Read codes	V1.00.001
VOLVO	X60	2009	Parking assistance module (PAM)	Erase codes	V1.00.001
VOLVO	X60	2009	Parking assistance module (PAM)	Freeze frame	V1.00.001
VOLVO	X60	2009	Parking assistance module (PAM)	Special functions	V1.00.001
VOLVO	X60	2009	Parking assistance module (PAM)	ECU identification	V1.00.001
VOLVO	X60	2009	Parking assistance module (PAM)	Read codes	V1.00.001
VOLVO	X60	2009	Parking assistance module (PAM)	Erase codes	V1.00.001
VOLVO	X60	2009	Parking assistance module (PAM)	Freeze frame	V1.00.001
VOLVO	X60	2009	Trailer module (TRM)	ECU identification	V1.00.001
VOLVO	X60	2009	Trailer module (TRM)	Read codes	V1.00.001
VOLVO	X60	2009	Trailer module (TRM)	Erase codes	V1.00.001
VOLVO	X60	2009	Trailer module (TRM)	Freeze frame	V1.00.001
VOLVO	X60	2009	Accessory USB unit (AUU)	ECU identification	V1.00.001
VOLVO	X60	2009	Accessory USB unit (AUU)	Read codes	V1.00.001
VOLVO	X60	2009	Accessory USB unit (AUU)	Erase codes	V1.00.001
VOLVO	X60	2009	Accessory USB unit (AUU)	Freeze frame	V1.00.001
VOLVO	X60	2009	Subwoofer module (SUB)	ECU identification	V1.00.001
VOLVO	X60	2009	Subwoofer module (SUB)	Read codes	V1.00.001
VOLVO	X60	2009	Subwoofer module (SUB)	Erase codes	V1.00.001
VOLVO	X60	2009	Subwoofer module (SUB)	Freeze frame	V1.00.001
VOLVO	X60	2009	Closing velocity module (CVM)	ECU identification	V1.00.001
VOLVO	X60	2009	Closing velocity module (CVM)	Read codes	V1.00.001
VOLVO	X60	2009	Closing velocity module (CVM)	Erase codes	V1.00.001
VOLVO	X60	2009	Closing velocity module (CVM)	Freeze frame	V1.00.001
VOLVO	X60	2009	High level display front (HLDF)	ECU identification	V1.00.001
VOLVO	X60	2009	High level display front (HLDF)	Read codes	V1.00.001
VOLVO	X60	2009	High level display front (HLDF)	Erase codes	V1.00.001
VOLVO	X60	2009	High level display front (HLDF)	Freeze frame	V1.00.001
VOLVO	X60	2009	Headlamp control module (HCM)	ECU identification	V1.00.001
VOLVO	X60	2009	Headlamp control module (HCM)	Read codes	V1.00.001
VOLVO	X60	2009	Headlamp control module (HCM)	Erase codes	V1.00.001
VOLVO	X60	2009	Headlamp control module (HCM)	Freeze frame	V1.00.001
VOLVO	X60	2009	Bluetooth phone module (BPM)	ECU identification	V1.00.001
VOLVO	X60	2009	Bluetooth phone module (BPM)	Read codes	V1.00.001
VOLVO	X60	2009	Bluetooth phone module (BPM)	Erase codes	V1.00.001
VOLVO	X60	2009	Bluetooth phone module (BPM)	Freeze frame	V1.00.001
VOLVO	X60	2009	Multimedia module (MMMM)	ECU identification	V1.00.001
VOLVO	X60	2009	Multimedia module (MMMM)	Read codes	V1.00.001
VOLVO	X60	2009	Multimedia module (MMMM)	Erase codes	V1.00.001
VOLVO	X60	2009	Multimedia module (MMMM)	Freeze frame	V1.00.001
VOLVO	X60	2009	Digital audio broadcast module (DABM)	ECU identification	V1.00.001
VOLVO	X60	2009	Digital audio broadcast module (DABM)	Read codes	V1.00.001
VOLVO	X60	2009	Digital audio broadcast module (DABM)	Erase codes	V1.00.001
VOLVO	X60	2009	Digital audio broadcast module (DABM)	Freeze frame	V1.00.001
VOLVO	X60	2009	Power operated tailgate module (POT)	ECU identification	V1.00.001
VOLVO	X60	2009	Power operated tailgate module (POT)	Read codes	V1.00.001
VOLVO	X60	2009	Power operated tailgate module (POT)	Erase codes	V1.00.001
VOLVO	X60	2009	Power operated tailgate module (POT)	Freeze frame	V1.00.001
VOLVO	X60	2009	Integrated audio module (IAM)	ECU identification	V1.00.001
VOLVO	X60	2009	Integrated audio module (IAM)	Read codes	V1.00.001
VOLVO	X60	2009	Phone module (PHM)	Erase codes	V1.00.001
VOLVO	X60	2009	Phone module (PHM)	ECU identification	V1.00.001
VOLVO	X60	2009	Phone module (PHM)	Read codes	V1.00.001
VOLVO	X60	2009	Phone module (PHM)	Erase codes	V1.00.001
VOLVO	X60	2009	Phone module (PHM)	Freeze frame	V1.00.001
VOLVO	X60	2009	Forward sensing module (FSM)	ECU identification	V1.00.001
VOLVO	X60	2009	Forward sensing module (FSM)	Read codes	V1.00.001
VOLVO	X60	2009	Forward sensing module (FSM)	Erase codes	V1.00.001
VOLVO	X60	2009	Forward sensing module (FSM)	Freeze frame	V1.00.001
VOLVO	X60	2009	Forward sensing module (FSM)	Special functions	V1.00.001
VOLVO	X60	2009	Forward sensing module (FSM)	ECU identification	V1.00.001
VOLVO	X60	2009	Forward sensing module (FSM)	Read codes	V1.00.001
VOLVO	X60	2009	Forward sensing module (FSM)	Erase codes	V1.00.001
VOLVO	X60	2009	Forward sensing module (FSM)	Freeze frame	V1.00.001
VOLVO	X60	2009	Engine control module (ECM)	ECU identification	V1.00.001
VOLVO	X60	2009	Engine control module (ECM)	Read codes	V1.00.001
VOLVO	X60	2009	Engine control module (ECM)	Erase codes	V1.00.001
VOLVO	X60	2009	Engine control module (ECM)	Freeze frame	V1.00.001
VOLVO	X60	2009	Engine control module (ECM)	Special functions	V1.00.001
VOLVO	X60	2009	Engine control module (ECM)	ECU identification	V1.00.001
VOLVO	X60	2009	Engine control module (ECM)	Read codes	V1.00.001
VOLVO	X60	2009	Engine control module (ECM)	Erase codes	V1.00.001
VOLVO	X60	2009	Engine control module (ECM)	Freeze frame	V1.00.001
VOLVO	X60	2009	Central electronic module (CEM)	ECU identification	V1.00.001
VOLVO	X60	2009	Central electronic module (CEM)	Read codes	V1.00.001
VOLVO	X60	2009	Central electronic module (CEM)	Erase codes	V1.00.001
VOLVO	X60	2009	Central electronic module (CEM)	Freeze frame	V1.00.001
VOLVO	X60	2009	Central electronic module (CEM)	Special functions	V1.00.001
VOLVO	X60	2009	Central electronic module (CEM)	ECU identification	V1.00.001
VOLVO	X60	2009	Central electronic module (CEM)	Read codes	V1.00.001
VOLVO	X60	2009	Central electronic module (CEM)	Erase codes	V1.00.001
VOLVO	X60	2009	Central electronic module (CEM)	Freeze frame	V1.00.001
VOLVO	X60	2009	Central electronic module (CEM)	Special functions	V1.00.001
VOLVO	X60	2009	Central electronic module (CEM)	ECU identification	V1.00.001
VOLVO	X60	2009	Central electronic module (CEM)	Read codes	V1.00.001
VOLVO	X60	2009	Central electronic module (CEM)	Erase codes	V1.00.001
VOLVO	X60	2009	Central electronic module (CEM)	Freeze frame	V1.00.001
VOLVO	X60	2009	Central electronic module (CEM)	Special functions	V1.00.001
VOLVO	X60	2009	Central electronic module (CEM)	ECU identification	V1.00.001
VOLVO	X60	2009	Central electronic module (CEM)	Read codes	V1.00.001
VOLVO	X60	2009	Central electronic module (CEM)	Erase codes	V1.00.001
VOLVO	X60	2009	Central electronic module (CEM)	Freeze frame	V1.00.001
VOLVO	X60	2009	Central electronic module (CEM)	Special functions	V1.00.001
VOLVO	X60	2009	Central electronic module (CEM)	ECU identification	V1.00.001
VOLVO	X60	2009	Central electronic module (CEM)	Read codes	V1.00.001
VOLVO	X60	2009	Central electronic module (CEM)	Erase codes	V1.00.001
VOLVO	X60	2009	Central electronic module (CEM)	Freeze frame	V1.00.001
VOLVO	X60	2009	Central electronic module (CEM)	Special functions	V1.00.001
VOLVO	X60	2009	Central electronic module (CEM)	ECU identification	V1.00.001
VOLVO	X60	2009	Central electronic module (CEM)	Read codes	V1.00.001
VOLVO	X60	2009	Central electronic module (CEM)	Erase codes	V1.00.001
VOLVO	X60	2009	Central electronic module (CEM)	Freeze frame	V1.00.001
VOLVO	X60	2009	Central electronic module (CEM)	Special functions	V1.00.001
VOLVO	X60	2009	Central electronic module (CEM)	ECU identification	V1.00.001
VOLVO	X60	2009	Central electronic module (CEM)	Read codes	V1.00.001
VOLVO	X60	2009	Central electronic module (CEM)	Erase codes	V1.00.001
VOLVO	X60	2009	Central electronic module (CEM)	Freeze frame	V1.00.001
VOLVO	X60	2009	Passenger door module (PDM)	ECU identification	V1.00.001
VOLVO	X60	2009	Passenger door module (PDM)	Read codes	V1.00.001
VOLVO	X60	2009	Passenger door module (PDM)	Erase codes	V1.00.001
VOLVO	X60	2009	Passenger door module (PDM)	Freeze frame	V1.00.001
VOLVO	X60	2009	Brake control module (BCM)	ECU identification	V1.00.001
VOLVO	X60	2009	Brake control module (BCM)	Read codes	V1.00.001
VOLVO	X60	2009	Brake control module (BCM)	Erase codes	V1.00.001
VOLVO	X60	2009	Brake control module (BCM)	Freeze frame	V1.00.001
VOLVO	X60	2009	Brake control module (BCM)	Special functions	V1.00.001
VOLVO	X60	2009	Supplemental restraint system module (SRS)	ECU identification	V1.00.001
VOLVO	X60	2009	Supplemental restraint system module (SRS)	Read codes	V1.00.001
VOLVO	X60	2009	Supplemental restraint system module (SRS)	Erase codes	V1.00.001
VOLVO	X60	2009	Supplemental restraint system module (SRS)	Freeze frame	V1.00.001
VOLVO	X60	2009	Supplemental restraint system module (SRS)	Special functions	V1.00.001
VOLVO	X60	2009	Supplemental restraint system module (SRS)	ECU identification	V1.00.001
VOLVO	X60	2009	Steering angle sensor module (SAS)	ECU identification	V1.00.001
VOLVO	X60	2009	Steering angle sensor module (SAS)	Read codes	V1.00.001
VOLVO	X60	2009	Steering angle sensor module (SAS)	Erase codes	V1.00.001
VOLVO	X60	2009	Steering angle sensor module (SAS)	Freeze frame	V1.00.001
VOLVO	X60	2009	Driver information module (DIM)	ECU identification	V1.00.001
VOLVO	X60	2009	Driver information module (DIM)	Read codes	V1.00.001
VOLVO	X60	2009	Driver information module (DIM)	Erase codes	V1.00.001
VOLVO	X60	2009	Driver information module (DIM)	Freeze frame	V1.00.001
VOLVO	X60	2009	Driver information module (DIM)	Special functions	V1.00.001
VOLVO	X60	2009	Driver information module (DIM)	ECU identification	V1.00.001
VOLVO	X60	2009	Driver information module (DIM)	Read codes	V1.00.001
VOLVO	X60	2009	Driver information module (DIM)	Erase codes	V1.00.001
VOLVO	X60	2009	Driver information module (DIM)	Freeze frame	V1.00.001
VOLVO	X60	2009	Climate control module (CCM)	ECU identification	V1.00.001
VOLVO	X60	2009	Climate control module (CCM)	Read codes	V1.00.001
VOLVO	X60	2009	Climate control module (CCM)	Erase codes	V1.00.001
VOLVO	X60	2009	Climate control module (CCM)	Freeze frame	V1.00.001
VOLVO	X60	2009	Calibration	Request for self test.	V1.00.001
VOLVO	X60	2009	Programming of parking assistance module (PAM)	Request for self test.	V1.00.001
VOLVO	X60	2009	Activation	Activation	V1.00.001
VOLVO	X60	2009	Activation of installation image	Activation of installation image	V1.00.001
VOLVO	X60	2009	Calibration of position sensor	Calibration of position sensor	V1.00.001
VOLVO	X60	2009	Reinstalling the reserve battery	Reinstalling the reserve battery	V1.00.001
VOLVO	X60	2009	Check whether PHM has Never On Call	Check whether PHM has Never On Call	V1.00.001
VOLVO	X60	2009	Set lighting on buttons to Volvo On Call	Set lighting on buttons to Volvo On Call	V1.00.001
VOLVO	X60	2009	Activation/Deactivation of Volvo On Call	Activation/Deactivation of Volvo On Call	V1.00.001
VOLVO	X60	2009	Initial adaptation	Initial adaptation	V1.00.001
VOLVO	X60	2009	Adapting the internal tire procedures	Adapting the internal tire procedures	V1.00.001
VOLVO	X60	2009	Activating heating coil, FKM	Activating heating coil, FKM	V1.00.001
VOLVO	X60	2009	Calibration of radar and camera	Calibration of radar and camera	V1.00.001
VOLVO	X60	2009	Adaptation of the exhaust gas recirculation (EGR) valve	Adaptation of the exhaust gas recirculation (EGR) valve	V1.00.001
VOLVO	X60	2009	Adjusting the air flow sensor	Adjusting the air flow sensor	V1.00.001
VOLVO	X60	2009	Adjusting the swirl channel throttle	Adjusting the swirl channel throttle	V1.00.001
VOLVO	X60	2009	Adaptation of turbo channel motor	Adaptation of turbo channel motor	V1.00.001
VOLVO	X60	2009	Adaptation of heated oxygen sensor	Adaptation of heated oxygen sensor	V1.00.001
VOLVO	X60	2009	Adaptation of differential pressure sensor filter	Adaptation of differential pressure sensor filter	V1.00.001
VOLVO	X60	2009	Adaptation of fuel pressure control valve	Adaptation of fuel pressure control valve	V1.00.001
VOLVO	X60	2009	Combustion of soot particles	Combustion of soot particles	V1.00.001
VOLVO	X60	2009	Checking injectors	Checking injectors	V1.00.001
VOLVO	X60	2009	Resetting the air gap	Resetting the air gap	V1.00.001
VOLVO	X60	2009	Adjusting calculated oil level	Adjusting calculated oil level	V1.00.001
VOLVO	X60	2009	Fuel pump activation for vehicles without fuel pump module (PEM)	Fuel pump activation for vehicles without fuel pump module (PEM)	V1.00.001
VOLVO	X60	2009	Resetting the clutch pedal counter	Resetting the clutch pedal counter	V1.00.001
VOLVO	X60	2009	Initializing the window in the front door	Initializing the window in the front door	V1.00.001
VOLVO	X60	2009	Initializing the window in the rear door	Initializing the window in the rear door	V1.00.001
VOLVO	X60	2009	Central lock motors, activating	Central lock motors, activating	V1.00.001
VOLVO	X60	2009	Calibration angle sensor	Calibration angle sensor	V1.00.001
VOLVO	X60	2009	Activation and service	Activation and service	V1.00.001
VOLVO	X60	2009	Calibration	Calibration	V1.00.001
VOLVO	X60	2009	Calibrating the occupant weight sensor (OWS)	Calibrating the occupant weight sensor (OWS)	V1.00.001
VOLVO	X60	2009	Powering the SRS system	Powering the SRS system	V1.00.001
VOLVO	X60	2009	Checking the PADS light	Checking the PADS light	V1.00.001
VOLVO	X60	2009	Programming control module	Programming control module	V1.00.001
VOLVO	X60	2009	Open-circuit in the MOST cable.	Open-circuit in the MOST cable.	V1.00.001
VOLVO	X60	2009	Checking MOST communication	Checking MOST communication	V1.00.001
VOLVO	X60	2009	Calibrating the odometre setting	Calibrating the odometre setting	V1.00.001
VOLVO	X60	2009	Resetting the seat belt reminder indicator	Resetting the seat belt reminder indicator	V1.00.001
VOLVO	X60	2009	Activating the seat belt reminder	Activating the seat belt reminder	V1.00.001
VOLVO	X60	2009	Programming seat belt reminder in backseat	Programming seat belt reminder in backseat	V1.00.001
VOLVO	X60	2009	Programming test message, seat belt reminder	Programming test message, seat belt reminder	V1.00.001
VOLVO	X60	2009	Programming seat belt reminder in front/rear	Programming seat belt reminder in front/rear	V1.00.001
VOLVO	X60	2009	Resetting the seat belt reminder	Resetting the seat belt reminder	V1.00.001
VOLVO	X60	2009	Display off oil check	Display off oil check	V1.00.001

VOLVO	Xc60	2010	Climate control module (CCM)	Erase codes		V1.10.001
VOLVO	Xc60	2010	Climate control module (CCM)	Freeze frame		V1.10.001
VOLVO	Xc60	2010	Climate control module (CCM)	Active test		V1.10.001
VOLVO	Xc60	2010	Climate control module (CCM)	Programmed values		V1.10.001
VOLVO	Xc60	2010	Climate control module (CCM)	Special functions		V1.10.001
VOLVO	Xc60	2010	Climate control module (CCM)	Special functions		V1.10.001
VOLVO	Xc60	2010	Climate control module (CCM)	Special functions		V1.10.001
VOLVO	Xc60	2010	Climate control module (CCM)	Special functions		V1.10.001
VOLVO	Xc60	2010	Climate control module (CCM)	Special functions		V1.10.001
VOLVO	Xc60	2010	Climate control module (CCM)	Special functions		V1.10.001
VOLVO	Xc60	2010	Climate control module (CCM)	Special functions		V1.10.001
VOLVO	Xc60	2010	Climate control module (CCM)	Special functions		V1.10.001
VOLVO	Xc60	2010	Climate control module (CCM)	Special functions		V1.10.001
VOLVO	Xc60	2010	Television module (TVM)	ECU identification		V1.10.001
VOLVO	Xc60	2010	Television module (TVM)	Read codes		V1.10.001
VOLVO	Xc60	2010	Television module (TVM)	Freeze frame		V1.10.001
VOLVO	Xc60	2010	Keyless vehicle module (KVM)	ECU identification		V1.10.001
VOLVO	Xc60	2010	Keyless vehicle module (KVM)	Read codes		V1.10.001
VOLVO	Xc60	2010	Keyless vehicle module (KVM)	Erase codes		V1.10.001
VOLVO	Xc60	2010	Keyless vehicle module (KVM)	Freeze frame		V1.10.001
VOLVO	Xc60	2010	Keyless vehicle module (KVM)	Special functions		V1.10.001
VOLVO	Xc60	2010	Keyless vehicle module (KVM)	Special functions		V1.10.001
VOLVO	Xc60	2010	Keyless vehicle module (KVM)	Special functions		V1.10.001
VOLVO	Xc60	2010	Keyless vehicle module (KVM)	Special functions		V1.10.001
VOLVO	Xc60	2010	Power seat module (PSM)	ECU identification		V1.10.001
VOLVO	Xc60	2010	Power seat module (PSM)	Read codes		V1.10.001
VOLVO	Xc60	2010	Power seat module (PSM)	Freeze frame		V1.10.001
VOLVO	Xc60	2010	Power seat module (PSM)	Active test		V1.10.001
VOLVO	Xc60	2010	Power seat module (PSM)	Special functions		V1.10.001
VOLVO	Xc60	2010	Combustion preheater module (CPM)	ECU identification		V1.10.001
VOLVO	Xc60	2010	Combustion preheater module (CPM)	Read codes		V1.10.001
VOLVO	Xc60	2010	Combustion preheater module (CPM)	Erase codes		V1.10.001
VOLVO	Xc60	2010	Combustion preheater module (CPM)	Freeze frame		V1.10.001
VOLVO	Xc60	2010	Combustion preheater module (CPM)	Special functions		V1.10.001
VOLVO	Xc60	2010	Combustion preheater module (CPM)	Special functions		V1.10.001
VOLVO	Xc60	2010	Combustion preheater module (CPM)	Special functions		V1.10.001
VOLVO	Xc60	2010	Combustion preheater module (CPM)	Special functions		V1.10.001
VOLVO	Xc60	2010	Audio module (AUD)	ECU identification		V1.10.001
VOLVO	Xc60	2010	Audio module (AUD)	Read codes		V1.10.001
VOLVO	Xc60	2010	Audio module (AUD)	Erase codes		V1.10.001
VOLVO	Xc60	2010	Audio module (AUD)	Freeze frame		V1.10.001
VOLVO	Xc60	2010	Audio module (AUD)	Special functions		V1.10.001
VOLVO	Xc60	2010	Accessory USB unit (AUX)	ECU identification		V1.10.001
VOLVO	Xc60	2010	Accessory USB unit (AUX)	Read codes		V1.10.001
VOLVO	Xc60	2010	Accessory USB unit (AUX)	Erase codes		V1.10.001
VOLVO	Xc60	2010	Forward sensing module (FSM)	ECU identification		V1.10.001
VOLVO	Xc60	2010	Forward sensing module (FSM)	Read codes		V1.10.001
VOLVO	Xc60	2010	Forward sensing module (FSM)	Freeze frame		V1.10.001
VOLVO	Xc60	2010	Forward sensing module (FSM)	Special functions		V1.10.001
VOLVO	Xc60	2010	Forward sensing module (FSM)	Activation		V1.10.001
VOLVO	Xc60	2010	Forward sensing module (FSM)	Request for self test.		V1.10.001
VOLVO	Xc60	2010	Calibration			V1.10.001
VOLVO	Xc60	2010	Trailer module (TRM)	ECU identification		V1.10.001
VOLVO	Xc60	2010	Trailer module (TRM)	Read codes		V1.10.001
VOLVO	Xc60	2010	Trailer module (TRM)	Erase codes		V1.10.001
VOLVO	Xc60	2010	Trailer module (TRM)	Freeze frame		V1.10.001
VOLVO	Xc60	2010	Trailer module (TRM)	Special functions		V1.10.001
VOLVO	Xc60	2010	Accessory USB unit (AUX)	ECU identification		V1.10.001
VOLVO	Xc60	2010	Accessory USB unit (AUX)	Read codes		V1.10.001
VOLVO	Xc60	2010	Accessory USB unit (AUX)	Erase codes		V1.10.001
VOLVO	Xc60	2010	Forward sensing module (FSM)	ECU identification		V1.10.001
VOLVO	Xc60	2010	Forward sensing module (FSM)	Read codes		V1.10.001
VOLVO	Xc60	2010	Forward sensing module (FSM)	Freeze frame		V1.10.001
VOLVO	Xc60	2010	Forward sensing module (FSM)	Activation		V1.10.001
VOLVO	Xc60	2010	Activation			V1.10.001
VOLVO	Xc60	2010	Calibration of position sensor			V1.10.001
VOLVO	Xc60	2010	High level display front (HDF)	ECU identification		V1.10.001
VOLVO	Xc60	2010	High level display front (HDF)	Read codes		V1.10.001
VOLVO	Xc60	2010	High level display front (HDF)	Erase codes		V1.10.001
VOLVO	Xc60	2010	High level display front (HDF)	Freeze frame		V1.10.001
VOLVO	Xc60	2010	High level display front (HDF)	Special functions		V1.10.001
VOLVO	Xc60	2010	Remote digital audio receiver (RDAIR)	ECU identification		V1.10.001
VOLVO	Xc60	2010	Remote digital audio receiver (RDAIR)	Read codes		V1.10.001
VOLVO	Xc60	2010	Remote digital audio receiver (RDAIR)	Erase codes		V1.10.001
VOLVO	Xc60	2010	Remote digital audio receiver (RDAIR)	Freeze frame		V1.10.001
VOLVO	Xc60	2010	Headlamp control module (HCM)	ECU identification		V1.10.001
VOLVO	Xc60	2010	Headlamp control module (HCM)	Read codes		V1.10.001
VOLVO	Xc60	2010	Headlamp control module (HCM)	Erase codes		V1.10.001
VOLVO	Xc60	2010	Headlamp control module (HCM)	Freeze frame		V1.10.001
VOLVO	Xc60	2010	Headlamp control module (HCM)	Special functions		V1.10.001
VOLVO	Xc60	2010	Bluetooth phone module (BPM)	ECU identification		V1.10.001
VOLVO	Xc60	2010	Bluetooth phone module (BPM)	Read codes		V1.10.001
VOLVO	Xc60	2010	Bluetooth phone module (BPM)	Erase codes		V1.10.001
VOLVO	Xc60	2010	Bluetooth phone module (BPM)	Freeze frame		V1.10.001
VOLVO	Xc60	2010	Bluetooth phone module (BPM)	Activation		V1.10.001
VOLVO	Xc60	2010	Multimedia module (MMM)	ECU identification		V1.10.001
VOLVO	Xc60	2010	Multimedia module (MMM)	Read codes		V1.10.001
VOLVO	Xc60	2010	Multimedia module (MMM)	Erase codes		V1.10.001
VOLVO	Xc60	2010	Multimedia module (MMM)	Freeze frame		V1.10.001
VOLVO	Xc60	2010	Digital audio broadcast module (DABM)	ECU identification		V1.10.001
VOLVO	Xc60	2010	Digital audio broadcast module (DABM)	Read codes		V1.10.001
VOLVO	Xc60	2010	Digital audio broadcast module (DABM)	Erase codes		V1.10.001
VOLVO	Xc60	2010	Digital audio broadcast module (DABM)	Freeze frame		V1.10.001
VOLVO	Xc60	2010	Power operated tailgate module (POT)	ECU identification		V1.10.001
VOLVO	Xc60	2010	Power operated tailgate module (POT)	Read codes		V1.10.001
VOLVO	Xc60	2010	Power operated tailgate module (POT)	Erase codes		V1.10.001
VOLVO	Xc60	2010	Power operated tailgate module (POT)	Freeze frame		V1.10.001
VOLVO	Xc60	2010	Power operated tailgate module (POT)	Activation		V1.10.001
VOLVO	Xc60	2010	Initiation of tailgate's position. Power operated tailgate module (POT)	ECU identification		V1.10.001
VOLVO	Xc60	2010	Initiation of tailgate's position. Power operated tailgate module (POT)	Read codes		V1.10.001
VOLVO	Xc60	2010	Initiation of tailgate's position. Power operated tailgate module (POT)	Erase codes		V1.10.001
VOLVO	Xc60	2010	Initiation of tailgate's position. Power operated tailgate module (POT)	Freeze frame		V1.10.001
VOLVO	Xc60	2010	Reinstalling the reserve battery			V1.10.001
VOLVO	Xc60	2010	Check whether PMS has Volvo On Call			V1.10.001
VOLVO	Xc60	2010	Set lighting on buttons to Volvo On Call			V1.10.001
VOLVO	Xc60	2010	Activation/pre-activation of Volvo On Call			V1.10.001
VOLVO	Xc60	2010	Activation of installation image			V1.10.001
VOLVO	Xc60	2010	Camera activation, parking aid camera			V1.10.001
VOLVO	Xc60	2010	Service calibration, parking aid camera			V1.10.001
VOLVO	Xc60	2010	Resetting the "Transmission fluid change" counter			V1.10.001
VOLVO	Xc60	2010	Calibration of gear position sensor			V1.10.001
VOLVO	Xc60	2010	Activating gear indication			V1.10.001
VOLVO	Xc60	2010	Control module adaption			V1.10.001
VOLVO	Xc60	2010	Readline out permanent diagnostic trouble codes (USA/CDN)			V1.10.001
VOLVO	Xc60	2010	Reseting the "Fuel tank system"			V1.10.001
VOLVO	Xc60	2010	Readline out fuel tank system (USA/CDN)			V1.10.001
VOLVO	Xc60	2010	Readline off UMPR (USA/CDN)			V1.10.001
VOLVO	Xc60	2010	Quick test of the fuel tank system			V1.10.001
VOLVO	Xc60	2010	Readline out permanent diagnostic trouble codes (USA/CDN)			V1.10.001
VOLVO	Xc60	2010	Reseting the "Exhaust gas recirculation (EGR) valve"			V1.10.001
VOLVO	Xc60	2010	Adaption of the exhaust gas recirculation (EGR) valve			V1.10.001
VOLVO	Xc60	2010	Adaption of the throttle module			V1.10.001
VOLVO	Xc60	2010	Adaption of the intake air pressure sensor module			V1.10.001
VOLVO	Xc60	2010	Readline out particle filter			V1.10.001
VOLVO	Xc60	2010	Readline out soot particulate			V1.10.001
VOLVO	Xc60	2010	Checking the oil level			V1.10.001
VOLVO	Xc60	2010	Adaption of oil level for oil quality			V1.10.001
VOLVO	Xc60	2010	Fuel pump activation for vehicles without fuel pump module (PEM)			V1.10.001
VOLVO	Xc60	2010	Resetting the clutch pedal counter			V1.10.001
VOLVO	Xc60	2010	Adaption of turbo control motor			V1.10.001
VOLVO	Xc60	2010	Accumulator draining			V1.10.001
VOLVO	Xc60	2010	Oil level out of fuel tank system (USA/CDN)			V1.10.001
VOLVO	Xc60	2010	Adaption of the exhaust gas recirculation (EGR) valve			V1.10.001
VOLVO	Xc60	2010	Readline off UMPR (USA/CDN)			V1.10.001
VOLVO	Xc60	2010	Readline out adaptation values			V1.10.001
VOLVO	Xc60	2010	Digital test of the fuel tank system			V1.10.001
VOLVO	Xc60	2010	Resetting adastation			V1.10.001
VOLVO	Xc60	2010	Reseting the "Transmission fluid change" counter			V1.10.001
VOLVO	Xc60	2010	Calibration of gear position sensor			V1.10.001
VOLVO	Xc60	2010	Activating gear indication			V1.10.001
VOLVO	Xc60	2010	Control module adaption			V1.10.001
VOLVO	Xc60	2010	Accumulator draining			V1.10.001
VOLVO	Xc60	2010	Reseting the "Fuel tank system"			V1.10.001
VOLVO	Xc60	2010	Readline out fuel tank system (USA/CDN)			V1.10.001
VOLVO	Xc60	2010	Readline off alarm cause			V1.10.001
VOLVO	Xc60	2010	Workshop test (TPMS)			V1.10.001
VOLVO	Xc60	2010	Checking installation, brake light switch, and brake pedal position switch			V1.10.001

VOLVO	XC60	2010A	Central electronic module (CEM)	Special functions	Quick test of alternator function	V1.10.001
VOLVO	XC60	2010A	Central electronic module (CEM)	Special functions	Read-out and resetting alerco-lock	V1.10.001
VOLVO	XC60	2010A	Central electronic module (CEM)	Special functions	Readout off power supply position	V1.10.001
VOLVO	XC60	2010A	Central electronic module (CEM)	Special functions	Program off rear window wiper when reversing	V1.10.001
VOLVO	XC60	2010A	Central electronic module (CEM)	Special functions	Ejection of key	V1.10.001
VOLVO	XC60	2010A	Central electronic module (CEM)	Special functions	Setting day and night mode for the instrumentation	V1.10.001
VOLVO	XC60	2010A	Driver door module (DDM)	ECU identification	Activating wipers, front/rear	V1.10.001
VOLVO	XC60	2010A	Driver door module (DDM)	Read codes	V1.10.001	
VOLVO	XC60	2010A	Driver door module (DDM)	Erase codes	V1.10.001	
VOLVO	XC60	2010A	Driver door module (DDM)	Freeze frame	V1.10.001	
VOLVO	XC60	2010A	Driver door module (DDM)	Active test	V1.10.001	
VOLVO	XC60	2010A	Driver door module (DDM)	Special functions	Calibration	V1.10.001
VOLVO	XC60	2010A	Driver door module (DDM)	Special functions	Installing the window in the front door	V1.10.001
VOLVO	XC60	2010A	Driver door module (DDM)	Special functions	Installing the window in the rear door	V1.10.001
VOLVO	XC60	2010A	Driver door module (DDM)	Special functions	Central lock motors, activating	V1.10.001
VOLVO	XC60	2010A	Pasenger door module (PDM)	ECU identification	V1.10.001	
VOLVO	XC60	2010A	Pasenger door module (PDM)	Read codes	V1.10.001	
VOLVO	XC60	2010A	Pasenger door module (PDM)	Erase codes	V1.10.001	
VOLVO	XC60	2010A	Pasenger door module (PDM)	Freeze frame	V1.10.001	
VOLVO	XC60	2010A	Pasenger door module (PDM)	Active test	V1.10.001	
VOLVO	XC60	2010A	Pasenger door module (PDM)	Special functions	Calibration	V1.10.001
VOLVO	XC60	2010A	Pasenger door module (PDM)	Special functions	Initializing the window in the front door	V1.10.001
VOLVO	XC60	2010A	Pasenger door module (PDM)	Special functions	Initializing the window in the rear door	V1.10.001
VOLVO	XC60	2010A	Pasenger door module (PDM)	Special functions	Central lock motors, activating	V1.10.001
VOLVO	XC60	2010A	Park brake module (PBM)	ECU identification	V1.10.001	
VOLVO	XC60	2010A	Park brake module (PBM)	Read codes	V1.10.001	
VOLVO	XC60	2010A	Park brake module (PBM)	Erase codes	V1.10.001	
VOLVO	XC60	2010A	Park brake module (PBM)	Freeze frame	V1.10.001	
VOLVO	XC60	2010A	Park brake module (PBM)	Special functions	Calibration	V1.10.001
VOLVO	XC60	2010A	Park brake module (PBM)	Special functions	Activation of the brake control module (BCM)	V1.10.001
VOLVO	XC60	2010A	Brake control module (BCM)	ECU identification	V1.10.001	
VOLVO	XC60	2010A	Brake control module (BCM)	Read codes	V1.10.001	
VOLVO	XC60	2010A	Brake control module (BCM)	Erase codes	V1.10.001	
VOLVO	XC60	2010A	Brake control module (BCM)	Freeze frame	V1.10.001	
VOLVO	XC60	2010A	Brake control module (BCM)	Active test	V1.10.001	
VOLVO	XC60	2010A	Brake control module (BCM)	Special functions	Calibration	V1.10.001
VOLVO	XC60	2010A	Brake control module (BCM)	Special functions	Restart of the brake control module (BCM)	V1.10.001
VOLVO	XC60	2010A	Climate control module (CCM)	ECU identification	V1.10.001	
VOLVO	XC60	2010A	Climate control module (CCM)	Read codes	V1.10.001	
VOLVO	XC60	2010A	Climate control module (CCM)	Erase codes	V1.10.001	
VOLVO	XC60	2010A	Climate control module (CCM)	Freeze frame	V1.10.001	
VOLVO	XC60	2010A	Climate control module (CCM)	Active test	V1.10.001	
VOLVO	XC60	2010A	Climate control module (CCM)	Programmed value	Calibrating the climate control module (CCM)	V1.10.001
VOLVO	XC60	2010A	Climate control module (CCM)	Special functions	Identifying components on the LAN network that belong to the climate control system (CCM)	V1.10.001
VOLVO	XC60	2010A	Climate control module (CCM)	Special functions	Reading off programmed value	V1.10.001
VOLVO	XC60	2010A	Climate control module (CCM)	Special functions	Reading out electronic damper motor, actual/preset range and tolerance limit	V1.10.001
VOLVO	XC60	2010A	Climate control module (CCM)	Special functions	Programmable limit for the climate control module (CCM)	V1.10.001
VOLVO	XC60	2010A	Climate control module (CCM)	Special functions	Activation of blower fan run-on	V1.10.001
VOLVO	XC60	2010A	Climate control module (CCM)	Special functions	Airflow setting in rear passenger compartment	V1.10.001
VOLVO	XC60	2010A	Climate control module (CCM)	Special functions	Programming the climate control module (CCM)	V1.10.001
VOLVO	XC60	2010A	Climate control module (CCM)	Special functions	Action for fail-safe temperature and cold draught in passenger compartment	V1.10.001
VOLVO	XC60	2010A	Climate control module (CCM)	Special functions	Row view mirror light sensitivity	V1.10.001
VOLVO	XC60	2010A	Infotainment control module (ICM)	ECU identification	V1.10.001	
VOLVO	XC60	2010A	Infotainment control module (ICM)	Read codes	V1.10.001	
VOLVO	XC60	2010A	Infotainment control module (ICM)	Erase codes	V1.10.001	
VOLVO	XC60	2010A	Infotainment control module (ICM)	Freeze frame	V1.10.001	
VOLVO	XC60	2010A	Infotainment control module (ICM)	Active test	V1.10.001	
VOLVO	XC60	2010A	Infotainment control module (ICM)	Special functions	Calibration	V1.10.001
VOLVO	XC60	2010A	Infotainment control module (ICM)	Special functions	Programming the occupant weight sensor (OWS)	V1.10.001
VOLVO	XC60	2010A	Supplemental restraint system module (SRS)	ECU identification	V1.10.001	
VOLVO	XC60	2010A	Supplemental restraint system module (SRS)	Read codes	V1.10.001	
VOLVO	XC60	2010A	Supplemental restraint system module (SRS)	Erase codes	V1.10.001	
VOLVO	XC60	2010A	Supplemental restraint system module (SRS)	Freeze frame	V1.10.001	
VOLVO	XC60	2010A	Supplemental restraint system module (SRS)	Active test	V1.10.001	
VOLVO	XC60	2010A	Supplemental restraint system module (SRS)	Special functions	Calibration	V1.10.001
VOLVO	XC60	2010A	Supplemental restraint system module (SRS)	Special functions	Restart of the supplemental restraint system (SRS)	V1.10.001
VOLVO	XC60	2010A	Driver information module (DIM)	ECU identification	V1.10.001	
VOLVO	XC60	2010A	Driver information module (DIM)	Read codes	V1.10.001	
VOLVO	XC60	2010A	Driver information module (DIM)	Erase codes	V1.10.001	
VOLVO	XC60	2010A	Driver information module (DIM)	Freeze frame	V1.10.001	
VOLVO	XC60	2010A	Driver information module (DIM)	Special functions	Resetting the odometer setting	V1.10.001
VOLVO	XC60	2010A	Driver information module (DIM)	Special functions	Resetting the service reminder indicator (SRI)	V1.10.001
VOLVO	XC60	2010A	Driver information module (DIM)	Special functions	Testing all indicators and lamps in the driver information module (DIM)	V1.10.001
VOLVO	XC60	2010A	Driver information module (DIM)	Special functions	Programming loudend audible signal, seat belt reminder	V1.10.001
VOLVO	XC60	2010A	Driver information module (DIM)	Special functions	Programmable limit	V1.10.001
VOLVO	XC60	2010A	Driver information module (DIM)	Special functions	Programming text message, seatbelt reminder	V1.10.001
VOLVO	XC60	2010A	Driver information module (DIM)	Special functions	Programming the driver information module (DIM)	V1.10.001
VOLVO	XC60	2010A	Driver information module (DIM)	Special functions	Read-out of fuel volume	V1.10.001
VOLVO	XC60	2010A	Infotainment control module (ICM)	ECU identification	V1.10.001	
VOLVO	XC60	2010A	Infotainment control module (ICM)	Read codes	V1.10.001	
VOLVO	XC60	2010A	Infotainment control module (ICM)	Erase codes	V1.10.001	
VOLVO	XC60	2010A	Infotainment control module (ICM)	Freeze frame	V1.10.001	
VOLVO	XC60	2010A	Infotainment control module (ICM)	Active test	V1.10.001	
VOLVO	XC60	2010A	Infotainment control module (ICM)	Special functions	Calibration	V1.10.001
VOLVO	XC60	2010A	Infotainment control module (ICM)	Special functions	Programming control module	V1.10.001
VOLVO	XC60	2010A	Infotainment control module (ICM)	Special functions	Open/circuit in the MOST cable.	V1.10.001
VOLVO	XC60	2010A	Infotainment control module (ICM)	Special functions	Checking MOST communication	V1.10.001
VOLVO	XC60	2010A	Keyless vehicle module (KVM)	ECU identification	V1.10.001	
VOLVO	XC60	2010A	Keyless vehicle module (KVM)	Read codes	V1.10.001	
VOLVO	XC60	2010A	Keyless vehicle module (KVM)	Erase codes	V1.10.001	
VOLVO	XC60	2010A	Keyless vehicle module (KVM)	Freeze frame	V1.10.001	
VOLVO	XC60	2010A	Keyless vehicle module (KVM)	Special functions	Requesting a remote command	V1.10.001
VOLVO	XC60	2010A	Keyless vehicle module (KVM)	Special functions	Checking the communication with the remote control receiver.	V1.10.001
VOLVO	XC60	2010A	Keyless vehicle module (KVM)	Special functions	Remote control	V1.10.001
VOLVO	XC60	2010A	Keyless vehicle module (KVM)	Special functions	Test of internal memory	V1.10.001
VOLVO	XC60	2010A	Keyless vehicle module (KVM)	Special functions	Activation of quick-lock motors.	V1.10.001
VOLVO	XC60	2010A	Parking assistance module (PAM)	ECU identification	V1.10.001	
VOLVO	XC60	2010A	Parking assistance module (PAM)	Read codes	V1.10.001	
VOLVO	XC60	2010A	Parking assistance module (PAM)	Erase codes	V1.10.001	
VOLVO	XC60	2010A	Parking assistance module (PAM)	Freeze frame	V1.10.001	
VOLVO	XC60	2010A	Parking assistance module (PAM)	Special functions	Programming the seat memory's delay time and acknowledgement	V1.10.001
VOLVO	XC60	2010A	Combustion preheater module (CPM)	ECU identification	V1.10.001	
VOLVO	XC60	2010A	Combustion preheater module (CPM)	Read codes	V1.10.001	
VOLVO	XC60	2010A	Combustion preheater module (CPM)	Erase codes	V1.10.001	
VOLVO	XC60	2010A	Combustion preheater module (CPM)	Freeze frame	V1.10.001	
VOLVO	XC60	2010A	Combustion preheater module (CPM)	Active test	V1.10.001	
VOLVO	XC60	2010A	Combustion preheater module (CPM)	Special functions	Calibration	V1.10.001
VOLVO	XC60	2010A	Combustion preheater module (CPM)	Special functions	Programming control module	V1.10.001
VOLVO	XC60	2010A	Combustion preheater module (CPM)	Special functions	Open/circuit in the MOST cable.	V1.10.001
VOLVO	XC60	2010A	Combustion preheater module (CPM)	Special functions	Checking MOST communication	V1.10.001
VOLVO	XC60	2010A	Accessory USB unit (AUU)	ECU identification	V1.10.001	
VOLVO	XC60	2010A	Accessory USB unit (AUU)	Read codes	V1.10.001	
VOLVO	XC60	2010A	Accessory USB unit (AUU)	Erase codes	V1.10.001	
VOLVO	XC60	2010A	Accessory USB unit (AUU)	Freeze frame	V1.10.001	
VOLVO	XC60	2010A	Accessory USB unit (AUU)	Active test	V1.10.001	
VOLVO	XC60	2010A	Accessory USB unit (AUU)	Special functions	Calibration	V1.10.001
VOLVO	XC60	2010A	Audio module (AUD)	ECU identification	V1.10.001	
VOLVO	XC60	2010A	Audio module (AUD)	Read codes	V1.10.001	
VOLVO	XC60	2010A	Audio module (AUD)	Erase codes	V1.10.001	
VOLVO	XC60	2010A	Audio module (AUD)	Freeze frame	V1.10.001	
VOLVO	XC60	2010A	Audio module (AUD)	Special functions	Request for self-test.	V1.10.001
VOLVO	XC60	2010A	Suspension module (SUM)	ECU identification	V1.10.001	
VOLVO	XC60	2010A	Suspension module (SUM)	Read codes	V1.10.001	
VOLVO	XC60	2010A	Suspension module (SUM)	Erase codes	V1.10.001	
VOLVO	XC60	2010A	Suspension module (SUM)	Freeze frame	V1.10.001	
VOLVO	XC60	2010A	Suspension module (SUM)	Active test	V1.10.001	
VOLVO	XC60	2010A	Suspension module (SUM)	Special functions	Calibration	V1.10.001
VOLVO	XC60	2010A	Parkin assistance module (PAM)	ECU identification	V1.10.001	
VOLVO	XC60	2010A	Parkin assistance module (PAM)	Read codes	V1.10.001	
VOLVO	XC60	2010A	Parkin assistance module (PAM)	Erase codes	V1.10.001	
VOLVO	XC60	2010A	Parkin assistance module (PAM)	Freeze frame	V1.10.001	
VOLVO	XC60	2010A	Parkin assistance module (PAM)	Active test	V1.10.001	
VOLVO	XC60	2010A	Parkin assistance module (PAM)	Special functions	Activation	V1.10.001
VOLVO	XC60	2010A	Subwoofer module (SUB)	ECU identification	V1.10.001	
VOLVO	XC60	2010A	Subwoofer module (SUB)	Read codes	V1.10.001	
VOLVO	XC60	2010A	Subwoofer module (SUB)	Erase codes	V1.10.001	
VOLVO	XC60	2010A	Subwoofer module (SUB)	Freeze frame	V1.10.001	
VOLVO	XC60	2010A	Subwoofer module (SUB)	Active test	V1.10.001	
VOLVO	XC60	2010A	Subwoofer module (SUB)	Special functions	Request for self-test.	V1.10.001
VOLVO	XC60	2010A	Closing velocity module (CVM)	ECU identification	V1.10.001	
VOLVO	XC60	2010A	Closing velocity module (CVM)	Read codes	V1.10.001	
VOLVO	XC60	2010A	Closing velocity module (CVM)	Erase codes	V1.10.001	
VOLVO	XC60	2010A	Closing velocity module (CVM)	Freeze frame	V1.10.001	
VOLVO	XC60	2010A	Closing velocity module (CVM)	Active test	V1.10.001	
VOLVO	XC60	2010A	Closing velocity module (CVM)	Special functions	Calibration	V1.10.001
VOLVO	XC60	2010A	High level display front (HDF)	ECU identification	V1.10.001	
VOLVO	XC60	2010A	High level display front (HDF)	Read codes	V1.10.001	
VOLVO	XC60	2010A	High level display front (HDF)	Erase codes	V1.10.001	
VOLVO	XC60	2010A	High level display front (HDF)	Freeze frame	V1.10.001	
VOLVO	XC60	2010A	High level display front (HDF)	Active test	V1.10.001	
VOLVO	XC60	2010A	High level display front (HDF)	Special functions	Activation	V1.10.001
VOLVO	XC60	2010A	Remote digital audio receiver (RDA)	ECU identification	V1.10.001	
VOLVO	XC60	2010A	Remote digital audio receiver (RDA)	Read codes	V1.10.001	
VOLVO	XC60	2010A	Remote digital audio receiver (RDA)	Erase codes	V1.10.001	
VOLVO	XC60	2010A	Remote digital audio receiver (RDA)	Freeze frame	V1.10.001	
VOLVO	XC60	2010A	Remote digital audio receiver (RDA)	Active test	V1.10.001	
VOLVO	XC60	2010A	Remote digital audio receiver (RDA)	Special functions	Calibration	V1.10.001
VOLVO	XC60	2010A	Parking assistance camera (PAC)	ECU identification	V1.10.001	
VOLVO	XC60	2010A	Parking assistance camera (PAC)	Read codes	V1.10.001	
VOLVO	XC60	2010A	Parking assistance camera (PAC)	Erase codes	V1.10.001	
VOLVO	XC60	2010A	Parking assistance camera (PAC)	Freeze frame	V1.10.001	
VOLVO	XC60	2010A	Parking assistance camera (PAC)	Active test	V1.10.001	
VOLVO	XC60	2010A	Parking assistance camera (PAC)	Special functions	Activation	V1.10.001
VOLVO	XC60	2010A	Headlight control module (HCM)	ECU identification	V1.10.001	
VOLVO	XC60	2010A	Headlight control module (HCM)	Read codes	V1.10.001	
VOLVO	XC60	2010A	Headlight control module (HCM)	Erase codes	V1.10.001	
VOLVO	XC60	2010A	Headlight control module (HCM)	Freeze frame	V1.10.001	
VOLVO	XC60	2010A	Headlight control module (HCM)	Active test		

VOLVO	Xc60	2011	Parkline assistance camera (PAC)	Special functions		Camera activation, parkline aid camera
VOLVO	Xc60	2011	Forward looking radar (FLR)	ECU identification		Service calibration, parkline aid camera
VOLVO	Xc60	2011	Forward looking radar (FLR)	Erase codes		
VOLVO	Xc60	2011	Forward looking radar (FLR)	Freeze frame		
VOLVO	Xc60	2011	Forward looking radar (FLR)	Identify function		
VOLVO	Xc60	2011	Closing velocity module (CVM)	Read codes		
VOLVO	Xc60	2011	Closing velocity module (CVM)	Erase codes		
VOLVO	Xc60	2011	Closing velocity module (CVM)	Freeze frame		
VOLVO	Xc60	2011	Closing velocity module (CVM)	Identify function		
VOLVO	Xc60	2011	Power steering control module (PSCM)	Read codes		
VOLVO	Xc60	2011	Power steering control module (PSCM)	Erase codes		
VOLVO	Xc60	2011	Power steering control module (PSCM)	Freeze frame		
VOLVO	Xc60	2011	Integrated audio module (IAM)	ECU identification		
VOLVO	Xc60	2011	Integrated audio module (IAM)	Read codes		
VOLVO	Xc60	2011	Integrated audio module (IAM)	Freeze frame		
VOLVO	Xc60	2011	Integrated audio module (IAM)	Identify function		
VOLVO	Xc60	2011	Integrated audio module (IAM)	Special functions		
VOLVO	Xc60	2011	Trailer module (TRM)	ECU identification		
VOLVO	Xc60	2011	Trailer module (TRM)	Read codes		
VOLVO	Xc60	2011	Trailer module (TRM)	Erase codes		
VOLVO	Xc60	2011	Trailer module (TRM)	Freeze frame		
VOLVO	Xc60	2011	Multimedia module (MMM)	ECU identification		
VOLVO	Xc60	2011	Multimedia module (MMM)	Read codes		
VOLVO	Xc60	2011	Multimedia module (MMM)	Erase codes		
VOLVO	Xc60	2011	Multimedia module (MMM)	Freeze frame		
VOLVO	Xc60	2011	Power operated tailgate module (POT)	ECU identification		
VOLVO	Xc60	2011	Power operated tailgate module (POT)	Read codes		
VOLVO	Xc60	2011	Power operated tailgate module (POT)	Erase codes		
VOLVO	Xc60	2011	Power operated tailgate module (POT)	Freeze frame		
VOLVO	Xc60	2011	Power operated tailgate module (POT)	Identify function		
VOLVO	Xc60	2011	Forward sensing module (FSM)	ECU identification		
VOLVO	Xc60	2011	Forward sensing module (FSM)	Read codes		
VOLVO	Xc60	2011	Forward sensing module (FSM)	Erase codes		
VOLVO	Xc60	2011	Forward sensing module (FSM)	Freeze frame		
VOLVO	Xc60	2011	Forward sensing module (FSM)	Special functions		
VOLVO	Xc60	2011	Forward sensing module (FSM)	Identify function		
VOLVO	Xc60	2011	Audio module (AUDI)	ECU identification		
VOLVO	Xc60	2011	Audio module (AUDI)	Read codes		
VOLVO	Xc60	2011	Audio module (AUDI)	Erase codes		
VOLVO	Xc60	2011	Audio module (AUDI)	Freeze frame		
VOLVO	Xc60	2011	Audio module (AUDI)	Special functions		
VOLVO	Xc60	2011	Audio module (AUDI)	Identify function		
VOLVO	Xc60	2011	Engine control module (ECM)	ECU identification		
VOLVO	Xc60	2011	Engine control module (ECM)	Read codes		
VOLVO	Xc60	2011	Engine control module (ECM)	Erase codes		
VOLVO	Xc60	2011	Engine control module (ECM)	Freeze frame		
VOLVO	Xc60	2011	Transmission control module (TCM)	Active test		
VOLVO	Xc60	2011	Transmission control module (TCM)	Special functions		
VOLVO	Xc60	2011	Transmission control module (TCM)	Identify function		
VOLVO	Xc60	2011	Transmission control module (TCM)	Resetting the counter for the particle filter		
VOLVO	Xc60	2011	Differential electronic module (DEM)	ECU identification		
VOLVO	Xc60	2011	Differential electronic module (DEM)	Read codes		
VOLVO	Xc60	2011	Differential electronic module (DEM)	Erase codes		
VOLVO	Xc60	2011	Differential electronic module (DEM)	Freeze frame		
VOLVO	Xc60	2011	Differential electronic module (DEM)	Special functions		
VOLVO	Xc60	2011	Differential electronic module (DEM)	Identify function		
VOLVO	Xc60	2011	Engine control module (ECM)	ECU identification		
VOLVO	Xc60	2011	Engine control module (ECM)	Read codes		
VOLVO	Xc60	2011	Engine control module (ECM)	Erase codes		
VOLVO	Xc60	2011	Engine control module (ECM)	Freeze frame		
VOLVO	Xc60	2011	Engine control module (ECM)	Special functions		
VOLVO	Xc60	2011	Engine control module (ECM)	Identify function		
VOLVO	Xc60	2011	Central electronic module (CEM)	ECU identification		
VOLVO	Xc60	2011	Central electronic module (CEM)	Read codes		
VOLVO	Xc60	2011	Central electronic module (CEM)	Erase codes		
VOLVO	Xc60	2011	Central electronic module (CEM)	Freeze frame		
VOLVO	Xc60	2011	Central electronic module (CEM)	Special functions		
VOLVO	Xc60	2011	Central electronic module (CEM)	Identify function		
VOLVO	Xc60	2011	Central electronic module (CEM)	Resetting the clutch pedal counter		
VOLVO	Xc60	2011	Central electronic module (CEM)	Checking the oil level		
VOLVO	Xc60	2011	Central electronic module (CEM)	Checking the oil pressure value		
VOLVO	Xc60	2011	Central electronic module (CEM)	Adjusting calculated oil level/oil quality		
VOLVO	Xc60	2011	Central electronic module (CEM)	Adaption turbo system		
VOLVO	Xc60	2011	Central electronic module (CEM)	Fuel pump activation for vehicles without fuel pump module (PEM)		
VOLVO	Xc60	2011	Central electronic module (CEM)	Resetting the clutch pedal counter		
VOLVO	Xc60	2011	Central electronic module (CEM)	Initial adaptation		
VOLVO	Xc60	2011	Central electronic module (CEM)	Adaptation of the throttle unit		
VOLVO	Xc60	2011	Central electronic module (CEM)	Resetting the oil consumption values		
VOLVO	Xc60	2011	Central electronic module (CEM)	Adaption of oil level sensor		
VOLVO	Xc60	2011	Central electronic module (CEM)	Checkline injectors		
VOLVO	Xc60	2011	Central electronic module (CEM)	Active test		
VOLVO	Xc60	2011	Central electronic module (CEM)	Special functions		
VOLVO	Xc60	2011	Central electronic module (CEM)	Identify function		
VOLVO	Xc60	2011	Transmission control module (TCM)	ECU identification		
VOLVO	Xc60	2011	Transmission control module (TCM)	Read codes		
VOLVO	Xc60	2011	Transmission control module (TCM)	Erase codes		
VOLVO	Xc60	2011	Transmission control module (TCM)	Freeze frame		
VOLVO	Xc60	2011	Transmission control module (TCM)	Identify function		
VOLVO	Xc60	2011	Park brake module (PBM)	ECU identification		
VOLVO	Xc60	2011	Park brake module (PBM)	Read codes		
VOLVO	Xc60	2011	Park brake module (PBM)	Erase codes		
VOLVO	Xc60	2011	Park brake module (PBM)	Freeze frame		
VOLVO	Xc60	2011	Park brake module (PBM)	Special functions		
VOLVO	Xc60	2011	Park brake module (PBM)	Identify function		
VOLVO	Xc60	2011	Driver door module (DOM)	ECU identification		
VOLVO	Xc60	2011	Driver door module (DOM)	Read codes		
VOLVO	Xc60	2011	Driver door module (DOM)	Erase codes		
VOLVO	Xc60	2011	Driver door module (DOM)	Freeze frame		
VOLVO	Xc60	2011	Driver door module (DOM)	Special functions		
VOLVO	Xc60	2011	Driver door module (DOM)	Identify function		
VOLVO	Xc60	2011	Passenger door module (PDM)	ECU identification		
VOLVO	Xc60	2011	Passenger door module (PDM)	Read codes		
VOLVO	Xc60	2011	Passenger door module (PDM)	Erase codes		
VOLVO	Xc60	2011	Passenger door module (PDM)	Freeze frame		
VOLVO	Xc60	2011	Passenger door module (PDM)	Identify function		
VOLVO	Xc60	2011	Supplemental restraint system module (SR5)	ECU identification		
VOLVO	Xc60	2011	Supplemental restraint system module (SR5)	Read codes		
VOLVO	Xc60	2011	Supplemental restraint system module (SR5)	Erase codes		
VOLVO	Xc60	2011	Supplemental restraint system module (SR5)	Freeze frame		
VOLVO	Xc60	2011	Supplemental restraint system module (SR5)	Special functions		
VOLVO	Xc60	2011	Supplemental restraint system module (SR5)	Identify function		
VOLVO	Xc60	2011	Park brake module (PBM)	ECU identification		
VOLVO	Xc60	2011	Park brake module (PBM)	Read codes		
VOLVO	Xc60	2011	Park brake module (PBM)	Erase codes		
VOLVO	Xc60	2011	Park brake module (PBM)	Freeze frame		
VOLVO	Xc60	2011	Park brake module (PBM)	Special functions		
VOLVO	Xc60	2011	Park brake module (PBM)	Identify function		
VOLVO	Xc60	2011	Driver door module (DOM)	ECU identification		
VOLVO	Xc60	2011	Driver door module (DOM)	Read codes		
VOLVO	Xc60	2011	Driver door module (DOM)	Erase codes		
VOLVO	Xc60	2011	Driver door module (DOM)	Freeze frame		
VOLVO	Xc60	2011	Driver door module (DOM)	Special functions		
VOLVO	Xc60	2011	Driver door module (DOM)	Identify function		
VOLVO	Xc60	2011	Passenger door module (PDM)	ECU identification		
VOLVO	Xc60	2011	Passenger door module (PDM)	Read codes		
VOLVO	Xc60	2011	Passenger door module (PDM)	Erase codes		
VOLVO	Xc60	2011	Passenger door module (PDM)	Freeze frame		
VOLVO	Xc60	2011	Passenger door module (PDM)	Identify function		
VOLVO	Xc60	2011	Climate control module (CCM)	ECU identification		
VOLVO	Xc60	2011	Climate control module (CCM)	Read codes		
VOLVO	Xc60	2011	Climate control module (CCM)	Erase codes		
VOLVO	Xc60	2011	Climate control module (CCM)	Freeze frame		
VOLVO	Xc60	2011	Climate control module (CCM)	Programm values		
VOLVO	Xc60	2011	Climate control module (CCM)	Reading out electric damper motor, actual/preset range and tolerance limit		
VOLVO	Xc60	2011	Climate control module (CCM)	Programming electric damper motor, actual/preset range and tolerance limit		
VOLVO	Xc60	2011	Climate control module (CCM)	Activation of blower fan run-on		
VOLVO	Xc60	2011	Airflow setting in rear passenger compartment			
VOLVO	Xc60	2011	Programming the climate control module (CCM)			
VOLVO	Xc60	2011	Calibrating the climate control module (CCM)			
VOLVO	Xc60	2011	Identifying components on the LN network that belong to the climate control system (CCM)			
VOLVO	Xc60	2011	Reading off programmed values			
VOLVO	Xc60	2011	Reading out electric damper motor, actual/preset range and tolerance limit			
VOLVO	Xc60	2011	Programming electric damper motor, actual/preset range and tolerance limit			
VOLVO	Xc60	2011	Activation of blower fan run-on			
VOLVO	Xc60	2011	Airflow setting in rear passenger compartment			
VOLVO	Xc60	2011	Programming the climate control module (CCM)			
VOLVO	Xc60	2011	Calibration			
VOLVO	Xc60	2011	Restart of the brake control module (BCM)			
VOLVO	Xc60	2011	Open circuit on MOST-cable (only vehicles with Infotainment control module (ICM))			
VOLVO	Xc60	2011	Communication on MOST			
VOLVO	Xc60	2011	Check video signal (only vehicles with Infotainment control module, ICM)			
VOLVO	Xc60	2011	Central lock motors, activating			
VOLVO	Xc60	2011	Initializing the window in the front door			
VOLVO	Xc60	2011	Initializing the window in the rear door			
VOLVO	Xc60	2011	Central lock motors, activating			
VOLVO	Xc60	2011	Activating wipers, front/rear			
VOLVO	Xc60	2011	Initial adaptation			
VOLVO	Xc60	2011	Calibration			
VOLVO	Xc60	2011	Activation and service			
VOLVO	Xc60	2011	Calibration angle sensor			
VOLVO	Xc60	2011	Activation and service			
VOLVO	Xc60	2011	Initialization of the window in the front door			
VOLVO	Xc60	2011	Initialization of the window in the rear door			
VOLVO	Xc60	2011	Central lock motors, activating			
VOLVO	Xc60	2011	Activating wipers, front/rear			
VOLVO	Xc60	2011	Initial adaptation			
VOLVO	Xc60	2011	Calibration			
VOLVO	Xc60	2011	Activation and service			
VOLVO	Xc60	2011	Initialization of the window in the front door			
VOLVO	Xc60	2011	Initialization of the window in the rear door			
VOLVO	Xc60	2011	Central lock motors, activating			
VOLVO	Xc60	2011	Activating wipers, front/rear			
VOLVO	Xc60	2011	Initial adaptation			
VOLVO	Xc60	2011	Calibration			
VOLVO	Xc60	2011	Activation and service			
VOLVO	Xc60	2011	Initialization of the window in the front door			
VOLVO	Xc60	2011	Initialization of the window in the rear door			
VOLVO	Xc60	2011	Central lock motors, activating			
VOLVO	Xc60	2011	Activating wipers, front/rear			
VOLVO	Xc60	2011	Initial adaptation			
VOLVO	Xc60	2011	Calibration			
VOLVO	Xc60	2011	Activation and service			
VOLVO	Xc60	2011	Initialization of the window in the front door			
VOLVO	Xc60	2011	Initialization of the window in the rear door			
VOLVO	Xc60	2011	Central lock motors, activating			
VOLVO	Xc60	2011	Activating wipers, front/rear			
VOLVO	Xc60	2011	Initial adaptation			
VOLVO	Xc60	2011	Calibration			
VOLVO	Xc60	2011	Activation and service			
VOLVO	Xc60	2011	Initialization of the window in the front door			
VOLVO	Xc60	2011	Initialization of the window in the rear door			
VOLVO	Xc60	2011	Central lock motors, activating			
VOLVO	Xc60	2011	Activating wipers, front/rear			
VOLVO	Xc60	2011	Initial adaptation			
VOLVO	Xc60	2011	Calibration			
VOLVO	Xc60	2011	Activation and service			
VOLVO	Xc60	2011	Initialization of the window in the front door			
VOLVO	Xc60	2011	Initialization of the window in the rear door			
VOLVO	Xc60	2011	Central lock motors, activating			
VOLVO	Xc60	2011	Activating wipers, front/rear			
VOLVO	Xc60	2011	Initial adaptation			
VOLVO	Xc60	2011	Calibration			
VOLVO	Xc60	2011	Activation and service			
VOLVO	Xc60	2011	Initialization of the window in the front door			
VOLVO	Xc60	2011	Initialization of the window in the rear door			
VOLVO	Xc60	2011	Central lock motors, activating			
VOLVO	Xc60	2011	Activating wipers, front/rear			
VOLVO	Xc60	2011	Initial adaptation			
VOLVO	Xc60	2011	Calibration			
VOLVO	Xc60	2011	Activation and service			
VOLVO	Xc60	2011	Initialization of the window in the front door			
VOLVO	Xc60	2011	Initialization of the window in the rear door			
VOLVO	Xc60	2011	Central lock motors, activating			
VOLVO	Xc60	2011	Activating wipers, front/rear			
VOLVO	Xc60	2011	Initial adaptation			
VOLVO	Xc60	2011	Calibration			
VOLVO	Xc60	2011	Activation and service			
VOLVO	Xc60	2011	Initialization of the window in the front door			
VOLVO	Xc60	2011	Initialization of the window in the rear door			
VOLVO	Xc60	2011	Central lock motors, activating			
VOLVO	Xc60	2011	Activating wipers, front/rear			
VOLVO	Xc60	2011	Initial adaptation			
VOLVO	Xc60	2011	Calibration			
VOLVO	Xc60	2011	Activation and service			
VOLVO	Xc60	2011	Initialization of the window in the front door			
VOLVO	Xc60	2011	Initialization of the window in the rear door			
VOLVO	Xc60					

VOLVO X70 (08)	2009	Phone module (PHM)	Read codes	
VOLVO X70 (08)	2009	Phone module (PHM)	Erase codes	
VOLVO X70 (08)	2009	Phone module (PHM)	Freeze frame	
VOLVO X70 (08)	2009	Phone module (PHM)	Special functions	
VOLVO X70 (08)	2009	Engine control module (ECM)	Special functions	
VOLVO X70 (08)	2009	Engine control module (ECM)	Special functions	Reinitializing the reserve battery
VOLVO X70 (08)	2009	Engine control module (ECM)	Special functions	Quick test of the fuel tank system (USA/CDN)
VOLVO X70 (08)	2009	Engine control module (ECM)	Special functions	Adaptation of the exhaust gas recirculation (EGR) valve
VOLVO X70 (08)	2009	Engine control module (ECM)	Special functions	Adaptation of the intake air temperature sensor
VOLVO X70 (08)	2009	Engine control module (ECM)	Special functions	Adaptation of the quick channel throttle
VOLVO X70 (08)	2009	Engine control module (ECM)	Special functions	Adaptation of the turbo control motor
VOLVO X70 (08)	2009	Engine control module (ECM)	Special functions	Adaptation of heated oxygen sensor
VOLVO X70 (08)	2009	Engine control module (ECM)	Special functions	Adaptation of the intake air pressure sensor
VOLVO X70 (08)	2009	Engine control module (ECM)	Special functions	Adaptation of differential pressure sensor particle filter
VOLVO X70 (08)	2009	Engine control module (ECM)	Special functions	Adaptation of fuel pressure control valve
VOLVO X70 (08)	2009	Engine control module (ECM)	Special functions	Resetting of soot particles
VOLVO X70 (08)	2009	Engine control module (ECM)	Special functions	Combustion indicators
VOLVO X70 (08)	2009	Engine control module (ECM)	Special functions	Check valves
VOLVO X70 (08)	2009	Engine control module (ECM)	Special functions	Adjusting calculated oil level
VOLVO X70 (08)	2009	Central electronic module (CEM)	Special functions	Fuel pump activation for vehicles without fuel pump module (PEM)
VOLVO X70 (08)	2009	Central electronic module (CEM)	Special functions	Resetting the clutch pedal counter
VOLVO X70 (08)	2009	Park brake module (PBM)	ECU identification	
VOLVO X70 (08)	2010	Engine control module (ECM)	Read codes	
VOLVO X70 (08)	2010	Engine control module (ECM)	Erase codes	
VOLVO X70 (08)	2010	Engine control module (ECM)	Freeze frame	
VOLVO X70 (08)	2010	Engine control module (ECM)	Special functions	Readiness code (USA/CDN)
VOLVO X70 (08)	2010	Engine control module (ECM)	Special functions	Reading out of the DTC (USA/CDN)
VOLVO X70 (08)	2010	Engine control module (ECM)	Special functions	Resetting active values
VOLVO X70 (08)	2010	Engine control module (ECM)	Special functions	Quick test of the fuel tank system
VOLVO X70 (08)	2010	Engine control module (ECM)	Special functions	Reading out permanent diagnostic trouble codes (USA/CDN)
VOLVO X70 (08)	2010	Transmission control module (TCM)	ECU identification	
VOLVO X70 (08)	2010	Transmission control module (TCM)	Read codes	
VOLVO X70 (08)	2010	Transmission control module (TCM)	Erase codes	
VOLVO X70 (08)	2010	Transmission control module (TCM)	Freeze frame	
VOLVO X70 (08)	2010	Transmission control module (TCM)	Special functions	Resetting adaptation
VOLVO X70 (08)	2010	Transmission control module (TCM)	Special functions	Resetting the transmission fluid change* counter
VOLVO X70 (08)	2010	Transmission control module (TCM)	Special functions	Calibration of rear position sensor
VOLVO X70 (08)	2010	Transmission control module (TCM)	Special functions	Activating gear indication
VOLVO X70 (08)	2010	Transmission control module (TCM)	Special functions	Control module adaptation
VOLVO X70 (08)	2010	Transmission control module (TCM)	ECU identification	Readout permanent diagnostic trouble codes (USA/CDN)
VOLVO X70 (08)	2010	Differential electronic module (DEM)	Read codes	
VOLVO X70 (08)	2010	Differential electronic module (DEM)	Erase codes	
VOLVO X70 (08)	2010	Differential electronic module (DEM)	Freeze frame	
VOLVO X70 (08)	2010	Differential electronic module (DEM)	Special functions	Accumulator draining
VOLVO X70 (08)	2010	Central electronic module (CEM)	ECU identification	
VOLVO X70 (08)	2010	Central electronic module (CEM)	Read codes	
VOLVO X70 (08)	2010	Central electronic module (CEM)	Erase codes	
VOLVO X70 (08)	2010	Central electronic module (CEM)	Freeze frame	
VOLVO X70 (08)	2010	Central electronic module (CEM)	Special functions	Pre-delivery service for new car
VOLVO X70 (08)	2010	Central electronic module (CEM)	Special functions	Restoring supplemental restraint system
VOLVO X70 (08)	2010	Central electronic module (CEM)	Special functions	Readout of alarm status
VOLVO X70 (08)	2010	Central electronic module (CEM)	Special functions	Workshop mode (TPMS)
VOLVO X70 (08)	2010	Central electronic module (CEM)	Special functions	Read-out and reprogramming a/c lock
VOLVO X70 (08)	2010	Central electronic module (CEM)	Special functions	Reading off power supply position
VOLVO X70 (08)	2010	Central electronic module (CEM)	Special functions	Programming of rear window defroster when reversing
VOLVO X70 (08)	2010	Central electronic module (CEM)	Special functions	Checking of rear window defroster when reversing
VOLVO X70 (08)	2010	Central electronic module (CEM)	Special functions	Readout of current from battery monitoring sensor
VOLVO X70 (08)	2010	Central electronic module (CEM)	Special functions	Readout of information stand-by current
VOLVO X70 (08)	2010	Central electronic module (CEM)	Special functions	Restoring the information to zero on power supply when replacing the battery monitoring sensor (BMS)
VOLVO X70 (08)	2010	Central electronic module (CEM)	Special functions	Ejection of key
VOLVO X70 (08)	2010	Central electronic module (CEM)	Special functions	Operating calibration of roof hatch
VOLVO X70 (08)	2010	Central electronic module (CEM)	Special functions	Setting of roof hatch mode for the instrumentation
VOLVO X70 (08)	2010	Central electronic module (CEM)	Special functions	Activating wipers, front/rear
VOLVO X70 (08)	2010	Central electronic module (CEM)	Special functions	Manual battery test
VOLVO X70 (08)	2010	Central electronic module (CEM)	Special functions	Programming safety lighting.
VOLVO X70 (08)	2010	Driver door module (DOM)	ECU identification	
VOLVO X70 (08)	2010	Driver door module (DOM)	Read codes	
VOLVO X70 (08)	2010	Driver door module (DOM)	Erase codes	
VOLVO X70 (08)	2010	Driver door module (DOM)	Freeze frame	
VOLVO X70 (08)	2010	Driver door module (DOM)	Special functions	Installing the window in the front door
VOLVO X70 (08)	2010	Driver door module (DOM)	Special functions	Installing the window in the rear door
VOLVO X70 (08)	2010	Driver door module (DOM)	Special functions	Central lock motors, activating
VOLVO X70 (08)	2010	Passenger door module (PDM)	ECU identification	
VOLVO X70 (08)	2010	Passenger door module (PDM)	Read codes	
VOLVO X70 (08)	2010	Passenger door module (PDM)	Erase codes	
VOLVO X70 (08)	2010	Passenger door module (PDM)	Freeze frame	
VOLVO X70 (08)	2010	Passenger door module (PDM)	Special functions	Passenger door module (PDM)
VOLVO X70 (08)	2010	Passenger door module (PDM)	Special functions	ECU identification
VOLVO X70 (08)	2010	Park brake module (PBM)	Read codes	
VOLVO X70 (08)	2010	Park brake module (PBM)	Erase codes	
VOLVO X70 (08)	2010	Park brake module (PBM)	Freeze frame	
VOLVO X70 (08)	2010	Park brake module (PBM)	Special functions	Calibration angle sensor
VOLVO X70 (08)	2010	Park brake module (PBM)	Special functions	Activation and service
VOLVO X70 (08)	2010	Supplemental restraint system module (SRS)	ECU identification	
VOLVO X70 (08)	2010	Supplemental restraint system module (SRS)	Read codes	
VOLVO X70 (08)	2010	Supplemental restraint system module (SRS)	Erase codes	
VOLVO X70 (08)	2010	Supplemental restraint system module (SRS)	Freeze frame	
VOLVO X70 (08)	2010	Supplemental restraint system module (SRS)	Special functions	Calibrating the occupant weight sensor (OWS)
VOLVO X70 (08)	2010	Supplemental restraint system module (SRS)	Special functions	Powering the SRS system
VOLVO X70 (08)	2010	Supplemental restraint system module (SRS)	Special functions	Checking the PAD-light
VOLVO X70 (08)	2010	Brake control module (BCM)	ECU identification	
VOLVO X70 (08)	2010	Brake control module (BCM)	Read codes	
VOLVO X70 (08)	2010	Brake control module (BCM)	Erase codes	
VOLVO X70 (08)	2010	Brake control module (BCM)	Freeze frame	
VOLVO X70 (08)	2010	Brake control module (BCM)	Special functions	Calibration
VOLVO X70 (08)	2010	Steering angle sensor module (SAS)	ECU identification	
VOLVO X70 (08)	2010	Steering angle sensor module (SAS)	Read codes	
VOLVO X70 (08)	2010	Steering angle sensor module (SAS)	Erase codes	
VOLVO X70 (08)	2010	Steering angle sensor module (SAS)	Freeze frame	
VOLVO X70 (08)	2010	Driver information module (DIM)	ECU identification	
VOLVO X70 (08)	2010	Driver information module (DIM)	Read codes	
VOLVO X70 (08)	2010	Driver information module (DIM)	Erase codes	
VOLVO X70 (08)	2010	Driver information module (DIM)	Freeze frame	
VOLVO X70 (08)	2010	Driver information module (DIM)	Special functions	Programmable control module
VOLVO X70 (08)	2010	Driver information module (DIM)	Special functions	Open-circuit in the MOST cable.
VOLVO X70 (08)	2010	Driver information module (DIM)	Special functions	Checking MOST communication
VOLVO X70 (08)	2010	Climate control module (CCM)	ECU identification	
VOLVO X70 (08)	2010	Climate control module (CCM)	Read codes	
VOLVO X70 (08)	2010	Climate control module (CCM)	Erase codes	
VOLVO X70 (08)	2010	Climate control module (CCM)	Freeze frame	
VOLVO X70 (08)	2010	Climate control module (CCM)	Special functions	Resetting the odometer setting
VOLVO X70 (08)	2010	Climate control module (CCM)	Special functions	Resetting the service reminder indicator (SR)
VOLVO X70 (08)	2010	Climate control module (CCM)	Special functions	Testing all indicators and lamps in the driver information module (DIM)
VOLVO X70 (08)	2010	Climate control module (CCM)	Special functions	Programming seatbelt reminder in backseat
VOLVO X70 (08)	2010	Climate control module (CCM)	Special functions	Programming message, seatbelt reminder
VOLVO X70 (08)	2010	Climate control module (CCM)	Special functions	Programming the driver information module (DIM)
VOLVO X70 (08)	2010	Climate control module (CCM)	Special functions	Read-out of fuel volume.
VOLVO X70 (08)	2010	Keyless vehicle module (KVM)	ECU identification	
VOLVO X70 (08)	2010	Keyless vehicle module (KVM)	Read codes	
VOLVO X70 (08)	2010	Keyless vehicle module (KVM)	Erase codes	
VOLVO X70 (08)	2010	Keyless vehicle module (KVM)	Freeze frame	
VOLVO X70 (08)	2010	Keyless vehicle module (KVM)	Special functions	Calibrating the climate control module (CCM)
VOLVO X70 (08)	2010	Keyless vehicle module (KVM)	Special functions	Identifying components on the LIN network that belong to the climate control system (CCM)
VOLVO X70 (08)	2010	Power seat module (PSM)	ECU identification	
VOLVO X70 (08)	2010	Power seat module (PSM)	Read codes	
VOLVO X70 (08)	2010	Power seat module (PSM)	Erase codes	
VOLVO X70 (08)	2010	Power seat module (PSM)	Freeze frame	
VOLVO X70 (08)	2010	Power seat module (PSM)	Special functions	Reading off current value
VOLVO X70 (08)	2010	Power seat module (PSM)	Special functions	Programming the evaporator, climate control module (CCM)
VOLVO X70 (08)	2010	Power seat module (PSM)	Special functions	Activation of blow fan run-on
VOLVO X70 (08)	2010	Power seat module (PSM)	Special functions	Airflow setting in rear passenger compartment
VOLVO X70 (08)	2010	Power seat module (PSM)	Special functions	Programming the climate control module (CCM)
VOLVO X70 (08)	2010	Power seat module (PSM)	Special functions	Action for filling temperature and cold draught in passenger compartment
VOLVO X70 (08)	2010	Power seat module (PSM)	ECU identification	Reset view mirror light sensitivity.
VOLVO X70 (08)	2010	Headlight control module (HCM)	Read codes	
VOLVO X70 (08)	2010	Headlight control module (HCM)	Erase codes	
VOLVO X70 (08)	2010	Headlight control module (HCM)	Freeze frame	
VOLVO X70 (08)	2010	Headlight control module (HCM)	Special functions	Checking all antennas
VOLVO X70 (08)	2010	Headlight control module (HCM)	Special functions	Check the communication with the remote control receiver.
VOLVO X70 (08)	2010	Headlight control module (HCM)	Special functions	Remote control
VOLVO X70 (08)	2010	Headlight control module (HCM)	Special functions	Test of internal memory
VOLVO X70 (08)	2010	Headlight control module (HCM)	Special functions	Activation of quick-lock motors.
VOLVO X70 (08)	2010	Combustion preheater module (CPM)	ECU identification	
VOLVO X70 (08)	2010	Combustion preheater module (CPM)	Read codes	
VOLVO X70 (08)	2010	Combustion preheater module (CPM)	Erase codes	
VOLVO X70 (08)	2010	Combustion preheater module (CPM)	Freeze frame	
VOLVO X70 (08)	2010	Combustion preheater module (CPM)	Special functions	Quick test of the function of the additional/parking heater
VOLVO X70 (08)	2010	Combustion preheater module (CPM)	Special functions	Cooling of the cooling system
VOLVO X70 (08)	2010	Combustion preheater module (CPM)	Special functions	Activating components
VOLVO X70 (08)	2010	Combustion preheater module (CPM)	Special functions	Filling of fuel system auxiliary heater
VOLVO X70 (08)	2010	Combustion preheater module (CPM)	Special functions	Identification of the heater
VOLVO X70 (08)	2010	Audio module (AUD)	ECU identification	
VOLVO X70 (08)	2010	Audio module (AUD)	Read codes	
VOLVO X70 (08)	2010	Audio module (AUD)	Erase codes	
VOLVO X70 (08)	2010	Audio module (AUD)	Freeze frame	
VOLVO X70 (08)	2010	Suspension module (SUM)	ECU identification	
VOLVO X70 (08)	2010	Suspension module (SUM)	Read codes	
VOLVO X70 (08)	2010	Suspension module (SUM)	Erase codes	
VOLVO X70 (08)	2010	Suspension module (SUM)	Freeze frame	
VOLVO X70 (08)	2010	Suspension module (SUM)	Special functions	Calibration
VOLVO X70 (08)	2010	Parking assistance module (PAM)	ECU identification	
VOLVO X70 (08)	2010	Parking assistance module (PAM)	Read codes	
VOLVO X70 (08)	2010	Parking assistance module (PAM)	Erase codes	
VOLVO X70 (08)	2010	Parking assistance module (PAM)	Freeze frame	
VOLVO X70 (08)	2010	Parking assistance module (PAM)	Special functions	Activation
VOLVO X70 (08)	2010	Parking assistance module (PAM)	Special functions	Calibration of position sensor
VOLVO X70 (08)	2010	High level display front (HLD)	ECU identification	
VOLVO X70 (08)	2010	High level display front (HLD)	Read codes	
VOLVO X70 (08)	2010	High level display front (HLD)	Erase codes	
VOLVO X70 (08)	2010	High level display front (HLD)	Freeze frame	
VOLVO X70 (08)	2010	High level display front (HLD)	Special functions	Programming of parking assistance module (PAM)
VOLVO X70 (08)	2010	Trailer module (TRM)	ECU identification	
VOLVO X70 (08)	2010	Trailer module (TRM)	Read codes	
VOLVO X70 (08)	2010	Trailer module (TRM)	Erase codes	
VOLVO X70 (08)	2010	Trailer module (TRM)	Freeze frame	
VOLVO X70 (08)	2010	High level display front (HLD)	Special functions	Read codes

VOLVO X90	2010	Engine control module (ECM)	ECU identification		Adaptation of the throttle unit Readiness code Quick test of exhaust camshaft control Quick test of intake camshaft control Quick test of fuel pump system (USA/CDN) Quick test of the fuel pump (JP)
VOLVO X90	2010	Engine control module (ECM)	Erase codes		
VOLVO X90	2010	Engine control module (ECM)	Freeze frame		
VOLVO X90	2010	Engine control module (ECM)	Active test		
VOLVO X90	2010	Engine control module (ECM)	Special functions		
VOLVO X90	2010	Engine control module (ECM)	Special functions		
VOLVO X90	2010	Engine control module (ECM)	Special functions		
VOLVO X90	2010	Engine control module (ECM)	Special functions		
VOLVO X90	2010	Engine control module (ECM)	Special functions		
VOLVO X90	2010	Brake control module (BCM)	ECU identification		
VOLVO X90	2010	Brake control module (BCM)	Erase codes		
VOLVO X90	2010	Brake control module (BCM)	Freeze frame		
VOLVO X90	2010	Brake control module (BCM)	Active test		
VOLVO X90	2010	Brake control module (BCM)	Special functions		
VOLVO X90	2010	Brake control module (BCM)	Special functions		
VOLVO X90	2010	Steering angle sensor module (SAS)	ECU identification		
VOLVO X90	2010	Steering angle sensor module (SAS)	Erase codes		
VOLVO X90	2010	Steering angle sensor module (SAS)	Freeze frame		
VOLVO X90	2010	Headlight control module (HCM)	ECU identification		
VOLVO X90	2010	Headlight control module (HCM)	Erase codes		
VOLVO X90	2010	Headlight control module (HCM)	Freeze frame		
VOLVO X90	2010	Headlight control module (HCM)	Special functions		
VOLVO X90	2010	Transmission control module (TCM)	ECU identification		
VOLVO X90	2010	Transmission control module (TCM)	Erase codes		
VOLVO X90	2010	Transmission control module (TCM)	Freeze frame		
VOLVO X90	2010	Differential electronic module (DEM)	ECU identification		
VOLVO X90	2010	Differential electronic module (DEM)	Erase codes		
VOLVO X90	2010	Differential electronic module (DEM)	Freeze frame		
VOLVO X90	2010	Supplemental restraint system module (SRS)	ECU identification		
VOLVO X90	2010	Supplemental restraint system module (SRS)	Erase codes		
VOLVO X90	2010	Supplemental restraint system module (SRS)	Freeze frame		
VOLVO X90	2010	Supplemental restraint system module (SRS)	Special functions		
VOLVO X90	2010	Supplemental restraint system module (SRS)	Special functions		
VOLVO X90	2010	Supplemental restraint system module (SRS)	Special functions		
VOLVO X90	2010	Supplemental restraint system module (SRS)	Special functions		
VOLVO X90	2010	Driver door module (DOM)	ECU identification		
VOLVO X90	2010	Driver door module (DOM)	Erase codes		
VOLVO X90	2010	Driver door module (DOM)	Freeze frame		
VOLVO X90	2010	Driver door module (DOM)	Active test		
VOLVO X90	2010	Driver door module (DOM)	Special functions		
VOLVO X90	2010	Driver door module (DOM)	Special functions		
VOLVO X90	2010	Driver door module (DOM)	Special functions		
VOLVO X90	2010	Driver information module (DIM)	ECU identification		
VOLVO X90	2010	Driver information module (DIM)	Erase codes		
VOLVO X90	2010	Driver information module (DIM)	Freeze frame		
VOLVO X90	2010	Driver information module (DIM)	Special functions		
VOLVO X90	2010	Driver information module (DIM)	Special functions		
VOLVO X90	2010	Passenger door module (PDM)	ECU identification		
VOLVO X90	2010	Passenger door module (PDM)	Erase codes		
VOLVO X90	2010	Passenger door module (PDM)	Freeze frame		
VOLVO X90	2010	Passenger door module (PDM)	Active test		
VOLVO X90	2010	Passenger door module (PDM)	Special functions		
VOLVO X90	2010	Passenger door module (PDM)	Special functions		
VOLVO X90	2010	Driver information module (DIM)	ECU identification		
VOLVO X90	2010	Driver information module (DIM)	Erase codes		
VOLVO X90	2010	Driver information module (DIM)	Freeze frame		
VOLVO X90	2010	Driver information module (DIM)	Special functions		
VOLVO X90	2010	Driver information module (DIM)	Special functions		
VOLVO X90	2010	Climate control module (CCM)	ECU identification		
VOLVO X90	2010	Climate control module (CCM)	Erase codes		
VOLVO X90	2010	Climate control module (CCM)	Freeze frame		
VOLVO X90	2010	Climate control module (CCM)	Programmed values		
VOLVO X90	2010	Climate control module (CCM)	Special functions		
VOLVO X90	2010	Climate control module (CCM)	Special functions		
VOLVO X90	2010	Climate control module (CCM)	Special functions		
VOLVO X90	2010	Climate control module (CCM)	Special functions		
VOLVO X90	2010	Climate control module (CCM)	Special functions		
VOLVO X90	2010	Information control module (ICM)	ECU identification		
VOLVO X90	2010	Information control module (ICM)	Erase codes		
VOLVO X90	2010	Information control module (ICM)	Freeze frame		
VOLVO X90	2010	Information control module (ICM)	Active test		
VOLVO X90	2010	Information control module (ICM)	Special functions		
VOLVO X90	2010	Information control module (ICM)	Special functions		
VOLVO X90	2010	Power seat module (PSM)	ECU identification		
VOLVO X90	2010	Power seat module (PSM)	Erase codes		
VOLVO X90	2010	Power seat module (PSM)	Freeze frame		
VOLVO X90	2010	Power seat module (PSM)	Active test		
VOLVO X90	2010	Power seat module (PSM)	Special functions		
VOLVO X90	2010	Power seat module (PSM)	Special functions		
VOLVO X90	2010	Power seat module (PSM)	Special functions		
VOLVO X90	2010	Subwoofer module (SUB)	ECU identification		
VOLVO X90	2010	Subwoofer module (SUB)	Erase codes		
VOLVO X90	2010	Subwoofer module (SUB)	Freeze frame		
VOLVO X90	2010	Accessory electronic module (AEM)	ECU identification		
VOLVO X90	2010	Accessory electronic module (AEM)	Erase codes		
VOLVO X90	2010	Accessory electronic module (AEM)	Freeze frame		
VOLVO X90	2010	Accessory electronic module (AEM)	Active test		
VOLVO X90	2010	Rear electronic module (REM)	ECU identification		
VOLVO X90	2010	Rear electronic module (REM)	Erase codes		
VOLVO X90	2010	Rear electronic module (REM)	Freeze frame		
VOLVO X90	2010	Rear electronic module (REM)	Special functions		
VOLVO X90	2010	Rear electronic module (REM)	Special functions		
VOLVO X90	2010	Integrated audio module (IAM)	ECU identification		
VOLVO X90	2010	Integrated audio module (IAM)	Erase codes		
VOLVO X90	2010	Integrated audio module (IAM)	Freeze frame		
VOLVO X90	2010	Integrated audio module (IAM)	Active test		
VOLVO X90	2010	Phone module (PHM)	ECU identification		
VOLVO X90	2010	Phone module (PHM)	Erase codes		
VOLVO X90	2010	Phone module (PHM)	Freeze frame		
VOLVO X90	2010	Phone module (PHM)	Active test		
VOLVO X90	2010	Remote digital audio receiver (RDAR)	ECU identification		
VOLVO X90	2010	Remote digital audio receiver (RDAR)	Erase codes		
VOLVO X90	2010	Remote digital audio receiver (RDAR)	Freeze frame		
VOLVO X90	2010	Upper electronic module (UEM)	ECU identification		
VOLVO X90	2010	Upper electronic module (UEM)	Erase codes		
VOLVO X90	2010	Upper electronic module (UEM)	Freeze frame		
VOLVO X90	2010	Upper electronic module (UEM)	Active test		
VOLVO X90	2010	Upper electronic module (UEM)	Programmed values		
VOLVO X90	2010	Upper electronic module (UEM)	Special functions		
VOLVO X90	2010	Upper electronic module (UEM)	Special functions		
VOLVO X90	2010	Upper electronic module (UEM)	Special functions		
VOLVO X90	2010	Multimedia module (MMM)	ECU identification		
VOLVO X90	2010	Multimedia module (MMM)	Erase codes		
VOLVO X90	2010	Multimedia module (MMM)	Freeze frame		
VOLVO X90	2010	Multimedia module (MMM)	Active test		
VOLVO X90	2010	Combustion preheater module (CPM)	ECU identification		
VOLVO X90	2010	Combustion preheater module (CPM)	Erase codes		
VOLVO X90	2010	Combustion preheater module (CPM)	Freeze frame		
VOLVO X90	2010	Combustion preheater module (CPM)	Special functions		
VOLVO X90	2010	Combustion preheater module (CPM)	Special functions		
VOLVO X90	2010	Central electronic module B (CEM-HS)	ECU identification		
VOLVO X90	2010	Central electronic module B (CEM-HS)	Erase codes		
VOLVO X90	2010	Central electronic module B (CEM-HS)	Freeze frame		
VOLVO X90	2010	Central electronic module B (CEM-HS)	Active test		
VOLVO X90	2010	Engine control module (ECM)	ECU identification		
VOLVO X90	2010	Engine control module (ECM)	Erase codes		
VOLVO X90	2010	Engine control module (ECM)	Freeze frame		
VOLVO X90	2010	Transmission control module (TCM)	ECU identification		
VOLVO X90	2010	Transmission control module (TCM)	Erase codes		
VOLVO X90	2010	Transmission control module (TCM)	Freeze frame		
VOLVO X90	2010	Differential electronic module (DEM)	ECU identification		
VOLVO X90	2010	Differential electronic module (DEM)	Erase codes		
VOLVO X90	2010	Differential electronic module (DEM)	Freeze frame		
VOLVO X90	2010	Engine control module (ECM)	ECU identification		
VOLVO X90	2010	Engine control module (ECM)	Erase codes		
VOLVO X90	2010	Engine control module (ECM)	Freeze frame		
VOLVO X90	2010	Transmission control module (TCM)	ECU identification		
VOLVO X90	2010	Transmission control module (TCM)	Erase codes		
VOLVO X90	2010	Transmission control module (TCM)	Freeze frame		
VOLVO X90	2010	Calibration (only vehicles with DSTC)			
VOLVO X90	2010	Checking brake light switch adjustment			
VOLVO X90	2010	Quick-test of HCM			
VOLVO X90	2010	Programming the HCM switch function			
VOLVO X90	2010	Resetting the transmission fluid change counter			
VOLVO X90	2010	Resetting the adaptation			
VOLVO X90	2010	Control module adaptation			
VOLVO X90	2010	Activating TEST MODE			
VOLVO X90	2010	Activating gear position indicator			
VOLVO X90	2010	Programming the remote control setting			
VOLVO X90	2010	Programming soft stop			
VOLVO X90	2010	Initializing the window position			
VOLVO X90	2010	Programming soft stop			
VOLVO X90	2010	Initializing the window position			
VOLVO X90	2010	Identifying components on the LIN network that belong to the climate control system (CCM)			
VOLVO X90	2010	Calibrating the climate control module (CCM)			
VOLVO X90	2010	Programming the climate control module (CCM)			
VOLVO X90	2010	Reading off the programmed parameters in the climate control module (CCM)			
VOLVO X90	2010	Reading out electronic damper motor, actual/preset range and tolerance limit			
VOLVO X90	2010	Compartment fan afterflow, status			
VOLVO X90	2010	Reading off the result from a rine break diagnostic			
VOLVO X90	2010	Checking current values			
VOLVO X90	2010	Programming the remote control setting			
VOLVO X90	2010	Activation of installation image			
VOLVO X90	2010	Reinstalling the reserve battery			
VOLVO X90	2010	Replacing the control unit			
VOLVO X90	2010	Replacing the control module			
VOLVO X90	2010	Configuration of the siren			
VOLVO X90	2010	Reading the programmed values			
VOLVO X90	2010	Activating and reading off sun roof parameters			
VOLVO X90	2010	Read out the stored ID numbers for the tyre pressure sensors			
VOLVO X90	2010	Activating components and functions			
VOLVO X90	2010	Programming the additional and parking heater			
VOLVO X90	2010	Reducing the adaption values			
VOLVO X90	2010	Reading off JUMPR (USA/CDN)			
VOLVO X90	2010	Resetting adaption			
VOLVO X90	2010	Resetting the transmission fluid change [*] counter			
VOLVO X90	2010	Activating the adaption			
VOLVO X90	2010	Calibration of gear position sensor			
VOLVO X90	2010	Testing the fuel pump (FP)			
VOLVO X90	2010	Readiness code (USA/CDN)			
VOLVO X90	2010	Calibration of document sensor			
VOLVO X90	2010	Resetting document sensor / transmission oil ch. gauge			
VOLVO X90	2010	Activation of breather module			
VOLVO X90	2010	Activation of servel channel throttle			
VOLVO X90	2010	Activation of turbo control motor			
VOLVO X90	2010	Activation of mass air flow sensor			
VOLVO X90	2010	Activation of differential pressure sensor filter			
VOLVO X90	2010	Activation of differential pressure sensor value			
VOLVO X90	2010	Resetting counter particle filter			
VOLVO X90	2010	Combustion of soot particles			
VOLVO X90	2010	Combustion injectors			

VOLVO XC90	2010	Engine control module (ECM)	Special functions	Checkin the oil level Adjustine calculated oil level	V1.10.001
VOLVO XC90	2010	Engine control module (ECM)	Special functions		V1.10.001
VOLVO XC90	2011	Engine control module (ECM)	ECU identification		V1.10.001
VOLVO XC90	2011	Engine control module (ECM)	Read codes		V1.10.001
VOLVO XC90	2011	Engine control module (ECM)	Erase codes		V1.10.001
VOLVO XC90	2011	Engine control module (ECM)	Freeze frame		V1.10.001
VOLVO XC90	2011	Engine control module (ECM)	Active test		V1.10.001
VOLVO XC90	2011	Engine control module (ECM)	Special functions		V1.10.001
VOLVO XC90	2011	Engine control module (ECM)	Special functions	Adaptation of the throttle unit	V1.10.001
VOLVO XC90	2011	Engine control module (ECM)	Special functions	Readout test of exhaust camshaft control	V1.10.001
VOLVO XC90	2011	Engine control module (ECM)	Special functions	Quick test of intake camshaft control	V1.10.001
VOLVO XC90	2011	Engine control module (ECM)	Special functions	Quick test of fuel tank system (USA/CDA)	V1.10.001
VOLVO XC90	2011	Engine control module (ECM)	ECU identification	Quick test of the fuel pump (FP)	V1.10.001
VOLVO XC90	2011	Central electronic module (CEM)	Read codes		V1.10.001
VOLVO XC90	2011	Central electronic module (CEM)	Erase codes		V1.10.001
VOLVO XC90	2011	Central electronic module (CEM)	Freeze frame		V1.10.001
VOLVO XC90	2011	Central electronic module (CEM)	Active test		V1.10.001
VOLVO XC90	2011	Central electronic module (CEM)	Programmed value		V1.10.001
VOLVO XC90	2011	Central electronic module (CEM)	Special functions	Reading off the alarm cause	V1.10.001
VOLVO XC90	2011	Central electronic module (CEM)	Special functions	Resetting basic settings	V1.10.001
VOLVO XC90	2011	Central electronic module (CEM)	Special functions	Programming control module	V1.10.001
VOLVO XC90	2011	Central electronic module (CEM)	Special functions	Reseting low-voltage counters	V1.10.001
VOLVO XC90	2011	Central electronic module (CEM)	Special functions	Quick test of alarm function	V1.10.001
VOLVO XC90	2011	Central electronic module (CEM)	Special functions	Resetting crash mode	V1.10.001
VOLVO XC90	2011	Central electronic module (CEM)	Special functions	Programming of short flash sequence	V1.10.001
VOLVO XC90	2011	Central electronic module (CEM)	Special functions	Pre-delivery service for new car	V1.10.001
VOLVO XC90	2011	Central electronic module (CEM)	Special functions	Remote controlled immobilization, status	V1.10.001
VOLVO XC90	2011	Brake control module (BCM)	ECU identification	Remote controlled immobilization, cause	V1.10.001
VOLVO XC90	2011	Brake control module (BCM)	Read codes		V1.10.001
VOLVO XC90	2011	Brake control module (BCM)	Erase codes		V1.10.001
VOLVO XC90	2011	Brake control module (BCM)	Freeze frame		V1.10.001
VOLVO XC90	2011	Brake control module (BCM)	Active test		V1.10.001
VOLVO XC90	2011	Brake control module (BCM)	Special functions		V1.10.001
VOLVO XC90	2011	Steering angle sensor module (SAS)	ECU identification	Calibration (only vehicles with DSTC)	V1.10.001
VOLVO XC90	2011	Steering angle sensor module (SAS)	Read codes	Checking brake light switch adjustment	V1.10.001
VOLVO XC90	2011	Steering angle sensor module (SAS)	Erase codes		V1.10.001
VOLVO XC90	2011	Steering angle sensor module (SAS)	Freeze frame		V1.10.001
VOLVO XC90	2011	Steering angle sensor module (SAS)	Active test		V1.10.001
VOLVO XC90	2011	Headlight control module (HCM)	ECU identification		V1.10.001
VOLVO XC90	2011	Headlight control module (HCM)	Read codes		V1.10.001
VOLVO XC90	2011	Headlight control module (HCM)	Erase codes		V1.10.001
VOLVO XC90	2011	Headlight control module (HCM)	Freeze frame		V1.10.001
VOLVO XC90	2011	Headlight control module (HCM)	Active test		V1.10.001
VOLVO XC90	2011	Differential electronic module (DEM)	ECU identification		V1.10.001
VOLVO XC90	2011	Differential electronic module (DEM)	Read codes		V1.10.001
VOLVO XC90	2011	Differential electronic module (DEM)	Erase codes		V1.10.001
VOLVO XC90	2011	Differential electronic module (DEM)	Freeze frame		V1.10.001
VOLVO XC90	2011	Differential electronic module (DEM)	ECU identification		V1.10.001
VOLVO XC90	2011	Transmission control module (TCM)	Read codes		V1.10.001
VOLVO XC90	2011	Transmission control module (TCM)	Erase codes		V1.10.001
VOLVO XC90	2011	Transmission control module (TCM)	Freeze frame		V1.10.001
VOLVO XC90	2011	Transmission control module (TCM)	Active test		V1.10.001
VOLVO XC90	2011	Transmission control module (TCM)	Special functions	Reseting transmission fluid change counter	V1.10.001
VOLVO XC90	2011	Transmission control module (TCM)	Special functions	Reseting the addition	V1.10.001
VOLVO XC90	2011	Transmission control module (TCM)	Special functions	Control mode adaptation	V1.10.001
VOLVO XC90	2011	Transmission control module (TCM)	Special functions	Activating TEST MODE	V1.10.001
VOLVO XC90	2011	Transmission control module (TCM)	Special functions	Activating gear indication	V1.10.001
VOLVO XC90	2011	Driver door module (DOM)	Read codes		V1.10.001
VOLVO XC90	2011	Driver door module (DOM)	Erase codes		V1.10.001
VOLVO XC90	2011	Driver door module (DOM)	Freeze frame		V1.10.001
VOLVO XC90	2011	Driver door module (DOM)	Active test		V1.10.001
VOLVO XC90	2011	Driver door module (DOM)	Special functions	Programming the remote control setting	V1.10.001
VOLVO XC90	2011	Driver door module (DOM)	Special functions	Programming soft stop	V1.10.001
VOLVO XC90	2011	Passenger door module (PDM)	ECU identification	Initialize the window position	V1.10.001
VOLVO XC90	2011	Passenger door module (PDM)	Read codes		V1.10.001
VOLVO XC90	2011	Passenger door module (PDM)	Erase codes		V1.10.001
VOLVO XC90	2011	Passenger door module (PDM)	Freeze frame		V1.10.001
VOLVO XC90	2011	Passenger door module (PDM)	Active test		V1.10.001
VOLVO XC90	2011	Passenger door module (PDM)	Special functions	Programming soft stop	V1.10.001
VOLVO XC90	2011	Passenger door module (PDM)	Special functions	Initializing the window position	V1.10.001
VOLVO XC90	2011	Driver information module (DIM)	ECU identification		V1.10.001
VOLVO XC90	2011	Driver information module (DIM)	Read codes		V1.10.001
VOLVO XC90	2011	Driver information module (DIM)	Erase codes		V1.10.001
VOLVO XC90	2011	Driver information module (DIM)	Freeze frame		V1.10.001
VOLVO XC90	2011	Driver information module (DIM)	Active test		V1.10.001
VOLVO XC90	2011	Supplemental restraint system module (SRS)	ECU identification	Programming the audible acknowledgement signal, seat belt reminder	V1.10.001
VOLVO XC90	2011	Supplemental restraint system module (SRS)	Read codes	Testing all needs and lamps in the dashboard	V1.10.001
VOLVO XC90	2011	Supplemental restraint system module (SRS)	Erase codes		V1.10.001
VOLVO XC90	2011	Supplemental restraint system module (SRS)	Freeze frame		V1.10.001
VOLVO XC90	2011	Supplemental restraint system module (SRS)	Special functions		V1.10.001
VOLVO XC90	2011	Supplemental restraint system module (SRS)	Special functions	Reseting the addition	V1.10.001
VOLVO XC90	2011	Supplemental restraint system module (SRS)	Special functions	Reseting the service indicator (SRI)	V1.10.001
VOLVO XC90	2011	Supplemental restraint system module (SRS)	Special functions	Reseting the time counter	V1.10.001
VOLVO XC90	2011	Supplemental restraint system module (SRS)	Special functions	Display of DSTC/ESC message	V1.10.001
VOLVO XC90	2011	Supplemental restraint system module (SRS)	Special functions	Programming the driver information module (DIM)	V1.10.001
VOLVO XC90	2011	Infotainment control module (ICM)	Read codes		V1.10.001
VOLVO XC90	2011	Infotainment control module (ICM)	Erase codes		V1.10.001
VOLVO XC90	2011	Infotainment control module (ICM)	Freeze frame		V1.10.001
VOLVO XC90	2011	Infotainment control module (ICM)	Active test	Reading off the result from a ring break diagnostic	V1.10.001
VOLVO XC90	2011	Infotainment control module (ICM)	Special functions		V1.10.001
VOLVO XC90	2011	Infotainment control module (ICM)	Read codes		V1.10.001
VOLVO XC90	2011	Climate control module (CCM)	Read codes		V1.10.001
VOLVO XC90	2011	Climate control module (CCM)	Erase codes		V1.10.001
VOLVO XC90	2011	Climate control module (CCM)	Freeze frame		V1.10.001
VOLVO XC90	2011	Climate control module (CCM)	Programmed values		V1.10.001
VOLVO XC90	2011	Climate control module (CCM)	Special functions		V1.10.001
VOLVO XC90	2011	Climate control module (CCM)	Special functions	Identifying components on the LIN network that belone to the climate control system (CCM)	V1.10.001
VOLVO XC90	2011	Climate control module (CCM)	Special functions	Calibrating the climate control module (CCM)	V1.10.001
VOLVO XC90	2011	Power seat module (PSM)	ECU identification	Programming the climate control module (CCM)	V1.10.001
VOLVO XC90	2011	Power seat module (PSM)	Read codes	Reading out electronic damper motor, actual/preset range and tolerance limit	V1.10.001
VOLVO XC90	2011	Power seat module (PSM)	Erase codes	Compartment fan afterblow, status	V1.10.001
VOLVO XC90	2011	Power seat module (PSM)	Freeze frame		V1.10.001
VOLVO XC90	2011	Power seat module (PSM)	Active test		V1.10.001
VOLVO XC90	2011	Power seat module (PSM)	Special functions		V1.10.001
VOLVO XC90	2011	Power seat module (PSM)	Special functions	Checking current values	V1.10.001
VOLVO XC90	2011	Global positioning system module (GPS)	ECU identification	Programming the remote control setting	V1.10.001
VOLVO XC90	2011	Global positioning system module (GPS)	Read codes		V1.10.001
VOLVO XC90	2011	Global positioning system module (GPS)	Erase codes		V1.10.001
VOLVO XC90	2011	Global positioning system module (GPS)	Freeze frame		V1.10.001
VOLVO XC90	2011	Accessory electronic module (AEM)	ECU identification		V1.10.001
VOLVO XC90	2011	Accessory electronic module (AEM)	Read codes		V1.10.001
VOLVO XC90	2011	Accessory electronic module (AEM)	Erase codes		V1.10.001
VOLVO XC90	2011	Accessory electronic module (AEM)	Freeze frame		V1.10.001
VOLVO XC90	2011	Accessory electronic module (AEM)	Active test		V1.10.001
VOLVO XC90	2011	Audio module (AUDI)	ECU identification		V1.10.001
VOLVO XC90	2011	Audio module (AUDI)	Read codes		V1.10.001
VOLVO XC90	2011	Audio module (AUDI)	Erase codes		V1.10.001
VOLVO XC90	2011	Audio module (AUDI)	Freeze frame		V1.10.001
VOLVO XC90	2011	Integrated audio module (IAM)	ECU identification		V1.10.001
VOLVO XC90	2011	Integrated audio module (IAM)	Read codes		V1.10.001
VOLVO XC90	2011	Integrated audio module (IAM)	Erase codes		V1.10.001
VOLVO XC90	2011	Integrated audio module (IAM)	Freeze frame		V1.10.001
VOLVO XC90	2011	Integrated digital receiver (RDR)	ECU identification		V1.10.001
VOLVO XC90	2011	Integrated digital receiver (RDR)	Read codes		V1.10.001
VOLVO XC90	2011	Integrated digital receiver (RDR)	Erase codes		V1.10.001
VOLVO XC90	2011	Integrated digital receiver (RDR)	Freeze frame		V1.10.001
VOLVO XC90	2011	Upper electronic module (ULEM)	ECU identification		V1.10.001
VOLVO XC90	2011	Upper electronic module (ULEM)	Read codes		V1.10.001
VOLVO XC90	2011	Upper electronic module (ULEM)	Erase codes		V1.10.001
VOLVO XC90	2011	Upper electronic module (ULEM)	Freeze frame		V1.10.001
VOLVO XC90	2011	Integrated audio module (IAM)	ECU identification		V1.10.001
VOLVO XC90	2011	Integrated audio module (IAM)	Read codes		V1.10.001
VOLVO XC90	2011	Integrated audio module (IAM)	Erase codes		V1.10.001
VOLVO XC90	2011	Integrated audio module (IAM)	Freeze frame		V1.10.001
VOLVO XC90	2011	Upper electronic module (ULEM)	ECU identification		V1.10.001
VOLVO XC90	2011	Upper electronic module (ULEM)	Read codes		V1.10.001
VOLVO XC90	2011	Upper electronic module (ULEM)	Erase codes		V1.10.001
VOLVO XC90	2011	Upper electronic module (ULEM)	Freeze frame		V1.10.001
VOLVO XC90	2011	Bluetooth phone module (BPM)	ECU identification		V1.10.001
VOLVO XC90	2011	Bluetooth phone module (BPM)	Read codes		V1.10.001
VOLVO XC90	2011	Bluetooth phone module (BPM)	Erase codes		V1.10.001
VOLVO XC90	2011	Bluetooth phone module (BPM)	Freeze frame		V1.10.001
VOLVO XC90	2011	Multimedia module (MMM)	ECU identification		V1.10.001
VOLVO XC90	2011	Multimedia module (MMM)	Read codes		V1.10.001
VOLVO XC90	2011	Multimedia module (MMM)	Erase codes		V1.10.001
VOLVO XC90	2011	Multimedia module (MMM)	Freeze frame		V1.10.001
VOLVO XC90	2011	Phone module (PHM)	ECU identification		V1.10.001
VOLVO XC90	2011	Phone module (PHM)	Read codes		V1.10.001
VOLVO XC90	2011	Phone module (PHM)	Erase codes		V1.10.001
VOLVO XC90	2011	Phone module (PHM)	Freeze frame		V1.10.001
VOLVO XC90	2011	Combustion preheater module (CPM)	ECU identification		V1.10.001
VOLVO XC90	2011	Combustion preheater module (CPM)	Read codes		V1.10.001
VOLVO XC90	2011	Combustion preheater module (CPM)	Erase codes		V1.10.001
VOLVO XC90	2011	Combustion preheater module (CPM)	Freeze frame		V1.10.001
VOLVO XC90	2011	Rear electronic module (REM)	ECU identification		V1.10.001
VOLVO XC90	2011	Rear electronic module (REM)	Read codes		V1.10.001
VOLVO XC90	2011	Rear electronic module (REM)	Erase codes		V1.10.001
VOLVO XC90	2011	Rear electronic module (REM)	Freeze frame		V1.10.001
VOLVO XC90	2011	Rear electronic module (REM)	Active test		V1.10.001
VOLVO XC90	2011	Rear electronic module (REM)	Special functions		V1.10.001
VOLVO XC90	2011	Rear electronic module (REM)	Special functions	Activating components and functions	V1.10.001
VOLVO XC90	2011	Rear electronic module (REM)	Special functions	Programming the additional and parking heater	V1.10.001
VOLVO XC90	2011	Rear electronic module (REM)	Special functions		V1.10.001
VOLVO XC90	2011	Rear electronic module (REM)	ECU identification		V1.10.001
VOLVO XC90	2011	Rear electronic module (REM)	Read codes		V1.10.001
VOLVO XC90	2011	Rear electronic module (REM)	Erase codes		V1.10.001
VOLVO XC90	2011	Rear electronic module (REM)	Freeze frame		V1.10.001
VOLVO XC90	2011	Rear electronic module (REM)	Active test		V1.10.001
VOLVO XC90	2011	Rear electronic module (REM)	Special functions		V1.10.001
VOLVO XC90	2011	Rear electronic module (REM)	Special functions	Reinstalling the reserve battery	V1.10.001
VOLVO XC90	2011	Rear electronic module (REM)	Special functions		V1.10.001
VOLVO XC90	2011	Engine control module (ECM)	ECU identification		V1.10.001
VOLVO XC90	2011	Engine control module (ECM)	Read codes		V1.10.001
VOLVO XC90	2011	Engine control module (ECM)	Erase codes		V1.10.001
VOLVO XC90	2011	Engine control module (ECM)	Freeze frame		V1.10.001
VOLVO XC90	2011	Central electronic module II (CEM-H)	ECU identification		V1.10.001
VOLVO XC90	2011	Central electronic module II (CEM-H)	Read codes		V1.10.001
VOLVO XC90	2011	Central electronic module II (CEM-H)	Erase codes		V1.10.001
VOLVO XC90	2011	Central electronic module II (CEM-H)	Freeze frame		V1.10.001
VOLVO XC90	2011	Central electronic module II (CEM-H)	Active test		V1.10.001
VOLVO XC90	2011</				

VOLVO	C90 Electric	2011	Central electronic module (CEM)	Special functions	Setting day and night mode for the instrumentation	V1.10.001
VOLVO	C90 Electric	2011	Brake control module (BCM)	ECU identification		V1.10.001
VOLVO	C90 Electric	2011	Brake control module (BCM)	Read codes		V1.10.001
VOLVO	C90 Electric	2011	Brake control module (BCM)	Erase codes		V1.10.001
VOLVO	C90 Electric	2011	Brake control module (BCM)	Freeze frame		V1.10.001
VOLVO	C90 Electric	2011	Brake control module (BCM)	Special functions		V1.10.001
VOLVO	C90 Electric	2011	Brake control module (BCM)	Special functions		V1.10.001
VOLVO	C90 Electric	2011	Brake control module (BCM)	Special functions		V1.10.001
VOLVO	C90 Electric	2011	Supplemental restraint system module (SR5)	ECU identification	Activating components and functions	V1.10.001
VOLVO	C90 Electric	2011	Supplemental restraint system module (SR5)	Read codes	Calibration (cars with DTC)	V1.10.001
VOLVO	C90 Electric	2011	Supplemental restraint system module (SR5)	Erase codes	Reading off the configuration	V1.10.001
VOLVO	C90 Electric	2011	Supplemental restraint system module (SR5)	Freeze frame		V1.10.001
VOLVO	C90 Electric	2011	Supplemental restraint system module (SR5)	Special functions	Resetting crash mode	V1.10.001
VOLVO	C90 Electric	2011	Driver door module (DDM)	ECU identification		V1.10.001
VOLVO	C90 Electric	2011	Driver door module (DDM)	Read codes		V1.10.001
VOLVO	C90 Electric	2011	Driver door module (DDM)	Erase codes		V1.10.001
VOLVO	C90 Electric	2011	Driver door module (DDM)	Freeze frame		V1.10.001
VOLVO	C90 Electric	2011	Driver door module (DDM)	Special functions		V1.10.001
VOLVO	C90 Electric	2011	Driver door module (DDM)	Special functions	Initializing the window position	V1.10.001
VOLVO	C90 Electric	2011	Passenger door module (PDM)	ECU identification		V1.10.001
VOLVO	C90 Electric	2011	Passenger door module (PDM)	Read codes		V1.10.001
VOLVO	C90 Electric	2011	Passenger door module (PDM)	Erase codes		V1.10.001
VOLVO	C90 Electric	2011	Passenger door module (PDM)	Freeze frame		V1.10.001
VOLVO	C90 Electric	2011	Passenger door module (PDM)	Special functions		V1.10.001
VOLVO	C90 Electric	2011	Infotainment control module (ICM)	ECU identification	Programming the infotainment control module (ICM)	V1.10.001
VOLVO	C90 Electric	2011	Infotainment control module (ICM)	Read codes	Programming other settings	V1.10.001
VOLVO	C90 Electric	2011	Infotainment control module (ICM)	Erase codes	Programming the clock	V1.10.001
VOLVO	C90 Electric	2011	Infotainment control module (ICM)	Freeze frame		V1.10.001
VOLVO	C90 Electric	2011	Infotainment control module (ICM)	Special functions		V1.10.001
VOLVO	C90 Electric	2011	Infotainment control module (ICM)	Special functions	Resetting the service reminder indicator (SRI)	V1.10.001
VOLVO	C90 Electric	2011	Driver information module (DIM)	ECU identification	Testing all indicators and lamps in the driver information module (DIM)	V1.10.001
VOLVO	C90 Electric	2011	Driver information module (DIM)	Read codes	Indicates unrammed values	V1.10.001
VOLVO	C90 Electric	2011	Driver information module (DIM)	Erase codes	Display of DTC/ESC message	V1.10.001
VOLVO	C90 Electric	2011	Driver information module (DIM)	Freeze frame	Programming the driver information module (DIM)	V1.10.001
VOLVO	C90 Electric	2011	Driver information module (DIM)	Special functions	Programming seatbelt reminder in backseat	V1.10.001
VOLVO	C90 Electric	2011	Driver information module (DIM)	Special functions	Programming the gear shift indicator	V1.10.001
VOLVO	C90 Electric	2011	Driver information module (DIM)	Special functions		V1.10.001
VOLVO	C90 Electric	2011	Driver information module (DIM)	Special functions	Identifying components on the LIN network that belong to the climate control system (CCM)	V1.10.001
VOLVO	C90 Electric	2011	Climate control module (CCM)	ECU identification	Programming the climate control module (CCM)	V1.10.001
VOLVO	C90 Electric	2011	Climate control module (CCM)	Read codes	Calibrating the climate control module (CCM)	V1.10.001
VOLVO	C90 Electric	2011	Climate control module (CCM)	Erase codes	Reading out detected/expected control modules/sensors	V1.10.001
VOLVO	C90 Electric	2011	Climate control module (CCM)	Freeze frame	Reading out electronic damper motor, actual/preset range and tolerance limit	V1.10.001
VOLVO	C90 Electric	2011	Climate control module (CCM)	Special functions	Initiation of the TCS switch by the tunnel console	V1.10.001
VOLVO	C90 Electric	2011	Climate control module (CCM)	Special functions		V1.10.001
VOLVO	C90 Electric	2011	Climate control module (CCM)	Special functions	Read out of the number of programmed remote keys	V1.10.001
VOLVO	C90 Electric	2011	Keyless vehicle module (KVM)	ECU identification	Read out of part number and serial number, Remote Keyless Entry (RKE)	V1.10.001
VOLVO	C90 Electric	2011	Keyless vehicle module (KVM)	Read codes		V1.10.001
VOLVO	C90 Electric	2011	Keyless vehicle module (KVM)	Erase codes		V1.10.001
VOLVO	C90 Electric	2011	Keyless vehicle module (KVM)	Freeze frame		V1.10.001
VOLVO	C90 Electric	2011	Keyless vehicle module (KVM)	Special functions		V1.10.001
VOLVO	C90 Electric	2011	Accessory electronic module (AEM)	ECU identification	Programmed vehicles	V1.10.001
VOLVO	C90 Electric	2011	Accessory electronic module (AEM)	Read codes		V1.10.001
VOLVO	C90 Electric	2011	Accessory electronic module (AEM)	Erase codes		V1.10.001
VOLVO	C90 Electric	2011	Accessory electronic module (AEM)	Freeze frame		V1.10.001
VOLVO	C90 Electric	2011	Accessory electronic module (AEM)	Special functions		V1.10.001
VOLVO	C90 Electric	2011	Parking assistance module (PAM)	ECU identification	Read off the configuration	V1.10.001
VOLVO	C90 Electric	2011	Parking assistance module (PAM)	Read codes		V1.10.001
VOLVO	C90 Electric	2011	Parking assistance module (PAM)	Erase codes		V1.10.001
VOLVO	C90 Electric	2011	Parking assistance module (PAM)	Freeze frame		V1.10.001
VOLVO	C90 Electric	2011	Audio module (AUD)	ECU identification		V1.10.001
VOLVO	C90 Electric	2011	Audio module (AUD)	Read codes		V1.10.001
VOLVO	C90 Electric	2011	Audio module (AUD)	Erase codes		V1.10.001
VOLVO	C90 Electric	2011	Audio module (AUD)	Freeze frame		V1.10.001
VOLVO	C90 Electric	2011	Accessory USB unit (AUU)	ECU identification		V1.10.001
VOLVO	C90 Electric	2011	Accessory USB unit (AUU)	Read codes		V1.10.001
VOLVO	C90 Electric	2011	Accessory USB unit (AUU)	Erase codes		V1.10.001
VOLVO	C90 Electric	2011	Accessory USB unit (AUU)	Freeze frame		V1.10.001
VOLVO	C90 Electric	2011	Steering wheel module (SWM)	ECU identification		V1.10.001
VOLVO	C90 Electric	2011	Steering wheel module (SWM)	Read codes		V1.10.001
VOLVO	C90 Electric	2011	Steering wheel module (SWM)	Erase codes		V1.10.001
VOLVO	C90 Electric	2011	Steering wheel module (SWM)	Freeze frame		V1.10.001
VOLVO	C90 Electric	2011	Integrated audio module (IAM)	ECU identification		V1.10.001
VOLVO	C90 Electric	2011	Integrated audio module (IAM)	Read codes		V1.10.001
VOLVO	C90 Electric	2011	Integrated audio module (IAM)	Erase codes		V1.10.001
VOLVO	C90 Electric	2011	Integrated audio module (IAM)	Freeze frame		V1.10.001
VOLVO	C90 Electric	2011	Headlight control module (HCM)	ECU identification		V1.10.001
VOLVO	C90 Electric	2011	Headlight control module (HCM)	Read codes		V1.10.001
VOLVO	C90 Electric	2011	Headlight control module (HCM)	Erase codes		V1.10.001
VOLVO	C90 Electric	2011	Headlight control module (HCM)	Freeze frame		V1.10.001
VOLVO	C90 Electric	2011	Headlight control module (HCM)	Special functions		V1.10.001
VOLVO	C90 Electric	2011	Combustion preheater module (CPM)	ECU identification		V1.10.001
VOLVO	C90 Electric	2011	Combustion preheater module (CPM)	Read codes		V1.10.001
VOLVO	C90 Electric	2011	Combustion preheater module (CPM)	Erase codes		V1.10.001
VOLVO	C90 Electric	2011	Combustion preheater module (CPM)	Freeze frame		V1.10.001
VOLVO	C90 Electric	2011	Bluetooth phone module (BPM)	ECU identification		V1.10.001
VOLVO	C90 Electric	2011	Bluetooth phone module (BPM)	Read codes		V1.10.001
VOLVO	C90 Electric	2011	Bluetooth phone module (BPM)	Erase codes		V1.10.001
VOLVO	C90 Electric	2011	Bluetooth phone module (BPM)	Freeze frame		V1.10.001
VOLVO	C90 Electric	2011	Electrical power steering module (EPS)	ECU identification		V1.10.001
VOLVO	C90 Electric	2011	Electrical power steering module (EPS)	Read codes		V1.10.001
VOLVO	C90 Electric	2011	Electrical power steering module (EPS)	Erase codes		V1.10.001
VOLVO	C90 Electric	2011	Electrical power steering module (EPS)	Freeze frame		V1.10.001
VOLVO	C90 Electric	2011	Multimedia module (MMM)	ECU identification		V1.10.001
VOLVO	C90 Electric	2011	Multimedia module (MMM)	Read codes		V1.10.001
VOLVO	C90 Electric	2011	Multimedia module (MMM)	Erase codes		V1.10.001
VOLVO	C90 Electric	2011	Multimedia module (MMM)	Freeze frame		V1.10.001
VOLVO	C90 Electric	2011	Phone module (PHM)	ECU identification		V1.10.001
VOLVO	C90 Electric	2011	Phone module (PHM)	Read codes		V1.10.001
VOLVO	C90 Electric	2011	Phone module (PHM)	Erase codes		V1.10.001
VOLVO	C90 Electric	2011	Phone module (PHM)	Freeze frame		V1.10.001
VOLVO	C90 Electric	2011	Central electronic module (CEM)	ECU identification		V1.10.001
VOLVO	C90 Electric	2011	Central electronic module (CEM)	Read codes		V1.10.001
VOLVO	C90 Electric	2011	Central electronic module (CEM)	Erase codes		V1.10.001
VOLVO	C90 Electric	2011	Central electronic module (CEM)	Freeze frame		V1.10.001
VOLVO	C90 Electric	2011	Central electronic module (CEM)	Special functions		V1.10.001
VOLVO	C90 Electric	2011	Central electronic module (CEM)	Special functions	Reinstalling the reserve battery	V1.10.001
VOLVO	C90 Electric	2011	Central electronic module (CEM)	Special functions		V1.10.001
VOLVO	C90 Electric	2011	Central electronic module (CEM)	Special functions	Activating components	V1.10.001
VOLVO	C90 Electric	2011	Central electronic module (CEM)	Special functions	Calibrating the vehicle	V1.10.001
VOLVO	C90 Electric	2011	Central electronic module (CEM)	Special functions	Reseting low voltage counters	V1.10.001
VOLVO	C90 Electric	2011	Central electronic module (CEM)	Special functions	Activation of rear window wiper when reversing	V1.10.001
VOLVO	C90 Electric	2011	Central electronic module (CEM)	Special functions	Setting clock deviation	V1.10.001
VOLVO	C90 Electric	2011	Central electronic module (CEM)	Special functions	Restoring vehicle	V1.10.001
VOLVO	C90 Electric	2011	Central electronic module (CEM)	Special functions	Read out of part number for Remote Receiver Module (RRX) and siren (SCM)	V1.10.001
VOLVO	C90 Electric	2011	Central electronic module (CEM)	Special functions	Resetting counter by reading block	V1.10.001
VOLVO	C90 Electric	2011	Central electronic module (CEM)	Special functions	Quick fix for alarm function	V1.10.001
VOLVO	C90 Electric	2011	Central electronic module (CEM)	Special functions	Remote controlled immobilising, status	V1.10.001
VOLVO	C90 Electric	2011	Central electronic module (CEM)	Special functions	Remote controlled immobilising, cause	V1.10.001
VOLVO	C90 Electric	2011	Central electronic module (CEM)	Special functions	Setting day and night mode for the instrumentation	V1.10.001
VOLVO	C90 Electric	2012	Supplemental restraint system module (SR5)	ECU identification		V1.10.001
VOLVO	C90 Electric	2012	Supplemental restraint system module (SR5)	Read codes		V1.10.001
VOLVO	C90 Electric	2012	Supplemental restraint system module (SR5)	Erase codes		V1.10.001
VOLVO	C90 Electric	2012	Supplemental restraint system module (SR5)	Freeze frame		V1.10.001
VOLVO	C90 Electric	2012	Driver door module (DDM)	ECU identification		V1.10.001
VOLVO	C90 Electric	2012	Driver door module (DDM)	Read codes		V1.10.001
VOLVO	C90 Electric	2012	Driver door module (DDM)	Erase codes		V1.10.001
VOLVO	C90 Electric	2012	Driver door module (DDM)	Freeze frame		V1.10.001
VOLVO	C90 Electric	2012	Driver door module (DDM)	Special functions		V1.10.001
VOLVO	C90 Electric	2012	Infotainment control module (ICM)	ECU identification		V1.10.001
VOLVO	C90 Electric	2012	Infotainment control module (ICM)	Read codes		V1.10.001
VOLVO	C90 Electric	2012	Infotainment control module (ICM)	Erase codes		V1.10.001
VOLVO	C90 Electric	2012	Infotainment control module (ICM)	Freeze frame		V1.10.001
VOLVO	C90 Electric	2012	Infotainment control module (ICM)	Special functions		V1.10.001
VOLVO	C90 Electric	2012	Infotainment control module (ICM)	Special functions	Resetting crash mode	V1.10.001
VOLVO	C90 Electric	2012	Passenger door module (PDM)	ECU identification		V1.10.001
VOLVO	C90 Electric	2012	Passenger door module (PDM)	Read codes		V1.10.001
VOLVO	C90 Electric	2012	Passenger door module (PDM)	Erase codes		V1.10.001
VOLVO	C90 Electric	2012	Passenger door module (PDM)	Freeze frame		V1.10.001
VOLVO	C90 Electric	2012	Passenger door module (PDM)	Special functions		V1.10.001
VOLVO	C90 Electric	2012	Driver information module (DIM)	ECU identification		V1.10.001
VOLVO	C90 Electric	2012	Driver information module (DIM)	Read codes		V1.10.001
VOLVO	C90 Electric	2012	Driver information module (DIM)	Erase codes		V1.10.001
VOLVO	C90 Electric	2012	Driver information module (DIM)	Freeze frame		V1.10.001
VOLVO	C90 Electric	2012	Driver information module (DIM)	Special functions		V1.10.001
VOLVO	C90 Electric	2012	Driver information module (DIM)	Special functions	Activating components and functions	V1.10.001
VOLVO	C90 Electric	2012	Driver information module (DIM)	Special functions	Calibration (cars with DTC)	V1.10.001
VOLVO	C90 Electric	2012	Driver information module (DIM)	Special functions	Reading off the configuration	V1.10.001
VOLVO	C90 Electric	2012	Driver door module (DDM)	ECU identification		V1.10.001
VOLVO	C90 Electric	2012	Driver door module (DDM)	Read codes		V1.10.001
VOLVO	C90 Electric	2012	Driver door module (DDM)	Erase codes		V1.10.001
VOLVO	C90 Electric	2012	Driver door module (DDM)	Freeze frame		V1.10.001
VOLVO	C90 Electric	2012	Driver door module (DDM)	Special functions		V1.10.001
VOLVO	C90 Electric	2012	Infotainment control module (ICM)	ECU identification		V1.10.001
VOLVO	C90 Electric	2012	Infotainment control module (ICM)	Read codes		V1.10.001
VOLVO	C90 Electric	2012	Infotainment control module (ICM)	Erase codes		V1.10.001
VOLVO	C90 Electric	2012	Infotainment control module (ICM)	Freeze frame		V1.10.001
VOLVO	C90 Electric	2012	Infotainment control module (ICM)	Special functions		V1.10.001
VOLVO	C90 Electric	2012	Infotainment control module (ICM)	Special functions	Resetting crash mode	V1.10.001
VOLVO	C90 Electric	2012	Passenger door module (PDM)	ECU identification		V1.10.001
VOLVO	C90 Electric	2012	Passenger door module (PDM)	Read codes		V1.10.001
VOLVO	C90 Electric	2012	Passenger door module (PDM)	Erase codes		V1.10.001
VOLVO	C90 Electric	2012	Passenger door module (PDM)	Freeze frame		V1.10.001
VOLVO	C90 Electric	2012	Passenger door module (PDM)	Special functions		V1.10.001
VOLVO	C90 Electric	2012	Driver information module (DIM)	ECU identification		V1.10.001
VOLVO	C90 Electric	2012	Driver information module (DIM)	Read codes		V1.10.001
VOLVO	C90 Electric					

VOLVO	C30 Electric	2013	Bluetooth phone module (BPM)	Read codes	V1.10.001
VOLVO	C30 Electric	2013	Bluetooth phone module (BPM)	Erase codes	V1.10.001
VOLVO	C30 Electric	2013	Bluetooth telephone (BPM)	Freeze frame	V1.10.001
VOLVO	C30 Electric	2013	Electrical power steering module (EPS)	ECU identification	V1.10.001
VOLVO	C30 Electric	2013	Electrical power steering module (EPS)	Read codes	V1.10.001
VOLVO	C30 Electric	2013	Electrical power steering module (EPS)	Erase codes	V1.10.001
VOLVO	C30 Electric	2013	Electrical power steering module (EPS)	Freeze frame	V1.10.001
VOLVO	C30 Electric	2013	Multimedia module (MMM)	ECU identification	V1.10.001
VOLVO	C30 Electric	2013	Multimedia module (MMM)	Read codes	V1.10.001
VOLVO	C30 Electric	2013	Multimedia module (MMM)	Erase codes	V1.10.001
VOLVO	C30 Electric	2013	Multimedia module (MMM)	Freeze frame	V1.10.001
VOLVO	C30 Electric	2013	Active test	Active test	V1.10.001
VOLVO	C30 Electric	2013	Phone module (PHM)	ECU identification	V1.10.001
VOLVO	C30 Electric	2013	Phone module (PHM)	Read codes	V1.10.001
VOLVO	C30 Electric	2013	Phone module (PHM)	Erase codes	V1.10.001
VOLVO	C30 Electric	2013	Phone module (PHM)	Freeze frame	V1.10.001
VOLVO	S80 (07)	2014	Engine control module (ECM)	Special functions	V1.10.001
VOLVO	S80 (07)	2014	Engine control module (ECM)	Special functions	V1.10.001
VOLVO	S80 (07)	2014	Engine control module (ECM)	Special functions	V1.10.001
VOLVO	S80 (07)	2014	Engine control module (ECM)	Special functions	V1.10.001
VOLVO	V60	2013	Driver information module (DIM)	Programmed value	V1.10.001
VOLVO	V60	2013	Driver information module (DIM)	Special functions	V1.10.001
VOLVO	V60	2013	Driver information module (DIM)	Read codes	V1.10.001
VOLVO	V60	2013	Battery energy control module (BECM)	ECU identification	V1.10.001
VOLVO	V60	2013	Battery energy control module (BECM)	Read codes	V1.10.001
VOLVO	V60	2013	Battery energy control module (BECM)	Erase codes	V1.10.001
VOLVO	V60	2013	Battery energy control module (BECM)	Freeze frame	V1.10.001
VOLVO	V60	2013	Battery energy control module (BECM)	Special functions	V1.10.001
VOLVO	V60	2013	Battery energy control module (BECM)	ECU identification	V1.10.001
VOLVO	V60	2013	On-Board charger module (OBC)	Read codes	V1.10.001
VOLVO	V60	2013	On-Board charger module (OBC)	Erase codes	V1.10.001
VOLVO	V60	2013	On-Board charger module (OBC)	Freeze frame	V1.10.001
VOLVO	V60	2013	On-Board charger module (OBC)	Special functions	V1.10.001
VOLVO	V60	2013	Exterior sound module (ESM)	ECU identification	V1.10.001
VOLVO	V60	2013	Exterior sound module (ESM)	Read codes	V1.10.001
VOLVO	V60	2013	Exterior sound module (ESM)	Erase codes	V1.10.001
VOLVO	V60	2013	Exterior sound module (ESM)	Freeze frame	V1.10.001
VOLVO	V60	2013	Exterior rear axle drive module (IERM)	ECU identification	V1.10.001
VOLVO	V60	2013	Inverter electric rear axle drive module (IERM)	Read codes	V1.10.001
VOLVO	V60	2013	Inverter electric rear axle drive module (IERM)	Erase codes	V1.10.001
VOLVO	V60	2013	Inverter electric rear axle drive module (IERM)	Freeze frame	V1.10.001
VOLVO	V60	2013	Inverter generator module (IGM)	ECU identification	V1.10.001
VOLVO	V60	2013	Inverter generator module (IGM)	Read codes	V1.10.001
VOLVO	V60	2013	Inverter generator module (IGM)	Erase codes	V1.10.001
VOLVO	V60	2013	Inverter generator module (IGM)	Freeze frame	V1.10.001
VOLVO	V60	2013	Air conditioning control module (ACCM)	ECU identification	V1.10.001
VOLVO	V60	2013	Air conditioning control module (ACCM)	Read codes	V1.10.001
VOLVO	V60	2013	Air conditioning control module (ACCM)	Erase codes	V1.10.001
VOLVO	V60	2013	Air conditioning control module (ACCM)	Freeze frame	V1.10.001
VOLVO	V60	2013	DC to DC converter control module (DCDC)	ECU identification	V1.10.001
VOLVO	V60	2013	DC to DC converter control module (DCDC)	Read codes	V1.10.001
VOLVO	V60	2013	DC to DC converter control module (DCDC)	Erase codes	V1.10.001
VOLVO	XC70 (08-)	2014	Exterior control module (ECM)	Special functions	V1.10.001
VOLVO	XC70 (08-)	2014	Exterior control module (ECM)	Read codes	V1.10.001
VOLVO	XC70 (08-)	2014	Exterior control module (ECM)	Erase codes	V1.10.001
VOLVO	XC70 (08-)	2014	Exterior control module (ECM)	Freeze frame	V1.10.001
VOLVO	XC70 (08-)	2014	Exterior control module (ECM)	Special functions	V1.10.001
VOLVO	S60 (11)	2012	Exterior control module (ECM)	ECU identification	V1.10.001
VOLVO	S60 (11)	2012	Exterior control module (ECM)	Read codes	V1.10.001
VOLVO	S60 (11)	2012	Exterior control module (ECM)	Erase codes	V1.10.001
VOLVO	S60 (11)	2012	Exterior control module (ECM)	Freeze frame	V1.10.001
VOLVO	S60 (11)	2012	Exterior control module (ECM)	Special functions	V1.10.001
VOLVO	S60 (11)	2012	Exterior control module (ECM)	ECU identification	V1.10.001
VOLVO	S60 (11)	2012	Transmission control module (TCM)	Read codes	V1.10.001
VOLVO	S60 (11)	2012	Transmission control module (TCM)	Erase codes	V1.10.001
VOLVO	S60 (11)	2012	Transmission control module (TCM)	Freeze frame	V1.10.001
VOLVO	S60 (11)	2012	Transmission control module (TCM)	Special functions	V1.10.001
VOLVO	S60 (11)	2012	Transmission control module (TCM)	ECU identification	V1.10.001
VOLVO	S60 (11)	2012	Central electronic module (CEM)	Read codes	V1.10.001
VOLVO	S60 (11)	2012	Central electronic module (CEM)	Erase codes	V1.10.001
VOLVO	S60 (11)	2012	Central electronic module (CEM)	Freeze frame	V1.10.001
VOLVO	S60 (11)	2012	Central electronic module (CEM)	Special functions	V1.10.001
VOLVO	S60 (11)	2012	Central electronic module (CEM)	ECU identification	V1.10.001
VOLVO	S60 (11)	2012	Park brake module (PBM)	Read codes	V1.10.001
VOLVO	S60 (11)	2012	Park brake module (PBM)	Erase codes	V1.10.001
VOLVO	S60 (11)	2012	Park brake module (PBM)	Freeze frame	V1.10.001
VOLVO	S60 (11)	2012	Park brake module (PBM)	Special functions	V1.10.001
VOLVO	S60 (11)	2012	Park brake module (PBM)	ECU identification	V1.10.001
VOLVO	S60 (11)	2012	Supplemental restraint system module (SRS)	Read codes	V1.10.001
VOLVO	S60 (11)	2012	Supplemental restraint system module (SRS)	Erase codes	V1.10.001
VOLVO	S60 (11)	2012	Supplemental restraint system module (SRS)	Freeze frame	V1.10.001
VOLVO	S60 (11)	2012	Supplemental restraint system module (SRS)	Special functions	V1.10.001
VOLVO	S60 (11)	2012	Supplemental restraint system module (SRS)	ECU identification	V1.10.001
VOLVO	S60 (11)	2012	Driver information module (DIM)	Read codes	V1.10.001
VOLVO	S60 (11)	2012	Driver information module (DIM)	Erase codes	V1.10.001
VOLVO	S60 (11)	2012	Driver information module (DIM)	Freeze frame	V1.10.001
VOLVO	S60 (11)	2012	Driver information module (DIM)	Special functions	V1.10.001
VOLVO	S60 (11)	2012	Driver information module (DIM)	ECU identification	V1.10.001
VOLVO	S60 (11)	2012	Park sensor (PS)	Read codes	V1.10.001
VOLVO	S60 (11)	2012	Park sensor (PS)	Erase codes	V1.10.001
VOLVO	S60 (11)	2012	Park sensor (PS)	Freeze frame	V1.10.001
VOLVO	S60 (11)	2012	Park sensor (PS)	Special functions	V1.10.001
VOLVO	S60 (11)	2012	Park sensor (PS)	ECU identification	V1.10.001
VOLVO	S60 (11)	2012	Passenger door module (PDM)	Read codes	V1.10.001
VOLVO	S60 (11)	2012	Passenger door module (PDM)	Erase codes	V1.10.001
VOLVO	S60 (11)	2012	Passenger door module (PDM)	Freeze frame	V1.10.001
VOLVO	S60 (11)	2012	Passenger door module (PDM)	Special functions	V1.10.001
VOLVO	S60 (11)	2012	Passenger door module (PDM)	ECU identification	V1.10.001
VOLVO	S60 (11)	2012	Driver door module (DDM)	Read codes	V1.10.001
VOLVO	S60 (11)	2012	Driver door module (DDM)	Erase codes	V1.10.001
VOLVO	S60 (11)	2012	Driver door module (DDM)	Freeze frame	V1.10.001
VOLVO	S60 (11)	2012	Driver door module (DDM)	Special functions	V1.10.001
VOLVO	S60 (11)	2012	Driver door module (DDM)	ECU identification	V1.10.001
VOLVO	S60 (11)	2012	Infotainment control module (ICM)	Read codes	V1.10.001
VOLVO	S60 (11)	2012	Infotainment control module (ICM)	Erase codes	V1.10.001
VOLVO	S60 (11)	2012	Infotainment control module (ICM)	Freeze frame	V1.10.001
VOLVO	S60 (11)	2012	Infotainment control module (ICM)	Special functions	V1.10.001
VOLVO	S60 (11)	2012	Infotainment control module (ICM)	ECU identification	V1.10.001
VOLVO	S60 (11)	2012	Steering angle sensor module (SAS)	Read codes	V1.10.001
VOLVO	S60 (11)	2012	Steering angle sensor module (SAS)	Erase codes	V1.10.001
VOLVO	S60 (11)	2012	Steering angle sensor module (SAS)	Freeze frame	V1.10.001
VOLVO	S60 (11)	2012	Steering angle sensor module (SAS)	Special functions	V1.10.001
VOLVO	S60 (11)	2012	Steering angle sensor module (SAS)	ECU identification	V1.10.001
VOLVO	S60 (11)	2012	Brake control module (BCM)	Read codes	V1.10.001
VOLVO	S60 (11)	2012	Brake control module (BCM)	Erase codes	V1.10.001
VOLVO	S60 (11)	2012	Brake control module (BCM)	Freeze frame	V1.10.001
VOLVO	S60 (11)	2012	Brake control module (BCM)	Special functions	V1.10.001
VOLVO	S60 (11)	2012	Brake control module (BCM)	ECU identification	V1.10.001
VOLVO	S60 (11)	2012	Keyless vehicle module (KVM)	Read codes	V1.10.001
VOLVO	S60 (11)	2012	Keyless vehicle module (KVM)	Erase codes	V1.10.001
				Rerinstalling the reserve battery	V1.10.001
				Resetting the fuel adaption values	V1.10.001
				Resetting the flywheel adaptions	V1.10.001
				Resetting the camshaft adaptions values	V1.10.001
				Failure diagnosis for the engine	V1.10.001
				Readout of number of blocked stops of combustion engine operations	V1.10.001
				Readout of number of system requested combustion engine operations	V1.10.001
				Readout of causes for the 10 latest occurrences of combustion engine operation	V1.10.001
				Readout of causes for the 10 latest occasions of system requested combustion engine operation	V1.10.001
				Readout of causes for the latest 10 occasions of blocked stop of combustion engine operation	V1.10.001
				Readout of causes for the latest 10 occasions of system requested combustion engine operation	V1.10.001
				Readout of causes for the latest 10 occasions of valve activation, shut-off unit BCM	V1.10.001
				Calibrating internal sensors, BCM	V1.10.001
				Valve activation, shut-off unit BCM	V1.10.001
				Calibrating all sensors, V2 BCM	V1.10.001
				Display of vehicle speed.	V1.10.001
				Programming the seat memory's delay time and acknowledgement	V1.10.001
				Filling and bleeding the cooling system	V1.10.001
				Insulation measurement	V1.10.001
				OBC LED test	V1.10.001
				OBC Lock test	V1.10.001
				Calibration of electric rear axle drive module (IED)	V1.10.001
				Calibration of high voltage generator module (IGM)	V1.10.001
				Test of fuel pressure regulation, low pressure side	V1.10.001
				Resetting adaptions and wear counter for supercharger	V1.10.001
				Resetting adaptions for fuel/air mix (fuel trim)	V1.10.001
				Resetting adaptions for the intake air mass sensor, intake air flow sensor	V1.10.001
				Resetting adaptions for camshaft regulation, intake	V1.10.001
				Resetting adaptions for camshaft regulation, exhaust	V1.10.001
				Resetting adaptions for the low pressure side	V1.10.001
				Resetting adaptions for cylinder balancing	V1.10.001
				Resetting adaptions for the throttle	V1.10.001
				Quick-test of EVAP valve	V1.10.001
				Resetting adaptation for the compressor bypass valve	V1.10.001
				Readiness code	V1.10.001
				Adaptation of the throttle unit	V1.10.001
				Checking the fuel pump (PP)	V1.10.001
				Quick-test of the fuel tank system	V1.10.001
				Test/movement of camshaft control, intake	V1.10.001
				Test/movement of camshaft control, exhaust	V1.10.001
				Resetting adaptation	V1.10.001
				Pre-delivery service for new car	V1.10.001
				Restoring supplemental restraint system	V1.10.001
				Restoring the cause	V1.10.001
				Replacing the fuel cell	V1.10.001
				Read-out and resetting auto-lock	V1.10.001
				Reading off power supply position	V1.10.001
				Checking installation, brake switch, and brake pedal position switch	V1.10.001
				Readout of information stand by current	V1.10.001
				Resetting the information to zero on power supply when replacing the battery monitoring sensor (BMS)	V1.10.001
				Remote controlled immobilising, status	V1.10.001
				Remote controlled immobilising, cause	V1.10.001
				Observing and initiating the roof hatch	V1.10.001
				Setting and reading out the instrumentation	V1.10.001
				Activating wipers, front/rear	V1.10.001
				Passenger door module (PDM)	V1.10.001
				Driver door module (DDM)	V1.10.001
				Infotainment control module (ICM)	V1.10.001
				Steering angle sensor module (SAS)	V1.10.001
				Brake control module (BCM)	V1.10.001
				Infotainment control module (ICM)	V1.10.001
				Readout of programmed values	V1.10.001
				Identifying components on the UN network that belong to the climate control system (CCM)	V1.10.001
				Reading off programmed values	V1.10.001
				Reading off programmed values, actual/present range and tolerance limit	V1.10.001
				Programming the evaporator, climate control module (CCM)	V1.10.001
				Activation of blower fan run-on	V1.10.001
				After programming the climate compartment	V1.10.001
				Programming the climate control module (CCM)	V1.10.001
				Rear view mirror light sensitivity.	V1.10.001
				Calibrating the climate control module (CCM)	V1.10.001
				Open circuit on MOST cable (only vehicles with infotainment control module (ICM))	V1.10.001
				Communication on MOST	V1.10.001
				Checking video signal (only applies vehicles with infotainment control module, ICM)	V1.10.001
				Open circuit on MOST cable (only vehicles with infotainment control module (ICM))	V1.10.001
				Calibration	V1.10.001
				Restart of the brake control module (BCM)	V1.10.001

VOLVO	S80 (07)	2015	Engine control module (ECM)	Special functions	Quick test of fuel tank system (USA/CDN) Readout one permanent diagnostic trouble codes (USA/CDN)
VOLVO	S80 (07)	2015	Engine control module (ECM)	Special functions	Quick-test of EVA-valve
VOLVO	S80 (07)	2015	Engine control module (ECM)	Special functions	Activating gear indication
VOLVO	S80 (07)	2015	Engine control module (ECM)	Special functions	Resetting adaptation for the compressor bypass valve
VOLVO	S80 (07)	2015	Engine control module (ECM)	Special functions	Testing oil pressure control
VOLVO	S80 (07)	2015	Engine control module (ECM)	Special functions	Checking the engine oil level
VOLVO	S80 (07)	2015	Transmission control module (TCM)	ECU identification	Entering the engine oil level after service
VOLVO	S80 (07)	2015	Transmission control module (TCM)	Read codes	
VOLVO	S80 (07)	2015	Transmission control module (TCM)	Erase codes	
VOLVO	S80 (07)	2015	Transmission control module (TCM)	Freeze frame	
VOLVO	S80 (07)	2015	Transmission control module (TCM)	Active test	
VOLVO	S80 (07)	2015	Transmission control module (TCM)	Special functions	Retaining adaption
VOLVO	S80 (07)	2015	Transmission control module (TCM)	Special functions	Calibration of rear position sensor
VOLVO	S80 (07)	2015	Transmission control module (TCM)	Special functions	Control module adaption
VOLVO	S80 (07)	2015	Transmission control module (TCM)	Special functions	Activating gear indication
VOLVO	S80 (07)	2015	Central electronic module (CEM)	ECU identification	
VOLVO	S80 (07)	2015	Central electronic module (CEM)	Read codes	
VOLVO	S80 (07)	2015	Central electronic module (CEM)	Erase codes	
VOLVO	S80 (07)	2015	Central electronic module (CEM)	Freeze frame	
VOLVO	S80 (07)	2015	Central electronic module (CEM)	Active test	
VOLVO	S80 (07)	2015	Central electronic module (CEM)	Special functions	Pre-delivery service for new car
VOLVO	S80 (07)	2015	Central electronic module (CEM)	Special functions	Reading out permanent restraint system
VOLVO	S80 (07)	2015	Central electronic module (CEM)	Special functions	Reading off alarm calls
VOLVO	S80 (07)	2015	Central electronic module (CEM)	Special functions	Workshop test (PMS)
VOLVO	S80 (07)	2015	Central electronic module (CEM)	Special functions	Read-out and reset of lock
VOLVO	S80 (07)	2015	Central electronic module (CEM)	Special functions	Readout and reset of parking position
VOLVO	S80 (07)	2015	Central electronic module (CEM)	Special functions	Checkin installation, brake light switch, and brake pedal position switch
VOLVO	S80 (07)	2015	Central electronic module (CEM)	Special functions	Readout of current from memory monitoring sensor
VOLVO	S80 (07)	2015	Central electronic module (CEM)	Special functions	Resetting the information to zero on power supply when replacing the battery
VOLVO	S80 (07)	2015	Central electronic module (CEM)	Special functions	Resetting the information to zero on power supply when replacing the battery monitoring sensor (BMS)
VOLVO	S80 (07)	2015	Central electronic module (CEM)	Special functions	Electrical system
VOLVO	S80 (07)	2015	Central electronic module (CEM)	Special functions	Remote controlled immobilising, status
VOLVO	S80 (07)	2015	Central electronic module (CEM)	Special functions	Remote controlled immobilising, cause
VOLVO	S80 (07)	2015	Central electronic module (CEM)	Special functions	Operating and reading the roof hatch
VOLVO	S80 (07)	2015	Central electronic module (CEM)	Special functions	Calibrating the roof hatch
VOLVO	S80 (07)	2015	Central electronic module (CEM)	Special functions	Setting day and night mode for the instrumentation
VOLVO	S80 (07)	2015	Central electronic module (CEM)	Special functions	Checking ABS function
VOLVO	S80 (07)	2015	Central electronic module (CEM)	Special functions	Activating anti-theft/alarm
VOLVO	S80 (07)	2015	Central electronic module (CEM)	Special functions	Activating steering wheel heatline
VOLVO	S80 (07)	2015	Central electronic module (CEM)	Special functions	Deactivation/activation of engine remote start ERS
VOLVO	S80 (07)	2015	Steering angle sensor module (SAS)	ECU identification	
VOLVO	S80 (07)	2015	Steering angle sensor module (SAS)	Read codes	
VOLVO	S80 (07)	2015	Steering angle sensor module (SAS)	Erase codes	
VOLVO	S80 (07)	2015	Steering angle sensor module (SAS)	Freeze frame	
VOLVO	S80 (07)	2015	Steering angle sensor module (SAS)	Active test	
VOLVO	S80 (07)	2015	Steering angle sensor module (SAS)	Special functions	Calibration angle sensor
VOLVO	S80 (07)	2015	Park brake module (PBM)	ECU identification	Activation and service
VOLVO	S80 (07)	2015	Park brake module (PBM)	Read codes	
VOLVO	S80 (07)	2015	Park brake module (PBM)	Erase codes	
VOLVO	S80 (07)	2015	Park brake module (PBM)	Freeze frame	
VOLVO	S80 (07)	2015	Park brake module (PBM)	Special functions	
VOLVO	S80 (07)	2015	Park brake module (PBM)	ECU identification	
VOLVO	S80 (07)	2015	Climate control module (CCM)	Read codes	
VOLVO	S80 (07)	2015	Climate control module (CCM)	Erase codes	
VOLVO	S80 (07)	2015	Climate control module (CCM)	Freeze frame	
VOLVO	S80 (07)	2015	Climate control module (CCM)	Active test	
VOLVO	S80 (07)	2015	Climate control module (CCM)	Special functions	Calibrating the climate control module (CCM)
VOLVO	S80 (07)	2015	Climate control module (CCM)	Programmed values	Identifying the components on the CAN network that belong to the climate control system (CCM)
VOLVO	S80 (07)	2015	Climate control module (CCM)	Special functions	Reading off programmed values
VOLVO	S80 (07)	2015	Climate control module (CCM)	Special functions	Reading out electronic damper motor, actual/preset range and tolerance limit
VOLVO	S80 (07)	2015	Climate control module (CCM)	Special functions	Programming the evaporator, climate control module (CCM)
VOLVO	S80 (07)	2015	Climate control module (CCM)	Special functions	Activating the climate control module (CCM)
VOLVO	S80 (07)	2015	Climate control module (CCM)	Special functions	Airflow setting in rear passenger compartment
VOLVO	S80 (07)	2015	Climate control module (CCM)	Special functions	Programming the climate control module (CCM)
VOLVO	S80 (07)	2015	Climate control module (CCM)	Special functions	Rear view mirror light sensitivity.
VOLVO	S80 (07)	2015	Brake master cylinder (BMC)	ECU identification	
VOLVO	S80 (07)	2015	Brake control module (BCM)	Read codes	
VOLVO	S80 (07)	2015	Brake control module (BCM)	Erase codes	
VOLVO	S80 (07)	2015	Brake control module (BCM)	Freeze frame	
VOLVO	S80 (07)	2015	Brake control module (BCM)	Active test	
VOLVO	S80 (07)	2015	Brake control module (BCM)	Special functions	Calibration
VOLVO	S80 (07)	2015	Driver door module (DDM)	ECU identification	
VOLVO	S80 (07)	2015	Driver door module (DDM)	Read codes	
VOLVO	S80 (07)	2015	Driver door module (DDM)	Erase codes	
VOLVO	S80 (07)	2015	Driver door module (DDM)	Freeze frame	
VOLVO	S80 (07)	2015	Driver door module (DDM)	Active test	
VOLVO	S80 (07)	2015	Driver door module (DDM)	Special functions	Initializing the window in the front door
VOLVO	S80 (07)	2015	Driver door module (DDM)	Special functions	Initializing the window in the rear door
VOLVO	S80 (07)	2015	Passenger door module (PDM)	ECU identification	Central lock motors, activating
VOLVO	S80 (07)	2015	Passenger door module (PDM)	Read codes	
VOLVO	S80 (07)	2015	Passenger door module (PDM)	Erase codes	
VOLVO	S80 (07)	2015	Passenger door module (PDM)	Freeze frame	
VOLVO	S80 (07)	2015	Passenger door module (PDM)	Special functions	Initializing the window in the front door
VOLVO	S80 (07)	2015	Passenger door module (PDM)	Special functions	Initializing the window in the rear door
VOLVO	S80 (07)	2015	Passenger door module (PDM)	Special functions	Central lock motors, activating
VOLVO	S80 (07)	2015	Supplemental restraint system module (SRS)	ECU identification	
VOLVO	S80 (07)	2015	Supplemental restraint system module (SRS)	Read codes	
VOLVO	S80 (07)	2015	Supplemental restraint system module (SRS)	Erase codes	
VOLVO	S80 (07)	2015	Supplemental restraint system module (SRS)	Freeze frame	
VOLVO	S80 (07)	2015	Supplemental restraint system module (SRS)	Special functions	
VOLVO	S80 (07)	2015	Supplemental restraint system module (SRS)	Programmed values	
VOLVO	S80 (07)	2015	Supplemental restraint system module (SRS)	Special functions	
VOLVO	S80 (07)	2015	Supplemental restraint system module (SRS)	ECU identification	
VOLVO	S80 (07)	2015	Infotainment control module (ICM)	Read codes	
VOLVO	S80 (07)	2015	Infotainment control module (ICM)	Erase codes	
VOLVO	S80 (07)	2015	Infotainment control module (ICM)	Freeze frame	
VOLVO	S80 (07)	2015	Infotainment control module (ICM)	Active test	
VOLVO	S80 (07)	2015	Infotainment control module (ICM)	Special functions	
VOLVO	S80 (07)	2015	Driver information module (DIM)	ECU identification	
VOLVO	S80 (07)	2015	Driver information module (DIM)	Read codes	
VOLVO	S80 (07)	2015	Driver information module (DIM)	Erase codes	
VOLVO	S80 (07)	2015	Driver information module (DIM)	Freeze frame	
VOLVO	S80 (07)	2015	Driver information module (DIM)	Programmed value	
VOLVO	S80 (07)	2015	Driver information module (DIM)	Special functions	
VOLVO	S80 (07)	2015	Driver information module (DIM)	ECU identification	
VOLVO	S80 (07)	2015	Driver information module (DIM)	Read codes	
VOLVO	S80 (07)	2015	Driver information module (DIM)	Erase codes	
VOLVO	S80 (07)	2015	Driver information module (DIM)	Freeze frame	
VOLVO	S80 (07)	2015	Driver information module (DIM)	Active test	
VOLVO	S80 (07)	2015	Driver information module (DIM)	Special functions	Testing all indicators and lights in the driver information module (DIM)
VOLVO	S80 (07)	2015	Driver information module (DIM)	Programmable customer reminder in backlog	
VOLVO	S80 (07)	2015	Driver information module (DIM)	Programming test message, scratch reminder	
VOLVO	S80 (07)	2015	Driver information module (DIM)	Programming the driver information module (DIM)	
VOLVO	S80 (07)	2015	Driver information module (DIM)	Read out of fuel volume	
VOLVO	S80 (07)	2015	Driver information module (DIM)	Display of vehicle speed	
VOLVO	S80 (07)	2015	Driver information module (DIM)	Programming the seat memory's delay time and acknowledgement	
VOLVO	S80 (07)	2015	Keyless vehicle module (KVM)	Read codes	
VOLVO	S80 (07)	2015	Keyless vehicle module (KVM)	Erase codes	
VOLVO	S80 (07)	2015	Keyless vehicle module (KVM)	Freeze frame	
VOLVO	S80 (07)	2015	Keyless vehicle module (KVM)	Special functions	
VOLVO	S80 (07)	2015	Keyless vehicle module (KVM)	ECU identification	
VOLVO	S80 (07)	2015	Keyless vehicle module (KVM)	Read codes	
VOLVO	S80 (07)	2015	Keyless vehicle module (KVM)	Erase codes	
VOLVO	S80 (07)	2015	Keyless vehicle module (KVM)	Freeze frame	
VOLVO	S80 (07)	2015	Keyless vehicle module (KVM)	Active test	
VOLVO	S80 (07)	2015	Keyless vehicle module (KVM)	Special functions	Checking all antennas
VOLVO	S80 (07)	2015	Keyless vehicle module (KVM)	Special functions	Check radio communication with the remote control receiver.
VOLVO	S80 (07)	2015	Keyless vehicle module (KVM)	Special functions	Remote control test
VOLVO	S80 (07)	2015	Keyless vehicle module (KVM)	Special functions	Test of internal memory
VOLVO	S80 (07)	2015	Keyless vehicle module (KVM)	Special functions	Activation of quick-lock motors.
VOLVO	S80 (07)	2015	High level display front (HLD)	ECU identification	
VOLVO	S80 (07)	2015	High level display front (HLD)	Read codes	
VOLVO	S80 (07)	2015	High level display front (HLD)	Erase codes	
VOLVO	S80 (07)	2015	High level display front (HLD)	Freeze frame	
VOLVO	S80 (07)	2015	Forward looking radar (FLR)	ECU identification	
VOLVO	S80 (07)	2015	Forward looking radar (FLR)	Read codes	
VOLVO	S80 (07)	2015	Forward looking radar (FLR)	Erase codes	
VOLVO	S80 (07)	2015	Forward looking radar (FLR)	Freeze frame	
VOLVO	S80 (07)	2015	Phone module (PHM)	ECU identification	
VOLVO	S80 (07)	2015	Phone module (PHM)	Read codes	
VOLVO	S80 (07)	2015	Phone module (PHM)	Erase codes	
VOLVO	S80 (07)	2015	Phone module (PHM)	Freeze frame	
VOLVO	S80 (07)	2015	Phone module (PHM)	Special functions	
VOLVO	S80 (07)	2015	Phone module (PHM)	ECU identification	
VOLVO	S80 (07)	2015	Phone module (PHM)	Read codes	
VOLVO	S80 (07)	2015	Phone module (PHM)	Erase codes	
VOLVO	S80 (07)	2015	Phone module (PHM)	Freeze frame	
VOLVO	S80 (07)	2015	Power seat module (PSM)	ECU identification	
VOLVO	S80 (07)	2015	Power seat module (PSM)	Read codes	
VOLVO	S80 (07)	2015	Power seat module (PSM)	Erase codes	
VOLVO	S80 (07)	2015	Power seat module (PSM)	Freeze frame	
VOLVO	S80 (07)	2015	Power seat module (PSM)	Active test	
VOLVO	S80 (07)	2015	Power seat module (PSM)	Special functions	
VOLVO	S80 (07)	2015	Power seat module (PSM)	ECU identification	
VOLVO	S80 (07)	2015	Power seat module (PSM)	Read codes	
VOLVO	S80 (07)	2015	Power seat module (PSM)	Erase codes	
VOLVO	S80 (07)	2015	Power seat module (PSM)	Freeze frame	
VOLVO	S80 (07)	2015	High level display front (HLD)	ECU identification	
VOLVO	S80 (07)	2015	High level display front (HLD)	Read codes	
VOLVO	S80 (07)	2015	High level display front (HLD)	Erase codes	
VOLVO	S80 (07)	2015	High level display front (HLD)	Freeze frame	
VOLVO	S80 (07)	2015	Forward looking radar (FLR)	ECU identification	
VOLVO	S80 (07)	2015	Forward looking radar (FLR)	Read codes	
VOLVO	S80 (07)	2015	Forward looking radar (FLR)	Erase codes	
VOLVO	S80 (07)	2015	Forward looking radar (FLR)	Freeze frame	
VOLVO	S80 (07)	2015	Phone module (PHM)	ECU identification	
VOLVO	S80 (07)	2015	Phone module (PHM)	Read codes	
VOLVO	S80 (07)	2015	Phone module (PHM)	Erase codes	
VOLVO	S80 (07)	2015	Phone module (PHM)	Freeze frame	
VOLVO	S80 (07)	2015	Phone module (PHM)	Active test	
VOLVO	S80 (07)	2015	Phone module (PHM)	Special functions	
VOLVO	S80 (07)	2015	Phone module (PHM)	ECU identification	
VOLVO	S80 (07)	2015	Phone module (PHM)	Read codes	
VOLVO	S80 (07)	2015	Phone module (PHM)	Erase codes	
VOLVO	S80 (07)	2015	Phone module (PHM)	Freeze frame	
VOLVO	S80 (07)	2015	Combination preheater module (CPM)	ECU identification	
VOLVO	S80 (07)	2015	Combination preheater module (CPM)	Read codes	
VOLVO	S80 (07)	2015	Combination preheater module (CPM)	Erase codes	
VOLVO	S80 (07)	2015	Combination preheater module (CPM)	Freeze frame	
VOLVO	S80 (07)	2015	Combination preheater module (CPM)	Active test	
VOLVO	S80 (07)	2015	Combination preheater module (CPM)	Special functions	
VOLVO	S80 (07)	2015	Combination preheater module (CPM)	ECU identification	
VOLVO	S80 (07)	2015	Combination preheater module (CPM)	Read codes	
VOLVO	S80 (07)	2015	Combination preheater module (CPM)	Erase codes	
VOLVO	S80 (07)	2015	Combination preheater module (CPM)	Freeze frame	
VOLVO	S80 (07)	2015	Rear seat entertainment module (RSE)	ECU identification	
VOLVO	S80 (07)	2015	Rear seat entertainment module (RSE)	Read codes	
VOLVO	S80 (07)	2015	Rear seat entertainment module (RSE)	Erase codes	
VOLVO	S80 (07)	2015	Rear seat entertainment module (RSE)	Freeze frame	
VOLVO	S80 (07)	2015	Rear seat entertainment module (RSE)	Active test	
VOLVO	S80 (07)	2015	Rear seat entertainment module (RSE)	Special functions	
VOLVO	S80 (07)	2015	Rear seat entertainment module (RSE)	ECU identification	
VOLVO	S80 (07)	2015	Rear seat entertainment module (RSE)	Read codes	
VOLVO	S80 (07)	2015	Rear seat entertainment module (RSE)	Erase codes	
VOLVO	S80 (07)	2015	Rear seat entertainment module (RSE)	Freeze frame	
VOLVO	S80 (07)	2015	Integrated audio module (IAM)	ECU identification	
VOLVO	S80 (07)	2015	Integrated audio module (IAM)	Read codes	
VOLVO	S80 (07)	2015	Integrated audio module (IAM)	Erase codes	
VOLVO	S80 (07)	2015	Integrated audio module (IAM)	Freeze frame	
VOLVO	S80 (07)	2015	Integrated audio module (IAM)	Special functions	
VOLVO	S80 (07)	2015	Integrated audio module (IAM)	ECU identification	
VOLVO	S80 (07)	2015	Integrated audio module (IAM)	Read codes	
VOLVO	S80 (07)	2015	Integrated audio module (IAM)	Erase codes	
VOLVO	S80 (07)	2015	Integrated audio module (IAM)	Freeze frame	
VOLVO	S80 (07)	2015	Power steering assistance camera (PAC)	ECU identification	
VOLVO	S80 (07)	2015	Power steering assistance camera (PAC)	Read codes	
VOLVO	S80 (07)	2015	Power steering assistance camera (PAC)	Erase codes	
VOLVO	S80 (07)	2015	Power steering assistance camera (PAC)	Freeze frame	
VOLVO	S80 (07)	2015	Power steering assistance camera (PAC)	Active test	
VOLVO	S80 (07)	2015	Power steering assistance camera (PAC)	Special functions	
VOLVO	S80 (07)	2015	Power steering assistance camera (PAC)	ECU identification	
VOLVO	S80 (07)	2015	Power steering assistance camera (PAC)	Read codes	
VOLVO	S80 (07)	2015	Power steering assistance camera (PAC)	Erase codes	
VOLVO	S80 (07)	2015	Power steering assistance camera (PAC)	Freeze frame	
VOLVO	S80 (07)	2015	Power steering control module (PSCM)	ECU identification	
VOLVO	S80 (07)	2015	Power steering control module (PSCM)	Read codes	
VOLVO	S80 (07)	2015	Power steering control module (PSCM)	Erase codes	
VOLVO	S80 (07)	2015	Power steering control module (PSCM)	Freeze frame	
VOLVO	S80 (07)	2015	Power steering control module (PSCM)	Active test	
VOLVO	S80 (07)	2015	Power steering control module (PSCM)	Special functions	
VOLVO	S80 (07)				

VOLVO	XC60	2015A	Forward sensing module (FSM)	Read codes	V1.10.001
VOLVO	XC60	2015A	Forward sensing module (FSM)	Erase codes	V1.10.001
VOLVO	XC60	2015A	Forward sensing module (FSM)	Freeze frame	V1.10.001
VOLVO	XC60	2015A	Forward sensing module (FSM)	Social functions	V1.10.001
VOLVO	XC60	2015A	Forward sensing module (FSM)	Special functions	V1.10.001
VOLVO	XC60	2015A	Forward sensing module (FSM)	Special functions	V1.10.001
VOLVO	XC60	2015A	Forward sensing module (FSM)	Special functions	V1.10.001
VOLVO	XC60	2015A	Digital audio broadcast module (DABM)	ECU identification	V1.10.001
VOLVO	XC60	2015A	Digital audio broadcast module (DABM)	Read codes	V1.10.001
VOLVO	XC60	2015A	Digital audio broadcast module (DABM)	Erase codes	V1.10.001
VOLVO	XC60	2015A	Digital audio broadcast module (DABM)	Freeze frame	V1.10.001
VOLVO	XC60	2015A	Phone module (PHM)	ECU identification	V1.10.001
VOLVO	XC60	2015A	Phone module (PHM)	Read codes	V1.10.001
VOLVO	XC60	2015A	Phone module (PHM)	Erase codes	V1.10.001
VOLVO	XC60	2015A	Phone module (PHM)	Freeze frame	V1.10.001
VOLVO	XC60	2015A	Phone module (PHM)	Social functions	V1.10.001
VOLVO	XC60	2015A	Phone module (PHM)	Special functions	V1.10.001
VOLVO	XC60	2015A	Phone module (PHM)	Special functions	V1.10.001
VOLVO	XC60	2015A	Phone module (PHM)	Special functions	V1.10.001
VOLVO	XC60	2015A	Phone module (PHM)	Special functions	V1.10.001
VOLVO	XC60	2015A	Engine control module (ECM)	Special functions	V1.10.001
VOLVO	XC60	2015A	Engine control module (ECM)	Social functions	V1.10.001
VOLVO	XC60	2015A	Engine control module (ECM)	Special functions	V1.10.001
VOLVO	XC60	2015A	Engine control module (ECM)	ECU identification	V1.10.001
VOLVO	XC60	2015A	Differential electronic module (DEM)	Read codes	V1.10.001
VOLVO	XC60	2015A	Differential electronic module (DEM)	Erase codes	V1.10.001
VOLVO	XC60	2015A	Differential electronic module (DEM)	Freeze frame	V1.10.001
VOLVO	XC60	2015A	Differential electronic module (DEM)	Social functions	V1.10.001
VOLVO	XC60	2015A	Differential electronic module (DEM)	Special functions	V1.10.001
VOLVO	XC60	2015A	Transmission control module (TCM)	ECU identification	V1.10.001
VOLVO	XC60	2015A	Transmission control module (TCM)	Read codes	V1.10.001
VOLVO	XC60	2015A	Transmission control module (TCM)	Erase codes	V1.10.001
VOLVO	XC60	2015A	Transmission control module (TCM)	Freeze frame	V1.10.001
VOLVO	XC60	2015A	Transmission control module (TCM)	Active test	V1.10.001
VOLVO	XC60	2015A	Transmission control module (TCM)	Social functions	V1.10.001
VOLVO	XC60	2015A	Transmission control module (TCM)	Special functions	V1.10.001
VOLVO	XC60	2015A	Transmission control module (TCM)	ECU identification	V1.10.001
VOLVO	XC60	2015A	Central electronic module (CEM)	Read codes	V1.10.001
VOLVO	XC60	2015A	Central electronic module (CEM)	Erase codes	V1.10.001
VOLVO	XC60	2015A	Central electronic module (CEM)	Freeze frame	V1.10.001
VOLVO	XC60	2015A	Central electronic module (CEM)	Active test	V1.10.001
VOLVO	XC60	2015A	Central electronic module (CEM)	Social functions	V1.10.001
VOLVO	XC60	2015A	Central electronic module (CEM)	Special functions	V1.10.001
VOLVO	XC60	2015A	Central electronic module (CEM)	ECU identification	V1.10.001
VOLVO	XC60	2015A	Steering angle sensor module (SAS)	ECU identification	V1.10.001
VOLVO	XC60	2015A	Steering angle sensor module (SAS)	Read codes	V1.10.001
VOLVO	XC60	2015A	Steering angle sensor module (SAS)	Erase codes	V1.10.001
VOLVO	XC60	2015A	Steering angle sensor module (SAS)	Freeze frame	V1.10.001
VOLVO	XC60	2015A	Park brake module (PBM)	ECU identification	V1.10.001
VOLVO	XC60	2015A	Park brake module (PBM)	Read codes	V1.10.001
VOLVO	XC60	2015A	Park brake module (PBM)	Erase codes	V1.10.001
VOLVO	XC60	2015A	Park brake module (PBM)	Freeze frame	V1.10.001
VOLVO	XC60	2015A	Park brake module (PBM)	Social functions	V1.10.001
VOLVO	XC60	2015A	Park brake module (PBM)	ECU identification	V1.10.001
VOLVO	XC60	2015A	Climate control module (CCM)	Read codes	V1.10.001
VOLVO	XC60	2015A	Climate control module (CCM)	Erase codes	V1.10.001
VOLVO	XC60	2015A	Climate control module (CCM)	Freeze frame	V1.10.001
VOLVO	XC60	2015A	Climate control module (CCM)	Active test	V1.10.001
VOLVO	XC60	2015A	Climate control module (CCM)	Programmed values	V1.10.001
VOLVO	XC60	2015A	Climate control module (CCM)	Social functions	V1.10.001
VOLVO	XC60	2015A	Climate control module (CCM)	ECU identification	V1.10.001
VOLVO	XC60	2015A	Brake control module (BCM)	Read codes	V1.10.001
VOLVO	XC60	2015A	Brake control module (BCM)	Erase codes	V1.10.001
VOLVO	XC60	2015A	Brake control module (BCM)	Freeze frame	V1.10.001
VOLVO	XC60	2015A	Brake control module (BCM)	Active test	V1.10.001
VOLVO	XC60	2015A	Brake control module (BCM)	Social functions	V1.10.001
VOLVO	XC60	2015A	Brake control module (BCM)	ECU identification	V1.10.001
VOLVO	XC60	2015A	Driver door module (DOM)	Read codes	V1.10.001
VOLVO	XC60	2015A	Driver door module (DOM)	Erase codes	V1.10.001
VOLVO	XC60	2015A	Driver door module (DOM)	Freeze frame	V1.10.001
VOLVO	XC60	2015A	Driver door module (DOM)	Active test	V1.10.001
VOLVO	XC60	2015A	Driver door module (DOM)	Social functions	V1.10.001
VOLVO	XC60	2015A	Driver door module (DOM)	ECU identification	V1.10.001
VOLVO	XC60	2015A	Passenger door module (PDM)	Read codes	V1.10.001
VOLVO	XC60	2015A	Passenger door module (PDM)	Erase codes	V1.10.001
VOLVO	XC60	2015A	Passenger door module (PDM)	Freeze frame	V1.10.001
VOLVO	XC60	2015A	Passenger door module (PDM)	Active test	V1.10.001
VOLVO	XC60	2015A	Passenger door module (PDM)	Social functions	V1.10.001
VOLVO	XC60	2015A	Passenger door module (PDM)	ECU identification	V1.10.001
VOLVO	XC60	2015A	Supplemental restraint system module (SRS)	Read codes	V1.10.001
VOLVO	XC60	2015A	Supplemental restraint system module (SRS)	Erase codes	V1.10.001
VOLVO	XC60	2015A	Supplemental restraint system module (SRS)	Freeze frame	V1.10.001
VOLVO	XC60	2015A	Supplemental restraint system module (SRS)	Active test	V1.10.001
VOLVO	XC60	2015A	Supplemental restraint system module (SRS)	Social functions	V1.10.001
VOLVO	XC60	2015A	Supplemental restraint system module (SRS)	ECU identification	V1.10.001
VOLVO	XC60	2015A	Driver information module (DIM)	Read codes	V1.10.001
VOLVO	XC60	2015A	Driver information module (DIM)	Erase codes	V1.10.001
VOLVO	XC60	2015A	Driver information module (DIM)	Freeze frame	V1.10.001
VOLVO	XC60	2015A	Driver information module (DIM)	Programmed values	V1.10.001
VOLVO	XC60	2015A	Driver information module (DIM)	Social functions	V1.10.001
VOLVO	XC60	2015A	Driver information module (DIM)	ECU identification	V1.10.001
VOLVO	XC60	2015A	Keyless vehicle module (KVM)	Read codes	V1.10.001
VOLVO	XC60	2015A	Keyless vehicle module (KVM)	Erase codes	V1.10.001
VOLVO	XC60	2015A	Keyless vehicle module (KVM)	Freeze frame	V1.10.001
VOLVO	XC60	2015A	Keyless vehicle module (KVM)	Social functions	V1.10.001
VOLVO	XC60	2015A	Keyless vehicle module (KVM)	ECU identification	V1.10.001
VOLVO	XC60	2015A	Television module (TVM)	Read codes	V1.10.001
VOLVO	XC60	2015A	Television module (TVM)	Erase codes	V1.10.001
VOLVO	XC60	2015A	Television module (TVM)	Freeze frame	V1.10.001
VOLVO	XC60	2015A	Power seat module (PSM)	ECU identification	V1.10.001
VOLVO	XC60	2015A	Power seat module (PSM)	Read codes	V1.10.001
VOLVO	XC60	2015A	Power seat module (PSM)	Erase codes	V1.10.001
VOLVO	XC60	2015A	Power seat module (PSM)	Freeze frame	V1.10.001
VOLVO	XC60	2015A	Power seat module (PSM)	Active test	V1.10.001
VOLVO	XC60	2015A	Power seat module (PSM)	Social functions	V1.10.001
VOLVO	XC60	2015A	Power seat module (PSM)	ECU identification	V1.10.001
VOLVO	XC60	2015A	Suspension module (SUM)	Read codes	V1.10.001
VOLVO	XC60	2015A	Suspension module (SUM)	Erase codes	V1.10.001
VOLVO	XC60	2015A	Suspension module (SUM)	Freeze frame	V1.10.001
VOLVO	XC60	2015A	Suspension module (SUM)	Active test	V1.10.001
VOLVO	XC60	2015A	Suspension module (SUM)	Social functions	V1.10.001
VOLVO	XC60	2015A	Suspension module (SUM)	ECU identification	V1.10.001
VOLVO	XC60	2015A	High level display front (HLD)	Read codes	V1.10.001
VOLVO	XC60	2015A	High level display front (HLD)	Erase codes	V1.10.001
VOLVO	XC60	2015A	High level display front (HLD)	Freeze frame	V1.10.001
				Calibration of radar and camera	V1.10.001
				Activating heating coil, FSM	V1.10.001
				Activation of the indicator for visual collision warning	V1.10.001
				Activating the internal test procedures	V1.10.001
				Reinstalling the engine battery	V1.10.001
				Check whether PHM has Volvo On Call	V1.10.001
				Set lighting on buttons to Volvo On Call	V1.10.001
				Activation/pre-activation of Volvo On Call	V1.10.001
				Resetting	V1.10.001
				Reading of UMAP (USA/CND)	V1.10.001
				Resetting the adaption value	V1.10.001
				Quick test of the fuel tank system	V1.10.001
				Calibration of differential electronic module (DEM)	V1.10.001
				Bleeding the oil pressure oemo	V1.10.001
				Resetting the "Transmission fluid change" counter	V1.10.001
				Resetting	V1.10.001
				Test of fuel pump	V1.10.001
				Test of fuel pressure regulation, low pressure side	V1.10.001
				Test of fuel pressure regulation, high pressure side	V1.10.001
				Adjustment of neutral position sensor	V1.10.001
				Resetting adaptions and wear counter for supercharger	V1.10.001
				Resetting the fuel pump pressure sensor	V1.10.001
				Resetting adaptions for rear heated oven sensor regulation	V1.10.001
				Resetting adaptions for air flow regulation, intake	V1.10.001
				Resetting adaptions for air flow regulation, exhaust	V1.10.001
				Resetting adaptions for cylinder balancing	V1.10.001
				Resetting adaptions for the thermostat	V1.10.001
				Quick test of ECU/EVAP	V1.10.001
				Quick test of EVAP-park	V1.10.001
				Activating the oil pressure sensor	V1.10.001
				Reseting adaptation for the compressor bypass valve	V1.10.001
				Testing oil pressure control	V1.10.001
				Checking the engine oil level	V1.10.001
				Enterline the engine oil level after service	V1.10.001
				Resetting gear indicator	V1.10.001
				Calibration	V1.10.001
				Resetting	V1.10.001
				Calibration of gear position sensor	V1.10.001
				Control module adaptation	V1.10.001
				Activating gear indication	V1.10.001
				Calibration	V1.10.001
				Identifying components on the UN network that belong to the climate control system (CCM)	V1.10.001
				Reading off programmed values	V1.10.001
				Programming out electric damper motor, actual / preset range and tolerance limit	V1.10.001
				Programmung out evap-damper module (CMM)	V1.10.001
				Activation of blower fan run-on	V1.10.001
				Airflow setting in rear passenger compartment	V1.10.001
				Programming the climate control module (CCM)	V1.10.001
				Rear view mirror light sensitivity.	V1.10.001
				Calibrating the occupant weight sensor (OWS)	V1.10.001
				Powering the SRS system	V1.10.001
				Checking the PAD-lids	V1.10.001
				Checkin seatbelt-related components at collision	V1.10.001
				Calibrating	V1.10.001
				Open circuit on MOST cable (only vehicles with infotainment control module (ICM))	V1.10.001
				Communication on MOST	V1.10.001
				Checking video signal (only applies vehicles with infotainment control module, ICM)	V1.10.001
				Display of vehicle speed.	V1.10.001
				Programming the seat memory's delay time and acknowledgement	V1.10.001
				Charge volume on EDW	V1.10.001
				Calibrating all antennas.	V1.10.001
				Check the communication with the remote control receiver.	V1.10.001
				Remote control	V1.10.001
				Test of internal memory	V1.10.001
				Activation of quick-lock motors.	V1.10.001
				Calibration	V1.10.001
				Resetting	V1.10.001
				Check-in all antennas.	V1.10.001
				Activating the communication with the remote control receiver.	V1.10.001
				Remote control	V1.10.001
				Test of internal memory	V1.10.001
				Activation of quick-lock motors.	V1.10.001
				Calibration	V1.10.001
				Resetting	V1.10.001
				Check-in all antennas.	V1.10.001
				Activating the communication with the remote control receiver.	V1.10.001
				Remote control	V1.10.001
				Test of internal memory	V1.10.001
				Activation of quick-lock motors.	V1.10.001

VOLVO	560	2001	Passenger door module (PDM)	Programming soft stop	V1.10.001
VOLVO	560	2001	Passenger door module (PDM)	Window position set-up	V1.10.001
VOLVO	560	2001	Power seat module (PSM)	Read codes	V1.10.001
VOLVO	560	2001	Power seat module (PSM)	Erase codes	V1.10.001
VOLVO	560	2001	Power seat module (PSM)	Reading off extended diagnostic trouble code (DTC) information, power seat module	V1.10.001
VOLVO	560	2001	Power seat module (PSM)	Reading off the control module ID	V1.10.001
VOLVO	560	2001	Power seat module (PSM)	Reading off input signals to the power seat module	V1.10.001
VOLVO	560	2001	Power seat module (PSM)	Activating components/functions	V1.10.001
VOLVO	560	2001	Power seat module (PSM)	Programming the seat temperature	V1.10.001
VOLVO	560	2001	Power seat module (PSM)	Checking current values	V1.10.001
VOLVO	560	2001	Supplemental restraint system module (SRS)	Read codes	V1.10.001
VOLVO	560	2001	Supplemental restraint system module (SRS)	Erase codes	V1.10.001
VOLVO	560	2001	Supplemental restraint system module (SRS)	Reading off extended diagnostic trouble code (DTC) information, SRS [supplemental restraint system] / SIPS [side impact protection system]	V1.10.001
VOLVO	560	2001	Supplemental restraint system module (SRS)	Readingsensor unit id	V1.10.001
VOLVO	560	2001	Supplemental restraint system module (SRS)	Parameter read off - digital display	V1.10.001
VOLVO	560	2001	Supplemental restraint system module (SRS)	Reading off the control module ID	V1.10.001
VOLVO	560	2001	Supplemental restraint system module (SRS)	Reading off input signals to the power seat module	V1.10.001
VOLVO	560	2001	Engine control module (ECM)	Activating components/functions	V1.10.001
VOLVO	560	2001	Engine control module (ECM)	Programming the seat temperature	V1.10.001
VOLVO	560	2001	Engine control module (ECM)	Reading off control module ID: ECM	V1.10.001
VOLVO	560	2001	Engine control module (ECM)	Readiness code (USA/CN)	V1.10.001
VOLVO	560	2001	Engine control module (ECM)	Parameter, digital display	V1.10.001
VOLVO	560	2001	Engine control module (ECM)	Activating components/functions	V1.10.001
VOLVO	560	2001	Engine control module (ECM)	Quick test of the fuel tank system (USA/CN)	V1.10.001
VOLVO	560	2001	Engine control module (ECM)	Reading off the diagnostic operating cycle	V1.10.001
VOLVO	560	2001	Engine control module (ECM)	Read codes	V1.10.001
VOLVO	560	2001	Fuel system/combined system	Erase codes	V1.10.001
VOLVO	560	2001	Fuel system/combined system	Reading off control module ID	V1.10.001
VOLVO	560	2001	Fuel system/combined system	Parameter, digital display	V1.10.001
VOLVO	560	2001	Fuel system/combined system	Activating components and functions	V1.10.001
VOLVO	560	2001	Fuel system/combined system	Programming fuel pump (FP) start diesel	V1.10.001
VOLVO	560	2001	Fuel system/combined system	Programming optimizing parameters	V1.10.001
VOLVO	560	2002	Accessory electronic module (AEM)	Read codes	V1.10.001
VOLVO	560	2002	Accessory electronic module (AEM)	Erase codes	V1.10.001
VOLVO	560	2002	Accessory electronic module (AEM)	Reading off control module ID: programming information, accessory electronic module	V1.10.001
VOLVO	560	2002	Accessory electronic module (AEM)	Readingsensor unit id	V1.10.001
VOLVO	560	2002	Accessory electronic module (AEM)	Reading off parameters, digital display	V1.10.001
VOLVO	560	2002	Accessory electronic module (AEM)	Activating components and functions	V1.10.001
VOLVO	560	2002	Audio module (AUM)	Read codes	V1.10.001
VOLVO	560	2002	Audio module (AUM)	Erase codes	V1.10.001
VOLVO	560	2002	Audio module (AUM)	Reading off extended diagnostic trouble code (DTC) information, audio module	V1.10.001
VOLVO	560	2002	Audio module (AUM)	Reading off the control module ID	V1.10.001
VOLVO	560	2002	Audio module (AUM)	Reading off parameters, digital display	V1.10.001
VOLVO	560	2002	Central electronic module (CEM)	Read codes	V1.10.001
VOLVO	560	2002	Central electronic module (CEM)	Erase codes	V1.10.001
VOLVO	560	2002	Central electronic module (CEM)	Reading off extended diagnostic trouble code (DTC) information, central electronic module	V1.10.001
VOLVO	560	2002	Central electronic module (CEM)	Readingsensor unit id	V1.10.001
VOLVO	560	2002	Central electronic module (CEM)	Reading data for vehicle configuration	V1.10.001
VOLVO	560	2002	Central electronic module (CEM)	Reading off parameters in the central electronic module (CEM)	V1.10.001
VOLVO	560	2002	Central electronic module (CEM)	Reading off parameters, central function	V1.10.001
VOLVO	560	2002	Central electronic module (CEM)	Activating components/functions	V1.10.001
VOLVO	560	2002	Central electronic module (CEM)	Programming the control module	V1.10.001
VOLVO	560	2002	Central electronic module (CEM)	Reading off the alarm cause	V1.10.001
VOLVO	560	2002	Central electronic module (CEM)	Resetting the factory settings	V1.10.001
VOLVO	560	2002	Driver information module (DIM)	Resetting the car	V1.10.001
VOLVO	560	2002	Driver information module (DIM)	Read codes	V1.10.001
VOLVO	560	2002	Driver information module (DIM)	Erase codes	V1.10.001
VOLVO	560	2002	Driver information module (DIM)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO	560	2002	Driver information module (DIM)	Reading the car unit ID	V1.10.001
VOLVO	560	2002	Driver information module (DIM)	Activating components and functions	V1.10.001
VOLVO	560	2002	Driver information module (DIM)	Testing all displays and lamps in instrument	V1.10.001
VOLVO	560	2002	Driver information module (DIM)	Programming the driver information module (DIM)	V1.10.001
VOLVO	560	2002	Driver information module (DIM)	Read and stored values in driver information module (DIM)	V1.10.001
VOLVO	560	2002	Driver information module (DIM)	Resetting the service reminder indicator (SR)	V1.10.001
VOLVO	560	2002	Phone module (PHM)	Read codes	V1.10.001
VOLVO	560	2002	Phone module (PHM)	Erase codes	V1.10.001
VOLVO	560	2002	Phone module (PHM)	Reading off extended diagnostic trouble code (DTC) information, carphone module	V1.10.001
VOLVO	560	2002	Phone module (PHM)	Reading off the control module ID	V1.10.001
VOLVO	560	2002	Phone module (PHM)	Reading off parameter values	V1.10.001
VOLVO	560	2002	Phone module (PHM)	Resetting the carphone code	V1.10.001
VOLVO	560	2002	Rear electronic module (REM)	Read codes	V1.10.001
VOLVO	560	2002	Rear electronic module (REM)	Erase codes	V1.10.001
VOLVO	560	2002	Rear electronic module (REM)	Reading off extended diagnostic trouble code (DTC) information, rear electrical module	V1.10.001
VOLVO	560	2002	Rear electronic module (REM)	Reading control unit id	V1.10.001
VOLVO	560	2002	Rear electronic module (REM)	Reading off the parameter values	V1.10.001
VOLVO	560	2002	Rear electronic module (REM)	Activating components and functions	V1.10.001
VOLVO	560	2002	Rear electronic module (REM)	Calibrating the Bi-Kenon lamp position sensor	V1.10.001
VOLVO	560	2002	Road traffic information module (RTI)	Read codes	V1.10.001
VOLVO	560	2002	Road traffic information module (RTI)	Erase codes	V1.10.001
VOLVO	560	2002	Road traffic information module (RTI)	Reading off extended diagnostic trouble code (DTC) information, road traffic information (RTI)	V1.10.001
VOLVO	560	2002	Road traffic information module (RTI)	Reading off the control module ID	V1.10.001
VOLVO	560	2002	Steering wheel (SWM)	Read codes	V1.10.001
VOLVO	560	2002	Steering wheel (SWM)	Erase codes	V1.10.001
VOLVO	560	2002	Steering wheel module (SWM)	Read codes	V1.10.001
VOLVO	560	2002	Steering wheel module (SWM)	Erase codes	V1.10.001
VOLVO	560	2002	Steering wheel module (SWM)	Reading off extended diagnostic trouble code (DTC) information, steering wheel module	V1.10.001
VOLVO	560	2002	Steering wheel module (SWM)	Reading control unit ID	V1.10.001
VOLVO	560	2002	Steering wheel module (SWM)	Digital display parameter	V1.10.001
VOLVO	560	2002	Upper electronic module (UEM)	Read codes	V1.10.001
VOLVO	560	2002	Upper electronic module (UEM)	Erase codes	V1.10.001
VOLVO	560	2002	Upper electronic module (UEM)	Reading off extended diagnostic trouble code (DTC) information, upper electrical module	V1.10.001
VOLVO	560	2002	Upper electronic module (UEM)	Reading control unit id	V1.10.001
VOLVO	560	2002	Upper electronic module (UEM)	Reading off parameter values	V1.10.001
VOLVO	560	2002	Upper electronic module (UEM)	Activating components/functions	V1.10.001
VOLVO	560	2002	Upper electronic module (UEM)	Programming the control unit	V1.10.001
VOLVO	560	2002	Upper electronic module (UEM)	Configuration data	V1.10.001
VOLVO	560	2002	Upper electronic module (UEM)	Replacing the control module	V1.10.001
VOLVO	560	2002	Upper electronic module (UEM)	Reading the programmed values	V1.10.001
VOLVO	560	2002	Transmission control module (TCM)	Read codes	V1.10.001
VOLVO	560	2002	Transmission control module (TCM)	Erase codes	V1.10.001
VOLVO	560	2002	Transmission control module (TCM)	Resetting adaptation to zero	V1.10.001
VOLVO	560	2002	Transmission control module (TCM)	Resetting counter for - gearbox oil change	V1.10.001
VOLVO	560	2002	Anti-lock brake system module (ABS/BCM)	Read codes	V1.10.001
VOLVO	560	2002	Anti-lock brake system module (ABS/BCM)	Erase codes	V1.10.001
VOLVO	560	2002	Anti-lock brake system module (ABS/BCM)	Reading off extended diagnostic trouble code (DTC) information, brake control module (BCM)	V1.10.001
VOLVO	560	2002	Anti-lock brake system module (ABS/BCM)	Reading off the control module ID	V1.10.001
VOLVO	560	2002	Anti-lock brake system module (ABS/BCM)	Parameter, digital display	V1.10.001
VOLVO	560	2002	Anti-lock brake system module (ABS/BCM)	Activating components and functions	V1.10.001
VOLVO	560	2002	Anti-lock brake system module (ABS/BCM)	Checking intake tank switch adjustment	V1.10.001
VOLVO	560	2002	Steering wheel angle sensor module (SAS)	Read codes	V1.10.001
VOLVO	560	2002	Steering wheel angle sensor module (SAS)	Erase codes	V1.10.001
VOLVO	560	2002	Steering wheel angle sensor module (SAS)	Readingsensor unit id, SAS	V1.10.001
VOLVO	560	2002	Steering wheel angle sensor module (SAS)	Digital display parameter (SAS)	V1.10.001
VOLVO	560	2002	Climate control module (CCM)	Read codes	V1.10.001
VOLVO	560	2002	Climate control module (CCM)	Erase codes	V1.10.001
VOLVO	560	2002	Climate control module (CCM)	Reading off extended diagnostic trouble code (DTC) information, climate control module	V1.10.001
VOLVO	560	2002	Climate control module (CCM)	Reading control unit id	V1.10.001
VOLVO	560	2002	Climate control module (CCM)	Reading off the parameter values	V1.10.001
VOLVO	560	2002	Climate control module (CCM)	Activating components and functions	V1.10.001
VOLVO	560	2002	Climate control module (CCM)	Self-adjustment of damper motor end stops	V1.10.001
VOLVO	560	2002	Climate control module (CCM)	Adjusting dampers, ELL	V1.10.001
VOLVO	560	2002	Climate control module (CCM)	Readline-out parameter values in the climate control module	V1.10.001
VOLVO	560	2002	Driver door module (DDM)	Read codes	V1.10.001
VOLVO	560	2002	Driver door module (DDM)	Erase codes	V1.10.001
VOLVO	560	2002	Driver door module (DDM)	Reading off extended diagnostic trouble code (DTC) information, driver's door module	V1.10.001
VOLVO	560	2002	Driver door module (DDM)	Reading control unit id	V1.10.001
VOLVO	560	2002	Driver door module (DDM)	Reading off the parameter values	V1.10.001
VOLVO	560	2002	Driver door module (DDM)	Activating components and functions	V1.10.001
VOLVO	560	2002	Passenger door module (PDM)	Window position set-up	V1.10.001
VOLVO	560	2002	Passenger door module (PDM)	Read codes	V1.10.001
VOLVO	560	2002	Passenger door module (PDM)	Erase codes	V1.10.001
VOLVO	560	2002	Passenger door module (PDM)	Reading off extended diagnostic trouble code (DTC) information, passenger door module	V1.10.001
VOLVO	560	2002	Passenger door module (PDM)	Reading control unit id	V1.10.001
VOLVO	560	2002	Passenger door module (PDM)	Reading off the parameter values	V1.10.001
VOLVO	560	2002	Power seat module (PSM)	Read codes	V1.10.001
VOLVO	560	2002	Power seat module (PSM)	Erase codes	V1.10.001
VOLVO	560	2002	Power seat module (PSM)	Window position set-up	V1.10.001
VOLVO	560	2002	Power seat module (PSM)	Read codes	V1.10.001
VOLVO	560	2002	Power seat module (PSM)	Erase codes	V1.10.001
VOLVO	560	2002	Power seat module (PSM)	Reading off extended diagnostic trouble code (DTC) information, power seat module	V1.10.001
VOLVO	560	2002	Power seat module (PSM)	Reading off the control module ID	V1.10.001
VOLVO	560	2002	Power seat module (PSM)	Reading off input signals to power seat module	V1.10.001
VOLVO	560	2002	Power seat module (PSM)	Activating components/functions	V1.10.001
VOLVO	560	2002	Power seat module (PSM)	Programming the seat temperature	V1.10.001
VOLVO	560	2002	Power seat module (PSM)	Checking current values	V1.10.001
VOLVO	560	2002	Supplemental restraint system module (SRS)	Read codes	V1.10.001
VOLVO	560	2002	Supplemental restraint system module (SRS)	Erase codes	V1.10.001
VOLVO	560	2002	Supplemental restraint system module (SRS)	Reading off extended diagnostic trouble code (DTC) information, SRS [supplemental restraint system] / SIPS [side impact protection system]	V1.10.001
VOLVO	560	2002	Supplemental restraint system module (SRS)	Readingsensor unit id	V1.10.001
VOLVO	560	2002	Supplemental restraint system module (SRS)	Parameter read off - digital display	V1.10.001
VOLVO	560	2002	Engine control module (ECM)	Read codes	V1.10.001
VOLVO	560	2002	Engine control module (ECM)	Erase codes	V1.10.001
VOLVO	560	2002	Engine control module (ECM)	Extended diagnostic trouble code (DTC) reading	V1.10.001
VOLVO	560	2002	Engine control module (ECM)	Reading off blocks of diagnostic trouble codes (DTCs)	V1.10.001
VOLVO	560	2002	Engine control module (ECM)	Reading off the control module ID: ECM	V1.10.001
VOLVO	560	2002	Engine control module (ECM)	Readiness code (USA/CN)	V1.10.001
VOLVO	560	2002	Engine control module (ECM)	Activating components / functions	V1.10.001
VOLVO	560	2002	Engine control module (ECM)	Quitting the fuel tank system (USA/CN)	V1.10.001
VOLVO	560	2002	Engine control module (ECM)	Reading off the diagnostic operating cycle	V1.10.001
VOLVO	560	2002	Fuel system/combined system	Read codes	V1.10.001
VOLVO	560	2002	Fuel system/combined system	Erase codes	V1.10.001
VOLVO	560	2002	Fuel system/combined system	Reading off the control module ID	V1.10.001
VOLVO	560	2002	Fuel system/combined system	Parameter, digital display	V1.10.001
VOLVO	560	2002	Fuel system/combined system	Activating components and functions	V1.10.001
VOLVO	560	2002	Fuel system/combined system	Adapting the throttle unit	V1.10.001
VOLVO	560	2002	Fuel system/combined system	Quick test of intake camshaft control	V1.10.001
VOLVO	560	2002	Fuel system/combined system	Quick test of the fuel tank system	V1.10.001
VOLVO	560	2003	Accessory electronic module (AEM)	Read codes	V1.10.001
VOLVO	560	2003	Accessory electronic module (AEM)	Erase codes	V1.10.001
VOLVO	560	2003	Accessory electronic module (AEM)	Reading off extended fault-tracing information, accessory electronic module	V1.10.001
VOLVO	560	2003	Accessory electronic module (AEM)	Readingsensor unit id	V1.10.001
VOLVO	560	2003	Accessory electronic module (AEM)	Reading off parameter values	V1.10.001
VOLVO	560	2003	Accessory electronic module (AEM)	Activating components and functions	V1.10.001
VOLVO	560				

VOLVO	560	2003	Central electronic module (CEM)	Read codes	V1.10.001
VOLVO	560	2003	Central electronic module (CEM)	Erase codes	V1.10.001
VOLVO	560	2003	Central electronic module (CEM)	Reading off extended diagnostic trouble code (DTC) information, central electronic module	V1.10.001
VOLVO	560	2003	Central electronic module (CEM)	Reading control unit ID	V1.10.001
VOLVO	560	2003	Central electronic module (CEM)	Reading data for vehicle configuration	V1.10.001
VOLVO	560	2003	Central electronic module (CEM)	Reading off parameters, digital display	V1.10.001
VOLVO	560	2003	Central electronic module (CEM)	Reading off parameter values	V1.10.001
VOLVO	560	2003	Central electronic module (CEM)	Activating components/functions	V1.10.001
VOLVO	560	2003	Central electronic module (CEM)	Activating components/functions	V1.10.001
VOLVO	560	2003	Central electronic module (CEM)	Programming the control module	V1.10.001
VOLVO	560	2003	Central electronic module (CEM)	Reading off alarm cause	V1.10.001
VOLVO	560	2003	Central electronic module (CEM)	Resetting the factory settings	V1.10.001
VOLVO	560	2003	Central electronic module (CEM)	Resetting the car	V1.10.001
VOLVO	560	2003	Driver information module (DIM)	Read codes	V1.10.001
VOLVO	560	2003	Driver information module (DIM)	Erase codes	V1.10.001
VOLVO	560	2003	Driver information module (DIM)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO	560	2003	Driver information module (DIM)	Reading the current ID	V1.10.001
VOLVO	560	2003	Driver information module (DIM)	Parameter, digital display	V1.10.001
VOLVO	560	2003	Driver information module (DIM)	Activating components and functions	V1.10.001
VOLVO	560	2003	Driver information module (DIM)	Testing all displays and lamps in instrument	V1.10.001
VOLVO	560	2003	Driver information module (DIM)	Programming, the driver information module (DIM)	V1.10.001
VOLVO	560	2003	Driver information module (DIM)	Reading off parameter values in driver information module (DIM)	V1.10.001
VOLVO	560	2003	Driver information module (DIM)	Resetting the service reminder indicator (SRI)	V1.10.001
VOLVO	560	2003	Phone module (PHM)	Read codes	V1.10.001
VOLVO	560	2003	Phone module (PHM)	Erase codes	V1.10.001
VOLVO	560	2003	Phone module (PHM)	Reading off extended diagnostic trouble code (DTC) information, carphone module	V1.10.001
VOLVO	560	2003	Phone module (PHM)	Reading off the control module ID	V1.10.001
VOLVO	560	2003	Phone module (PHM)	Reading off parameter values	V1.10.001
VOLVO	560	2003	Phone module (PHM)	Resetting the carphone code	V1.10.001
VOLVO	560	2003	Rear electronic module (REM)	Read codes	V1.10.001
VOLVO	560	2003	Rear electronic module (REM)	Erase codes	V1.10.001
VOLVO	560	2003	Rear electronic module (REM)	Reading off extended diagnostic trouble code (DTC) information, rear electrical module	V1.10.001
VOLVO	560	2003	Rear electronic module (REM)	Reading control unit ID	V1.10.001
VOLVO	560	2003	Rear electronic module (REM)	Reading off the parameter values	V1.10.001
VOLVO	560	2003	Rear electronic module (REM)	Activating components and functions	V1.10.001
VOLVO	560	2003	Rear electronic module (REM)	Calibrating the Bi-Xenon lamp position sensor	V1.10.001
VOLVO	560	2003	Road traffic information module (RTI)	Read codes	V1.10.001
VOLVO	560	2003	Road traffic information module (RTI)	Erase codes	V1.10.001
VOLVO	560	2003	Road traffic information module (RTI)	Reading off extended diagnostic trouble code (DTC) information, road traffic information (RTI)	V1.10.001
VOLVO	560	2003	Steering wheel module (SWM)	Read codes	V1.10.001
VOLVO	560	2003	Steering wheel module (SWM)	Erase codes	V1.10.001
VOLVO	560	2003	Steering wheel module (SWM)	Reading off extended diagnostic trouble code (DTC) information, steering wheel module	V1.10.001
VOLVO	560	2003	Steering wheel module (SWM)	Reading control unit ID	V1.10.001
VOLVO	560	2003	Steering wheel module (SWM)	Digital display parameter	V1.10.001
VOLVO	560	2003	Upper electronic module (UEM)	Read codes	V1.10.001
VOLVO	560	2003	Upper electronic module (UEM)	Erase codes	V1.10.001
VOLVO	560	2003	Upper electronic module (UEM)	Reading off extended diagnostic trouble code (DTC) information, upper electrical module	V1.10.001
VOLVO	560	2003	Upper electronic module (UEM)	Reading control unit ID	V1.10.001
VOLVO	560	2003	Upper electronic module (UEM)	Reading off parameter values	V1.10.001
VOLVO	560	2003	Upper electronic module (UEM)	Activating components/functions	V1.10.001
VOLVO	560	2003	Upper electronic module (UEM)	Reset adjustment to zero	V1.10.001
VOLVO	560	2003	Upper electronic module (UEM)	Configuration of the area	V1.10.001
VOLVO	560	2003	Upper electronic module (UEM)	Replacing the control module	V1.10.001
VOLVO	560	2003	User electric module (UEM)	Readline the unprinted values	V1.10.001
VOLVO	560	2003	Transmission control module (TCM)	Read codes	V1.10.001
VOLVO	560	2003	Transmission control module (TCM)	Erase codes	V1.10.001
VOLVO	560	2003	Transmission control module (TCM)	Reading off extended diagnostic trouble code (DTC) information, transmission control module (TCM)	V1.10.001
VOLVO	560	2003	Transmission control module (TCM)	Reading control unit ID	V1.10.001
VOLVO	560	2003	Transmission control module (TCM)	Parameter, digital display	V1.10.001
VOLVO	560	2003	Transmission control module (TCM)	Activating components / functions	V1.10.001
VOLVO	560	2003	Transmission control module (TCM)	Reset adjustment to zero	V1.10.001
VOLVO	560	2003	Transmission control module (TCM)	Reading the counter for gearbox oil change	V1.10.001
VOLVO	560	2003	Anti-lock brake system module (ABS/BCM)	Read codes	V1.10.001
VOLVO	560	2003	Anti-lock brake system module (ABS/BCM)	Erase codes	V1.10.001
VOLVO	560	2003	Anti-lock brake system module (ABS/BCM)	Reading off extended diagnostic trouble code (DTC) information, brake control module (BCM)	V1.10.001
VOLVO	560	2003	Anti-lock brake system module (ABS/BCM)	Reading off the control module ID	V1.10.001
VOLVO	560	2003	Anti-lock brake system module (ABS/BCM)	Parameter, digital display	V1.10.001
VOLVO	560	2003	Anti-lock brake system module (ABS/BCM)	Activating components and functions	V1.10.001
VOLVO	560	2003	Anti-lock brake system module (ABS/BCM)	Checking brake light switch adjustment	V1.10.001
VOLVO	560	2003	Anti-lock brake system module (ABS/BCM)	Calibration	V1.10.001
VOLVO	560	2003	Steering wheel angle sensor module (SAS)	Read codes	V1.10.001
VOLVO	560	2003	Steering wheel angle sensor module (SAS)	Erase codes	V1.10.001
VOLVO	560	2003	Steering wheel angle sensor module (SAS)	Reading control unit ID, SAS	V1.10.001
VOLVO	560	2003	Steering wheel angle sensor module (SAS)	Digital display parameter (SAS)	V1.10.001
VOLVO	560	2003	Climate control module (CCM)	Read codes	V1.10.001
VOLVO	560	2003	Climate control module (CCM)	Erase codes	V1.10.001
VOLVO	560	2003	Climate control module (CCM)	Reading off extended diagnostic trouble code (DTC) information, climate control module	V1.10.001
VOLVO	560	2003	Climate control module (CCM)	Reading control unit ID	V1.10.001
VOLVO	560	2003	Climate control module (CCM)	Digital display parameter	V1.10.001
VOLVO	560	2003	Climate control module (CCM)	Progamming the climate control module (CCM)	V1.10.001
VOLVO	560	2003	Climate control module (CCM)	Self-adjustment of damper motor end stops	V1.10.001
VOLVO	560	2003	Climate control module (CCM)	Adapting the climate control	V1.10.001
VOLVO	560	2003	Climate control module (CCM)	Reading out programmed parameters in the climate control module	V1.10.001
VOLVO	560	2003	Driver door module (DOM)	Read codes	V1.10.001
VOLVO	560	2003	Driver door module (DOM)	Erase codes	V1.10.001
VOLVO	560	2003	Driver door module (DOM)	Reading off extended diagnostic trouble code (DTC) information, driver's door module	V1.10.001
VOLVO	560	2003	Driver door module (DOM)	Reading control unit ID	V1.10.001
VOLVO	560	2003	Driver door module (DOM)	Reading off the parameter values	V1.10.001
VOLVO	560	2003	Driver door module (DOM)	Activating components and functions	V1.10.001
VOLVO	560	2003	Driver door module (DOM)	Programm soft stop	V1.10.001
VOLVO	560	2003	Driver door module (DOM)	Programming the remote control setting	V1.10.001
VOLVO	560	2003	Passenger door module (PDM)	Read codes	V1.10.001
VOLVO	560	2003	Passenger door module (PDM)	Erase codes	V1.10.001
VOLVO	560	2003	Passenger door module (PDM)	Reading off extended diagnostic trouble code (DTC) information, passenger door module	V1.10.001
VOLVO	560	2003	Passenger door module (PDM)	Reading control unit ID	V1.10.001
VOLVO	560	2003	Passenger door module (PDM)	Reading off the parameter values	V1.10.001
VOLVO	560	2003	Passenger door module (PDM)	Activating components and functions	V1.10.001
VOLVO	560	2003	Passenger door module (PDM)	Programm soft stop	V1.10.001
VOLVO	560	2003	Passenger door module (PDM)	Programming the remote control setting	V1.10.001
VOLVO	560	2003	Passenger seat module (PSM)	Read codes	V1.10.001
VOLVO	560	2003	Passenger seat module (PSM)	Erase codes	V1.10.001
VOLVO	560	2003	Passenger seat module (PSM)	Reading off extended diagnostic trouble code (DTC) information, power seat module	V1.10.001
VOLVO	560	2003	Passenger seat module (PSM)	Reading control unit ID	V1.10.001
VOLVO	560	2003	Passenger seat module (PSM)	Reading off input signals to the power seat module	V1.10.001
VOLVO	560	2003	Passenger seat module (PSM)	Activating components and functions	V1.10.001
VOLVO	560	2003	Passenger seat module (PSM)	Programme the seat temperature	V1.10.001
VOLVO	560	2003	Passenger seat module (PSM)	Checkin current values	V1.10.001
VOLVO	560	2003	Supplemental restraint system module (SRS)	Read codes	V1.10.001
VOLVO	560	2003	Supplemental restraint system module (SRS)	Erase codes	V1.10.001
VOLVO	560	2003	Supplemental restraint system module (SRS)	Reading off extended diagnostic trouble code (DTC) information, SRS (supplemental restraint system) / SIPS (side impact protection system)	V1.10.001
VOLVO	560	2003	Supplemental restraint system module (SRS)	Reading control unit ID	V1.10.001
VOLVO	560	2003	Supplemental restraint system module (SRS)	Reading off parameters, digital display	V1.10.001
VOLVO	560	2003	Engine control module (ECM)	Read codes	V1.10.001
VOLVO	560	2003	Engine control module (ECM)	Erase codes	V1.10.001
VOLVO	560	2003	Engine control module (ECM)	Quick test of exhaust camshaft control	V1.10.001
VOLVO	560	2003	Engine control module (ECM)	Quick test of intake camshaft control	V1.10.001
VOLVO	560	2003	Engine control module (ECM)	Quick test of the fuel tank system	V1.10.001
VOLVO	560	2004	Engine control module (ECM)	Read codes	V1.10.001
VOLVO	560	2004	Engine control module (ECM)	Erase codes	V1.10.001
VOLVO	560	2004	Engine control module (ECM)	Reading off individual diagnostic trouble code (DTC) information, engine control module (ECM)	V1.10.001
VOLVO	560	2004	Engine control module (ECM)	Reading off control module ID, ECM	V1.10.001
VOLVO	560	2004	Engine control module (ECM)	Parameters, digital display	V1.10.001
VOLVO	560	2004	Engine control module (ECM)	Activating components and functions	V1.10.001
VOLVO	560	2004	Engine control module (ECM)	Adapting the throttle unit	V1.10.001
VOLVO	560	2004	Engine control module (ECM)	Quick test of exhaust camshaft control	V1.10.001
VOLVO	560	2004	Engine control module (ECM)	Quick test of intake camshaft control	V1.10.001
VOLVO	560	2004	Accessory electronic module (AEM)	Read codes	V1.10.001
VOLVO	560	2004	Accessory electronic module (AEM)	Erase codes	V1.10.001
VOLVO	560	2004	Accessory electronic module (AEM)	Reading off extended fault-tracing information, accessory electronic module	V1.10.001
VOLVO	560	2004	Accessory electronic module (AEM)	Reading off the control module ID	V1.10.001
VOLVO	560	2004	Accessory electronic module (AEM)	Reading off parameters, digital display	V1.10.001
VOLVO	560	2004	Audio module (AUM)	Read codes	V1.10.001
VOLVO	560	2004	Audio module (AUM)	Erase codes	V1.10.001
VOLVO	560	2004	Audio module (AUM)	Reading off extended diagnostic trouble code (DTC) information, audio module	V1.10.001
VOLVO	560	2004	Central electronic module (CEM)	Read codes	V1.10.001
VOLVO	560	2004	Central electronic module (CEM)	Erase codes	V1.10.001
VOLVO	560	2004	Central electronic module (CEM)	Reading off extended diagnostic trouble code (DTC) information, central electronic module	V1.10.001
VOLVO	560	2004	Central electronic module (CEM)	Reading control unit ID	V1.10.001
VOLVO	560	2004	Central electronic module (CEM)	Reading off parameters, digital display	V1.10.001
VOLVO	560	2004	Central electronic module (CEM)	Activating components and functions	V1.10.001
VOLVO	560	2004	Central electronic module (CEM)	Programm the control module	V1.10.001
VOLVO	560	2004	Central electronic module (CEM)	Reading off the alarm cause	V1.10.001
VOLVO	560	2004	Central electronic module (CEM)	Resetting the factory settings	V1.10.001
VOLVO	560	2004	Central electronic module (CEM)	Restoring the car	V1.10.001
VOLVO	560	2004	Driver information module (DIM)	Read codes	V1.10.001
VOLVO	560	2004	Driver information module (DIM)	Erase codes	V1.10.001
VOLVO	560	2004	Driver information module (DIM)	Reading the unprinted values	V1.10.001
VOLVO	560	2004	Driver information module (DIM)	Reading the control unit ID	V1.10.001
VOLVO	560	2004	Driver information module (DIM)	Parameter, digital display	V1.10.001
VOLVO	560	2004	Driver information module (DIM)	Activating components and functions	V1.10.001
VOLVO	560	2004	Driver information module (DIM)	Testing the alarm lamps in instrument	V1.10.001
VOLVO	560	2004	Driver information module (DIM)	Programm the driver information module (DIM)	V1.10.001
VOLVO	560	2004	Driver information module (DIM)	Read-out of unprinted values in driver information module (DIM)	V1.10.001
VOLVO	560	2004	Phone module (PHM)	Read codes	V1.10.001
VOLVO	560	2004	Phone module (PHM)	Erase codes	V1.10.001
VOLVO	560	2004	Phone module (PHM)	Reading off extended diagnostic trouble code (DTC) information, carphone module	V1.10.001
VOLVO	560	2004	Phone module (PHM)	Reading off the control module ID	V1.10.001
VOLVO	560	2004	Phone module (PHM)	Reading off parameter values	V1.10.001
VOLVO	560	2004	Phone module (PHM)	Resetting the carphone code	V1.10.001
VOLVO	560	2004	Rear electronic module (REM)	Erase codes	V1.10.001
VOLVO	560	2004	Rear electronic module (REM)	Reading off extended diagnostic trouble code (DTC) information, rear electrical module	V1.10.001
VOLVO	560	2004	Rear electronic module (REM)	Reading off control module ID	V1.10.001
VOLVO	560	2004	Rear electronic module (REM)	Reading off the parameter values	V1.10.001
VOLVO	560	2004	Rear electronic module (REM)	Activating components and functions	V1.10.001
VOLVO	560	2004	Rear electronic module (REM)	Calibrating the Bi-Xenon lamp position sensor	V1.10.001
VOLVO	560	2004	Road traffic information module (RTI)	Read codes	V1.10.001
VOLVO	560	2004	Road traffic information module (RTI)	Erase codes	V1.10.001
VOLVO	560	2004	Road traffic information module (RTI)	Reading off extended diagnostic trouble code (DTC) information, road traffic information (RTI)	V1.10.001
VOLVO	560	2004	Steering wheel module (SWM)	Read codes	V1.10.001
VOLVO	560	2004	Steering wheel module (SWM)	Erase codes	V1.10.001
VOLVO	560	2004	Steering wheel module (SWM)	Reading off extended diagnostic trouble code (DTC) information, steering wheel module	V1.10.001
VOLVO	560	2004	Steering wheel module (SWM)	Reading control unit ID	V1.10.001
VOLVO	560	2004	Steering wheel module (SWM)	Digital display parameter	V1.10.001
VOLVO	560	2004			

VOLVO	560	2005	Driver door module (DDM)	Read codes	V1.10.001
VOLVO	560	2005	Driver door module (DDM)	Erase codes	V1.10.001
VOLVO	560	2005	Driver door module (DDM)	Reading off extended diagnostic trouble code (DTC) information, driver's door module	V1.10.001
VOLVO	560	2005	Driver door module (DDM)	Reading control unit id	V1.10.001
VOLVO	560	2005	Driver door module (DDM)	Reading off parameters, digital display	V1.10.001
VOLVO	560	2005	Driver door module (DDM)	Activating components and functions	V1.10.001
VOLVO	560	2005	Driver door module (DDM)	Initialising the window position	V1.10.001
VOLVO	560	2005	Driver door module (DDM)	Programming soft stop	V1.10.001
VOLVO	560	2005	Driver door module (DDM)	Programming the remote control setting	V1.10.001
VOLVO	560	2005	Passenger door module (PDM)	Read codes	V1.10.001
VOLVO	560	2005	Passenger door module (PDM)	Erase codes	V1.10.001
VOLVO	560	2005	Passenger door module (PDM)	Reading off extended diagnostic trouble code (DTC) information, passenger door module	V1.10.001
VOLVO	560	2005	Passenger door module (PDM)	Reading control unit id	V1.10.001
VOLVO	560	2005	Passenger door module (PDM)	Reading off parameters, digital display	V1.10.001
VOLVO	560	2005	Passenger door module (PDM)	Activating components and functions	V1.10.001
VOLVO	560	2005	Passenger door module (PDM)	Initialising the window position	V1.10.001
VOLVO	560	2005	Power seat module (PSM)	Programming soft stop	V1.10.001
VOLVO	560	2005	Power seat module (PSM)	Read codes	V1.10.001
VOLVO	560	2005	Power seat module (PSM)	Erase codes	V1.10.001
VOLVO	560	2005	Power seat module (PSM)	Reading off extended diagnostic trouble code (DTC) information, power seat module	V1.10.001
VOLVO	560	2005	Power seat module (PSM)	Reading off input signals to the power seat module	V1.10.001
VOLVO	560	2005	Power seat module (PSM)	Activating components/functions	V1.10.001
VOLVO	560	2005	Power seat module (PSM)	Checking the set values	V1.10.001
VOLVO	560	2005	Power seat module (PSM)	Programming the remote control setting	V1.10.001
VOLVO	560	2005	Supplemental restraint system module (SR5)	Read codes	V1.10.001
VOLVO	560	2005	Supplemental restraint system module (SR5)	Erase codes	V1.10.001
VOLVO	560	2005	Supplemental restraint system module (SR5)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO	560	2005	Supplemental restraint system module (SR5)	Reading off the control module ID	V1.10.001
VOLVO	560	2005	Supplemental restraint system module (SR5)	Reading off parameters, digital display	V1.10.001
VOLVO	560	2005	Supplemental restraint system module (SR5)	Reading off diagnostic trouble code information, ECM	V1.10.001
VOLVO	560	2005	Engine control module (ECM)	Readiness code (USA/CDN)	V1.10.001
VOLVO	560	2005	Engine control module (ECM)	Quick test of the fuel tank system (USA/CDN)	V1.10.001
VOLVO	560	2005	Engine control module (ECM)	Extended diagnostic trouble code (DTC) reading	V1.10.001
VOLVO	560	2005	Engine control module (ECM)	Reading off blocks of diagnostic trouble codes (DTCs)	V1.10.001
VOLVO	560	2005	Engine control module (ECM)	Reading off extended diagnostic trouble code (DTC) information, engine control module (ECM)	V1.10.001
VOLVO	560	2005	Engine control module (ECM)	Reading off control module ID, Electronic throttle module	V1.10.001
VOLVO	560	2005	Engine control module (ECM)	Parameter, digital display	V1.10.001
VOLVO	560	2005	Engine control module (ECM)	Reading off the diagnostic operating cycle	V1.10.001
VOLVO	560	2005	Engine control module (ECM)	Readiness code (USA/CDN)	V1.10.001
VOLVO	560	2005	Engine control module (ECM)	Programming, optimizing parameters	V1.10.001
VOLVO	560	2005	Engine control module (ECM)	Resetting car	V1.10.001
VOLVO	560	2005	Differential electronic module (DEM)	Read codes	V1.10.001
VOLVO	560	2005	Differential electronic module (DEM)	Erase codes	V1.10.001
VOLVO	560	2005	Differential electronic module (DEM)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO	560	2005	Differential electronic module (DEM)	Reading off the control module ID	V1.10.001
VOLVO	560	2005	Differential electronic module (DEM)	Reading off parameters, digital display	V1.10.001
VOLVO	560	2005	Fuel system/combined system	Read codes	V1.10.001
VOLVO	560	2005	Fuel system/combined system	Erase codes	V1.10.001
VOLVO	560	2005	Fuel system/combined system	Reading off the control module ID	V1.10.001
VOLVO	560	2005	Fuel system/combined system	Parameter, digital display	V1.10.001
VOLVO	560	2005	Fuel system/combined system	Activating components and functions	V1.10.001
VOLVO	560	2005	Fuel system/combined system	Programming, optimizing parameters	V1.10.001
VOLVO	560	1999	Combined instrument	Read codes	V1.10.001
VOLVO	570	1999	Combined instrument	Erase codes	V1.10.001
VOLVO	570	1999	Combined instrument	Reading off the control module ID	V1.10.001
VOLVO	570	1999	Combined instrument	Parameter, digital display	V1.10.001
VOLVO	570	1999	Combined instrument	Activating components/functions	V1.10.001
VOLVO	570	1999	Combined instrument	Programming, combined instrument panel	V1.10.001
VOLVO	570	1999	Combined instrument	Reading off programmed values in the combined instrument panel	V1.10.001
VOLVO	570	1999	Combined instrument	Resetting the Service reminder indicator (SRI)	V1.10.001
VOLVO	570	1999	Combined instrument	Resetting car	V1.10.001
VOLVO	570	1999	Lock and alarm	Read codes	V1.10.001
VOLVO	570	1999	Lock and alarm	Erase codes	V1.10.001
VOLVO	570	1999	Lock and alarm	Reading off the control module ID	V1.10.001
VOLVO	570	1999	Lock and alarm	Reading off parameters	V1.10.001
VOLVO	570	1999	Lock and alarm	Activating components/functions	V1.10.001
VOLVO	570	1999	Lock and alarm	Checking the number of remote controls	V1.10.001
VOLVO	570	1999	Lock and alarm	Reading off the unauthorised values	V1.10.001
VOLVO	570	1999	Lock and alarm	Reading off alarm causes	V1.10.001
VOLVO	570	1999	Lock and alarm	Resetting car	V1.10.001
VOLVO	570	1999	Road traffic information module (RTI)	Read codes	V1.10.001
VOLVO	570	1999	Road traffic information module (RTI)	Erase codes	V1.10.001
VOLVO	570	1999	Road traffic information module (RTI)	Reading off the control module ID	V1.10.001
VOLVO	570	1999	Road traffic information module (RTI)	Reading off parameters	V1.10.001
VOLVO	570	1999	Road traffic information module (RTI)	Activating components/functions	V1.10.001
VOLVO	570	1999	Transmission control module (TCM)	Read codes	V1.10.001
VOLVO	570	1999	Transmission control module (TCM)	Erase codes	V1.10.001
VOLVO	570	1999	Transmission control module (TCM)	Reading off the control module ID	V1.10.001
VOLVO	570	1999	Transmission control module (TCM)	Parameter, digital display	V1.10.001
VOLVO	570	1999	Transmission control module (TCM)	Activating components/functions	V1.10.001
VOLVO	570	1999	Climate control module (CCM)	Read codes	V1.10.001
VOLVO	570	1999	Climate control module (CCM)	Erase codes	V1.10.001
VOLVO	570	1999	Climate control module (CCM)	Reading off the control module ID	V1.10.001
VOLVO	570	1999	Climate control module (CCM)	Reading off parameters	V1.10.001
VOLVO	570	1999	Combustion preheater module (CPM)	Read codes	V1.10.001
VOLVO	570	1999	Combustion preheater module (CPM)	Erase codes	V1.10.001
VOLVO	570	1999	Combustion preheater module (CPM)	Reading off the control module ID	V1.10.001
VOLVO	570	1999	Combustion preheater module (CPM)	Parameter read off - digital display	V1.10.001
VOLVO	570	1999	Power seat module, left	Read codes	V1.10.001
VOLVO	570	1999	Power seat module, left	Erase codes	V1.10.001
VOLVO	570	1999	Power seat module, left	Reading off the control module ID	V1.10.001
VOLVO	570	1999	Power seat module, left	Reading off parameters	V1.10.001
VOLVO	570	1999	Power seat module, left	Activating components/functions	V1.10.001
VOLVO	570	1999	Power seat module, right	Read codes	V1.10.001
VOLVO	570	1999	Power seat module, right	Erase codes	V1.10.001
VOLVO	570	1999	Power seat module, right	Reading off the control module ID	V1.10.001
VOLVO	570	1999	Power seat module, right	Reading off parameters	V1.10.001
VOLVO	570	1999	Power seat module, right	Activating components/functions	V1.10.001
VOLVO	570	1999	Engine control module (ECM)	Read codes	V1.10.001
VOLVO	570	1999	Engine control module (ECM)	Erase codes	V1.10.001
VOLVO	570	1999	Engine control module (ECM)	Reading off extended diagnostic trouble code (DTC) information, engine control module (ECM)	V1.10.001
VOLVO	570	1999	Engine control module (ECM)	Reading off control module ID, ECM	V1.10.001
VOLVO	570	1999	Engine control module (ECM)	Parameter, digital display	V1.10.001
VOLVO	570	1999	Engine control module (ECM)	Activating components/functions	V1.10.001
VOLVO	570	1999	Transmission control module (TCM)	Read codes	V1.10.001
VOLVO	570	1999	Transmission control module (TCM)	Erase codes	V1.10.001
VOLVO	570	1999	Transmission control module (TCM)	Reset adaptation to zero	V1.10.001
VOLVO	570	1999	Transmission control module (TCM)	Resetting the counter for - gearbox oil change	V1.10.001
VOLVO	570	1999	Fuel system/combined system	Read codes	V1.10.001
VOLVO	570	1999	Fuel system/combined system	Erase codes	V1.10.001
VOLVO	570	1999	Fuel system/combined system	Reading off the control module ID	V1.10.001
VOLVO	570	1999	Fuel system/combined system	Parameter read off - digital display	V1.10.001
VOLVO	570	1999	Fuel system/combined system	Activating components/functions	V1.10.001
VOLVO	570	1999	Engine control module (ECM)	Read codes	V1.10.001
VOLVO	570	1999	Engine control module (ECM)	Erase codes	V1.10.001
VOLVO	570	1999	Engine control module (ECM)	Quick test of the fuel tank system	V1.10.001
VOLVO	570	1999	Combined instrument	Read codes	V1.10.001
VOLVO	570	1999	Combined instrument	Erase codes	V1.10.001
VOLVO	570	1999	Combined instrument	Reading off the control module ID	V1.10.001
VOLVO	570	1999	Combined instrument	Parameter, digital display	V1.10.001
VOLVO	570	1999	Combined instrument	Activating components/functions	V1.10.001
VOLVO	570	1999	Transmission control module (TCM)	Read codes	V1.10.001
VOLVO	570	1999	Transmission control module (TCM)	Erase codes	V1.10.001
VOLVO	570	1999	Transmission control module (TCM)	Reset adaptation to zero	V1.10.001
VOLVO	570	1999	Transmission control module (TCM)	Resetting counter for - gearbox oil change	V1.10.001
VOLVO	570	2000	Anti-lock brake system module (ABS/RCM)	Read codes	V1.10.001
VOLVO	570	2000	Anti-lock brake system module (ABS/RCM)	Erase codes	V1.10.001
VOLVO	570	2000	Anti-lock brake system module (ABS/RCM)	Reading off the control module ID	V1.10.001
VOLVO	570	2000	Anti-lock brake system module (ABS/RCM)	Parameter, digital display	V1.10.001
VOLVO	570	2000	Anti-lock brake system module (ABS/RCM)	Activating components/functions	V1.10.001
VOLVO	570	2000	Climate control module (CCM)	Read codes	V1.10.001
VOLVO	570	2000	Climate control module (CCM)	Erase codes	V1.10.001
VOLVO	570	2000	Climate control module (CCM)	Reading off the control module ID	V1.10.001
VOLVO	570	2000	Combustion preheater module (CPM)	Read codes	V1.10.001
VOLVO	570	2000	Combustion preheater module (CPM)	Erase codes	V1.10.001
VOLVO	570	2000	Combustion preheater module (CPM)	Reading off the control module ID	V1.10.001
VOLVO	570	2000	Power seat module, left	Read codes	V1.10.001
VOLVO	570	2000	Power seat module, left	Erase codes	V1.10.001
VOLVO	570	2000	Power seat module, left	Reading off the control module ID	V1.10.001
VOLVO	570	2000	Power seat module, left	Reading off parameters	V1.10.001
VOLVO	570	2000	Power seat module, left	Activating components/functions	V1.10.001
VOLVO	570	2000	Power seat module, right	Read codes	V1.10.001
VOLVO	570	2000	Power seat module, right	Erase codes	V1.10.001
VOLVO	570	2000	Power seat module, right	Reading off the control module ID	V1.10.001
VOLVO	570	2000	Power seat module, right	Reading off parameters	V1.10.001
VOLVO	570	2000	Power seat module, right	Activating components/functions	V1.10.001
VOLVO	570	2000	Supplemental restraint system module (SRS)	Read codes	V1.10.001
VOLVO	570	2000	Supplemental restraint system module (SRS)	Erase codes	V1.10.001
VOLVO	570	2000	Supplemental restraint system module (SRS)	Reading off control module ID	V1.10.001

VOLVO	S70	2000	Supplemental restraint system module (SRS)	Parameter, digital display	V1.10.001
VOLVO	S70	2000	Engine control module (ECM)	Extended diagnostic trouble code (DTC) reading	V1.10.001
VOLVO	S70	2000	Engine control module (ECM)	Readline off control module ID, Electronic throttle module	V1.10.001
VOLVO	S70	1999	Engine control module (ECM)	Readline code (USA/CDN)	V1.10.001
VOLVO	S70	2000	Engine control module (ECM)	Activating components/functions	V1.10.001
VOLVO	S70	2000	Engine control module (ECM)	Quick test of the fuel tank system (USA/CDN)	V1.10.001
VOLVO	S70	2000	Engine control module (ECM)	Reading off parameter values, operating cycle	V1.10.001
VOLVO	S70	2000	Transmission control module (TCM)	Activating components / functions	V1.10.001
VOLVO	S70	2000	Engine control module (ECM)	Reading control unit ID	V1.10.001
VOLVO	S70	2000	Engine control module (ECM)	Regulating the idle speed	V1.10.001
VOLVO	S70	2000	Engine control module (ECM)	Check and adjust dynamic pump setting	V1.10.001
VOLVO	S80	1999	Engine control module (ECM)	Read codes	V1.10.001
VOLVO	S80	1999	Engine control module (ECM)	Erase codes	V1.10.001
VOLVO	S80	1999	Engine control module (ECM)	Reading off extended diagnostic trouble code (DTC) information, engine control module (ECM)	V1.10.001
VOLVO	S80	1999	Engine control module (ECM)	Readline off control module ID, ECM	V1.10.001
VOLVO	S80	1999	Engine control module (ECM)	Readline off control module ID, ETM	V1.10.001
VOLVO	S80	1999	Engine control module (ECM)	Readline off parameter values	V1.10.001
VOLVO	S80	1999	Engine control module (ECM)	Digital display parameter	V1.10.001
VOLVO	S80	1999	Engine control module (ECM)	Activating components/functions, BS2x4 T	V1.10.001
VOLVO	S80	1999	Engine control module (ECM)	Quick fuel tank system test	V1.10.001
VOLVO	S80	1999	Engine control module (ECM)	Read codes	V1.10.001
VOLVO	S80	1999	Audio module (AUM)	Erase codes	V1.10.001
VOLVO	S80	1999	Audio module (AUM)	Reading off extended diagnostic trouble code (DTC) information, audio module	V1.10.001
VOLVO	S80	1999	Central electronic module (CEM)	Readline off vehicle control module ID	V1.10.001
VOLVO	S80	1999	Central electronic module (CEM)	Read codes	V1.10.001
VOLVO	S80	1999	Central electronic module (CEM)	Reading off extended diagnostic trouble code (DTC) information, central electronic module	V1.10.001
VOLVO	S80	1999	Central electronic module (CEM)	Erase codes	V1.10.001
VOLVO	S80	1999	Central electronic module (CEM)	Activating components/functions	V1.10.001
VOLVO	S80	1999	Central electronic module (CEM)	Programming the control unit	V1.10.001
VOLVO	S80	1999	Central electronic module (CEM)	Resetting the car	V1.10.001
VOLVO	S80	1999	Driver information module (DIM)	Read codes	V1.10.001
VOLVO	S80	1999	Driver information module (DIM)	Erase codes	V1.10.001
VOLVO	S80	1999	Driver information module (DIM)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO	S80	1999	Driver information module (DIM)	Readline off control unit ID	V1.10.001
VOLVO	S80	1999	Driver information module (DIM)	Digital display parameter	V1.10.001
VOLVO	S80	1999	Driver information module (DIM)	Activating components/functions	V1.10.001
VOLVO	S80	1999	Driver information module (DIM)	Testing all displays and lamps in instrument	V1.10.001
VOLVO	S80	1999	Driver information module (DIM)	Programming the driver information module (DIM)	V1.10.001
VOLVO	S80	1999	Driver information module (DIM)	Read-out of programmed values in driver information module (DIM)	V1.10.001
VOLVO	S80	1999	Driver information module (DIM)	Resetting the SRL (Service Reminder Lamp) to zero	V1.10.001
VOLVO	S80	1999	Phone module (PHM)	Read codes	V1.10.001
VOLVO	S80	1999	Phone module (PHM)	Erase codes	V1.10.001
VOLVO	S80	1999	Phone module (PHM)	Reading off extended diagnostic trouble code (DTC) information, carphone module	V1.10.001
VOLVO	S80	1999	Phone module (PHM)	Readline off vehicle control module ID	V1.10.001
VOLVO	S80	1999	Rear electronic module (REM)	Read codes	V1.10.001
VOLVO	S80	1999	Rear electronic module (REM)	Reading off extended diagnostic trouble code (DTC) information, rear electrical module	V1.10.001
VOLVO	S80	1999	Rear electronic module (REM)	Reading control unit id	V1.10.001
VOLVO	S80	1999	Rear electronic module (REM)	Reading the parameter values	V1.10.001
VOLVO	S80	1999	Rear electronic module (REM)	Activate components/functions	V1.10.001
VOLVO	S80	1999	Road traffic information module (RTI)	Read codes	V1.10.001
VOLVO	S80	1999	Road traffic information module (RTI)	Erase codes	V1.10.001
VOLVO	S80	1999	Road traffic information module (RTI)	Reading off extended diagnostic trouble code (DTC) information, road traffic information (RTI)	V1.10.001
VOLVO	S80	1999	Road traffic information module (RTI)	Readline off vehicle control module ID	V1.10.001
VOLVO	S80	1999	Steering wheel module (SWM)	Read codes	V1.10.001
VOLVO	S80	1999	Steering wheel module (SWM)	Erase codes	V1.10.001
VOLVO	S80	1999	Steering wheel module (SWM)	Reading off extended diagnostic trouble code (DTC) information, steering wheel module	V1.10.001
VOLVO	S80	1999	Steering wheel module (SWM)	Readline off control unit ID	V1.10.001
VOLVO	S80	1999	Steering wheel module (SWM)	Digital display parameter	V1.10.001
VOLVO	S80	1999	Upper electronic module (UEM)	Read codes	V1.10.001
VOLVO	S80	1999	Upper electronic module (UEM)	Erase codes	V1.10.001
VOLVO	S80	1999	Upper electronic module (UEM)	Reading off extended diagnostic trouble code (DTC) information, upper electrical module	V1.10.001
VOLVO	S80	1999	Upper electronic module (UEM)	Readline off control unit ID	V1.10.001
VOLVO	S80	1999	Upper electronic module (UEM)	Reading off parameter values	V1.10.001
VOLVO	S80	1999	Upper electronic module (UEM)	Activating components/functions	V1.10.001
VOLVO	S80	1999	Transmission control module (TCM)	Read codes	V1.10.001
VOLVO	S80	1999	Transmission control module (TCM)	Erase codes	V1.10.001
VOLVO	S80	1999	Transmission control module (TCM)	Resetting the counter for... gearbox oil change	V1.10.001
VOLVO	S80	1999	Transmission control module (TCM)	Readline off vehicle control module ID	V1.10.001
VOLVO	S80	1999	Anti-lock brake system module (ABS/RCM)	Read codes	V1.10.001
VOLVO	S80	1999	Anti-lock brake system module (ABS/RCM)	Reading off extended diagnostic trouble code (DTC) information, ABS	V1.10.001
VOLVO	S80	1999	Anti-lock brake system module (ABS/RCM)	Readline off control module ID	V1.10.001
VOLVO	S80	1999	Anti-lock brake system module (ABS/RCM)	Digital display parameter (DSTC)	V1.10.001
VOLVO	S80	1999	Anti-lock brake system module (ABS/RCM)	Parameter, digital display	V1.10.001
VOLVO	S80	1999	Anti-lock brake system module (ABS/RCM)	Activating components/functions	V1.10.001
VOLVO	S80	1999	Anti-lock brake system module (ABS/RCM)	Activating components/functions (DSTC)	V1.10.001
VOLVO	S80	1999	Anti-lock brake system module (ABS/RCM)	Calibration (DSTC)	V1.10.001
VOLVO	S80	1999	Steering wheel angle sensor module (SAS)	Read codes	V1.10.001
VOLVO	S80	1999	Steering wheel angle sensor module (SAS)	Erase codes	V1.10.001
VOLVO	S80	1999	Steering wheel angle sensor module (SAS)	Readline off extended diagnostic trouble code (DTC) information, SAS	V1.10.001
VOLVO	S80	1999	Steering wheel angle sensor module (SAS)	Digital display parameter (SASI)	V1.10.001
VOLVO	S80	1999	Climate control module (CCM)	Read codes	V1.10.001
VOLVO	S80	1999	Climate control module (CCM)	Erase codes	V1.10.001
VOLVO	S80	1999	Climate control module (CCM)	Reading off extended diagnostic trouble code (DTC) information, climate control module	V1.10.001
VOLVO	S80	1999	Climate control module (CCM)	Readline off control module ID	V1.10.001
VOLVO	S80	1999	Climate control module (CCM)	Digital display parameter	V1.10.001
VOLVO	S80	1999	Climate control module (CCM)	Activating parameters, EEC	V1.10.001
VOLVO	S80	1999	Climate control module (CCM)	Reading off programmed parameters in the climate control module	V1.10.001
VOLVO	S80	1999	Driver door module (DDM)	Read codes	V1.10.001
VOLVO	S80	1999	Driver door module (DDM)	Erase codes	V1.10.001
VOLVO	S80	1999	Driver door module (DDM)	Reading off extended diagnostic trouble code (DTC) information, driver's door module	V1.10.001
VOLVO	S80	1999	Driver door module (DDM)	Readline off control unit id	V1.10.001
VOLVO	S80	1999	Driver door module (DDM)	Reading off parameter values	V1.10.001
VOLVO	S80	1999	Driver door module (DDM)	Activating components/functions	V1.10.001
VOLVO	S80	1999	Passenger door module (PDM)	Window position set -99	V1.10.001
VOLVO	S80	1999	Passenger door module (PDM)	Read codes	V1.10.001
VOLVO	S80	1999	Passenger door module (PDM)	Erase codes	V1.10.001
VOLVO	S80	1999	Passenger door module (PDM)	Reading off extended diagnostic trouble code (DTC) information, passenger door module	V1.10.001
VOLVO	S80	1999	Passenger door module (PDM)	Readline off control unit id	V1.10.001
VOLVO	S80	1999	Passenger door module (PDM)	Reading the parameter values	V1.10.001
VOLVO	S80	1999	Passenger door module (PDM)	Activating components/functions	V1.10.001
VOLVO	S80	1999	Power seat module (PSM)	Window position set -99	V1.10.001
VOLVO	S80	1999	Power seat module (PSM)	Read codes	V1.10.001
VOLVO	S80	1999	Power seat module (PSM)	Erase codes	V1.10.001
VOLVO	S80	1999	Power seat module (PSM)	Reading off input signals to the power seat module	V1.10.001
VOLVO	S80	1999	Power seat module (PSM)	Activating components/functions	V1.10.001
VOLVO	S80	1999	Supplemental restraint system module (SRS)	Read codes	V1.10.001
VOLVO	S80	1999	Supplemental restraint system module (SRS)	Erase codes	V1.10.001
VOLVO	S80	1999	Supplemental restraint system module (SRS)	Reading off extended diagnostic trouble code (DTC) information, SRS (supplemental restraint system) / SIPS (side impact protection system)	V1.10.001
VOLVO	S80	1999	Supplemental restraint system module (SRS)	Readline off control unit id	V1.10.001
VOLVO	S80	1999	Engine control module (ECM)	Extended diagnostic trouble code (DTC) reading	V1.10.001
VOLVO	S80	1999	Engine control module (ECM)	Reading off control module ID, Electronic throttle module	V1.10.001
VOLVO	S80	1999	Engine control module (ECM)	Parameter, digital display	V1.10.001
VOLVO	S80	1999	Engine control module (ECM)	Activating components / functions	V1.10.001
VOLVO	S80	1999	Engine control module (ECM)	Quick test of the fuel tank system (USA/CDN)	V1.10.001
VOLVO	S80	1999	Transmission control module (TCM)	Activating components / functions	V1.10.001
VOLVO	S80	1999	Engine control module (ECM)	Reading control unit ID	V1.10.001
VOLVO	S80	1999	Engine control module (ECM)	Activating components/functions	V1.10.001
VOLVO	S80	1999	Engine control module (ECM)	Programming the idle speed	V1.10.001
VOLVO	S80	1999	Engine control module (ECM)	Check and adjust dynamic pump setting	V1.10.001
VOLVO	S80	2000	Engine control module (ECM)	Read codes	V1.10.001
VOLVO	S80	2000	Engine control module (ECM)	Erase codes	V1.10.001
VOLVO	S80	2000	Engine control module (ECM)	Reading off extended diagnostic trouble code (DTC) information, engine control module (ECM)	V1.10.001
VOLVO	S80	2000	Engine control module (ECM)	Readline off control module ID, ECM	V1.10.001
VOLVO	S80	2000	Engine control module (ECM)	Reading off control module ID, ETM	V1.10.001
VOLVO	S80	2000	Engine control module (ECM)	Readline off parameter values	V1.10.001
VOLVO	S80	2000	Engine control module (ECM)	Digital display parameter	V1.10.001
VOLVO	S80	2000	Engine control module (ECM)	Activating components/functions, BS2x4 T	V1.10.001
VOLVO	S80	2000	Engine control module (ECM)	Quick fuel tank system test	V1.10.001
VOLVO	S80	2000	Audio module (AUM)	Read codes	V1.10.001
VOLVO	S80	2000	Audio module (AUM)	Erase codes	V1.10.001
VOLVO	S80	2000	Audio module (AUM)	Reading off the control module ID	V1.10.001
VOLVO	S80	2000	Audio module (AUM)	Reading off parameters, digital display	V1.10.001
VOLVO	S80	2000	Central electronic module (CEM)	Read codes	V1.10.001
VOLVO	S80	2000	Central electronic module (CEM)	Erase codes	V1.10.001
VOLVO	S80	2000	Central electronic module (CEM)	Reading off extended diagnostic trouble code (DTC) information, central electronic module	V1.10.001
VOLVO	S80	2000	Central electronic module (CEM)	Readline off vehicle control module ID	V1.10.001
VOLVO	S80	2000	Central electronic module (CEM)	Resetting the car	V1.10.001
VOLVO	S80	2000	Driver information module (DIM)	Read codes	V1.10.001
VOLVO	S80	2000	Driver information module (DIM)	Erase codes	V1.10.001
VOLVO	S80	2000	Driver information module (DIM)	Reading off the control unit ID	V1.10.001
VOLVO	S80	2000	Driver information module (DIM)	Reading off parameter values	V1.10.001
VOLVO	S80	2000	Driver information module (DIM)	Activating components/functions	V1.10.001
VOLVO	S80	2000	Steering wheel module (SWM)	Read codes	V1.10.001
VOLVO	S80	2000	Steering wheel module (SWM)	Erase codes	V1.10.001
VOLVO	S80	2000	Steering wheel module (SWM)	Reading off extended diagnostic trouble code (DTC) information, rear electrical module	V1.10.001
VOLVO	S80	2000	Steering wheel module (SWM)	Readline off control unit ID	V1.10.001
VOLVO	S80	2000	Steering wheel module (SWM)	Digital display parameter	V1.10.001
VOLVO	S80	2000	Upper electronic module (UEM)	Read codes	V1.10.001
VOLVO	S80	2000	Upper electronic module (UEM)	Erase codes	V1.10.001
VOLVO	S80	2000	Upper electronic module (UEM)	Reading off extended diagnostic trouble code (DTC) information, upper electrical module	V1.10.001
VOLVO	S80	2000	Upper electronic module (UEM)	Readline off control unit id	V1.10.001
VOLVO	S80	2000	Upper electronic module (UEM)	Reading off parameter values	V1.10.001
VOLVO	S80	2000	Upper electronic module (UEM)	Activating components/functions	V1.10.001

VOLVO	S80	2000	User electronic module (UEM)	Programming the control unit	V1.10.001
VOLVO	S80	2000	User electronic module (UEM)	Configuration of the screen	V1.10.001
VOLVO	S80	2000	User electronic module (UEM)	Resetting the control module	V1.10.001
VOLVO	S80	2000	User electronic module (UEM)	Reading off programmed values	V1.10.001
VOLVO	S80	2000	Transmission control module (TCM)	Read codes	V1.10.001
VOLVO	S80	2000	Transmission control module (TCM)	Erase codes	V1.10.001
VOLVO	S80	2000	Transmission control module (TCM)	Reading off extended diagnostic trouble code (DTC) information, transmission control module (TCM)	V1.10.001
VOLVO	S80	2000	Transmission control module (TCM)	Reading control unit id	V1.10.001
VOLVO	S80	2000	Transmission control module (TCM)	Activating components/functions	V1.10.001
VOLVO	S80	2000	Transmission control module (TCM)	Reset adaptation to zero	V1.10.001
VOLVO	S80	2000	Transmission control module (TCM)	Resetting the counter for - gearbox oil change	V1.10.001
VOLVO	S80	2000	Anti-lock brake system module (ABS/BCM)	Read codes	V1.10.001
VOLVO	S80	2000	Anti-lock brake system module (ABS/BCM)	Erase codes	V1.10.001
VOLVO	S80	2000	Anti-lock brake system module (ABS/BCM)	Reading off extended diagnostic trouble code (DTC) information, ABS	V1.10.001
VOLVO	S80	2000	Anti-lock brake system module (ABS/BCM)	Digital display parameter (DSTC)	V1.10.001
VOLVO	S80	2000	Anti-lock brake system module (ABS/BCM)	Parameter: digital display	V1.10.001
VOLVO	S80	2000	Anti-lock brake system module (ABS/BCM)	Activating components/functions	V1.10.001
VOLVO	S80	2000	Anti-lock brake system module (ABS/BCM)	Activating components/functions (DSTC)	V1.10.001
VOLVO	S80	2000	Anti-lock brake system module (ABS/BCM)	Calibration (DSTC)	V1.10.001
VOLVO	S80	2000	Steering wheel angle sensor module (SAS)	Read codes	V1.10.001
VOLVO	S80	2000	Steering wheel angle sensor module (SAS)	Erase codes	V1.10.001
VOLVO	S80	2000	Steering wheel angle sensor module (SAS)	Reading control unit id, SAS	V1.10.001
VOLVO	S80	2000	Steering wheel angle sensor module (SAS)	Digital display parameter (SAS)	V1.10.001
VOLVO	S80	2000	Climate control module (CCM)	Read codes	V1.10.001
VOLVO	S80	2000	Climate control module (CCM)	Erase codes	V1.10.001
VOLVO	S80	2000	Climate control module (CCM)	Reading off extended diagnostic trouble code (DTC) information, climate control module	V1.10.001
VOLVO	S80	2000	Climate control module (CCM)	Reading control unit id	V1.10.001
VOLVO	S80	2000	Climate control module (CCM)	Digital display parameter	V1.10.001
VOLVO	S80	2000	Climate control module (CCM)	Programmable climate control module (CCM)	V1.10.001
VOLVO	S80	2000	Climate control module (CCM)	Self-adjustment of damper motor end stops	V1.10.001
VOLVO	S80	2000	Driver door module (DDM)	Adjusting parameters, ECC	V1.10.001
VOLVO	S80	2000	Driver door module (DDM)	Read codes	V1.10.001
VOLVO	S80	2000	Driver door module (DDM)	Erase codes	V1.10.001
VOLVO	S80	2000	Driver door module (DDM)	Reading off extended diagnostic trouble code (DTC) information, driver's door module	V1.10.001
VOLVO	S80	2000	Driver door module (DDM)	Reading control unit id	V1.10.001
VOLVO	S80	2000	Driver door module (DDM)	Reading the parameter values	V1.10.001
VOLVO	S80	2000	Driver door module (DDM)	Activating components/functions	V1.10.001
VOLVO	S80	2000	Driver door module (DDM)	Window position set-up	V1.10.001
VOLVO	S80	2000	Passenger door module (PDM)	Read codes	V1.10.001
VOLVO	S80	2000	Passenger door module (PDM)	Erase codes	V1.10.001
VOLVO	S80	2000	Passenger door module (PDM)	Reading off extended diagnostic trouble code (DTC) information, passenger door module	V1.10.001
VOLVO	S80	2000	Passenger door module (PDM)	Reading control unit id	V1.10.001
VOLVO	S80	2000	Passenger door module (PDM)	Reading the parameter values	V1.10.001
VOLVO	S80	2000	Passenger door module (PDM)	Activating components/functions	V1.10.001
VOLVO	S80	2000	Passenger seat module (PSM)	Read codes	V1.10.001
VOLVO	S80	2000	Passenger seat module (PSM)	Erase codes	V1.10.001
VOLVO	S80	2000	Passenger seat module (PSM)	Reading off extended diagnostic trouble code (DTC) information, power seat module	V1.10.001
VOLVO	S80	2000	Passenger seat module (PSM)	Reading off the control module id	V1.10.001
VOLVO	S80	2000	Passenger seat module (PSM)	Reading off input signals to the power seat module	V1.10.001
VOLVO	S80	2000	Passenger seat module (PSM)	Activating components/functions	V1.10.001
VOLVO	S80	2000	Passenger seat module (PSM)	Programmable seat temperature	V1.10.001
VOLVO	S80	2000	Passenger seat module (PSM)	Checking current temperature	V1.10.001
VOLVO	S80	2000	Supplemental restraint system module (SRS)	Read codes	V1.10.001
VOLVO	S80	2000	Supplemental restraint system module (SRS)	Erase codes	V1.10.001
VOLVO	S80	2000	Supplemental restraint system module (SRS)	Reading off extended diagnostic trouble code (DTC) information, SRS (supplemental restraint system) / SIPS (side impact protection system)	V1.10.001
VOLVO	S80	2000	Supplemental restraint system module (SRS)	Reading control unit id	V1.10.001
VOLVO	S80	2000	Supplemental restraint system module (SRS)	Parameters of: digital display	V1.10.001
VOLVO	S80	2000	Supplemental restraint system module (SRS)	Activating components / functions	V1.10.001
VOLVO	S80	2000	Throttle position module (TPM)	Extended diagnostic trouble code (DTC) reading	V1.10.001
VOLVO	S80	2000	Engine control module (ECM)	Extended diagnostic trouble code (DTC) reading	V1.10.001
VOLVO	S80	2000	Engine control module (ECM)	Reading off control module id. Electronic throttle module	V1.10.001
VOLVO	S80	2000	Engine control module (ECM)	Parameters of: digital display	V1.10.001
VOLVO	S80	2000	Engine control module (ECM)	Activating components / functions	V1.10.001
VOLVO	S80	2000	Engine control module (ECM)	Quick test of the fuel tank system (USA/CN)	V1.10.001
VOLVO	S80	2000	Engine control module (ECM)	Reading off diagnostic operating cycle	V1.10.001
VOLVO	S80	2000	Engine control module (ECM)	Activating components/functions	V1.10.001
VOLVO	S80	2000	Engine control module (ECM)	Programming the idle speed	V1.10.001
VOLVO	S80	2000	Engine control module (ECM)	Check & adjust dynamic pump setting	V1.10.001
VOLVO	S80	2000	Engine control module (ECM)	Read codes	V1.10.001
VOLVO	S80	2001	Engine control module (ECM)	Erase codes	V1.10.001
VOLVO	S80	2001	Engine control module (ECM)	Reading off extended diagnostic trouble code (DTC) information, engine control module (ECM)	V1.10.001
VOLVO	S80	2001	Engine control module (ECM)	Reading off control module id. ECM	V1.10.001
VOLVO	S80	2001	Engine control module (ECM)	Readiness codes	V1.10.001
VOLVO	S80	2001	Engine control module (ECM)	Digital display parameter	V1.10.001
VOLVO	S80	2001	Engine control module (ECM)	Activating components/functions. BS2x4 T	V1.10.001
VOLVO	S80	2001	Engine control module (ECM)	Quick test of the fuel tank system	V1.10.001
VOLVO	S80	2001	Accessory electronic module (AEM)	Read codes	V1.10.001
VOLVO	S80	2001	Accessory electronic module (AEM)	Erase codes	V1.10.001
VOLVO	S80	2001	Accessory electronic module (AEM)	Reading off extended fault-tracing information, accessory electronic module	V1.10.001
VOLVO	S80	2001	Accessory electronic module (AEM)	Reading off the control module id	V1.10.001
VOLVO	S80	2001	Accessory electronic module (AEM)	Reading off parameters, digital display	V1.10.001
VOLVO	S80	2001	Accessory electronic module (AEM)	Activating components and functions	V1.10.001
VOLVO	S80	2001	Audio module (AUM)	Read codes	V1.10.001
VOLVO	S80	2001	Audio module (AUM)	Erase codes	V1.10.001
VOLVO	S80	2001	Audio module (AUM)	Reading off extended diagnostic trouble code (DTC) information, audio module	V1.10.001
VOLVO	S80	2001	Audio module (AUM)	Reading off the control module id	V1.10.001
VOLVO	S80	2001	Central electronic module (CEM)	Read codes	V1.10.001
VOLVO	S80	2001	Central electronic module (CEM)	Erase codes	V1.10.001
VOLVO	S80	2001	Central electronic module (CEM)	Reading off extended diagnostic trouble code (DTC) information, central electronic module	V1.10.001
VOLVO	S80	2001	Central electronic module (CEM)	Reading control unit id	V1.10.001
VOLVO	S80	2001	Central electronic module (CEM)	Reading data for vehicle configuration	V1.10.001
VOLVO	S80	2001	Central electronic module (CEM)	Reading of parameters, Central Electronic module (CEM)	V1.10.001
VOLVO	S80	2001	Central electronic module (CEM)	Activating components/functions	V1.10.001
VOLVO	S80	2001	Central electronic module (CEM)	Programming the control unit	V1.10.001
VOLVO	S80	2001	Central electronic module (CEM)	Reading off alarm cause	V1.10.001
VOLVO	S80	2001	Central electronic module (CEM)	Reading the factory settings	V1.10.001
VOLVO	S80	2001	Driver information module (DIM)	Read codes	V1.10.001
VOLVO	S80	2001	Driver information module (DIM)	Erase codes	V1.10.001
VOLVO	S80	2001	Driver information module (DIM)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO	S80	2001	Driver information module (DIM)	Reading the control unit id	V1.10.001
VOLVO	S80	2001	Driver information module (DIM)	Digital display parameter	V1.10.001
VOLVO	S80	2001	Driver information module (DIM)	Activating components/functions	V1.10.001
VOLVO	S80	2001	Rear electronic module (REM)	Read codes	V1.10.001
VOLVO	S80	2001	Rear electronic module (REM)	Erase codes	V1.10.001
VOLVO	S80	2001	Rear electronic module (REM)	Reading off extended diagnostic trouble code (DTC) information, rear electrical module	V1.10.001
VOLVO	S80	2001	Rear electronic module (REM)	Reading control unit id	V1.10.001
VOLVO	S80	2001	Rear electronic module (REM)	Reading the parameter values	V1.10.001
VOLVO	S80	2001	Rear electronic module (REM)	Activating components/functions	V1.10.001
VOLVO	S80	2001	Road traffic information module (RTI)	Read codes	V1.10.001
VOLVO	S80	2001	Road traffic information module (RTI)	Erase codes	V1.10.001
VOLVO	S80	2001	Road traffic information module (RTI)	Reading off extended diagnostic trouble code (DTC) information, road traffic information (RTI)	V1.10.001
VOLVO	S80	2001	Road traffic information module (RTI)	Reading off the control module id	V1.10.001
VOLVO	S80	2001	Steering wheel module (SWM)	Read codes	V1.10.001
VOLVO	S80	2001	Steering wheel module (SWM)	Erase codes	V1.10.001
VOLVO	S80	2001	Steering wheel module (SWM)	Reading off individual diagnostic trouble code (DTC) information, steering wheel module	V1.10.001
VOLVO	S80	2001	Steering wheel module (SWM)	Reading control unit id	V1.10.001
VOLVO	S80	2001	Steering wheel module (SWM)	Digital display parameter	V1.10.001
VOLVO	S80	2001	Upper electronic module (UEM)	Read codes	V1.10.001
VOLVO	S80	2001	Upper electronic module (UEM)	Erase codes	V1.10.001
VOLVO	S80	2001	Upper electronic module (UEM)	Reading off extended diagnostic trouble code (DTC) information, upper electrical module	V1.10.001
VOLVO	S80	2001	Upper electronic module (UEM)	Reading control unit id	V1.10.001
VOLVO	S80	2001	Upper electronic module (UEM)	Reading off parameter values	V1.10.001
VOLVO	S80	2001	Upper electronic module (UEM)	Activating components/functions	V1.10.001
VOLVO	S80	2001	Upper electronic module (UEM)	Programming the control unit	V1.10.001
VOLVO	S80	2001	Upper electronic module (UEM)	Configuration of green	V1.10.001
VOLVO	S80	2001	Upper electronic module (UEM)	Replacing the control module	V1.10.001
VOLVO	S80	2001	Transmission control module (TCM)	Read codes	V1.10.001
VOLVO	S80	2001	Transmission control module (TCM)	Erase codes	V1.10.001
VOLVO	S80	2001	Transmission control module (TCM)	Reading off extended diagnostic trouble code (DTC) information, transmission control module (TCM)	V1.10.001
VOLVO	S80	2001	Transmission control module (TCM)	Reading control unit id	V1.10.001
VOLVO	S80	2001	Anti-lock brake system module (ABS/BCM)	Read codes	V1.10.001
VOLVO	S80	2001	Anti-lock brake system module (ABS/BCM)	Erase codes	V1.10.001
VOLVO	S80	2001	Anti-lock brake system module (ABS/BCM)	Reading off control module ID	V1.10.001
VOLVO	S80	2001	Anti-lock brake system module (ABS/BCM)	Digital display parameter (DSTC)	V1.10.001
VOLVO	S80	2001	Anti-lock brake system module (ABS/BCM)	Parameter: digital display	V1.10.001
VOLVO	S80	2001	Anti-lock brake system module (ABS/BCM)	Activating components/functions	V1.10.001
VOLVO	S80	2001	Anti-lock brake system module (ABS/BCM)	Calibration (DSTC)	V1.10.001
VOLVO	S80	2001	Steering wheel angle sensor module (SAS)	Read codes	V1.10.001
VOLVO	S80	2001	Steering wheel angle sensor module (SAS)	Erase codes	V1.10.001
VOLVO	S80	2001	Steering wheel angle sensor module (SAS)	Reading control unit id, SAS	V1.10.001
VOLVO	S80	2001	Steering wheel angle sensor module (SAS)	Digital display parameter (SAS)	V1.10.001
VOLVO	S80	2001	Steering wheel angle sensor module (SAS)	Activating components/functions	V1.10.001
VOLVO	S80	2001	Climate control module (CCM)	Read codes	V1.10.001
VOLVO	S80	2001	Climate control module (CCM)	Erase codes	V1.10.001
VOLVO	S80	2001	Climate control module (CCM)	Reading off extended diagnostic trouble code (DTC) information, climate control module	V1.10.001
VOLVO	S80	2001	Climate control module (CCM)	Reading control unit id	V1.10.001
VOLVO	S80	2001	Climate control module (CCM)	Digital display parameter	V1.10.001
VOLVO	S80	2001	Climate control module (CCM)	Programmable the climate control module (CCM)	V1.10.001
VOLVO	S80	2001	Climate control module (CCM)	Self-adjustment of damper motor end stops	V1.10.001
VOLVO	S80	2001	Climate control module (CCM)	Adjusting parameters, ECC	V1.10.001
VOLVO	S80	2001	Climate control module (CCM)	Reading-out programmed parameters in the climate control module	V1.10.001
VOLVO	S80	2001	Driver door module (DDM)	Read codes	V1.10.001
VOLVO	S80	2001	Driver door module (DDM)	Erase codes	V1.10.001
VOLVO	S80	2001	Driver door module (DDM)	Reading off the parameter values	V1.10.001
VOLVO	S80	2001	Driver door module (DDM)	Activating components/functions	V1.10.001
VOLVO	S80	2001	Passenger door module (PDM)	Read codes	V1.10.001
VOLVO	S80	2001	Passenger door module (PDM)	Erase codes	V1.10.001
VOLVO	S80	2001	Passenger door module (PDM)	Reading off extended diagnostic trouble code (DTC) information, passenger door module	V1.10.001
VOLVO	S80	2001	Passenger door module (PDM)	Reading control unit id	V1.10.001
VOLVO	S80	2001	Passenger door module (PDM)	Reading off the parameter values	V1.10.001
VOLVO	S80	2001	Passenger door module (PDM)	Activating components/functions	V1.10.001
VOLVO	S80	2001	Passenger door module (PDM)	Window position set-up	V1.10.001
VOLVO	S80	2001	Power seat module (PSM)	Read codes	V1.10.001
VOLVO	S80	2001	Power seat module (PSM)	Erase codes	V1.10.001
VOLVO	S80	2001	Power seat module (PSM)	Reading off extended diagnostic trouble code (DTC) information, power seat module	V1.10.001
VOLVO	S80	2001	Power seat module (PSM)	Reading off the control module ID	V1.10.001
VOLVO	S80	2001	Power seat module (PSM)	Reading off input signal to the power seat module	V1.10.001
VOLVO	S80	2001	Power seat module (PSM)	Activating components/functions	V1.10.001
VOLVO	S80	2001	Power seat module (PSM)	Programming the seat temperature	V1.10.001
VOLVO	S80	2001	Power seat module (PSM)	Checking current values	V1.10.001

VOLVO	800	2001 Supplemental restraint system module (SRS)	Read codes	V10.100.0001
VOLVO	800	2001 Supplemental restraint system module (SRS)	Reading off extended diagnostic trouble code (DTC) information, SRS (supplemental restraint system) / SIPS (side impact protection system)	V10.100.0001
VOLVO	800	2001 Supplemental restraint system module (SRS)	Reading of control unit id	V10.100.0001
VOLVO	800	2001 Supplemental restraint system module (SRS)	Parameter read off - digital display	V10.100.0001
VOLVO	800	2001 Engine control module (ECM)	Extended diagnostic trouble code (DTC) reading	V10.100.0001
VOLVO	800	2001 Engine control module (ECM)	Reading off blocks of diagnostic trouble codes (DTCs)	V10.100.0001
VOLVO	800	2001 Engine control module (ECM)	Reading off control module ID, Electronic throttle module	V10.100.0001
VOLVO	800	2001 Engine control module (ECM)	Parameter, digital display	V10.100.0001
VOLVO	800	2001 Engine control module (ECM)	Activating components / functions	V10.100.0001
VOLVO	800	2001 Engine control module (ECM)	Reading of the diagnostic operating cycle	V10.100.0001
VOLVO	800	2001 Engine control module (ECM)	Activating components and functions	V10.100.0001
VOLVO	800	2001 Fuel system/combined system	Activating components/functions	V10.100.0001
VOLVO	800	2001 Fuel system/combined system	Read codes	V10.100.0001
VOLVO	800	2001 Fuel system/combined system	Erase codes	V10.100.0001
VOLVO	800	2001 Fuel system/combined system	Reading off the control module ID	V10.100.0001
VOLVO	800	2001 Fuel system/combined system	Parameter, digital display	V10.100.0001
VOLVO	800	2001 Fuel system/combined system	Activating components and functions	V10.100.0001
VOLVO	800	2001 Fuel system/combined system	Programming fuel pump (FP) start diesel	V10.100.0001
VOLVO	800	2001 Fuel system/combined system	Reading off optimizing parameters	V10.100.0001
VOLVO	800	2001 Engine control module (ECM)	Reading control unit id	V10.100.0001
VOLVO	800	2001 Engine control module (ECM)	Activating components/functions	V10.100.0001
VOLVO	800	2001 Engine control module (ECM)	Reading of the idle speed	V10.100.0001
VOLVO	800	2001 Engine control module (ECM)	Read and adjust dynamic pump setting	V10.100.0001
VOLVO	800	2001 Engine control module (ECM)	Read codes	V10.100.0001
VOLVO	800	2001 Engine control module (ECM)	Erase codes	V10.100.0001
VOLVO	800	2001 Engine control module (ECM)	Reading off extended diagnostic trouble code (DTC) information, engine control module (ECM)	V10.100.0001
VOLVO	800	2002 Engine control module (ECM)	Reading off control module ID, ECM	V10.100.0001
VOLVO	800	2002 Engine control module (ECM)	Readings code	V10.100.0001
VOLVO	800	2002 Engine control module (ECM)	Parameter, digital display	V10.100.0001
VOLVO	800	2002 Engine control module (ECM)	Activating components and functions	V10.100.0001
VOLVO	800	2002 Engine control module (ECM)	Adapting of the throttle unit	V10.100.0001
VOLVO	800	2002 Engine control module (ECM)	Quick test of exhaust camshaft control	V10.100.0001
VOLVO	800	2002 Engine control module (ECM)	Reading of the fuel tank system	V10.100.0001
VOLVO	800	2002 Accessory electronic module (AEM)	Read codes	V10.100.0001
VOLVO	800	2002 Accessory electronic module (AEM)	Erase codes	V10.100.0001
VOLVO	800	2002 Accessory electronic module (AEM)	Reading off extended fault-tracing information, accessory electronic module	V10.100.0001
VOLVO	800	2002 Accessory electronic module (AEM)	Reading of the control module ID	V10.100.0001
VOLVO	800	2002 Accessory electronic module (AEM)	Reading off parameters, digital display	V10.100.0001
VOLVO	800	2002 Accessory electronic module (AEM)	Activating components and functions	V10.100.0001
VOLVO	800	2002 Audio module (AUM)	Read codes	V10.100.0001
VOLVO	800	2002 Audio module (AUM)	Erase codes	V10.100.0001
VOLVO	800	2002 Audio module (AUM)	Reading off extended diagnostic trouble code (DTC) information, audio module	V10.100.0001
VOLVO	800	2002 Central electronic module (CEM)	Reading off the control module ID	V10.100.0001
VOLVO	800	2002 Central electronic module (CEM)	Reading of parameters, digital display	V10.100.0001
VOLVO	800	2002 Central electronic module (CEM)	Activating components/functions	V10.100.0001
VOLVO	800	2002 Central electronic module (CEM)	Resetting the factory setting	V10.100.0001
VOLVO	800	2002 Central electronic module (CEM)	Resetting the car	V10.100.0001
VOLVO	800	2002 Central electronic module (CEM)	Resetting the car	V10.100.0001
VOLVO	800	2002 Driver information module (DIM)	Erase codes	V10.100.0001
VOLVO	800	2002 Driver information module (DIM)	Reading off extended diagnostic trouble code (DTC) information	V10.100.0001
VOLVO	800	2002 Driver information module (DIM)	Reading the control unit ID	V10.100.0001
VOLVO	800	2002 Driver information module (DIM)	Reading data for driver configuration	V10.100.0001
VOLVO	800	2002 Driver information module (DIM)	Reading parameters, Central Electronic module (CEM)	V10.100.0001
VOLVO	800	2002 Central electronic module (CEM)	Activating components, immobilizer function	V10.100.0001
VOLVO	800	2002 Central electronic module (CEM)	Reprogramming central control module	V10.100.0001
VOLVO	800	2002 Central electronic module (CEM)	Resetting off the alarm function	V10.100.0001
VOLVO	800	2002 Central electronic module (CEM)	Resetting the service reminder indicator (SRI)	V10.100.0001
VOLVO	800	2002 Phone module (PHM)	Read codes	V10.100.0001
VOLVO	800	2002 Phone module (PHM)	Erase codes	V10.100.0001
VOLVO	800	2002 Phone module (PHM)	Reading off extended diagnostic trouble code (DTC) information, carphone module	V10.100.0001
VOLVO	800	2002 Phone module (PHM)	Reading off the control module ID	V10.100.0001
VOLVO	800	2002 Phone module (PHM)	Reading off parameter values	V10.100.0001
VOLVO	800	2002 Rear electronic module (REM)	Read codes	V10.100.0001
VOLVO	800	2002 Rear electronic module (REM)	Erase codes	V10.100.0001
VOLVO	800	2002 Rear electronic module (REM)	Reading off extended diagnostic trouble code (DTC) information, rear electrical module	V10.100.0001
VOLVO	800	2002 Rear electronic module (REM)	Reading control unit id	V10.100.0001
VOLVO	800	2002 Rear electronic module (REM)	Reading off the parameter values	V10.100.0001
VOLVO	800	2002 Rear electronic module (REM)	Activating components and functions	V10.100.0001
VOLVO	800	2002 Rear electronic module (REM)	Calibrating the Bi-Xenon lamp position sensor	V10.100.0001
VOLVO	800	2002 Road traffic information module (RTI)	Read codes	V10.100.0001
VOLVO	800	2002 Road traffic information module (RTI)	Erase codes	V10.100.0001
VOLVO	800	2002 Road traffic information module (RTI)	Reading off extended diagnostic trouble code (DTC) information, road traffic information (RTI)	V10.100.0001
VOLVO	800	2002 Road traffic information module (RTI)	Reading off the control module ID	V10.100.0001
VOLVO	800	2002 Steering wheel module (SWM)	Read codes	V10.100.0001
VOLVO	800	2002 Steering wheel module (SWM)	Erase codes	V10.100.0001
VOLVO	800	2002 Steering wheel module (SWM)	Reading off extended diagnostic trouble code (DTC) information, steering wheel module	V10.100.0001
VOLVO	800	2002 Steering wheel module (SWM)	Reading control unit ID	V10.100.0001
VOLVO	800	2002 Steering wheel module (SWM)	Replacing the control module	V10.100.0001
VOLVO	800	2002 Upper electronic module (IEM)	Read codes	V10.100.0001
VOLVO	800	2002 Upper electronic module (IEM)	Erase codes	V10.100.0001
VOLVO	800	2002 User electronic module (IEM)	Reading off extended diagnostic trouble code (DTC) information, user electrical module	V10.100.0001
VOLVO	800	2002 User electronic module (IEM)	Reading control unit id	V10.100.0001
VOLVO	800	2002 User electronic module (IEM)	Readline off parameter value	V10.100.0001
VOLVO	800	2002 User electronic module (IEM)	Activating components/functions	V10.100.0001
VOLVO	800	2002 User electronic module (IEM)	Replacing the control module	V10.100.0001
VOLVO	800	2002 Transmission control module (TCM)	Read codes	V10.100.0001
VOLVO	800	2002 Transmission control module (TCM)	Erase codes	V10.100.0001
VOLVO	800	2002 Transmission control module (TCM)	Reading off extended diagnostic trouble code (DTC) information, transmission control module (TCM)	V10.100.0001
VOLVO	800	2002 Transmission control module (TCM)	Reading control unit id	V10.100.0001
VOLVO	800	2002 Transmission control module (TCM)	Parameter, digital display	V10.100.0001
VOLVO	800	2002 Anti-lock brake system module (ABS/BCM)	Activating components and functions	V10.100.0001
VOLVO	800	2002 Anti-lock brake system module (ABS/BCM)	Checking brake light switch adjustment	V10.100.0001
VOLVO	800	2002 Anti-lock brake system module (ABS/BCM)	Calibration	V10.100.0001
VOLVO	800	2002 Anti-lock brake system module (ABS/BCM)	Read codes	V10.100.0001
VOLVO	800	2002 Anti-lock brake system module (ABS/BCM)	Erase codes	V10.100.0001
VOLVO	800	2002 Steering wheel angle sensor module (SAS)	Read codes	V10.100.0001
VOLVO	800	2002 Steering wheel angle sensor module (SAS)	Erase codes	V10.100.0001
VOLVO	800	2002 Steering wheel angle sensor module (SAS)	Reading control unit id, SAS	V10.100.0001
VOLVO	800	2002 Steering wheel angle sensor module (SAS)	Digital sasv parameter (SASI)	V10.100.0001
VOLVO	800	2002 Climate control module (CCM)	Read codes	V10.100.0001
VOLVO	800	2002 Climate control module (CCM)	Erase codes	V10.100.0001
VOLVO	800	2002 Climate control module (CCM)	Reading off extended diagnostic trouble code (DTC) information, climate control module	V10.100.0001
VOLVO	800	2002 Climate control module (CCM)	Reading control unit id	V10.100.0001
VOLVO	800	2002 Climate control module (CCM)	Digital display parameter	V10.100.0001
VOLVO	800	2002 Climate control module (CCM)	Programming the climate control module (CCM)	V10.100.0001
VOLVO	800	2002 Climate control module (CCM)	Self-adjustment of damper motor end stops	V10.100.0001
VOLVO	800	2002 Climate control module (CCM)	Replacing parameters, ECC	V10.100.0001
VOLVO	800	2002 Climate control module (CCM)	Reading out programmed parameters in the climate control module	V10.100.0001
VOLVO	800	2002 Driver door module (DDM)	Read codes	V10.100.0001
VOLVO	800	2002 Driver door module (DDM)	Erase codes	V10.100.0001
VOLVO	800	2002 Driver door module (DDM)	Reading off extended diagnostic trouble code (DTC) information, driver's door module	V10.100.0001
VOLVO	800	2002 Driver door module (DDM)	Reading control unit id	V10.100.0001
VOLVO	800	2002 Driver door module (DDM)	Readline off parameter values	V10.100.0001
VOLVO	800	2002 Driver door module (DDM)	Activating components and functions	V10.100.0001
VOLVO	800	2002 Driver door module (DDM)	Window position set up	V10.100.0001
VOLVO	800	2002 Passenger door module (PDM)	Read codes	V10.100.0001
VOLVO	800	2002 Passenger door module (PDM)	Erase codes	V10.100.0001
VOLVO	800	2002 Passenger door module (PDM)	Reading off extended diagnostic trouble code (DTC) information, passenger door module	V10.100.0001
VOLVO	800	2002 Passenger door module (PDM)	Reading control unit id	V10.100.0001
VOLVO	800	2002 Passenger door module (PDM)	Reading off parameter values	V10.100.0001
VOLVO	800	2002 Passenger door module (PDM)	Activating components and functions	V10.100.0001
VOLVO	800	2002 Power seat module (PSM)	Read codes	V10.100.0001
VOLVO	800	2002 Power seat module (PSM)	Erase codes	V10.100.0001
VOLVO	800	2002 Power seat module (PSM)	Reading off extended diagnostic trouble code (DTC) information, power seat module	V10.100.0001
VOLVO	800	2002 Power seat module (PSM)	Reading line of the control module ID	V10.100.0001
VOLVO	800	2002 Power seat module (PSM)	Activating components/functions	V10.100.0001
VOLVO	800	2002 Power seat module (PSM)	Programming the seat temperature	V10.100.0001
VOLVO	800	2002 Supplemental restraint system module (SRS)	Read codes	V10.100.0001
VOLVO	800	2002 Supplemental restraint system module (SRS)	Erase codes	V10.100.0001
VOLVO	800	2002 Supplemental restraint system module (SRS)	Reading off extended diagnostic trouble code (DTC) information, SRS (supplemental restraint system) / SIPS (side impact protection system)	V10.100.0001
VOLVO	800	2002 Supplemental restraint system module (SRS)	Reading control unit id	V10.100.0001
VOLVO	800	2002 Supplemental restraint system module (SRS)	Activating components/functions	V10.100.0001
VOLVO	800	2002 Engine control module (ECM)	Extended diagnostic trouble code (DTC) reading	V10.100.0001
VOLVO	800	2002 Engine control module (ECM)	Reading off blocks of diagnostic trouble codes (DTCs)	V10.100.0001
VOLVO	800	2002 Engine control module (ECM)	Reading line of the control module ID, Electronic throttle module	V10.100.0001
VOLVO	800	2002 Engine control module (ECM)	Activating components / functions	V10.100.0001
VOLVO	800	2002 Engine control module (ECM)	Quick test of the fuel tank system (USA/CND)	V10.100.0001
VOLVO	800	2002 Engine control module (ECM)	Reading off the diagnostic operating cycle	V10.100.0001
VOLVO	800	2002 Engine control module (ECM)	Quick test of intake camshaft control	V10.100.0001
VOLVO	800	2002 Transmission control module (TCM)	Activating components/functions	V10.100.0001
VOLVO	800	2002 Fuel system/combined system	Read codes	V10.100.0001
VOLVO	800	2002 Fuel system/combined system	Erase codes	V10.100.0001
VOLVO	800	2002 Fuel system/combined system	Reading off the control module ID	V10.100.0001
VOLVO	800	2002 Fuel system/combined system	Parameter, digital display	V10.100.0001
VOLVO	800	2002 Fuel system/combined system	Activating components/functions	V10.100.0001
VOLVO	800	2002 Fuel system/combined system	Programming fuel pump (FP) start diesel	V10.100.0001
VOLVO	800	2002 Fuel system/combined system	Programming optimizing parameters	V10.100.0001
VOLVO	800	2003 Engine control module (ECM)	Read codes	V10.100.0001
VOLVO	800	2003 Engine control module (ECM)	Erase codes	V10.100.0001
VOLVO	800	2003 Engine control module (ECM)	Reading off extended diagnostic trouble code (DTC) information, engine control module (ECM)	V10.100.0001
VOLVO	800	2003 Engine control module (ECM)	Reading off control module ID, ECM	V10.100.0001
VOLVO	800	2003 Engine control module (ECM)	Readings	V10.100.0001
VOLVO	800	2003 Engine control module (ECM)	Parameter, digital display	V10.100.0001
VOLVO	800	2003 Engine control module (ECM)	Activating components / functions	V10.100.0001
VOLVO	800	2003 Engine control module (ECM)	Replacing the control unit	V10.100.0001
VOLVO	800	2003 Engine control module (ECM)	Quick test of the exhaust camshaft control	V10.100.0001
VOLVO	800	2003 Engine control module (ECM)	Quick test of the fuel tank system	V10.100.0001
VOLVO	800	2003 Accessory electronic module (AEM)	Read codes	V10.100.0001
VOLVO	800	2003 Accessory electronic module (AEM)	Erase codes	V10.100.0001
VOLVO	800	2003 Accessory electronic module (AEM)	Reading off extended fault-tracing information, accessoress electronic module	V10.100.0001
VOLVO	800	2003 Accessory electronic module (AEM)	Reading off the control module ID	V10.100.0001
VOLVO	800	2003 Accessory electronic module (AEM)	Readline off parameters, digital display	V10.100.0001
VOLVO	800	2003 Accessory electronic module (AEM)	Activating components / functions	V10.100.0001
VOLVO	800	2003 Audio module (AUM)	Read codes	V10.100.0001
VOLVO	800	2003 Audio module (AUM)	Erase codes	V10.100.0001
VOLVO	800	2003 Audio module (AUM)	Reading off extended diagnostic trouble code (DTC) information, audio module	V10.100.0001
VOLVO	800	2003 Audio module (AUM)	Reading off the control module ID	V10.100.0001
VOLVO	800	2003 Audio module (AUM)	Readline off parameter values	V10.100.0001

VOLVO	S80	2003	Central electronic module (CEM)	Reading data for vehicle configuration	V1.10.001
VOLVO	S80	2003	Central electronic module (CEM)	Reading off parameters, digital display	V1.10.001
VOLVO	S80	2003	Central electronic module (CEM)	Reading off parameters, function	V1.10.001
VOLVO	S80	2003	Central electronic module (CEM)	Activating components/functions	V1.10.001
VOLVO	S80	2003	Central electronic module (CEM)	Programming the control module	V1.10.001
VOLVO	S80	2003	Central electronic module (CEM)	Reading off the alarm cause	V1.10.001
VOLVO	S80	2003	Central electronic module (CEM)	Restoring factory settings	V1.10.001
VOLVO	S80	2003	Central electronic module (CEM)	Resetting the car	V1.10.001
VOLVO	S80	2003	Driver information module (DIM)	Reading off codes	V1.10.001
VOLVO	S80	2003	Driver information module (DIM)	Erasing codes	V1.10.001
VOLVO	S80	2003	Driver information module (DIM)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO	S80	2003	Driver information module (DIM)	Reading the control unit ID	V1.10.001
VOLVO	S80	2003	Driver information module (DIM)	Parameter, digital display	V1.10.001
VOLVO	S80	2003	Driver information module (DIM)	Activating components/functions	V1.10.001
VOLVO	S80	2003	Driver information module (DIM)	Testing all displays and lamps in instrument	V1.10.001
VOLVO	S80	2003	Driver information module (DIM)	Programming the driver information module (DIM)	V1.10.001
VOLVO	S80	2003	Driver information module (DIM)	Reading off pre-programmed values in driver information module (DIM)	V1.10.001
VOLVO	S80	2003	Driver information module (DIM)	Resetting the service reminder indicator (SRI)	V1.10.001
VOLVO	S80	2004	Phone module (PHM)	Reading codes	V1.10.001
VOLVO	S80	2004	Phone module (PHM)	Erasing codes	V1.10.001
VOLVO	S80	2004	Phone module (PHM)	Reading off extended diagnostic trouble code (DTC) information, carphone module	V1.10.001
VOLVO	S80	2004	Phone module (PHM)	Reading off the control module ID	V1.10.001
VOLVO	S80	2004	Phone module (PHM)	Reading off parameter values	V1.10.001
VOLVO	S80	2004	Phone module (PHM)	Activating components and functions	V1.10.001
VOLVO	S80	2004	Rear electronic module (REM)	Restoring carphone code	V1.10.001
VOLVO	S80	2004	Rear electronic module (REM)	Reading codes	V1.10.001
VOLVO	S80	2004	Rear electronic module (REM)	Erasing codes	V1.10.001
VOLVO	S80	2004	Rear electronic module (REM)	Reading off extended diagnostic trouble code (DTC) information, rear electrical module	V1.10.001
VOLVO	S80	2004	Rear electronic module (REM)	Reading the control unit ID	V1.10.001
VOLVO	S80	2004	Rear electronic module (REM)	Reading off the parameter values	V1.10.001
VOLVO	S80	2004	Rear electronic module (REM)	Activating components and functions	V1.10.001
VOLVO	S80	2004	Rear electronic module (REM)	Calibration Bi-Xenon lamp position sensor	V1.10.001
VOLVO	S80	2004	Road traffic information module (RTI)	Reading codes	V1.10.001
VOLVO	S80	2004	Road traffic information module (RTI)	Erasing codes	V1.10.001
VOLVO	S80	2004	Road traffic information module (RTI)	Reading off extended diagnostic trouble code (DTC) information, road traffic information (RTI)	V1.10.001
VOLVO	S80	2004	Road traffic information module (RTI)	Reading off the control module ID	V1.10.001
VOLVO	S80	2004	Steering wheel module (SWM)	Reading codes	V1.10.001
VOLVO	S80	2004	Steering wheel module (SWM)	Erasing codes	V1.10.001
VOLVO	S80	2004	Steering wheel module (SWM)	Reading off extended diagnostic trouble code (DTC) information, steering wheel module	V1.10.001
VOLVO	S80	2004	Steering wheel module (SWM)	Reading control unit ID	V1.10.001
VOLVO	S80	2004	Steering wheel module (SWM)	Digital display parameter	V1.10.001
VOLVO	S80	2004	Upper electronic module (UEM)	Reading codes	V1.10.001
VOLVO	S80	2004	Upper electronic module (UEM)	Erasing codes	V1.10.001
VOLVO	S80	2004	Upper electronic module (UEM)	Reading off extended diagnostic trouble code (DTC) information, upper electrical module	V1.10.001
VOLVO	S80	2004	Upper electronic module (UEM)	Reading the control unit ID	V1.10.001
VOLVO	S80	2004	Upper electronic module (UEM)	Reading off parameter values	V1.10.001
VOLVO	S80	2004	Upper electronic module (UEM)	Activating components and functions	V1.10.001
VOLVO	S80	2004	Upper electronic module (UEM)	Replacing the control module	V1.10.001
VOLVO	S80	2004	Upper electronic module (UEM)	Reading the programmed values	V1.10.001
VOLVO	S80	2004	Upper electronic module (UEM)	Resetting the car	V1.10.001
VOLVO	S80	2004	Upper electronic module (UEM)	Erasing codes	V1.10.001
VOLVO	S80	2004	Upper electronic module (UEM)	Reading off extended diagnostic trouble code (DTC) information, upper electrical module	V1.10.001
VOLVO	S80	2004	Upper electronic module (UEM)	Reading the control unit ID	V1.10.001
VOLVO	S80	2004	Upper electronic module (UEM)	Reading off parameter values	V1.10.001
VOLVO	S80	2004	Upper electronic module (UEM)	Activating components/functions	V1.10.001
VOLVO	S80	2004	Upper electronic module (UEM)	Programming the control unit	V1.10.001
VOLVO	S80	2004	Upper electronic module (UEM)	Reading off pre-programmed values	V1.10.001
VOLVO	S80	2004	Transmission control module (TCM)	Reading codes	V1.10.001
VOLVO	S80	2004	Transmission control module (TCM)	Erasing codes	V1.10.001
VOLVO	S80	2004	Transmission control module (TCM)	Reading off extended diagnostic trouble code (DTC) information, transmission control module (TCM)	V1.10.001
VOLVO	S80	2004	Transmission control module (TCM)	Reading the control unit ID	V1.10.001
VOLVO	S80	2004	Transmission control module (TCM)	Parameter, digital display	V1.10.001
VOLVO	S80	2004	Transmission control module (TCM)	Activating components/functions	V1.10.001
VOLVO	S80	2004	Transmission control module (TCM)	Reset adaptation to zero	V1.10.001
VOLVO	S80	2004	Transmission control module (TCM)	Replacing the counter for gearbox oil change	V1.10.001
VOLVO	S80	2004	Anti-lock brake system module (ABS/BCM)	Reading codes	V1.10.001
VOLVO	S80	2004	Anti-lock brake system module (ABS/BCM)	Erasing codes	V1.10.001
VOLVO	S80	2004	Anti-lock brake system module (ABS/BCM)	Reading off extended diagnostic trouble code (DTC) information, brake control module (BCM)	V1.10.001
VOLVO	S80	2004	Anti-lock brake system module (ABS/BCM)	Reading off the control module ID	V1.10.001
VOLVO	S80	2004	Anti-lock brake system module (ABS/BCM)	Parameter, digital display	V1.10.001
VOLVO	S80	2004	Anti-lock brake system module (ABS/BCM)	Activating components and functions	V1.10.001
VOLVO	S80	2004	Anti-lock brake system module (ABS/BCM)	Checking engine light switch adjustment	V1.10.001
VOLVO	S80	2004	Anti-lock brake system module (ABS/BCM)	Calibration	V1.10.001
VOLVO	S80	2004	Steering wheel angle sensor module (SAS)	Reading codes	V1.10.001
VOLVO	S80	2004	Steering wheel angle sensor module (SAS)	Erasing codes	V1.10.001
VOLVO	S80	2004	Steering wheel angle sensor module (SAS)	Reading control unit id, SAS	V1.10.001
VOLVO	S80	2004	Steering wheel angle sensor module (SAS)	Digital display parameter (SAS)	V1.10.001
VOLVO	S80	2004	Climate control module (CCM)	Reading codes	V1.10.001
VOLVO	S80	2004	Climate control module (CCM)	Erasing codes	V1.10.001
VOLVO	S80	2004	Climate control module (CCM)	Reading off extended diagnostic trouble code (DTC) information, climate control module	V1.10.001
VOLVO	S80	2004	Climate control module (CCM)	Reading control unit id	V1.10.001
VOLVO	S80	2004	Climate control module (CCM)	Reading off the parameter values	V1.10.001
VOLVO	S80	2004	Climate control module (CCM)	Activating components and functions	V1.10.001
VOLVO	S80	2004	Climate control module (CCM)	Programming the climate control module (CCM)	V1.10.001
VOLVO	S80	2004	Climate control module (CCM)	Self-adjustment of damper motor end stops	V1.10.001
VOLVO	S80	2004	Climate control module (CCM)	Adjusting parameters, ECC	V1.10.001
VOLVO	S80	2004	Climate control module (CCM)	Reading off programmed parameters in the climate control module	V1.10.001
VOLVO	S80	2004	Driver door module (DDM)	Reading codes	V1.10.001
VOLVO	S80	2004	Driver door module (DDM)	Erasing codes	V1.10.001
VOLVO	S80	2004	Driver door module (DDM)	Reading off extended diagnostic trouble code (DTC) information, driver's door module	V1.10.001
VOLVO	S80	2004	Driver door module (DDM)	Reading control unit id	V1.10.001
VOLVO	S80	2004	Driver door module (DDM)	Reading off the parameter values	V1.10.001
VOLVO	S80	2004	Driver door module (DDM)	Activating components and functions	V1.10.001
VOLVO	S80	2004	Driver door module (DDM)	Window position set-up	V1.10.001
VOLVO	S80	2004	Driver door module (DDM)	Resetting the window position	V1.10.001
VOLVO	S80	2004	Passenger door module (PDM)	Reading codes	V1.10.001
VOLVO	S80	2004	Passenger door module (PDM)	Erasing codes	V1.10.001
VOLVO	S80	2004	Passenger door module (PDM)	Reading off extended diagnostic trouble code (DTC) information, passenger door module	V1.10.001
VOLVO	S80	2004	Passenger door module (PDM)	Reading the control unit ID	V1.10.001
VOLVO	S80	2004	Passenger door module (PDM)	Reading off the parameter values	V1.10.001
VOLVO	S80	2004	Passenger door module (PDM)	Activating components/functions	V1.10.001
VOLVO	S80	2004	Passenger door module (PDM)	Window position set-up	V1.10.001
VOLVO	S80	2004	Power seat module (PSM)	Reading codes	V1.10.001
VOLVO	S80	2004	Power seat module (PSM)	Erasing codes	V1.10.001
VOLVO	S80	2004	Power seat module (PSM)	Reading off extended diagnostic trouble code (DTC) information, power seat module	V1.10.001
VOLVO	S80	2004	Power seat module (PSM)	Reading the control module ID	V1.10.001
VOLVO	S80	2004	Power seat module (PSM)	Reading off the parameter values	V1.10.001
VOLVO	S80	2004	Power seat module (PSM)	Activating components/functions	V1.10.001
VOLVO	S80	2004	Power seat module (PSM)	Programming the seat temperature	V1.10.001
VOLVO	S80	2004	Power seat module (PSM)	Checking current values	V1.10.001
VOLVO	S80	2004	Power seat module (PSM)	Programming the remote control setting	V1.10.001
VOLVO	S80	2004	Supplemental restraint system module (SRS)	Reading codes	V1.10.001
VOLVO	S80	2004	Supplemental restraint system module (SRS)	Erasing codes	V1.10.001
VOLVO	S80	2004	Supplemental restraint system module (SRS)	Reading off extended diagnostic trouble code (DTC) information, supplemental restraint system / SIPS (side impact protection system)	V1.10.001
VOLVO	S80	2004	Supplemental restraint system module (SRS)	Reading control unit id, SRS	V1.10.001
VOLVO	S80	2004	Supplemental restraint system module (SRS)	Reading off control module ID, SRS	V1.10.001
VOLVO	S80	2004	Supplemental restraint system module (SRS)	Reading off the fuel tank system (USA/CDN)	V1.10.001
VOLVO	S80	2004	Engine control module (ECM)	Extended diagnostic trouble code (DTC) reading	V1.10.001
VOLVO	S80	2004	Engine control module (ECM)	Reading off blocks of diagnostic trouble codes (DTCs)	V1.10.001
VOLVO	S80	2004	Engine control module (ECM)	Reading off control module ID, Electronic throttle module	V1.10.001
VOLVO	S80	2004	Engine control module (ECM)	Reading off diagnostic operating cycle	V1.10.001
VOLVO	S80	2004	Differential electronic module (DEM)	Reading codes	V1.10.001
VOLVO	S80	2004	Differential electronic module (DEM)	Erasing codes	V1.10.001
VOLVO	S80	2004	Differential electronic module (DEM)	Reading off the control module ID	V1.10.001
VOLVO	S80	2004	Differential electronic module (DEM)	Reading off parameters, digital display	V1.10.001
VOLVO	S80	2004	Transmission control module (TCM)	Reading codes	V1.10.001
VOLVO	S80	2004	Fuel system/combined system	Reading codes	V1.10.001
VOLVO	S80	2004	Fuel system/combined system	Erasing codes	V1.10.001
VOLVO	S80	2004	Fuel system/combined system	Programming optimizing parameters	V1.10.001
VOLVO	S80	2004	Fuel system/combined system	Reading off the control module ID	V1.10.001
VOLVO	S80	2004	Fuel system/combined system	Parameter, digital display	V1.10.001
VOLVO	S80	2004	Engine control module (ECM)	Reading codes	V1.10.001
VOLVO	S80	2004	Engine control module (ECM)	Erasing codes	V1.10.001
VOLVO	S80	2004	Engine control module (ECM)	Reading off extended diagnostic trouble code (DTC) information, engine control module (ECM)	V1.10.001
VOLVO	S80	2004	Engine control module (ECM)	Reading the control unit ID, ECM	V1.10.001
VOLVO	S80	2004	Engine control module (ECM)	Readiness codes	V1.10.001
VOLVO	S80	2004	Engine control module (ECM)	Parameter, digital display	V1.10.001
VOLVO	S80	2004	Engine control module (ECM)	Activating components and functions	V1.10.001
VOLVO	S80	2004	Engine control module (ECM)	Adapting the throttle unit	V1.10.001
VOLVO	S80	2004	Intake air temperature sensor	Reading off intake camshaft control	V1.10.001
VOLVO	S80	2004	Intake air temperature sensor	Quick test of intake camshaft control	V1.10.001
VOLVO	S80	2004	Accessory electronic module (AEM)	Reading codes	V1.10.001
VOLVO	S80	2004	Accessory electronic module (AEM)	Erasing codes	V1.10.001
VOLVO	S80	2004	Accessory electronic module (AEM)	Reading off extended fault-tracing information, accessory electronic module	V1.10.001
VOLVO	S80	2004	Accessory electronic module (AEM)	Reading off the control module	V1.10.001
VOLVO	S80	2004	Accessory electronic module (AEM)	Reading off parameters, digital display	V1.10.001
VOLVO	S80	2004	Accessory electronic module (AEM)	Activating components and functions	V1.10.001
VOLVO	S80	2004	Audio module (AUM)	Reading codes	V1.10.001
VOLVO	S80	2004	Audio module (AUM)	Erasing codes	V1.10.001
VOLVO	S80	2004	Audio module (AUM)	Reading off extended diagnostic trouble code (DTC) information, audio module	V1.10.001
VOLVO	S80	2004	Audio module (AUM)	Reading the control module ID	V1.10.001
VOLVO	S80	2004	Audio module (AUM)	Reading off parameter values	V1.10.001
VOLVO	S80	2004	Central electronic module (CEM)	Reading codes	V1.10.001
VOLVO	S80	2004	Central electronic module (CEM)	Erasing codes	V1.10.001
VOLVO	S80	2004	Central electronic module (CEM)	Reading off extended diagnostic trouble code (DTC) information, central electronic module	V1.10.001
VOLVO	S80	2004	Central electronic module (CEM)	Reading the control unit ID	V1.10.001
VOLVO	S80	2004	Central electronic module (CEM)	Reading off parameter values	V1.10.001
VOLVO	S80	2004	Central electronic module (CEM)	Activating components/functions	V1.10.001
VOLVO	S80	2004	Central electronic module (CEM)	Programming the control module	V1.10.001
VOLVO	S80	2004	Central electronic module (CEM)	Reading off the alarm cause	V1.10.001
VOLVO	S80	2004	Central electronic module (CEM)	Restoring factory settings	V1.10.001
VOLVO	S80	2004	Driver information module (DIM)	Reading codes	V1.10.001
VOLVO	S80	2004	Driver information module (DIM)	Erasing codes	V1.10.001
VOLVO	S80	2004	Driver information module (DIM)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO	S80	2004	Driver information module (DIM)	Reading the control unit ID	V1.10.001
VOLVO	S80	2004	Driver information module (DIM)	Parameter, digital display	V1.10.001
VOLVO	S80	2004	Driver information module (DIM)	Activating components/functions	V1.10.001
VOLVO	S80	2004	Driver information module (DIM)	Testing all displays and lamps in instrument	V1.10.001
VOLVO	S80	2004	Driver information module (DIM)	Programming the driver information module (DIM)	V1.10.001
VOLVO	S80	2004	Driver information module (DIM)	Reading off pre-programmed values in driver information module (DIM)	V1.10.001
VOLVO	S80	2004	Driver information module (DIM)	Restoring the service reminder indicator (SRI)	V1.10.001
VOLVO	S80	2004	Phone module (PHM)	Reading codes	V1.10.001
VOLVO	S80	2004	Phone module (PHM)	Erasing codes	V1.10.001
VOLVO	S80	2004	Phone module (PHM)	Reading off extended diagnostic trouble code (DTC) information, carphone module	V1.10.001
VOLVO	S80	2004	Phone module (PHM)	Reading off the control module ID	V1.10.001
VOLVO	S80	2004	Phone module (PHM)	Reading off parameter values	V1.10.001
VOLVO	S80	2004			

VOLVO	S80	2004	User electronic module (UEM)	Configuration of the siren	V1.10.001
VOLVO	S80	2004	User electronic module (UEM)	Readasing the control module	V1.10.001
VOLVO	S80	2004	User electronic module (UEM)	Reading the unrammed values	V1.10.001
VOLVO	S80	2004	Transmission control module (TCM)	Read codes	V1.10.001
VOLVO	S80	2004	Transmission control module (TCM)	Erase codes	V1.10.001
VOLVO	S80	2004	Transmission control module (TCM)	Reading off extended diagnostic trouble code (DTC) information, transmission control module (TCM)	V1.10.001
VOLVO	S80	2004	Transmission control module (TCM)	Readsing off control unit id	V1.10.001
VOLVO	S80	2004	Transmission control module (TCM)	Parameter, digital display	V1.10.001
VOLVO	S80	2004	Transmission control module (TCM)	Activating components / functions	V1.10.001
VOLVO	S80	2004	Transmission control module (TCM)	Reset adaption to zero	V1.10.001
VOLVO	S80	2004	Transmission control module (TCM)	Resetting the counter for gearbox oil change	V1.10.001
VOLVO	S80	2004	Anti-lock brake system module (ABS/BCM)	Read codes	V1.10.001
VOLVO	S80	2004	Anti-lock brake system module (ABS/BCM)	Erase codes	V1.10.001
VOLVO	S80	2004	Anti-lock brake system module (ABS/BCM)	Reading off extended diagnostic trouble code (DTC) information, brake control module (BCM)	V1.10.001
VOLVO	S80	2004	Anti-lock brake system module (ABS/BCM)	Readsing off the control module ID	V1.10.001
VOLVO	S80	2004	Anti-lock brake system module (ABS/BCM)	Parameter, digital display	V1.10.001
VOLVO	S80	2004	Anti-lock brake system module (ABS/BCM)	Activating components / functions	V1.10.001
VOLVO	S80	2004	Anti-lock brake system module (ABS/BCM)	Checking brake light switch adjustment	V1.10.001
VOLVO	S80	2004	Anti-lock brake system module (ABS/BCM)	Calibration	V1.10.001
VOLVO	S80	2004	Steering wheel angle sensor module (SAS)	Read codes	V1.10.001
VOLVO	S80	2004	Steering wheel angle sensor module (SAS)	Erase codes	V1.10.001
VOLVO	S80	2004	Steering wheel angle sensor module (SAS)	Reading control unit id, SAS	V1.10.001
VOLVO	S80	2004	Steering wheel angle sensor module (SAS)	Digital display parameter (SAS)	V1.10.001
VOLVO	S80	2004	Suspension module (SUM)	Read codes	V1.10.001
VOLVO	S80	2004	Suspension module (SUM)	Erase codes	V1.10.001
VOLVO	S80	2004	Suspension module (SUM)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO	S80	2004	Suspension module (SUM)	Readsing off the control module ID	V1.10.001
VOLVO	S80	2004	Suspension module (SUM)	Parameter, digital display	V1.10.001
VOLVO	S80	2004	Climate control module (CCM)	Read codes	V1.10.001
VOLVO	S80	2004	Climate control module (CCM)	Erase codes	V1.10.001
VOLVO	S80	2004	Climate control module (CCM)	Reading off extended diagnostic trouble code (DTC) information, climate control module	V1.10.001
VOLVO	S80	2004	Climate control module (CCM)	Readsing off control unit ID	V1.10.001
VOLVO	S80	2004	Climate control module (CCM)	Digital display parameter	V1.10.001
VOLVO	S80	2004	Climate control module (CCM)	Programmung remote control module (CCM)	V1.10.001
VOLVO	S80	2004	Climate control module (CCM)	Self-adjustment of damper motor end stops	V1.10.001
VOLVO	S80	2004	Climate control module (CCM)	Adjusting parameters, ECC	V1.10.001
VOLVO	S80	2004	Climate control module (CCM)	Reading-out programmed parameters in the climate control module	V1.10.001
VOLVO	S80	2004	Driver door module (DDM)	Read codes	V1.10.001
VOLVO	S80	2004	Driver door module (DDM)	Erase codes	V1.10.001
VOLVO	S80	2004	Driver door module (DDM)	Reading off extended diagnostic trouble code (DTC) information, driver's door module	V1.10.001
VOLVO	S80	2004	Driver door module (DDM)	Readsing off control unit id	V1.10.001
VOLVO	S80	2004	Driver door module (DDM)	Reading off the parameter values	V1.10.001
VOLVO	S80	2004	Driver door module (DDM)	Activating components and functions	V1.10.001
VOLVO	S80	2004	Driver door module (DDM)	Window position set - up	V1.10.001
VOLVO	S80	2004	Power seat module (PSM)	Read codes	V1.10.001
VOLVO	S80	2004	Power seat module (PSM)	Erase codes	V1.10.001
VOLVO	S80	2004	Power seat module (PSM)	Reading off extended diagnostic trouble code (DTC) information, power seat module	V1.10.001
VOLVO	S80	2004	Power seat module (PSM)	Readsing off the control module ID	V1.10.001
VOLVO	S80	2004	Power seat module (PSM)	Reading off input signals to the power seat module	V1.10.001
VOLVO	S80	2004	Power seat module (PSM)	Activating components and functions	V1.10.001
VOLVO	S80	2004	Power seat module (PSM)	Programming the seat temperature	V1.10.001
VOLVO	S80	2004	Power seat module (PSM)	Checking current values	V1.10.001
VOLVO	S80	2004	Power seat module (PSM)	Programming the remote control setting	V1.10.001
VOLVO	S80	2004	Supplemental restraint system module (SRS)	Read codes	V1.10.001
VOLVO	S80	2004	Supplemental restraint system module (SRS)	Erase codes	V1.10.001
VOLVO	S80	2004	Supplemental restraint system module (SRS)	Reading off extended diagnostic trouble code (DTC) information, SRS (supplemental restraint system) / SIPS (side impact protection system)	V1.10.001
VOLVO	S80	2004	Supplemental restraint system module (SRS)	Readsing off control unit id	V1.10.001
VOLVO	S80	2004	Supplemental restraint system module (SRS)	Reading off parameters, digital display	V1.10.001
VOLVO	S80	2004	Engine control module (ECM)	Quick test of the fuel tank (ECM)	V1.10.001
VOLVO	S80	2004	Engine control module (ECM)	Extended diagnostic trouble code (DTC) module	V1.10.001
VOLVO	S80	2004	Engine control module (ECM)	Reading off blocks of diagnostic trouble codes (DTCs)	V1.10.001
VOLVO	S80	2004	Engine control module (ECM)	Reading off control module ID, Electronic throttle module	V1.10.001
VOLVO	S80	2004	Engine control module (ECM)	Reading off the diagnostic operating cycle	V1.10.001
VOLVO	S80	2004	Differential electronic module (DEM)	Read codes	V1.10.001
VOLVO	S80	2004	Differential electronic module (DEM)	Erase codes	V1.10.001
VOLVO	S80	2004	Differential electronic module (DEM)	Reading off the control module ID	V1.10.001
VOLVO	S80	2004	Differential electronic module (DEM)	Reading off parameters, digital display	V1.10.001
VOLVO	S80	2004	Transmission control module (TCM)	Activating components/functions	V1.10.001
VOLVO	S80	2004	Fuel system/combined system	Read codes	V1.10.001
VOLVO	S80	2004	Fuel system/combined system	Erase codes	V1.10.001
VOLVO	S80	2004	Fuel system/combined system	Reading off the control module ID	V1.10.001
VOLVO	S80	2004	Fuel system/combined system	Parameter, digital display	V1.10.001
VOLVO	S80	2004	Accessory electronic module (AEM)	Read codes	V1.10.001
VOLVO	S80	2004	Accessory electronic module (AEM)	Erase codes	V1.10.001
VOLVO	S80	2004	Accessory electronic module (AEM)	Reading off extended fault diagnosis information, accessory electronic module	V1.10.001
VOLVO	S80	2004	Accessory electronic module (AEM)	Readsing off the control module ID	V1.10.001
VOLVO	S80	2004	Accessory electronic module (AEM)	Reading off parameters, digital display	V1.10.001
VOLVO	S80	2005	Audio module (AUM)	Activating components and functions	V1.10.001
VOLVO	S80	2005	Audio module (AUM)	Read codes	V1.10.001
VOLVO	S80	2005	Audio module (AUM)	Erase codes	V1.10.001
VOLVO	S80	2005	Audio module (AUM)	Reading off extended diagnostic trouble code (DTC) information, audio module	V1.10.001
VOLVO	S80	2005	Audio module (AUM)	Readsing off the control module ID	V1.10.001
VOLVO	S80	2005	Audio module (AUM)	Reading off parameters, digital display	V1.10.001
VOLVO	S80	2005	Central electronic module (CEM)	Read codes	V1.10.001
VOLVO	S80	2005	Central electronic module (CEM)	Erase codes	V1.10.001
VOLVO	S80	2005	Central electronic module (CEM)	Reading off extended diagnostic trouble code (DTC) information, central electronic module	V1.10.001
VOLVO	S80	2005	Central electronic module (CEM)	Readsing off control unit id	V1.10.001
VOLVO	S80	2005	Central electronic module (CEM)	Reading control unit ID	V1.10.001
VOLVO	S80	2005	Central electronic module (CEM)	Activating components and functions	V1.10.001
VOLVO	S80	2005	Central electronic module (CEM)	Read codes	V1.10.001
VOLVO	S80	2005	Central electronic module (CEM)	Erase codes	V1.10.001
VOLVO	S80	2005	Central electronic module (CEM)	Detailed control module code information readout	V1.10.001
VOLVO	S80	2005	Central electronic module (CEM)	Reading off intake camshaft control	V1.10.001
VOLVO	S80	2005	Central electronic module (CEM)	Quick test of the intake camshaft control	V1.10.001
VOLVO	S80	2005	Central electronic module (CEM)	Quick test of the fuel pump (FP)	V1.10.001
VOLVO	S80	2005	Central electronic module (CEM)	Read codes	V1.10.001
VOLVO	S80	2005	Central electronic module (CEM)	Erase codes	V1.10.001
VOLVO	S80	2005	Central electronic module (CEM)	Reading off extended fault diagnosis information, central electronic module	V1.10.001
VOLVO	S80	2005	Central electronic module (CEM)	Readsing off control unit id	V1.10.001
VOLVO	S80	2005	Central electronic module (CEM)	Reading control unit ID	V1.10.001
VOLVO	S80	2005	Central electronic module (CEM)	Activating components and functions	V1.10.001
VOLVO	S80	2005	Driver information module (DIM)	Read codes	V1.10.001
VOLVO	S80	2005	Driver information module (DIM)	Erase codes	V1.10.001
VOLVO	S80	2005	Driver information module (DIM)	Programming the driver information module (DIM)	V1.10.001
VOLVO	S80	2005	Driver information module (DIM)	Reading off programmed values	V1.10.001
VOLVO	S80	2005	Driver information module (DIM)	Reading the service reminder indicator (SRI)	V1.10.001
VOLVO	S80	2005	Driver information module (DIM)	Read codes	V1.10.001
VOLVO	S80	2005	Driver information module (DIM)	Erase codes	V1.10.001
VOLVO	S80	2005	Driver information module (DIM)	Activating components and functions	V1.10.001
VOLVO	S80	2005	Driver information module (DIM)	Testing a failure in the component	V1.10.001
VOLVO	S80	2005	Driver information module (DIM)	Programming the driver information module (DIM)	V1.10.001
VOLVO	S80	2005	Driver information module (DIM)	Reading off programmed values	V1.10.001
VOLVO	S80	2005	Driver information module (DIM)	Reading the service reminder indicator (SRI)	V1.10.001
VOLVO	S80	2005	Phone module (PHM)	Read codes	V1.10.001
VOLVO	S80	2005	Phone module (PHM)	Erase codes	V1.10.001
VOLVO	S80	2005	Phone module (PHM)	Reading off extended diagnostic trouble code (DTC) information, carphone module	V1.10.001
VOLVO	S80	2005	Phone module (PHM)	Readsing off control unit id	V1.10.001
VOLVO	S80	2005	Phone module (PHM)	Reading off parameters, digital display	V1.10.001
VOLVO	S80	2005	Phone module (PHM)	Activating components and functions	V1.10.001
VOLVO	S80	2005	Phone module (PHM)	Calibrating the position sensor for Bi-Xenon lamps	V1.10.001
VOLVO	S80	2005	Phone module (PHM)	Reading off the alarm cause	V1.10.001
VOLVO	S80	2005	Road traffic information module (RTI)	Read codes	V1.10.001
VOLVO	S80	2005	Road traffic information module (RTI)	Erase codes	V1.10.001
VOLVO	S80	2005	Road traffic information module (RTI)	Reading off extended diagnostic trouble code (DTC) information, road traffic information (RTI)	V1.10.001
VOLVO	S80	2005	Road traffic information module (RTI)	Readsing off control module ID	V1.10.001
VOLVO	S80	2005	Road traffic information module (RTI)	Reading off parameters, digital display	V1.10.001
VOLVO	S80	2005	Upper electrical module (UEM)	Read codes	V1.10.001
VOLVO	S80	2005	Upper electrical module (UEM)	Erase codes	V1.10.001
VOLVO	S80	2005	Upper electrical module (UEM)	Reading off extended diagnostic trouble code (DTC) information, upper electrical module	V1.10.001
VOLVO	S80	2005	Upper electrical module (UEM)	Readsing off control unit id	V1.10.001
VOLVO	S80	2005	Upper electrical module (UEM)	Reading control unit ID	V1.10.001
VOLVO	S80	2005	Upper electrical module (UEM)	Activating components and functions	V1.10.001
VOLVO	S80	2005	Upper electrical module (UEM)	Programming the control unit	V1.10.001
VOLVO	S80	2005	Upper electrical module (UEM)	Configuration of the siren	V1.10.001
VOLVO	S80	2005	Upper electrical module (UEM)	Readsing off the control module ID	V1.10.001
VOLVO	S80	2005	Upper electrical module (UEM)	Activating components and functions	V1.10.001
VOLVO	S80	2005	Upper electrical module (UEM)	Reading off tire pressure values	V1.10.001
VOLVO	S80	2005	Transmission control module (TCM)	Read codes	V1.10.001
VOLVO	S80	2005	Transmission control module (TCM)	Erase codes	V1.10.001
VOLVO	S80	2005	Transmission control module (TCM)	Reading off extended diagnostic trouble code (DTC) information, transmission control module (TCM)	V1.10.001
VOLVO	S80	2005	Transmission control module (TCM)	Readsing off control unit id	V1.10.001
VOLVO	S80	2005	Transmission control module (TCM)	Reading control unit ID	V1.10.001
VOLVO	S80	2005	Transmission control module (TCM)	Activating components / functions	V1.10.001
VOLVO	S80	2005	Transmission control module (TCM)	Reset adaption to zero	V1.10.001
VOLVO	S80	2005	Transmission control module (TCM)	Resetting the counter for gearbox oil change	V1.10.001
VOLVO	S80	2005	Anti-lock brake system module (ABS/BCM)	Read codes	V1.10.001
VOLVO	S80	2005	Anti-lock brake system module (ABS/BCM)	Erase codes	V1.10.001
VOLVO	S80	2005	Anti-lock brake system module (ABS/BCM)	Reading off extended diagnostic trouble code (DTC) information, brake control module (BCM)	V1.10.001
VOLVO	S80	2005	Anti-lock brake system module (ABS/BCM)	Readsing off control unit id	V1.10.001
VOLVO	S80	2005	Anti-lock brake system module (ABS/BCM)	Parameter, digital display	V1.10.001
VOLVO	S80	2005	Anti-lock brake system module (ABS/BCM)	Activating components and functions	V1.10.001
VOLVO	S80	2005	Anti-lock brake system module (ABS/BCM)	Calibrating brake light switch adjustment	V1.10.001
VOLVO	S80	2005	Steering wheel angle sensor module (SAS)	Read codes	V1.10.001
VOLVO	S80	2005	Steering wheel angle sensor module (SAS)	Erase codes	V1.10.001
VOLVO	S80	2005	Steering wheel angle sensor module (SAS)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO	S80	2005	Steering wheel angle sensor module (SAS)	Readsing off the control module ID	V1.10.001
VOLVO	S80	2005	Steering wheel angle sensor module (SAS)	Parameter, digital display	V1.10.001
VOLVO	S80	2005	Suspension module (SUM)	Read codes	V1.10.001
VOLVO	S80	2005	Suspension module (SUM)	Erase codes	V1.10.001
VOLVO	S80	2005	Suspension module (SUM)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO	S80	2005	Suspension module (SUM)	Readsing off control unit id	V1.10.001
VOLVO	S80	2005	Suspension module (SUM)	Reading control unit ID	V1.10.001
VOLVO	S80	2005	Suspension module (SUM)	Activating components and functions	V1.10.001
VOLVO	S80	2005	Climate control module (CCM)	Read codes	V1.10.001
VOLVO	S80	2005	Climate control module (CCM)	Erase codes	V1.10.001
VOLVO	S80	2005	Climate control module (CCM)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO	S80	2005	Climate control module (CCM)	Readsing off control unit id	V1.10.001
VOLVO	S80	2005	Climate control module (CCM)	Reading off parameters, digital display	V1.10.001
VOLVO	S80	2005	Climate control module (CCM)	Activating components and functions	V1.10.001
VOLVO	S80	2005	Climate control module (CCM)	Identifying the Damper motor module (DMM)	V1.10.001
VOLVO	S80	2005	Climate control module (CCM)	Read codes	V1.10.001
VOLVO	S80	2005	Driver door module (DDM)	Erase codes	V1.10.001
VOLVO	S80	2005	Driver door module (DDM)	Reading off extended diagnostic trouble code (DTC) information, driver's door module	V1.10.001
VOLVO	S80	2005	Driver door module (DDM)	Readsing off control unit id	V1.10.001
VOLVO	S80	2005	Driver door module (DDM)	Reading control unit ID	V1.10.001
VOLVO	S80	2005	Driver door module (DDM)	Activating components and functions	V1

VOLVO	S80	2005	Passenger door module (PDM)	Erase codes	V1.10.001
VOLVO	S80	2005	Passenger door module (PDM)	Reading off extended diagnostic trouble code (DTC) information, passenger door module	V1.10.001
VOLVO	S80	2005	Passenger door module (PDM)	Readline control unit ID	V1.10.001
VOLVO	S80	2005	Passenger door module (PDM)	Reading off parameters, digital display	V1.10.001
VOLVO	S80	2005	Passenger door module (PDM)	Activating components/functions	V1.10.001
VOLVO	S80	2005	Passenger door module (PDM)	Checking current values	V1.10.001
VOLVO	S80	2005	Passenger door module (PDM)	Initializing the window position	V1.10.001
VOLVO	S80	2005	Power seat module (PSM)	Read codes	V1.10.001
VOLVO	S80	2005	Power seat module (PSM)	Erase codes	V1.10.001
VOLVO	S80	2005	Power seat module (PSM)	Reading off extended diagnostic trouble code (DTC) information, power seat module	V1.10.001
VOLVO	S80	2005	Power seat module (PSM)	Readline off the control module ID	V1.10.001
VOLVO	S80	2005	Power seat module (PSM)	Reading off input signals to the power seat module	V1.10.001
VOLVO	S80	2005	Power seat module (PSM)	Activating components/functions	V1.10.001
VOLVO	S80	2005	Power seat module (PSM)	Checking current values	V1.10.001
VOLVO	S80	2005	Power seat module (PSM)	Positioning the remote control setting	V1.10.001
VOLVO	S80	2005	Supplemental restraint system module (SRS)	Read codes	V1.10.001
VOLVO	S80	2005	Supplemental restraint system module (SRS)	Erase codes	V1.10.001
VOLVO	S80	2005	Supplemental restraint system module (SRS)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO	S80	2005	Supplemental restraint system module (SRS)	Readline off the control module ID	V1.10.001
VOLVO	S80	2005	Supplemental restraint system module (SRS)	Reading off extended diagnostic trouble code (DTC) information, engine control module (ECM)	V1.10.001
VOLVO	S80	2005	Supplemental restraint system module (SRS)	Readline off control module ID. Electronic throttle module	V1.10.001
VOLVO	S80	2005	Supplemental restraint system module (SRS)	Parameter, digital display	V1.10.001
VOLVO	S80	2005	Supplemental restraint system module (SRS)	Readline off the diagnostic operating cycle	V1.10.001
VOLVO	S80	2005	Supplemental restraint system module (SRS)	Readline off the part number	V1.10.001
VOLVO	S80	2005	Differential electronic module (DEM)	Erase codes	V1.10.001
VOLVO	S80	2005	Differential electronic module (DEM)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO	S80	2005	Differential electronic module (DEM)	Readline off the control module ID	V1.10.001
VOLVO	S80	2005	Differential electronic module (DEM)	Reading off parameters, digital display	V1.10.001
VOLVO	S80	2005	Transmission control module (TCM)	Activating components/functions	V1.10.001
VOLVO	S80	2005	Fuel system/combined system	Read codes	V1.10.001
VOLVO	S80	2005	Fuel system/combined system	Erase codes	V1.10.001
VOLVO	S80	2005	Fuel system/combined system	Readline off the control module ID	V1.10.001
VOLVO	S80	2005	Fuel system/combined system	Parameter, digital display	V1.10.001
VOLVO	S80	2005	Fuel system/combined system	Activating components/functions	V1.10.001
VOLVO	S80	2005	Fuel system/combined system	Positioning the optimized parameters	V1.10.001
VOLVO	V40	1999	Anti-spin system	Read codes	V1.10.001
VOLVO	V40	1999	Anti-spin system	Erase codes	V1.10.001
VOLVO	V40	1999	Anti-spin system	Reading off the part number	V1.10.001
VOLVO	V40	1999	Anti-spin system	Parameter read off - digital display	V1.10.001
VOLVO	V40	1999	Driver information module (DIM)	Read codes	V1.10.001
VOLVO	V40	1999	Driver information module (DIM)	Erase codes	V1.10.001
VOLVO	V40	1999	Driver information module (DIM)	Readline off the control module ID	V1.10.001
VOLVO	V40	1999	Driver information module (DIM)	Parameter, digital display	V1.10.001
VOLVO	V40	1999	Driver information module (DIM)	Activating components / functions	V1.10.001
VOLVO	V40	1999	Driver information module (DIM)	Resetting the mileage, new car	V1.10.001
VOLVO	V40	1999	Driver information module (DIM)	Resetting the service reminder lamp (SRL)	V1.10.001
VOLVO	V40	1999	Lock and alarm	Read codes	V1.10.001
VOLVO	V40	1999	Lock and alarm	Erase codes	V1.10.001
VOLVO	V40	1999	Lock and alarm	Reading off the part number	V1.10.001
VOLVO	V40	1999	Lock and alarm	Parameter read off - digital display	V1.10.001
VOLVO	V40	1999	Anti-lock brake system module (ABS/BCM)	Read codes	V1.10.001
VOLVO	V40	1999	Anti-lock brake system module (ABS/BCM)	Erase codes	V1.10.001
VOLVO	V40	1999	Anti-lock brake system module (ABS/BCM)	Readline off the control module ID	V1.10.001
VOLVO	V40	1999	Anti-lock brake system module (ABS/BCM)	Parameter read off - digital display	V1.10.001
VOLVO	V40	1999	Anti-lock brake system module (ABS/BCM)	Activating components / functions	V1.10.001
VOLVO	V40	1999	Climate control module (CCM)	Read codes	V1.10.001
VOLVO	V40	1999	Climate control module (CCM)	Erase codes	V1.10.001
VOLVO	V40	1999	Climate control module (CCM)	Reading off the part number	V1.10.001
VOLVO	V40	1999	Climate control module (CCM)	Parameter read off - digital display	V1.10.001
VOLVO	V40	1999	Combustion preheater module (CPM)	Read codes	V1.10.001
VOLVO	V40	1999	Combustion preheater module (CPM)	Erase codes	V1.10.001
VOLVO	V40	1999	Combustion preheater module (CPM)	Reading control unit ID	V1.10.001
VOLVO	V40	1999	Combustion preheater module (CPM)	Parameter readout - digital display	V1.10.001
VOLVO	V40	1999	Supplemental restraint system module (SRS)	Programmung the control unit	V1.10.001
VOLVO	V40	1999	Supplemental restraint system module (SRS)	Read codes	V1.10.001
VOLVO	V40	1999	Supplemental restraint system module (SRS)	Erase codes	V1.10.001
VOLVO	V40	1999	Transmission control module (TCM)	Read codes	V1.10.001
VOLVO	V40	1999	Transmission control module (TCM)	Erase codes	V1.10.001
VOLVO	V40	1999	Transmission control module (TCM)	Reading off the control module ID	V1.10.001
VOLVO	V40	1999	Transmission control module (TCM)	Reading off the parameter values	V1.10.001
VOLVO	V40	1999	Transmission control module (TCM)	Activating components / functions	V1.10.001
VOLVO	V40	1999	Fuel system/combined system	Read codes	V1.10.001
VOLVO	V40	1999	Fuel system/combined system	Erase codes	V1.10.001
VOLVO	V40	1999	Fuel system/combined system	Reading control unit ID	V1.10.001
VOLVO	V40	1999	Fuel system/combined system	Digital display parameter	V1.10.001
VOLVO	V40	1999	Fuel system/combined system	Activating components / functions	V1.10.001
VOLVO	V40	1999	Fuel system/combined system	Idling speed adjustment	V1.10.001
VOLVO	V40	1999	Fuel system/combined system	Positioning the throttle position sensor	V1.10.001
VOLVO	V40	1999	Fuel system/combined system	Parameter readout - digital display	V1.10.001
VOLVO	V40	2000	Anti-spin system	Read codes	V1.10.001
VOLVO	V40	2000	Anti-spin system	Erase codes	V1.10.001
VOLVO	V40	2000	Anti-spin system	Reading off the part number	V1.10.001
VOLVO	V40	2000	Anti-spin system	Parameter read off - digital display	V1.10.001
VOLVO	V40	2000	Fuel system/combined system	Read codes	V1.10.001
VOLVO	V40	2000	Fuel system/combined system	Erase codes	V1.10.001
VOLVO	V40	2000	Fuel system/combined system	Reading off the control module ID	V1.10.001
VOLVO	V40	2000	Fuel system/combined system	Parameter read off - digital display	V1.10.001
VOLVO	V40	2000	Fuel system/combined system	Activating components / functions	V1.10.001
VOLVO	V40	2000	Fuel system/combined system	Programming a new combined instrument panel	V1.10.001
VOLVO	V40	2000	Fuel system/combined system	Programming the outside temperature display	V1.10.001
VOLVO	V40	2000	Fuel system/combined system	Programming the outside temperature display	V1.10.001
VOLVO	V40	2000	Fuel system/combined system	Programming a new combined instrument panel	V1.10.001
VOLVO	V40	2000	Fuel system/combined system	Reading off the programmed values	V1.10.001
VOLVO	V40	2000	Fuel system/combined system	Resetting the mileage, new car	V1.10.001
VOLVO	V40	2000	Fuel system/combined system	Resetting the service reminder lamp (SRL)	V1.10.001
VOLVO	V40	2000	Lock and alarm	Read codes	V1.10.001
VOLVO	V40	2000	Lock and alarm	Erase codes	V1.10.001
VOLVO	V40	2000	Lock and alarm	Reading off the control module ID	V1.10.001
VOLVO	V40	2000	Lock and alarm	Reading off the parameter values, digital display	V1.10.001
VOLVO	V40	2000	Lock and alarm	Activating components / functions	V1.10.001
VOLVO	V40	2000	Lock and alarm	Programmung the alarm function	V1.10.001
VOLVO	V40	2000	Lock and alarm	Programming the remote control function	V1.10.001
VOLVO	V40	2000	Lock and alarm	Programmung new control module	V1.10.001
VOLVO	V40	2000	Lock and alarm	Reading off the programmed values	V1.10.001
VOLVO	V40	2000	Lock and alarm	Resetting the mileage, new car	V1.10.001
VOLVO	V40	2000	Lock and alarm	Resetting the service reminder lamp (SRL)	V1.10.001
VOLVO	V40	2000	Gas discharge light module	Read codes	V1.10.001
VOLVO	V40	2000	Gas discharge light module	Erase codes	V1.10.001
VOLVO	V40	2000	Gas discharge light module	Reading off the control module ID	V1.10.001
VOLVO	V40	2000	Gas discharge light module	Reading off the parameter values, digital display	V1.10.001
VOLVO	V40	2000	Gas discharge light module	Activating components / functions	V1.10.001
VOLVO	V40	2000	Gas discharge light module	Programming the combined instrument panel	V1.10.001
VOLVO	V40	2000	Gas discharge light module	Programming the outside temperature display	V1.10.001
VOLVO	V40	2000	Gas discharge light module	Programming the outside temperature display	V1.10.001
VOLVO	V40	2000	Gas discharge light module	Programmung a new combined instrument panel	V1.10.001
VOLVO	V40	2000	Gas discharge light module	Reading off the programmed values	V1.10.001
VOLVO	V40	2000	Gas discharge light module	Resetting the mileage, new car	V1.10.001
VOLVO	V40	2000	Gas discharge light module	Resetting the service reminder lamp (SRL)	V1.10.001
VOLVO	V40	2001	Anti-spin system	Read codes	V1.10.001
VOLVO	V40	2001	Anti-spin system	Erase codes	V1.10.001
VOLVO	V40	2001	Anti-spin system	Reading off the part number	V1.10.001
VOLVO	V40	2001	Anti-spin system	Parameter read off - digital display	V1.10.001
VOLVO	V40	2001	Fuel system/combined system	Read codes	V1.10.001
VOLVO	V40	2001	Fuel system/combined system	Erase codes	V1.10.001
VOLVO	V40	2001	Fuel system/combined system	Reading off the control module ID	V1.10.001
VOLVO	V40	2001	Fuel system/combined system	Parameter read off - digital display	V1.10.001
VOLVO	V40	2001	Fuel system/combined system	Activating components / functions	V1.10.001
VOLVO	V40	2001	Fuel system/combined system	Programming a new control module	V1.10.001
VOLVO	V40	2001	Fuel system/combined system	Reading off the parameter values	V1.10.001
VOLVO	V40	2001	Fuel system/combined system	Resetting the mileage, new car	V1.10.001
VOLVO	V40	2001	Fuel system/combined system	Resetting the service reminder lamp (SRL)	V1.10.001
VOLVO	V40	2001	Lock and alarm	Read codes	V1.10.001
VOLVO	V40	2001	Lock and alarm	Erase codes	V1.10.001
VOLVO	V40	2001	Lock and alarm	Reading off the control module ID	V1.10.001
VOLVO	V40	2001	Lock and alarm	Reading off the parameter values, digital display	V1.10.001
VOLVO	V40	2001	Lock and alarm	Activating components / functions	V1.10.001
VOLVO	V40	2001	Lock and alarm	Programmung parameters / functions	V1.10.001
VOLVO	V40	2001	Lock and alarm	Programming the remote control function	V1.10.001
VOLVO	V40	2001	Lock and alarm	Programmung new control module	V1.10.001
VOLVO	V40	2001	Lock and alarm	Programming remote control	V1.10.001
VOLVO	V40	2001	Lock and alarm	Checking the number of remote controls	V1.10.001
VOLVO	V40	2001	Lock and alarm	Reading off the programmed values	V1.10.001
VOLVO	V40	2001	Lock and alarm	Reading off alarm causes	V1.10.001
VOLVO	V40	2001	Anti-lock brake system module (ABS/BCM)	Read codes	V1.10.001
VOLVO	V40	2001	Anti-lock brake system module (ABS/BCM)	Erase codes	V1.10.001
VOLVO	V40	2001	Anti-lock brake system module (ABS/BCM)	Reading off the control module ID	V1.10.001

VOLVO	V40	2004	Fuel system/combined system	Programming a new control module	V1.10.001
VOLVO	V40	2004	Fuel system/combined system	Readiness code	V1.10.001
VOLVO	V40	2004	Driver information module (DIM)	Erase codes	V1.10.001
VOLVO	V40	2004	Driver information module (DIM)	Reading off the control module ID	V1.10.001
VOLVO	V40	2004	Driver information module (DIM)	Parameter, digital display	V1.10.001
VOLVO	V40	2004	Driver information module (DIM)	Parameter, graphic display	V1.10.001
VOLVO	V40	2004	Driver information module (DIM)	Activating components and functions	V1.10.001
VOLVO	V40	2004	Driver information module (DIM)	Modify the settings in the instrument panel	V1.10.001
VOLVO	V40	2004	Driver information module (DIM)	Programming a new temperature display	V1.10.001
VOLVO	V40	2004	Driver information module (DIM)	Programming the trip computer function	V1.10.001
VOLVO	V40	2004	Driver information module (DIM)	Programming a new combined instrument panel	V1.10.001
VOLVO	V40	2004	Driver information module (DIM)	Reading off the programmed values	V1.10.001
VOLVO	V40	2004	Driver information module (DIM)	Resets the database, new car	V1.10.001
VOLVO	V40	2004	Driver information module (DIM)	Resets the service reminder lamp (SRL)	V1.10.001
VOLVO	V40	2004	Gas discharge light module	Read codes	V1.10.001
VOLVO	V40	2004	Gas discharge light module	Reading off the control module ID	V1.10.001
VOLVO	V40	2004	Gas discharge light module	Reading off the parameter values, digital display	V1.10.001
VOLVO	V40	2004	Gas discharge light module	Activating components and functions	V1.10.001
VOLVO	V40	2004	Gas discharge light module	Calibrating the control module	V1.10.001
VOLVO	V40	2004	Lock and alarm	Read codes	V1.10.001
VOLVO	V40	2004	Lock and alarm	Erase codes	V1.10.001
VOLVO	V40	2004	Lock and alarm	Reading off the control module ID	V1.10.001
VOLVO	V40	2004	Lock and alarm	Activating components / functions	V1.10.001
VOLVO	V40	2004	Lock and alarm	Programmable parameters / functions	V1.10.001
VOLVO	V40	2004	Lock and alarm	Programmable the alarm function	V1.10.001
VOLVO	V40	2004	Lock and alarm	Programmable the remote control function	V1.10.001
VOLVO	V40	2004	Lock and alarm	Programming a new control module	V1.10.001
VOLVO	V40	2004	Lock and alarm	Programmable the remote control	V1.10.001
VOLVO	V40	2004	Lock and alarm	Programmable the remote control	V1.10.001
VOLVO	V40	2004	Lock and alarm	Checking the number of remote controls	V1.10.001
VOLVO	V40	2004	Lock and alarm	Reading off the programmed values	V1.10.001
VOLVO	V40	2004	Lock and alarm	Reading off the alarm causes	V1.10.001
VOLVO	V40	2004	Anti-lock brake system module (ABS/BCM)	Read codes	V1.10.001
VOLVO	V40	2004	Anti-lock brake system module (ABS/BCM)	Erase codes	V1.10.001
VOLVO	V40	2004	Anti-lock brake system module (ABS/BCM)	Reading off the control module ID	V1.10.001
VOLVO	V40	2004	Anti-lock brake system module (ABS/BCM)	Self-adjustment of damper motor end positions	V1.10.001
VOLVO	V40	2004	Anti-lock brake system module (ABS/BCM)	Reading off the programmed values	V1.10.001
VOLVO	V40	2004	Anti-lock brake system module (ABS/BCM)	Erase codes	V1.10.001
VOLVO	V40	2004	Climate control module (CCM)	Read codes	V1.10.001
VOLVO	V40	2004	Climate control module (CCM)	Erase codes	V1.10.001
VOLVO	V40	2004	Climate control module (CCM)	Reading off the part number	V1.10.001
VOLVO	V40	2004	Climate control module (CCM)	Activating read off -diagnosis	V1.10.001
VOLVO	V40	2004	Climate control module (CCM)	Activating components and functions	V1.10.001
VOLVO	V40	2004	Climate control module (CCM)	Programming the climate control module	V1.10.001
VOLVO	V40	2004	Climate control module (CCM)	Self-adjustment of damper motor end positions	V1.10.001
VOLVO	V40	2004	Climate control module (CCM)	Reading off the programmed values	V1.10.001
VOLVO	V40	2004	Combustion preheater module (CPM)	Erase codes	V1.10.001
VOLVO	V40	2004	Combustion preheater module (CPM)	Reading control unit ID	V1.10.001
VOLVO	V40	2004	Combustion preheater module (CPM)	Parameter read off - digital display	V1.10.001
VOLVO	V40	2004	Combustion preheater module (CPM)	Programming the control unit	V1.10.001
VOLVO	V40	2004	Supplemental restraint system module (SRS)	Read codes	V1.10.001
VOLVO	V40	2004	Supplemental restraint system module (SRS)	Erase codes	V1.10.001
VOLVO	V40	2004	Supplemental restraint system module (SRS)	Reading off the control module ID	V1.10.001
VOLVO	V40	2004	Transmission control module (TCM)	Read codes	V1.10.001
VOLVO	V40	2004	Transmission control module (TCM)	Erase codes	V1.10.001
VOLVO	V40	2004	Transmission control module (TCM)	Reading off the control module ID	V1.10.001
VOLVO	V40	2004	Transmission control module (TCM)	Parameter, digital display	V1.10.001
VOLVO	V40	2004	Transmission control module (TCM)	Activating components and functions	V1.10.001
VOLVO	V40	2004	Transmission control module (TCM)	Resetting the transmission fluid change counter	V1.10.001
VOLVO	V40	2004	Transmission control module (TCM)	Resetting the adaptation	V1.10.001
VOLVO	V40	2004	Fuel system/combined system	Reading control unit ID	V1.10.001
VOLVO	V40	2004	Fuel system/combined system	Digital display	V1.10.001
VOLVO	V40	2004	Fuel system/combined system	Activating components/functions	V1.10.001
VOLVO	V40	2004	Fuel system/combined system	Positioning of accelerator pedal sensor	V1.10.001
VOLVO	V50	2004	Engine control module (ECM)	Read codes	V1.10.001
VOLVO	V50	2004	Engine control module (ECM)	Erase codes	V1.10.001
VOLVO	V50	2004	Engine control module (ECM)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO	V50	2004	Engine control module (ECM)	Reading off the control module ID	V1.10.001
VOLVO	V50	2004	Accessory electronic module (AEM)	Read codes	V1.10.001
VOLVO	V50	2004	Accessory electronic module (AEM)	Erase codes	V1.10.001
VOLVO	V50	2004	Accessory electronic module (AEM)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO	V50	2004	Accessory electronic module (AEM)	Reading off the control module ID	V1.10.001
VOLVO	V50	2004	Accessory electronic module (AEM)	Activating components and functions	V1.10.001
VOLVO	V50	2004	Accessory electronic module (AEM)	Reading off parameters, digital display	V1.10.001
VOLVO	V50	2004	Accessory electronic module (AEM)	Reading off the control module ID	V1.10.001
VOLVO	V50	2004	Central electronic module (CEM)	Read codes	V1.10.001
VOLVO	V50	2004	Central electronic module (CEM)	Erase codes	V1.10.001
VOLVO	V50	2004	Central electronic module (CEM)	Reading off the control module ID	V1.10.001
VOLVO	V50	2004	Central electronic module (CEM)	Calibration of position sensor, GDI lamps	V1.10.001
VOLVO	V50	2004	Central electronic module (CEM)	Reading data for vehicle configuration	V1.10.001
VOLVO	V50	2004	Central electronic module (CEM)	Reading off parameters, digital display	V1.10.001
VOLVO	V50	2004	Central electronic module (CEM)	Activating components and functions	V1.10.001
VOLVO	V50	2004	Driver information module (DIM)	Reading off the control module ID	V1.10.001
VOLVO	V50	2004	Driver information module (DIM)	Programming the driver information module (DIM)	V1.10.001
VOLVO	V50	2004	Driver information module (DIM)	Resets the service reminder indicator (SRI)	V1.10.001
VOLVO	V50	2004	Driver information module (DIM)	Indicates programmed values	V1.10.001
VOLVO	V50	2004	Global positioning system module (GPS)	Read codes	V1.10.001
VOLVO	V50	2004	Global positioning system module (GPS)	Erase codes	V1.10.001
VOLVO	V50	2004	Global positioning system module (GPS)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO	V50	2004	Global positioning system module (GPS)	Reading off the control module ID	V1.10.001
VOLVO	V50	2004	Infotainment control module (ICM)	Read codes	V1.10.001
VOLVO	V50	2004	Infotainment control module (ICM)	Erase codes	V1.10.001
VOLVO	V50	2004	Infotainment control module (ICM)	Reading off the control module ID	V1.10.001
VOLVO	V50	2004	Infotainment control module (ICM)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO	V50	2004	Infotainment control module (ICM)	Reading off the control module ID	V1.10.001
VOLVO	V50	2004	Infotainment control module (ICM)	Reading off parameters, digital display	V1.10.001
VOLVO	V50	2004	Media player module (MPM)	Read codes	V1.10.001
VOLVO	V50	2004	Media player module (MPM)	Erase codes	V1.10.001
VOLVO	V50	2004	Media player module (MPM)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO	V50	2004	Media player module (MPM)	Reading off the control module ID	V1.10.001
VOLVO	V50	2004	Multimedia module (MMM)	Read codes	V1.10.001
VOLVO	V50	2004	Multimedia module (MMM)	Erase codes	V1.10.001
VOLVO	V50	2004	Multimedia module (MMM)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO	V50	2004	Multimedia module (MMM)	Reading off the control module ID	V1.10.001
VOLVO	V50	2004	Multimedia module (MMM)	Activating components and functions	V1.10.001
VOLVO	V50	2004	Phone module (PHM)	Read codes	V1.10.001
VOLVO	V50	2004	Phone module (PHM)	Erase codes	V1.10.001
VOLVO	V50	2004	Phone module (PHM)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO	V50	2004	Phone module (PHM)	Reading off the control module ID	V1.10.001
VOLVO	V50	2004	Steering wheel module (SWM)	Read codes	V1.10.001
VOLVO	V50	2004	Steering wheel module (SWM)	Erase codes	V1.10.001
VOLVO	V50	2004	Steering wheel module (SWM)	Reading off the control module ID	V1.10.001
VOLVO	V50	2004	Steering wheel module (SWM)	Reading off parameters, digital display	V1.10.001
VOLVO	V50	2004	Subwoofer module (SUB)	Read codes	V1.10.001
VOLVO	V50	2004	Subwoofer module (SUB)	Erase codes	V1.10.001
VOLVO	V50	2004	Traffic message channel module (TMC)	Read codes	V1.10.001
VOLVO	V50	2004	Traffic message channel module (TMC)	Erase codes	V1.10.001
VOLVO	V50	2004	Traffic message channel module (TMC)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO	V50	2004	Traffic message channel module (TMC)	Reading off the control module ID	V1.10.001
VOLVO	V50	2004	Transmission control module (TCM)	Read codes	V1.10.001
VOLVO	V50	2004	Transmission control module (TCM)	Erase codes	V1.10.001
VOLVO	V50	2004	Transmission control module (TCM)	Reading off the control module ID	V1.10.001
VOLVO	V50	2004	Transmission control module (TCM)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO	V50	2004	Transmission control module (TCM)	Reading off the control module ID	V1.10.001
VOLVO	V50	2004	Transmission control module (TCM)	Reading off parameters, digital display	V1.10.001
VOLVO	V50	2004	Transmission control module (TCM)	Activating components and functions	V1.10.001
VOLVO	V50	2004	Driver door module (DDM)	Read codes	V1.10.001
VOLVO	V50	2004	Driver door module (DDM)	Erase codes	V1.10.001
VOLVO	V50	2004	Driver door module (DDM)	Reading off the control module ID	V1.10.001
VOLVO	V50	2004	Driver door module (DDM)	Reading off parameters, digital display	V1.10.001
VOLVO	V50	2004	Driver door module (DDM)	Activating components and functions	V1.10.001
VOLVO	V50	2004	Driver door module (DDM)	Indicates the open status	V1.10.001
VOLVO	V50	2004	Passenger door module (PDM)	Read codes	V1.10.001
VOLVO	V50	2004	Passenger door module (PDM)	Erase codes	V1.10.001
VOLVO	V50	2004	Passenger door module (PDM)	Reading off the control module ID	V1.10.001
VOLVO	V50	2004	Passenger door module (PDM)	Reading off parameters, digital display	V1.10.001
VOLVO	V50	2004	Passenger door module (PDM)	Activating components and functions	V1.10.001
VOLVO	V50	2004	Passenger door module (PDM)	Programmable the remote control setting	V1.10.001
VOLVO	V50	2004	Power seat module (PSM)	Read codes	V1.10.001
VOLVO	V50	2004	Power seat module (PSM)	Erase codes	V1.10.001
VOLVO	V50	2004	Power seat module (PSM)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO	V50	2004	Power seat module (PSM)	Reading off the control module ID	V1.10.001
VOLVO	V50	2004	Power seat module (PSM)	Reading off parameters, digital display	V1.10.001
VOLVO	V50	2004	Power seat module (PSM)	Activating components and functions	V1.10.001
VOLVO	V50	2004	Power seat module (PSM)	Programmable the remote control setting	V1.10.001
VOLVO	V50	2004	Supplemental restraint system module (SRS)	Read codes	V1.10.001
VOLVO	V50	2004	Supplemental restraint system module (SRS)	Erase codes	V1.10.001
VOLVO	V50	2004	Supplemental restraint system module (SRS)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO	V50	2004	Supplemental restraint system module (SRS)	Reading off the control module ID	V1.10.001
VOLVO	V50	2004	Supplemental restraint system module (SRS)	Reading off parameters, digital display	V1.10.001
VOLVO	V50	2004	Trailer module (TRM)	Read codes	V1.10.001

VOLVO V50	2004	Trailer module (TRM)	Erase codes	V1.10.001
VOLVO V50	2004	Trailer module (TRM)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO V50	2004	Trailer module (TRM)	Reading off the control module ID	V1.10.001
VOLVO V50	2004	Trailer module (TRM)	Reading off parameters, digital display	V1.10.001
VOLVO V50	2004	Engine control module (ECM)	Reading codes	V1.10.001
VOLVO V50	2004	Engine control module (ECM)	Adaptation of the throttle unit	V1.10.001
VOLVO V50	2004	Engine control module (ECM)	Quick test of exhaust camshaft control	V1.10.001
VOLVO V50	2004	Engine control module (ECM)	Quick test of intake camshaft control	V1.10.001
VOLVO V50	2004	Engine control module (ECM)	Quick test of the fuel tank (FP)	V1.10.001
VOLVO V50	2004	Engine control module (ECM)	Programme the engine control parameters	V1.10.001
VOLVO V50	2004	Engine control module (ECM)	Resetting the adaptation values	V1.10.001
VOLVO V50	2004	Engine control module (ECM)	Adaptation of the exhaust gas recirculation (EGR) valve	V1.10.001
VOLVO V50	2005	Engine control module (ECM)	Read codes	V1.10.001
VOLVO V50	2005	Engine control module (ECM)	Erase codes	V1.10.001
VOLVO V50	2005	Engine control module (ECM)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO V50	2005	Engine control module (ECM)	Reading off the control module ID	V1.10.001
VOLVO V50	2005	Engine control module (ECM)	Reading off parameters, digital display	V1.10.001
VOLVO V50	2005	Engine control module (ECM)	Activating components and functions	V1.10.001
VOLVO V50	2005	AM/FM tuner module (AFM)	Reading codes	V1.10.001
VOLVO V50	2005	AM/FM tuner module (AFM)	Erase codes	V1.10.001
VOLVO V50	2005	AM/FM tuner module (AFM)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO V50	2005	AM/FM tuner module (AFM)	Reading off the control module ID	V1.10.001
VOLVO V50	2005	AM/FM tuner module (AFM)	Reading off parameters, digital display	V1.10.001
VOLVO V50	2005	Accessory electronic module (AEM)	Erase codes	V1.10.001
VOLVO V50	2005	Accessory electronic module (AEM)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO V50	2005	Accessory electronic module (AEM)	Reading off the control module ID	V1.10.001
VOLVO V50	2005	Accessory electronic module (AEM)	Reading off parameters, digital display	V1.10.001
VOLVO V50	2005	Accessory electronic module (AEM)	Activating components and functions	V1.10.001
VOLVO V50	2005	Audio module (AUD)	Read codes	V1.10.001
VOLVO V50	2005	Audio module (AUD)	Erase codes	V1.10.001
VOLVO V50	2005	Audio module (AUD)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO V50	2005	Audio module (AUD)	Reading off the control module ID	V1.10.001
VOLVO V50	2005	Central electronic module (CEM)	Erase codes	V1.10.001
VOLVO V50	2005	Central electronic module (CEM)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO V50	2005	Central electronic module (CEM)	Reading off the control module ID	V1.10.001
VOLVO V50	2005	Central electronic module (CEM)	Calibration of position sensor, SDI lamps	V1.10.001
VOLVO V50	2005	Central electronic module (CEM)	Reading data for vehicle configuration	V1.10.001
VOLVO V50	2005	Central electronic module (CEM)	Reading off parameters, digital display	V1.10.001
VOLVO V50	2005	Central electronic module (CEM)	Activating components and functions	V1.10.001
VOLVO V50	2005	Central electronic module (CEM)	Quick test of alternator function	V1.10.001
VOLVO V50	2005	Central electronic module (CEM)	Resetting low voltage counters	V1.10.001
VOLVO V50	2005	Central electronic module (CEM)	Reading off the control module ID	V1.10.001
VOLVO V50	2005	Driver information module (DIM)	Erase codes	V1.10.001
VOLVO V50	2005	Driver information module (DIM)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO V50	2005	Driver information module (DIM)	Reading off the control module ID	V1.10.001
VOLVO V50	2005	Driver information module (DIM)	Reading off parameters, digital display	V1.10.001
VOLVO V50	2005	Driver information module (DIM)	Activating components and functions	V1.10.001
VOLVO V50	2005	Driver information module (DIM)	Testing all indicators and lamps in the driver information module (DIM)	V1.10.001
VOLVO V50	2005	Driver information module (DIM)	Programme the driver information module (DIM)	V1.10.001
VOLVO V50	2005	Driver information module (DIM)	Resetting the service reminder indicator (SRI)	V1.10.001
VOLVO V50	2005	Driver information module (DIM)	Indicates programmed values	V1.10.001
VOLVO V50	2005	Global positioning system (GPS)	Read codes	V1.10.001
VOLVO V50	2005	Global positioning system (GPS)	Erase codes	V1.10.001
VOLVO V50	2005	Global positioning system (GPS)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO V50	2005	Global positioning system (GPS)	Reading off the control module ID	V1.10.001
VOLVO V50	2005	Global positioning system (GPS)	Reading off parameters, digital display	V1.10.001
VOLVO V50	2005	Infotainment control module (ICM)	Erase codes	V1.10.001
VOLVO V50	2005	Infotainment control module (ICM)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO V50	2005	Infotainment control module (ICM)	Reading off the control module ID	V1.10.001
VOLVO V50	2005	Infotainment control module (ICM)	Reading off parameters, digital display	V1.10.001
VOLVO V50	2005	Infotainment control module (ICM)	Activating components and functions	V1.10.001
VOLVO V50	2005	Integrated audio module (IAM)	Read codes	V1.10.001
VOLVO V50	2005	Integrated audio module (IAM)	Erase codes	V1.10.001
VOLVO V50	2005	Integrated audio module (IAM)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO V50	2005	Integrated audio module (IAM)	Reading off the control module ID	V1.10.001
VOLVO V50	2005	Integrated audio module (IAM)	Reading off parameters, digital display	V1.10.001
VOLVO V50	2005	Integrated audio module (IAM)	Activating components and functions	V1.10.001
VOLVO V50	2005	Keyless vehicle module (KVM)	Read codes	V1.10.001
VOLVO V50	2005	Keyless vehicle module (KVM)	Erase codes	V1.10.001
VOLVO V50	2005	Keyless vehicle module (KVM)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO V50	2005	Keyless vehicle module (KVM)	Reading off the control module ID	V1.10.001
VOLVO V50	2005	Keyless vehicle module (KVM)	Reading off parameters, digital display	V1.10.001
VOLVO V50	2005	Keyless vehicle module (KVM)	Activating components and functions	V1.10.001
VOLVO V50	2005	Media player module (MPM)	Read codes	V1.10.001
VOLVO V50	2005	Media player module (MPM)	Erase codes	V1.10.001
VOLVO V50	2005	Media player module (MPM)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO V50	2005	Media player module (MPM)	Reading off the control module ID	V1.10.001
VOLVO V50	2005	Media player module (MPM)	Reading off parameters, digital display	V1.10.001
VOLVO V50	2005	Multimedia module (MMM)	Read codes	V1.10.001
VOLVO V50	2005	Multimedia module (MMM)	Erase codes	V1.10.001
VOLVO V50	2005	Multimedia module (MMM)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO V50	2005	Multimedia module (MMM)	Reading off the control module ID	V1.10.001
VOLVO V50	2005	Multimedia module (MMM)	Reading off parameters, digital display	V1.10.001
VOLVO V50	2005	Multimedia module (MMM)	Activating components and functions	V1.10.001
VOLVO V50	2005	Park assist module (PAM)	Read codes	V1.10.001
VOLVO V50	2005	Park assist module (PAM)	Erase codes	V1.10.001
VOLVO V50	2005	Park assist module (PAM)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO V50	2005	Park assist module (PAM)	Reading off the control module ID	V1.10.001
VOLVO V50	2005	Park assist module (PAM)	Reading off parameters, digital display	V1.10.001
VOLVO V50	2005	Phone module (PHM)	Read codes	V1.10.001
VOLVO V50	2005	Phone module (PHM)	Erase codes	V1.10.001
VOLVO V50	2005	Phone module (PHM)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO V50	2005	Phone module (PHM)	Reading off control module ID	V1.10.001
VOLVO V50	2005	Phone module (PHM)	Reading off parameters, digital display	V1.10.001
VOLVO V50	2005	Steering wheel module (SWM)	Read codes	V1.10.001
VOLVO V50	2005	Steering wheel module (SWM)	Erase codes	V1.10.001
VOLVO V50	2005	Steering wheel module (SWM)	Reading off the control module ID	V1.10.001
VOLVO V50	2005	Steering wheel module (SWM)	Reading off parameters, digital display	V1.10.001
VOLVO V50	2005	Subwoofer module (SUB)	Read codes	V1.10.001
VOLVO V50	2005	Subwoofer module (SUB)	Erase codes	V1.10.001
VOLVO V50	2005	Traffic message channel module (TMC)	Read codes	V1.10.001
VOLVO V50	2005	Traffic message channel module (TMC)	Erase codes	V1.10.001
VOLVO V50	2005	Traffic message channel module (TMC)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO V50	2005	Traffic message channel module (TMC)	Reading off the control module ID	V1.10.001
VOLVO V50	2005	Traffic message channel module (TMC)	Reading off parameters, digital display	V1.10.001
VOLVO V50	2005	Traffic message channel module (TMC)	Activating components and functions	V1.10.001
VOLVO V50	2005	Anti-lock brake system module (ABS/BCM)	Read codes	V1.10.001
VOLVO V50	2005	Anti-lock brake system module (ABS/BCM)	Erase codes	V1.10.001
VOLVO V50	2005	Anti-lock brake system module (ABS/BCM)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO V50	2005	Anti-lock brake system module (ABS/BCM)	Reading off the control module ID	V1.10.001
VOLVO V50	2005	Anti-lock brake system module (ABS/BCM)	Reading off parameters, digital display	V1.10.001
VOLVO V50	2005	Anti-lock brake system module (ABS/BCM)	Activating components and functions	V1.10.001
VOLVO V50	2005	Electrical power steering module (EPS)	Read codes	V1.10.001
VOLVO V50	2005	Electrical power steering module (EPS)	Erase codes	V1.10.001
VOLVO V50	2005	Electrical power steering module (EPS)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO V50	2005	Electrical power steering module (EPS)	Reading off the control module ID	V1.10.001
VOLVO V50	2005	Electrical power steering module (EPS)	Reading off parameters, digital display	V1.10.001
VOLVO V50	2005	Passenger door module (PDM)	Read codes	V1.10.001
VOLVO V50	2005	Passenger door module (PDM)	Erase codes	V1.10.001
VOLVO V50	2005	Passenger door module (PDM)	Reading off the control module ID	V1.10.001
VOLVO V50	2005	Passenger door module (PDM)	Reading off parameters, digital display	V1.10.001
VOLVO V50	2005	Passenger seat module (PSM)	Read codes	V1.10.001
VOLVO V50	2005	Passenger seat module (PSM)	Erase codes	V1.10.001
VOLVO V50	2005	Passenger seat module (PSM)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO V50	2005	Passenger seat module (PSM)	Reading off the control module ID	V1.10.001
VOLVO V50	2005	Passenger seat module (PSM)	Reading off parameters, digital display	V1.10.001
VOLVO V50	2005	Power seat module (PSM)	Read codes	V1.10.001
VOLVO V50	2005	Power seat module (PSM)	Erase codes	V1.10.001
VOLVO V50	2005	Power seat module (PSM)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO V50	2005	Power seat module (PSM)	Reading off the control module ID	V1.10.001
VOLVO V50	2005	Power seat module (PSM)	Reading off parameters, digital display	V1.10.001
VOLVO V50	2005	Supplemental restraint system (SRS)	Read codes	V1.10.001
VOLVO V50	2005	Supplemental restraint system (SRS)	Erase codes	V1.10.001
VOLVO V50	2005	Supplemental restraint system (SRS)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO V50	2005	Supplemental restraint system (SRS)	Reading off the control module ID	V1.10.001
VOLVO V50	2005	Supplemental restraint system (SRS)	Reading off parameters, digital display	V1.10.001
VOLVO V50	2005	Trailer module (TRM)	Read codes	V1.10.001
VOLVO V50	2005	Trailer module (TRM)	Erase codes	V1.10.001
VOLVO V50	2005	Trailer module (TRM)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO V50	2005	Trailer module (TRM)	Reading off the control module ID	V1.10.001
VOLVO V50	2005	Trailer module (TRM)	Reading off parameters, digital display	V1.10.001
VOLVO V50	2005	Transmission control module (TCM)	Read codes	V1.10.001
VOLVO V50	2005	Transmission control module (TCM)	Erase codes	V1.10.001
VOLVO V50	2005	Transmission control module (TCM)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO V50	2005	Transmission control module (TCM)	Reading off the control module ID	V1.10.001
VOLVO V50	2005	Transmission control module (TCM)	Reading off parameters, digital display	V1.10.001
VOLVO V50	2005	Differential electronic module (DEM)	Read codes	V1.10.001
VOLVO V50	2005	Differential electronic module (DEM)	Erase codes	V1.10.001
VOLVO V50	2005	Differential electronic module (DEM)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO V50	2005	Differential electronic module (DEM)	Reading off the control module ID	V1.10.001
VOLVO V50	2005	Differential electronic module (DEM)	Reading off parameters, digital display	V1.10.001
VOLVO V50	2005	Additive dosing module (ADM)	Read codes	V1.10.001
VOLVO V50	2005	Additive dosing module (ADM)	Erase codes	V1.10.001
VOLVO V50	2005	Additive dosing module (ADM)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO V50	2005	Additive dosing module (ADM)	Reading off the control module ID	V1.10.001
VOLVO V50	2005	Additive dosing module (ADM)	Reading off parameters, digital display	V1.10.001
VOLVO V50	2005	Refilling the feed hose with additive	Read codes	V1.10.001
VOLVO V50	2005	Refilling the feed hose with additive	Erase codes	V1.10.001
VOLVO V50	2005	Refilling the feed hose with additive	Resetting the tank level gauge	V1.10.001
VOLVO V50	2005	Refilling the feed hose with additive	Programming the tank level gauge	V1.10.001
VOLVO V50	2005	Refilling the feed hose with additive	Adapting the exhaust gas recirculation (EGR) valve	V1.10.001
VOLVO V50	2005	Combustion of soot particles	Read codes	V1.10.001
VOLVO V50	2005	Combustion of soot particles	Erase codes	V1.10.001
VOLVO V50	2005	Combustion of soot particles	Resetting the odometer particle trap	V1.10.001
VOLVO V50	2005	Combustion of soot particles	Resetting the adaptation values	V1.10.001
VOLVO V50	1999	Combined instrument	Read codes	V1.10.001
VOLVO V50	1999	Combined instrument	Erase codes	V1.10.001
VOLVO V50	1999	Combined instrument	Resetting off the control module ID	V1.10.001
VOLVO V50	1999	Combined instrument	Parameter, digital display	V1.10.001
VOLVO V50	1999	Combined instrument	Activating components/functions	V1.10.001
VOLVO V50	1999	Combined instrument panel	Programming combined instrument panel	V1.10.001
VOLVO V50	1999	Combined instrument	Resetting programmed values in the combined instrument panel	V1.10.001
VOLVO V50	1999	Combined instrument	Resetting the service reminder indicator (SRI)	V1.10.001
VOLVO V50	1999	Combined instrument	Resetting car	V1.10.001

VOLVO	V70 (00)	1999	Lock and alarm	Read codes	V110000
VOLVO	V70 (00)	1999	Lock and alarm	Erase codes	V110001
VOLVO	V70 (00)	1999	Lock and alarm	Readline off the control module ID	V110002
VOLVO	V70 (00)	1999	Lock and alarm	Activating components/functions	V110003
VOLVO	V70 (00)	1999	Lock and alarm	Checking the number of remotes controls	V110004
VOLVO	V70 (00)	1999	Lock and alarm	Reading out the onearmed values	V110005
VOLVO	V70 (00)	1999	Lock and alarm	Reading of alarm causes	V110006
VOLVO	V70 (00)	1999	Road traffic information module (RTI)	Read codes	V110007
VOLVO	V70 (00)	1999	Road traffic information module (RTI)	Erase codes	V110008
VOLVO	V70 (00)	1999	Road traffic information module (RTI)	Readline off the control module ID	V110009
VOLVO	V70 (00)	1999	Road traffic information module (RTI)	Reading off parameters	V110010
VOLVO	V70 (00)	1999	Road traffic information module (RTI)	Activating components/functions	V110011
VOLVO	V70 (00)	1999	Road traffic information module (RTI)	Read codes	V110012
VOLVO	V70 (00)	1999	Road traffic information module (RTI)	Erase codes	V110013
VOLVO	V70 (00)	1999	Road traffic information module (RTI)	Readline off the control module ID	V110014
VOLVO	V70 (00)	1999	Road traffic information module (RTI)	Activating components/functions	V110015
VOLVO	V70 (00)	1999	Road traffic information module (RTI)	Resetting	V110016
VOLVO	V70 (00)	1999	Road traffic information module (RTI)	Transmission oil replacement/counter	V110017
VOLVO	V70 (00)	1999	Road traffic information module (RTI)	Resetting adaptation	V110018
VOLVO	V70 (00)	1999	Anti-lock brake system module (ABS/BCM)	Read codes	V110019
VOLVO	V70 (00)	1999	Anti-lock brake system module (ABS/BCM)	Erase codes	V110020
VOLVO	V70 (00)	1999	Anti-lock brake system module (ABS/BCM)	Reading off control module ID	V110021
VOLVO	V70 (00)	1999	Anti-lock brake system module (ABS/BCM)	Parameter, digital display	V110022
VOLVO	V70 (00)	1999	Anti-lock brake system module (ABS/BCM)	Activating components/functions	V110023
VOLVO	V70 (00)	1999	Climate control module (CCM)	Read codes	V110024
VOLVO	V70 (00)	1999	Climate control module (CCM)	Erase codes	V110025
VOLVO	V70 (00)	1999	Climate control module (CCM)	Readline off the control module ID	V110026
VOLVO	V70 (00)	1999	Climate control module (CCM)	Activating components/functions	V110027
VOLVO	V70 (00)	1999	Combustion preheater module (CPM)	Read codes	V110028
VOLVO	V70 (00)	1999	Combustion preheater module (CPM)	Erase codes	V110029
VOLVO	V70 (00)	1999	Combustion preheater module (CPM)	Reading off parameters	V110030
VOLVO	V70 (00)	1999	Combustion preheater module (CPM)	Activating components/functions	V110031
VOLVO	V70 (00)	1999	Combustion preheater module (CPM)	Resetting	V110032
VOLVO	V70 (00)	1999	Power seat module, left	Read codes	V110033
VOLVO	V70 (00)	1999	Power seat module, left	Erase codes	V110034
VOLVO	V70 (00)	1999	Power seat module, left	Reading off the control module ID	V110035
VOLVO	V70 (00)	1999	Power seat module, left	Activating components/functions	V110036
VOLVO	V70 (00)	1999	Power seat module, right	Read codes	V110037
VOLVO	V70 (00)	1999	Power seat module, right	Erase codes	V110038
VOLVO	V70 (00)	1999	Power seat module, right	Reading off the control module ID	V110039
VOLVO	V70 (00)	1999	Power seat module, right	Activating components/functions	V110040
VOLVO	V70 (00)	1999	Supplemental restraint system module (SRS)	Read codes	V110041
VOLVO	V70 (00)	1999	Supplemental restraint system module (SRS)	Erase codes	V110042
VOLVO	V70 (00)	1999	Supplemental restraint system module (SRS)	Reading off control module ID	V110043
VOLVO	V70 (00)	1999	Supplemental restraint system module (SRS)	Parameter, digital display	V110044
VOLVO	V70 (00)	1999	Supplemental restraint system module (SRS)	Activating components/functions	V110045
VOLVO	V70 (00)	1999	Engine control module (ECM)	Read codes	V110046
VOLVO	V70 (00)	1999	Engine control module (ECM)	Erase codes	V110047
VOLVO	V70 (00)	1999	Engine control module (ECM)	Reading off extended diagnostic trouble code (DTC) information, engine control module (ECM)	V110048
VOLVO	V70 (00)	1999	Engine control module (ECM)	Reading of control module ID: ECM	V110049
VOLVO	V70 (00)	1999	Engine control module (ECM)	Reading of control module ID: ETM	V110050
VOLVO	V70 (00)	1999	Engine control module (ECM)	Readiness code	V110051
VOLVO	V70 (00)	1999	Engine control module (ECM)	Parameter, digital display	V110052
VOLVO	V70 (00)	1999	Engine control module (ECM)	Activating components/functions	V110053
VOLVO	V70 (00)	1999	Quick fuel tank system	Read codes	V110054
VOLVO	V70 (00)	1999	Quick fuel tank system	Erase codes	V110055
VOLVO	V70 (00)	1999	Quick fuel tank system	Extended diagnostic trouble code (DTC) reading	V110056
VOLVO	V70 (00)	1999	Quick fuel tank system	Reading of control module ID: Electronic throttle module	V110057
VOLVO	V70 (00)	1999	Quick fuel tank system	Reading off parameters	V110058
VOLVO	V70 (00)	1999	Quick fuel tank system	Activating components/functions	V110059
VOLVO	V70 (00)	1999	Quick test of the fuel tank system (USA/CDN)	Read codes	V110060
VOLVO	V70 (00)	1999	Quick test of the fuel tank system (USA/CDN)	Erase codes	V110061
VOLVO	V70 (00)	1999	Fuel system/combined system	Read codes	V110062
VOLVO	V70 (00)	1999	Fuel system/combined system	Erase codes	V110063
VOLVO	V70 (00)	1999	Fuel system/combined system	Reading off control module ID	V110064
VOLVO	V70 (00)	1999	Fuel system/combined system	Activating components/functions	V110065
VOLVO	V70 (00)	1999	Combined instrument	Read codes	V110066
VOLVO	V70 (00)	1999	Combined instrument	Erase codes	V110067
VOLVO	V70 (00)	1999	Combined instrument	Reading off control module ID	V110068
VOLVO	V70 (00)	1999	Combined instrument	Activating components/functions	V110069
VOLVO	V70 (00)	1999	Programmed combined instrument panel	Read codes	V110070
VOLVO	V70 (00)	1999	Programmed combined instrument panel	Erase codes	V110071
VOLVO	V70 (00)	1999	Resetting the Service reminder indicator (SRI)	Resetting	V110072
VOLVO	V70 (00)	2000	Combined instrument	Read codes	V110073
VOLVO	V70 (00)	2000	Combined instrument	Erase codes	V110074
VOLVO	V70 (00)	2000	Combined instrument	Reading off control module ID	V110075
VOLVO	V70 (00)	2000	Combined instrument	Activating components/functions	V110076
VOLVO	V70 (00)	2000	Resetting the Service reminder indicator (SRI)	Resetting car	V110077
VOLVO	V70 (00)	2000	Lock and alarm	Read codes	V110078
VOLVO	V70 (00)	2000	Lock and alarm	Erase codes	V110079
VOLVO	V70 (00)	2000	Lock and alarm	Reading off the control module ID	V110080
VOLVO	V70 (00)	2000	Lock and alarm	Activating components/functions	V110081
VOLVO	V70 (00)	2000	Lock and alarm	Check and adjust dynamic pump setting	V110082
VOLVO	V70 (00)	2000	Lock and alarm	Read codes	V110083
VOLVO	V70 (00)	2000	Lock and alarm	Erase codes	V110084
VOLVO	V70 (00)	2000	Lock and alarm	Reading off control module ID	V110085
VOLVO	V70 (00)	2000	Lock and alarm	Activating components/functions	V110086
VOLVO	V70 (00)	2000	Lock and alarm	Resetting the counter for seabox oil change	V110087
VOLVO	V70 (00)	2000	Anti-lock brake system module (ABS/BCM)	Read codes	V110088
VOLVO	V70 (00)	2000	Anti-lock brake system module (ABS/BCM)	Erase codes	V110089
VOLVO	V70 (00)	2000	Anti-lock brake system module (ABS/BCM)	Reading off control module ID	V110090
VOLVO	V70 (00)	2000	Anti-lock brake system module (ABS/BCM)	Parameter, digital display	V110091
VOLVO	V70 (00)	2000	Anti-lock brake system module (ABS/BCM)	Activating components/functions	V110092
VOLVO	V70 (00)	2000	Climate control module (CCM)	Read codes	V110093
VOLVO	V70 (00)	2000	Climate control module (CCM)	Erase codes	V110094
VOLVO	V70 (00)	2000	Climate control module (CCM)	Reading off the control module ID	V110095
VOLVO	V70 (00)	2000	Climate control module (CCM)	Activating components/functions	V110096
VOLVO	V70 (00)	2000	Combustion preheater module (CPM)	Read codes	V110097
VOLVO	V70 (00)	2000	Combustion preheater module (CPM)	Erase codes	V110098
VOLVO	V70 (00)	2000	Combustion preheater module (CPM)	Reading off parameters	V110099
VOLVO	V70 (00)	2000	Combustion preheater module (CPM)	Activating components/functions	V110100
VOLVO	V70 (00)	2000	Power seat module, left	Read codes	V110101
VOLVO	V70 (00)	2000	Power seat module, left	Erase codes	V110102
VOLVO	V70 (00)	2000	Power seat module, left	Reading off the control module ID	V110103
VOLVO	V70 (00)	2000	Power seat module, left	Activating components/functions	V110104
VOLVO	V70 (00)	2000	Power seat module, right	Read codes	V110105
VOLVO	V70 (00)	2000	Power seat module, right	Erase codes	V110106
VOLVO	V70 (00)	2000	Power seat module, right	Reading off the control module ID	V110107
VOLVO	V70 (00)	2000	Power seat module, right	Activating components/functions	V110108
VOLVO	V70 (00)	2000	Supplemental restraint system module (SRS)	Read codes	V110109
VOLVO	V70 (00)	2000	Supplemental restraint system module (SRS)	Erase codes	V110110
VOLVO	V70 (00)	2000	Supplemental restraint system module (SRS)	Reading off control module ID	V110111
VOLVO	V70 (00)	2000	Supplemental restraint system module (SRS)	Parameter, digital display	V110112
VOLVO	V70 (00)	2000	Supplemental restraint system module (SRS)	Activating components/functions	V110113
VOLVO	V70 (00)	2000	Engine control module (ECM)	Read codes	V110114
VOLVO	V70 (00)	2000	Engine control module (ECM)	Erase codes	V110115
VOLVO	V70 (00)	2000	Engine control module (ECM)	Reading off extended diagnostic trouble code (DTC) reading	V110116
VOLVO	V70 (00)	2000	Engine control module (ECM)	Reading of control module ID: Electronic throttle module	V110117
VOLVO	V70 (00)	2000	Engine control module (ECM)	Activating components/functions	V110118
VOLVO	V70 (00)	2000	Engine control module (ECM)	Resetting	V110119
VOLVO	V70 (00)	2000	Transmission control module (TCM)	Read codes	V110120
VOLVO	V70 (00)	2000	Transmission control module (TCM)	Erase codes	V110121
VOLVO	V70 (00)	2000	Transmission control module (TCM)	Reading control unit id	V110122
VOLVO	V70 (00)	2000	Transmission control module (TCM)	Parameter, digital display	V110123
VOLVO	V70 (00)	2000	Transmission control module (TCM)	Activating components/functions	V110124
VOLVO	V70 (00)	2000	Transmission control module (TCM)	Resetting	V110125
VOLVO	V70 (00)	2000	Anti-lock brake system module (ABS/BCM)	Read codes	V110126
VOLVO	V70 (00)	2000	Anti-lock brake system module (ABS/BCM)	Erase codes	V110127
VOLVO	V70 (00)	2000	Anti-lock brake system module (ABS/BCM)	Reading off control module ID	V110128
VOLVO	V70 (00)	2000	Anti-lock brake system module (ABS/BCM)	Activating components/functions	V110129
VOLVO	V70 (00)	2000	Climate control module (CCM)	Read codes	V110130
VOLVO	V70 (00)	2000	Climate control module (CCM)	Erase codes	V110131
VOLVO	V70 (00)	2000	Climate control module (CCM)	Reading off the control module ID	V110132
VOLVO	V70 (00)	2000	Climate control module (CCM)	Activating components/functions	V110133
VOLVO	V70 (00)	2000	Combustion preheater module (CPM)	Read codes	V110134
VOLVO	V70 (00)	2000	Combustion preheater module (CPM)	Erase codes	V110135
VOLVO	V70 (00)	2000	Combustion preheater module (CPM)	Reading off parameters	V110136
VOLVO	V70 (00)	2000	Combustion preheater module (CPM)	Activating components/functions	V110137
VOLVO	V70 (00)	2000	Power seat module, left	Read codes	V110138
VOLVO	V70 (00)	2000	Power seat module, left	Erase codes	V110139
VOLVO	V70 (00)	2000	Power seat module, left	Reading off the control module ID	V110140
VOLVO	V70 (00)	2000	Power seat module, left	Activating components/functions	V110141
VOLVO	V70 (00)	2000	Power seat module, right	Read codes	V110142
VOLVO	V70 (00)	2000	Power seat module, right	Erase codes	V110143
VOLVO	V70 (00)	2000	Power seat module, right	Reading off the control module ID	V110144
VOLVO	V70 (00)	2000	Power seat module, right	Activating components/functions	V110145
VOLVO	V70 (00)	2000	Supplemental restraint system module (SRS)	Read codes	V110146
VOLVO	V70 (00)	2000	Supplemental restraint system module (SRS)	Erase codes	V110147
VOLVO	V70 (00)	2000	Supplemental restraint system module (SRS)	Reading off control module ID	V110148
VOLVO	V70 (00)	2000	Supplemental restraint system module (SRS)	Parameter, digital display	V110149
VOLVO	V70 (00)	2000	Supplemental restraint system module (SRS)	Activating components/functions	V110150
VOLVO	V70 (00)	2000	Supplemental restraint system module (SRS)	Resetting	V110151
VOLVO	V70 (00)	2000	Combined instrument	Read codes	V110152
VOLVO	V70 (00)	2000	Combined instrument	Erase codes	V110153
VOLVO	V70 (00)	2000	Combined instrument	Reading off control module ID	V110154
VOLVO	V70 (00)	2000	Combined instrument	Activating components/functions	V110155
VOLVO	V70 (00)	2000	Programmed combined instrument panel	Read codes	V110156
VOLVO	V70 (00)	2000	Programmed combined instrument panel	Erase codes	V110157
VOLVO	V70 (00)	2000	Programmed combined instrument panel	Reading off control module ID	V110158
VOLVO	V70 (00)	2000	Programmed combined instrument panel	Activating components/functions	V110159
VOLVO	V70 (00)	2000	Resetting the Service reminder indicator (SRI)	Resetting	V110160
VOLVO	V70 (00)	2000	Driver information module (DIM)	Read codes	V110161
VOLVO	V70 (00)	2000	Driver information module (DIM)	Erase codes	V110162
VOLVO	V70 (00)	2000	Driver information module (DIM)	Reading off extended diagnostic trouble code (DTC) information	V110163
VOLVO	V70 (00)	2000	Driver information module (DIM)	Reading of control unit ID	V110164
VOLVO	V70 (00)	2000	Driver information module (DIM)	Digital display parameter	V110165
VOLVO	V70 (00)	2000	Driver information module (DIM)	Activating components/functions	V110166
VOLVO	V70 (00)	2000	Driver information module (DIM)	Resetting	V110167
VOLVO	V70 (00)	2000	Driver information module (DIM)	Testing all displays and lamps in instrument	V110168
VOLVO	V70 (00)	2000	Driver information module (DIM)	Programming the driver information module (DIM)	V110169
VOLVO	V70 (00)	2000	Driver information module (DIM)	Read-out of programmed values in driver information module (DIM)	V110170
VOLVO	V70 (00)	2000	Driver information module (DIM)	Resetting the SRI (Service Reminder lamp) to zero	V110171
VOLVO	V70 (00)	2000	Phone module (PHM)	Read codes	V110172
VOLVO	V70 (00)	2000	Phone module (PHM)	Erase codes	V110173
VOLVO	V70 (00)	2000	Phone module (PHM)	Reading off control module ID	V110174
VOLVO	V70 (00)	2000	Phone module (PHM)	Activating components/functions	V110175
VOLVO	V70 (00)	2000	Central electronic module (CEM)	Read codes	V110176
VOLVO	V70 (00)	2000	Central electronic module (CEM)	Erase codes	V110177
VOLVO	V70 (00)	2000	Central electronic module (CEM)	Reading off control module ID	V110178
VOLVO	V70 (00)	2000	Central electronic module (CEM)	Activating components/functions	V110179
VOLVO	V70 (00)	2000	Central electronic module (CEM)	Resetting	V110180
VOLVO	V70 (00)	2000	Central electronic module (CEM)	Reading data for vehicle identification	V110181
VOLVO	V70 (00)	2000	Central electronic module (CEM)	Reading parameters in the central electronic module (CEM)	V110182
VOLVO	V70 (00)	2000	Central electronic module (CEM)	Activating parameters, immobilizer function	V110183
VOLVO	V70 (00)	2000	Central electronic module (CEM)	Activating the control unit	V110184
VOLVO	V70 (00)	2000	Central electronic module (CEM)	Programming the control unit	V110185
VOLVO	V70 (00)	2000	Central electronic module (CEM)	Resetting the control unit	V110186
VOLVO	V70 (00)	2000	Steering wheel module (SWM)	Read codes	V110187
VOLVO	V70 (00)	2000	Steering wheel module (SWM)	Erase codes	V110188
VOLVO	V70 (00)	2000	Steering wheel module (SWM)	Reading off control module ID	V110189
VOLVO	V70 (00)	2000	Steering wheel module (SWM)	Activating components/functions	V110190
VOLVO	V70 (00)	2000	Steering wheel module (SWM)	Resetting	V110191
VOLVO	V70 (00)	2000	Steering wheel module (SWM)	Reading off parameters	V110192
VOLVO	V70 (00)	2000	Steering wheel module (SWM)	Activating components and functions	V110193
VOLVO	V70 (00)	2000	Road traffic information module (RTI)	Read codes	V110194
VOLVO	V70 (00)	2000	Road traffic information module (RTI)	Erase codes	V110195
VOLVO	V70 (00)	2000	Road traffic information module (RTI)	Reading off control module ID	V110196
VOLVO	V70 (00)	2000	Road traffic information module (RTI)	Activating components/functions	V110197
VOLVO	V70 (00)	2000	Road traffic information module (RTI)	Resetting</td	

VOLVO	V70 (00-)	2001 Power seat module (PSM)	Readline off the control module ID	V1.10.001
VOLVO	V70 (00-)	2001 Power seat module (PSM)	Readline off input signals to the power seat module	V1.10.001
VOLVO	V70 (00-)	2001 Power seat module (PSM)	Activating components /functions	V1.10.001
VOLVO	V70 (00-)	2001 Power seat module (PSM)	Programming the seat temperature	V1.10.001
VOLVO	V70 (00-)	2001 Power seat module (PSM)	Checking current values	V1.10.001
VOLVO	V70 (00-)	2001 Supplemental restraint system module (SRS)	Read codes	V1.10.001
VOLVO	V70 (00-)	2001 Supplemental restraint system module (SRS)	Erase codes	V1.10.001
VOLVO	V70 (00-)	2001 Supplemental restraint system module (SRS)	Reading off extended diagnostic trouble code (DTC) information, SRS (supplemental restraint system) / SIPS (side impact protection system)	V1.10.001
VOLVO	V70 (00-)	2001 Supplemental restraint system module (SRS)	Reading off diagnostic trouble code (DTC) reading	V1.10.001
VOLVO	V70 (00-)	2001 Engine control module (ECM)	Parameter read off - digital display	V1.10.001
VOLVO	V70 (00-)	2001 Engine control module (ECM)	Extended diagnostic trouble code (DTC) reading	V1.10.001
VOLVO	V70 (00-)	2001 Engine control module (ECM)	Reading off blocks of diagnostic trouble codes (DTCs)	V1.10.001
VOLVO	V70 (00-)	2001 Engine control module (ECM)	Reading off control module ID: Electronic throttle module	V1.10.001
VOLVO	V70 (00-)	2001 Engine control module (ECM)	Readline off the control module ID	V1.10.001
VOLVO	V70 (00-)	2001 Engine control module (ECM)	Parameter: digital display	V1.10.001
VOLVO	V70 (00-)	2001 Engine control module (ECM)	Activating components / functions	V1.10.001
VOLVO	V70 (00-)	2001 Engine control module (ECM)	Programming fuel pump (FP) start diesel	V1.10.001
VOLVO	V70 (00-)	2001 Engine control module (ECM)	Programming optimizing parameters	V1.10.001
VOLVO	V70 (00-)	2001 Engine control module (ECM)	Reading control unit off	V1.10.001
VOLVO	V70 (00-)	2001 Engine control module (ECM)	Activating components /functions	V1.10.001
VOLVO	V70 (00-)	2001 Engine control module (ECM)	Programmation the idle speed	V1.10.001
VOLVO	V70 (00-)	2001 Engine control module (ECM)	Programmation the idle dynamic pump setting	V1.10.001
VOLVO	V70 (00-)	2001 Fuel system/combined system	Read codes	V1.10.001
VOLVO	V70 (00-)	2001 Fuel system/combined system	Erase codes	V1.10.001
VOLVO	V70 (00-)	2001 Fuel system/combined system	Reading off the control module ID	V1.10.001
VOLVO	V70 (00-)	2001 Fuel system/combined system	Parameter: digital display	V1.10.001
VOLVO	V70 (00-)	2001 Fuel system/combined system	Activating components / functions	V1.10.001
VOLVO	V70 (00-)	2001 Fuel system/combined system	Adapting of the throttle unit	V1.10.001
VOLVO	V70 (00-)	2001 Fuel system/combined system	Quick test of exhaust camshaft control	V1.10.001
VOLVO	V70 (00-)	2002 Engine control module (ECM)	Quick test of the fuel tank system	V1.10.001
VOLVO	V70 (00-)	2002 Engine control module (ECM)	Read codes	V1.10.001
VOLVO	V70 (00-)	2002 Accessory electronic module (AEM)	Erase codes	V1.10.001
VOLVO	V70 (00-)	2002 Accessory electronic module (AEM)	Reading off controller information, accessory electronic module	V1.10.001
VOLVO	V70 (00-)	2002 Accessory electronic module (AEM)	Readline off the control module	V1.10.001
VOLVO	V70 (00-)	2002 Accessory electronic module (AEM)	Reading off parameters: digital display	V1.10.001
VOLVO	V70 (00-)	2002 Accessory electronic module (AEM)	Activating components / functions	V1.10.001
VOLVO	V70 (00-)	2002 Audio module (AUM)	Read codes	V1.10.001
VOLVO	V70 (00-)	2002 Audio module (AUM)	Reading off the control module ID	V1.10.001
VOLVO	V70 (00-)	2002 Audio module (AUM)	Reading off parameters: digital display	V1.10.001
VOLVO	V70 (00-)	2002 Central electronic module (CEM)	Read codes	V1.10.001
VOLVO	V70 (00-)	2002 Central electronic module (CEM)	Erase codes	V1.10.001
VOLVO	V70 (00-)	2002 Central electronic module (CEM)	Reading off extended diagnostic trouble code (DTC) information, central electronic module	V1.10.001
VOLVO	V70 (00-)	2002 Central electronic module (CEM)	Readline off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO	V70 (00-)	2002 Central electronic module (CEM)	Reading data for vehicle configuration	V1.10.001
VOLVO	V70 (00-)	2002 Central electronic module (CEM)	Reading off parameters in the central electronic module (CEM)	V1.10.001
VOLVO	V70 (00-)	2002 Central electronic module (CEM)	Reading off control module function	V1.10.001
VOLVO	V70 (00-)	2002 Central electronic module (CEM)	Activating components/functions	V1.10.001
VOLVO	V70 (00-)	2002 Central electronic module (CEM)	Programming the control module	V1.10.001
VOLVO	V70 (00-)	2002 Central electronic module (CEM)	Resetting the alarm cause	V1.10.001
VOLVO	V70 (00-)	2002 Central electronic module (CEM)	Resetting the factory settings	V1.10.001
VOLVO	V70 (00-)	2002 Central electronic module (CEM)	Resetting the car	V1.10.001
VOLVO	V70 (00-)	2002 Driver information module (DIM)	Read codes	V1.10.001
VOLVO	V70 (00-)	2002 Driver information module (DIM)	Erase codes	V1.10.001
VOLVO	V70 (00-)	2002 Driver information module (DIM)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO	V70 (00-)	2002 Driver information module (DIM)	Readline off the control unit ID	V1.10.001
VOLVO	V70 (00-)	2002 Driver information module (DIM)	Parameter: digital display	V1.10.001
VOLVO	V70 (00-)	2002 Driver information module (DIM)	Activating components / functions	V1.10.001
VOLVO	V70 (00-)	2002 Driver information module (DIM)	Testing all displays and lamps in instrument	V1.10.001
VOLVO	V70 (00-)	2002 Driver information module (DIM)	Programming the driver information module (DIM)	V1.10.001
VOLVO	V70 (00-)	2002 Driver information module (DIM)	Read line and stored values in driver information module (DIM)	V1.10.001
VOLVO	V70 (00-)	2002 Driver information module (DIM)	Resetting the service reminder indicator (SR)	V1.10.001
VOLVO	V70 (00-)	2002 Phone module (PHM)	Read codes	V1.10.001
VOLVO	V70 (00-)	2002 Phone module (PHM)	Erase codes	V1.10.001
VOLVO	V70 (00-)	2002 Phone module (PHM)	Reading off extended diagnostic trouble code (DTC) information, carphone module	V1.10.001
VOLVO	V70 (00-)	2002 Phone module (PHM)	Reading off the control module ID	V1.10.001
VOLVO	V70 (00-)	2002 Phone module (PHM)	Reading off parameter values	V1.10.001
VOLVO	V70 (00-)	2002 Phone module (PHM)	Resetting the carphone code	V1.10.001
VOLVO	V70 (00-)	2002 Rear electronic module (REM)	Read codes	V1.10.001
VOLVO	V70 (00-)	2002 Rear electronic module (REM)	Erase codes	V1.10.001
VOLVO	V70 (00-)	2002 Rear electronic module (REM)	Reading off extended diagnostic trouble code (DTC) information, rear electrical module	V1.10.001
VOLVO	V70 (00-)	2002 Rear electronic module (REM)	Reading control unit id	V1.10.001
VOLVO	V70 (00-)	2002 Rear electronic module (REM)	Reading off the parameter values	V1.10.001
VOLVO	V70 (00-)	2002 Rear electronic module (REM)	Activating components / functions	V1.10.001
VOLVO	V70 (00-)	2002 Rear electronic module (REM)	Calibrating the Bi-Kenon lamp position sensor	V1.10.001
VOLVO	V70 (00-)	2002 Road traffic information module (RTI)	Read codes	V1.10.001
VOLVO	V70 (00-)	2002 Road traffic information module (RTI)	Erase codes	V1.10.001
VOLVO	V70 (00-)	2002 Road traffic information module (RTI)	Reading off extended diagnostic trouble code (DTC) information, road traffic information (RTI)	V1.10.001
VOLVO	V70 (00-)	2002 Road traffic information module (RTI)	Readline off the control module ID	V1.10.001
VOLVO	V70 (00-)	2002 Steering wheel module (SWM)	Read codes	V1.10.001
VOLVO	V70 (00-)	2002 Steering wheel module (SWM)	Erase codes	V1.10.001
VOLVO	V70 (00-)	2002 Steering wheel module (SWM)	Reading off extended diagnostic trouble code (DTC) information, steering wheel module	V1.10.001
VOLVO	V70 (00-)	2002 Steering wheel module (SWM)	Readline control unit ID	V1.10.001
VOLVO	V70 (00-)	2002 Steering wheel module (SWM)	Parameter: digital display	V1.10.001
VOLVO	V70 (00-)	2002 Upper electronic module (UEM)	Read codes	V1.10.001
VOLVO	V70 (00-)	2002 Upper electronic module (UEM)	Erase codes	V1.10.001
VOLVO	V70 (00-)	2002 Upper electronic module (UEM)	Reading off extended diagnostic trouble code (DTC) information, upper electrical module	V1.10.001
VOLVO	V70 (00-)	2002 Upper electronic module (UEM)	Readline off the control unit id	V1.10.001
VOLVO	V70 (00-)	2002 Upper electronic module (UEM)	Reading off the parameter values	V1.10.001
VOLVO	V70 (00-)	2002 Upper electronic module (UEM)	Activating components / functions	V1.10.001
VOLVO	V70 (00-)	2002 Upper electronic module (UEM)	Programming the control unit	V1.10.001
VOLVO	V70 (00-)	2002 Upper electronic module (UEM)	Configuration data	V1.10.001
VOLVO	V70 (00-)	2002 Upper electronic module (UEM)	Replacing the control module	V1.10.001
VOLVO	V70 (00-)	2002 Upper electronic module (UEM)	Reading the programmed values	V1.10.001
VOLVO	V70 (00-)	2002 Transmission control module (TCM)	Read codes	V1.10.001
VOLVO	V70 (00-)	2002 Transmission control module (TCM)	Erase codes	V1.10.001
VOLVO	V70 (00-)	2002 Transmission control module (TCM)	Reading off extended diagnostic trouble code (DTC) information, transmission control module (TCM)	V1.10.001
VOLVO	V70 (00-)	2002 Transmission control module (TCM)	Readline off the control unit id	V1.10.001
VOLVO	V70 (00-)	2002 Transmission control module (TCM)	Parameter: digital display	V1.10.001
VOLVO	V70 (00-)	2002 Transmission control module (TCM)	Activating components / functions	V1.10.001
VOLVO	V70 (00-)	2002 Transmission control module (TCM)	Reset adaptation to zero	V1.10.001
VOLVO	V70 (00-)	2002 Transmission control module (TCM)	Resetting the counter for gearbox oil change	V1.10.001
VOLVO	V70 (00-)	2002 Anti-lock brake system module (ABS/BCM)	Read codes	V1.10.001
VOLVO	V70 (00-)	2002 Anti-lock brake system module (ABS/BCM)	Erase codes	V1.10.001
VOLVO	V70 (00-)	2002 Anti-lock brake system module (ABS/BCM)	Reading off extended diagnostic trouble code (DTC) information, brake control module (BCM)	V1.10.001
VOLVO	V70 (00-)	2002 Anti-lock brake system module (ABS/BCM)	Readline off the control module ID	V1.10.001
VOLVO	V70 (00-)	2002 Anti-lock brake system module (ABS/BCM)	Parameter: digital display	V1.10.001
VOLVO	V70 (00-)	2002 Anti-lock brake system module (ABS/BCM)	Activating components / functions	V1.10.001
VOLVO	V70 (00-)	2002 Anti-lock brake system module (ABS/BCM)	Checking intake late switch adjustment	V1.10.001
VOLVO	V70 (00-)	2002 Steering wheel angle sensor module (SAS)	Read codes	V1.10.001
VOLVO	V70 (00-)	2002 Steering wheel angle sensor module (SAS)	Erase codes	V1.10.001
VOLVO	V70 (00-)	2002 Steering wheel angle sensor module (SAS)	Reading control unit id, SAS	V1.10.001
VOLVO	V70 (00-)	2002 Steering wheel angle sensor module (SAS)	Digital display parameter (SAS)	V1.10.001
VOLVO	V70 (00-)	2002 Climate control module (CCM)	Read codes	V1.10.001
VOLVO	V70 (00-)	2002 Climate control module (CCM)	Erase codes	V1.10.001
VOLVO	V70 (00-)	2002 Climate control module (CCM)	Reading off extended diagnostic trouble code (DTC) information, climate control module	V1.10.001
VOLVO	V70 (00-)	2002 Climate control module (CCM)	Readline off the control module ID	V1.10.001
VOLVO	V70 (00-)	2002 Climate control module (CCM)	Parameter: digital display	V1.10.001
VOLVO	V70 (00-)	2002 Climate control module (CCM)	Activating components / functions	V1.10.001
VOLVO	V70 (00-)	2002 Climate control module (CCM)	Programming the climate control module (CCM)	V1.10.001
VOLVO	V70 (00-)	2002 Climate control module (CCM)	Self-adjustment of damper motor end stops	V1.10.001
VOLVO	V70 (00-)	2002 Climate control module (CCM)	Adjusting dampers, ELL	V1.10.001
VOLVO	V70 (00-)	2002 Climate control module (CCM)	Readline-out parameter values in the climate control module	V1.10.001
VOLVO	V70 (00-)	2002 Driver door module (DDM)	Read codes	V1.10.001
VOLVO	V70 (00-)	2002 Driver door module (DDM)	Erase codes	V1.10.001
VOLVO	V70 (00-)	2002 Driver door module (DDM)	Reading off extended diagnostic trouble code (DTC) information, driver's door module	V1.10.001
VOLVO	V70 (00-)	2002 Driver door module (DDM)	Readline off the control unit id	V1.10.001
VOLVO	V70 (00-)	2002 Driver door module (DDM)	Reading off the parameter values	V1.10.001
VOLVO	V70 (00-)	2002 Driver door module (DDM)	Activating components / functions	V1.10.001
VOLVO	V70 (00-)	2002 Passenger door module (PDM)	Window position set up	V1.10.001
VOLVO	V70 (00-)	2002 Passenger door module (PDM)	Read codes	V1.10.001
VOLVO	V70 (00-)	2002 Passenger door module (PDM)	Erase codes	V1.10.001
VOLVO	V70 (00-)	2002 Passenger door module (PDM)	Reading off extended diagnostic trouble code (DTC) information, passenger door module	V1.10.001
VOLVO	V70 (00-)	2002 Passenger door module (PDM)	Readline control unit id	V1.10.001
VOLVO	V70 (00-)	2002 Passenger door module (PDM)	Reading off the parameter values	V1.10.001
VOLVO	V70 (00-)	2002 Passenger door module (PDM)	Activating components / functions	V1.10.001
VOLVO	V70 (00-)	2002 Power seat module (PSM)	Read codes	V1.10.001
VOLVO	V70 (00-)	2002 Power seat module (PSM)	Erase codes	V1.10.001
VOLVO	V70 (00-)	2002 Power seat module (PSM)	Reading off the control module ID	V1.10.001
VOLVO	V70 (00-)	2002 Power seat module (PSM)	Reading off input signal to power seat module	V1.10.001
VOLVO	V70 (00-)	2002 Power seat module (PSM)	Activating components /functions	V1.10.001
VOLVO	V70 (00-)	2002 Power seat module (PSM)	Programming the seat temperature	V1.10.001
VOLVO	V70 (00-)	2002 Power seat module (PSM)	Checking current values	V1.10.001
VOLVO	V70 (00-)	2002 Supplemental restraint system module (SRS)	Read codes	V1.10.001
VOLVO	V70 (00-)	2002 Supplemental restraint system module (SRS)	Erase codes	V1.10.001
VOLVO	V70 (00-)	2002 Supplemental restraint system module (SRS)	Reading off extended diagnostic trouble code (DTC) information, SRS (supplemental restraint system) / SIPS (side impact protection system)	V1.10.001
VOLVO	V70 (00-)	2002 Supplemental restraint system module (SRS)	Readline off the control unit id	V1.10.001
VOLVO	V70 (00-)	2002 Engine control module (ECM)	Parameter read off - digital display	V1.10.001
VOLVO	V70 (00-)	2002 Engine control module (ECM)	Extended diagnostic trouble code (DTC) reading	V1.10.001
VOLVO	V70 (00-)	2002 Engine control module (ECM)	Reading off blocks of diagnostic trouble codes (DTCs)	V1.10.001
VOLVO	V70 (00-)	2002 Engine control module (ECM)	Reading off control module ID: Electronic throttle module	V1.10.001
VOLVO	V70 (00-)	2002 Engine control module (ECM)	Readline code (USA/CDN)	V1.10.001
VOLVO	V70 (00-)	2002 Engine control module (ECM)	Activating components / functions	V1.10.001
VOLVO	V70 (00-)	2002 Fuel system/combined system	Read codes	V1.10.001
VOLVO	V70 (00-)	2002 Fuel system/combined system	Erase codes	V1.10.001
VOLVO	V70 (00-)	2002 Fuel system/combined system	Reading off the control module ID	V1.10.001
VOLVO	V70 (00-)	2002 Fuel system/combined system	Parameter: digital display	V1.10.001
VOLVO	V70 (00-)	2002 Fuel system/combined system	Activating components / functions	V1.10.001
VOLVO	V70 (00-)	2002 Fuel system/combined system	Adapting of the throttle unit	V1.10.001
VOLVO	V70 (00-)	2002 Fuel system/combined system	Quick test of intake camshaft control	V1.10.001
VOLVO	V70 (00-)	2002 Fuel system/combined system	Quick test of the fuel tank system	V1.10.001
VOLVO	V70 (00-)	2003 Accessory electronic module (AEM)	Read codes	V1.10.001
VOLVO	V70 (00-)	2003 Accessory electronic module (AEM)	Erase codes	V1.10.001
VOLVO	V70 (00-)	2003 Accessory electronic module (AEM)	Reading off extended fault-tracing information, accessory electronic module	V1.10.001
VOLVO	V70 (00-)	2003 Accessory electronic module (AEM)	Readline off the control module ID	V1.10.001
VOLVO	V70 (00-)	2003 Accessory electronic module (AEM)	Reading off parameter values	V1.10.001
VOLVO	V70 (00-)	2003 Accessory electronic module (AEM)	Activating components / functions	V1.10.001
VOLVO	V70 (00-)	2003 Accessory electronic module (AEM)	Readline off the control module ID	V1.10.001
VOLVO	V70 (00-)	2003 Accessory electronic module (AEM)	Reading off extended diagnostic trouble code (DTC) information, audio module	V1.10.001
VOLVO	V70 (00-)	2003 Accessory electronic module (AEM)	Readline off the control module ID	V1.10.001
VOLVO	V70 (00-)	2003 Accessory electronic module (AEM)	Reading off parameters: digital display	V1.10.001
VOLVO	V70 (00-)	2003 Accessory electronic module (AEM)	Activating components / functions	V1.10.001
VOLVO	V70 (00-)	2003 Accessory electronic module (AEM)	Read codes	V1.10.001
VOLVO	V70 (00-)	2003 Accessory electronic module (AEM)	Erase codes	V1.10.001
VOLVO	V70 (00-)	2003 Accessory electronic module (AEM)	Reading off extended diagnostic trouble code (DTC) information, engine control module (ECM)	V1.10.001
VOLVO	V70 (00-)	2003 Accessory electronic module (AEM)	Readline off the control module ID	V1.10.001
VOLVO	V70 (00-)	2003 Accessory electronic module (AEM)	Reading off the parameter values	V1.10.001
VOLVO	V70 (00-)	2003 Accessory electronic module (AEM)	Activating components / functions	V1.10.001
VOLVO	V70 (00-)	2003 Accessory electronic module (AEM)	Readline code (USA	

VOLVO	V70 (00-)	2003 Central electronic module (CEM)	Read codes	V1.10.001
VOLVO	V70 (00-)	2003 Central electronic module (CEM)	Erase codes	V1.10.001
VOLVO	V70 (00-)	2003 Central electronic module (CEM)	Reading off extended diagnostic trouble code (DTC) information, central electronic module	V1.10.001
VOLVO	V70 (00-)	2003 Central electronic module (CEM)	Reading control unit ID	V1.10.001
VOLVO	V70 (00-)	2003 Central electronic module (CEM)	Reading data for vehicle configuration	V1.10.001
VOLVO	V70 (00-)	2003 Central electronic module (CEM)	Reading off parameters, digital display	V1.10.001
VOLVO	V70 (00-)	2003 Central electronic module (CEM)	Reading off parameter values	V1.10.001
VOLVO	V70 (00-)	2003 Central electronic module (CEM)	Activating components/functions	V1.10.001
VOLVO	V70 (00-)	2003 Central electronic module (CEM)	Activating components/functions	V1.10.001
VOLVO	V70 (00-)	2003 Central electronic module (CEM)	Programming the control module	V1.10.001
VOLVO	V70 (00-)	2003 Central electronic module (CEM)	Programming the control module	V1.10.001
VOLVO	V70 (00-)	2003 Central electronic module (CEM)	Reading off alarm cause	V1.10.001
VOLVO	V70 (00-)	2003 Central electronic module (CEM)	Resetting the service reminder indicator	V1.10.001
VOLVO	V70 (00-)	2003 Central electronic module (CEM)	Resetting the car	V1.10.001
VOLVO	V70 (00-)	2003 Driver information module (DIM)	Read codes	V1.10.001
VOLVO	V70 (00-)	2003 Driver information module (DIM)	Erase codes	V1.10.001
VOLVO	V70 (00-)	2003 Driver information module (DIM)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO	V70 (00-)	2003 Driver information module (DIM)	Reading the component ID	V1.10.001
VOLVO	V70 (00-)	2003 Driver information module (DIM)	Parameter, digital display	V1.10.001
VOLVO	V70 (00-)	2003 Driver information module (DIM)	Activating components and functions	V1.10.001
VOLVO	V70 (00-)	2003 Driver information module (DIM)	Testing all displays and lamps in instrument	V1.10.001
VOLVO	V70 (00-)	2003 Driver information module (DIM)	Programming, the driver information module (DIM)	V1.10.001
VOLVO	V70 (00-)	2003 Driver information module (DIM)	Reading off parameter values in driver information module (DIM)	V1.10.001
VOLVO	V70 (00-)	2003 Driver information module (DIM)	Resetting the service reminder indicator (SR)	V1.10.001
VOLVO	V70 (00-)	2003 Phone module (PHM)	Read codes	V1.10.001
VOLVO	V70 (00-)	2003 Phone module (PHM)	Erase codes	V1.10.001
VOLVO	V70 (00-)	2003 Phone module (PHM)	Reading off extended diagnostic trouble code (DTC) information, carphone module	V1.10.001
VOLVO	V70 (00-)	2003 Phone module (PHM)	Reading off the control module ID	V1.10.001
VOLVO	V70 (00-)	2003 Phone module (PHM)	Reading off parameter values	V1.10.001
VOLVO	V70 (00-)	2003 Phone module (PHM)	Resetting the carphone code	V1.10.001
VOLVO	V70 (00-)	2003 Rear electronic module (REM)	Read codes	V1.10.001
VOLVO	V70 (00-)	2003 Rear electronic module (REM)	Erase codes	V1.10.001
VOLVO	V70 (00-)	2003 Rear electronic module (REM)	Reading off extended diagnostic trouble code (DTC) information, rear electrical module	V1.10.001
VOLVO	V70 (00-)	2003 Rear electronic module (REM)	Reading control unit ID	V1.10.001
VOLVO	V70 (00-)	2003 Rear electronic module (REM)	Reading off the parameter values	V1.10.001
VOLVO	V70 (00-)	2003 Rear electronic module (REM)	Activating components and functions	V1.10.001
VOLVO	V70 (00-)	2003 Road traffic information module (RTI)	Calibrating the Bi-Xenon lamp position sensor	V1.10.001
VOLVO	V70 (00-)	2003 Road traffic information module (RTI)	Read codes	V1.10.001
VOLVO	V70 (00-)	2003 Road traffic information module (RTI)	Reading off extended diagnostic trouble code (DTC) information, road traffic information (RTI)	V1.10.001
VOLVO	V70 (00-)	2003 Road traffic information module (RTI)	Reading off the control module ID	V1.10.001
VOLVO	V70 (00-)	2003 Steering wheel module (SWM)	Read codes	V1.10.001
VOLVO	V70 (00-)	2003 Steering wheel module (SWM)	Erase codes	V1.10.001
VOLVO	V70 (00-)	2003 Steering wheel module (SWM)	Reading off extended diagnostic trouble code (DTC) information, steering wheel module	V1.10.001
VOLVO	V70 (00-)	2003 Steering wheel module (SWM)	Reading control unit ID	V1.10.001
VOLVO	V70 (00-)	2003 Steering wheel module (SWM)	Parameter, digital display	V1.10.001
VOLVO	V70 (00-)	2003 Upper electronic module (UEM)	Read codes	V1.10.001
VOLVO	V70 (00-)	2003 Upper electronic module (UEM)	Erase codes	V1.10.001
VOLVO	V70 (00-)	2003 Upper electronic module (UEM)	Reading off extended diagnostic trouble code (DTC) information, upper electrical module	V1.10.001
VOLVO	V70 (00-)	2003 Upper electronic module (UEM)	Reading control unit ID	V1.10.001
VOLVO	V70 (00-)	2003 Upper electronic module (UEM)	Reading off the parameter values	V1.10.001
VOLVO	V70 (00-)	2003 Upper electronic module (UEM)	Activating components and functions	V1.10.001
VOLVO	V70 (00-)	2003 Upper electronic module (UEM)	Programmable control unit	V1.10.001
VOLVO	V70 (00-)	2003 Upper electronic module (UEM)	Configuration of the area	V1.10.001
VOLVO	V70 (00-)	2003 Upper electronic module (UEM)	Replacing the control module	V1.10.001
VOLVO	V70 (00-)	2003 User electric module (IEM)	Readline the unprogrammed values	V1.10.001
VOLVO	V70 (00-)	2003 User electric module (IEM)	Readline the parameter values	V1.10.001
VOLVO	V70 (00-)	2003 Transmission control module (TCM)	Erase codes	V1.10.001
VOLVO	V70 (00-)	2003 Transmission control module (TCM)	Reading off extended diagnostic trouble code (DTC) information, transmission control module (TCM)	V1.10.001
VOLVO	V70 (00-)	2003 Transmission control module (TCM)	Reading control unit ID	V1.10.001
VOLVO	V70 (00-)	2003 Transmission control module (TCM)	Parameter, digital display	V1.10.001
VOLVO	V70 (00-)	2003 Transmission control module (TCM)	Activating components / functions	V1.10.001
VOLVO	V70 (00-)	2003 Transmission control module (TCM)	Reset adjustment to zero	V1.10.001
VOLVO	V70 (00-)	2003 Transmission control module (TCM)	Reading the counter for gearbox oil change	V1.10.001
VOLVO	V70 (00-)	2003 Anti-lock brake system module (ABS/BCM)	Read codes	V1.10.001
VOLVO	V70 (00-)	2003 Anti-lock brake system module (ABS/BCM)	Erase codes	V1.10.001
VOLVO	V70 (00-)	2003 Anti-lock brake system module (ABS/BCM)	Reading off extended diagnostic trouble code (DTC) information, brake control module (BCM)	V1.10.001
VOLVO	V70 (00-)	2003 Anti-lock brake system module (ABS/BCM)	Reading off the control module ID	V1.10.001
VOLVO	V70 (00-)	2003 Anti-lock brake system module (ABS/BCM)	Parameter, digital display	V1.10.001
VOLVO	V70 (00-)	2003 Anti-lock brake system module (ABS/BCM)	Activating components and functions	V1.10.001
VOLVO	V70 (00-)	2003 Anti-lock brake system module (ABS/BCM)	Checking brake light switch adjustment	V1.10.001
VOLVO	V70 (00-)	2003 Anti-lock brake system module (ABS/BCM)	Calibration	V1.10.001
VOLVO	V70 (00-)	2003 Steering wheel angle sensor module (TAS)	Read codes	V1.10.001
VOLVO	V70 (00-)	2003 Steering wheel angle sensor module (TAS)	Erase codes	V1.10.001
VOLVO	V70 (00-)	2003 Steering wheel angle sensor module (TAS)	Reading control unit ID, SAS	V1.10.001
VOLVO	V70 (00-)	2003 Steering wheel angle sensor module (TAS)	Digital display parameter (SAS)	V1.10.001
VOLVO	V70 (00-)	2003 Climate control module (CCM)	Read codes	V1.10.001
VOLVO	V70 (00-)	2003 Climate control module (CCM)	Erase codes	V1.10.001
VOLVO	V70 (00-)	2003 Climate control module (CCM)	Reading off extended diagnostic trouble code (DTC) information, climate control module	V1.10.001
VOLVO	V70 (00-)	2003 Climate control module (CCM)	Reading control unit ID	V1.10.001
VOLVO	V70 (00-)	2003 Climate control module (CCM)	Digital display parameter	V1.10.001
VOLVO	V70 (00-)	2003 Climate control module (CCM)	Progamming the climate control module (CCM)	V1.10.001
VOLVO	V70 (00-)	2003 Climate control module (CCM)	Self-adjustment of damper motor end stops	V1.10.001
VOLVO	V70 (00-)	2003 Climate control module (CCM)	Adjusting the damper ECU	V1.10.001
VOLVO	V70 (00-)	2003 Climate control module (CCM)	Reading-out programmed parameters in the climate control module	V1.10.001
VOLVO	V70 (00-)	2003 Driver door module (DOM)	Read codes	V1.10.001
VOLVO	V70 (00-)	2003 Driver door module (DOM)	Erase codes	V1.10.001
VOLVO	V70 (00-)	2003 Driver door module (DOM)	Reading off extended diagnostic trouble code (DTC) information, driver's door module	V1.10.001
VOLVO	V70 (00-)	2003 Driver door module (DOM)	Reading control unit ID	V1.10.001
VOLVO	V70 (00-)	2003 Driver door module (DOM)	Reading off the parameter values	V1.10.001
VOLVO	V70 (00-)	2003 Driver door module (DOM)	Activating components and functions	V1.10.001
VOLVO	V70 (00-)	2003 Driver door module (DOM)	Programming soft stop	V1.10.001
VOLVO	V70 (00-)	2003 Driver door module (DOM)	Programming the remote control setting	V1.10.001
VOLVO	V70 (00-)	2003 Passenger door module (PDM)	Read codes	V1.10.001
VOLVO	V70 (00-)	2003 Passenger door module (PDM)	Erase codes	V1.10.001
VOLVO	V70 (00-)	2003 Passenger door module (PDM)	Reading off extended diagnostic trouble code (DTC) information, passenger door module	V1.10.001
VOLVO	V70 (00-)	2003 Passenger door module (PDM)	Reading control unit ID	V1.10.001
VOLVO	V70 (00-)	2003 Passenger door module (PDM)	Reading off the parameter values	V1.10.001
VOLVO	V70 (00-)	2003 Passenger door module (PDM)	Activating components and functions	V1.10.001
VOLVO	V70 (00-)	2003 Passenger door module (PDM)	Programming the remote control setting	V1.10.001
VOLVO	V70 (00-)	2003 Passenger door module (PDM)	Window position set up	V1.10.001
VOLVO	V70 (00-)	2003 Passenger door module (PDM)	Window position set up	V1.10.001
VOLVO	V70 (00-)	2003 Power seat module (PSM)	Read codes	V1.10.001
VOLVO	V70 (00-)	2003 Power seat module (PSM)	Erase codes	V1.10.001
VOLVO	V70 (00-)	2003 Power seat module (PSM)	Reading off extended diagnostic trouble code (DTC) information, power seat module	V1.10.001
VOLVO	V70 (00-)	2003 Power seat module (PSM)	Reading control unit ID	V1.10.001
VOLVO	V70 (00-)	2003 Power seat module (PSM)	Reading off input signals to the power seat module	V1.10.001
VOLVO	V70 (00-)	2003 Power seat module (PSM)	Activating components and functions	V1.10.001
VOLVO	V70 (00-)	2003 Power seat module (PSM)	Programme the seat temperature	V1.10.001
VOLVO	V70 (00-)	2003 Power seat module (PSM)	Checkin current values	V1.10.001
VOLVO	V70 (00-)	2003 Supplemental restraint system module (SRS)	Read codes	V1.10.001
VOLVO	V70 (00-)	2003 Supplemental restraint system module (SRS)	Erase codes	V1.10.001
VOLVO	V70 (00-)	2003 Supplemental restraint system module (SRS)	Reading off extended diagnostic trouble code (DTC) information, SRS (supplemental restraint system) / SIPS (side impact protection system)	V1.10.001
VOLVO	V70 (00-)	2003 Supplemental restraint system module (SRS)	Reading control unit ID	V1.10.001
VOLVO	V70 (00-)	2003 Supplemental restraint system module (SRS)	Reading off parameters, digital display	V1.10.001
VOLVO	V70 (00-)	2003 Engine control module (ECM)	Read codes	V1.10.001
VOLVO	V70 (00-)	2003 Engine control module (ECM)	Erase codes	V1.10.001
VOLVO	V70 (00-)	2003 Engine control module (ECM)	Quicks test of exhaust camshaft control	V1.10.001
VOLVO	V70 (00-)	2003 Engine control module (ECM)	Quicks test of intake camshaft control	V1.10.001
VOLVO	V70 (00-)	2003 Engine control module (ECM)	Quicks test of the fuel tank system	V1.10.001
VOLVO	V70 (00-)	2004 Accessory electronic module (AEM)	Read codes	V1.10.001
VOLVO	V70 (00-)	2004 Accessory electronic module (AEM)	Erase codes	V1.10.001
VOLVO	V70 (00-)	2004 Accessory electronic module (AEM)	Reading off extended fault-tracing information, accessory electronic module	V1.10.001
VOLVO	V70 (00-)	2004 Accessory electronic module (AEM)	Reading off the control module ID	V1.10.001
VOLVO	V70 (00-)	2004 Accessory electronic module (AEM)	Parameter, digital display	V1.10.001
VOLVO	V70 (00-)	2004 Audio module (AUM)	Read codes	V1.10.001
VOLVO	V70 (00-)	2004 Audio module (AUM)	Erase codes	V1.10.001
VOLVO	V70 (00-)	2004 Audio module (AUM)	Reading off extended diagnostic trouble code (DTC) information, audio module	V1.10.001
VOLVO	V70 (00-)	2004 Central electronic module (CEM)	Read codes	V1.10.001
VOLVO	V70 (00-)	2004 Central electronic module (CEM)	Erase codes	V1.10.001
VOLVO	V70 (00-)	2004 Central electronic module (CEM)	Reading off extended diagnostic trouble code (DTC) information, central electronic module	V1.10.001
VOLVO	V70 (00-)	2004 Central electronic module (CEM)	Reading control unit ID	V1.10.001
VOLVO	V70 (00-)	2004 Central electronic module (CEM)	Activating components and functions	V1.10.001
VOLVO	V70 (00-)	2004 Central electronic module (CEM)	Programming the control module	V1.10.001
VOLVO	V70 (00-)	2004 Central electronic module (CEM)	Reading off the alarm cause	V1.10.001
VOLVO	V70 (00-)	2004 Central electronic module (CEM)	Resetting the factory settings	V1.10.001
VOLVO	V70 (00-)	2004 Central electronic module (CEM)	Restoring the car	V1.10.001
VOLVO	V70 (00-)	2004 Driver information module (DIM)	Read codes	V1.10.001
VOLVO	V70 (00-)	2004 Driver information module (DIM)	Erase codes	V1.10.001
VOLVO	V70 (00-)	2004 Driver information module (DIM)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO	V70 (00-)	2004 Driver information module (DIM)	Reading the control unit ID	V1.10.001
VOLVO	V70 (00-)	2004 Driver information module (DIM)	Parameter, digital display	V1.10.001
VOLVO	V70 (00-)	2004 Driver information module (DIM)	Activating components and functions	V1.10.001
VOLVO	V70 (00-)	2004 Driver information module (DIM)	Testing all displays and lamps in instrument	V1.10.001
VOLVO	V70 (00-)	2004 Driver information module (DIM)	Programm the driver information module (DIM)	V1.10.001
VOLVO	V70 (00-)	2004 Driver information module (DIM)	Read out of unprogrammed values in driver information module (DIM)	V1.10.001
VOLVO	V70 (00-)	2004 Phone module (PHM)	Read codes	V1.10.001
VOLVO	V70 (00-)	2004 Phone module (PHM)	Erase codes	V1.10.001
VOLVO	V70 (00-)	2004 Phone module (PHM)	Reading off extended diagnostic trouble code (DTC) information, carphone module	V1.10.001
VOLVO	V70 (00-)	2004 Phone module (PHM)	Reading off the control module ID	V1.10.001
VOLVO	V70 (00-)	2004 Phone module (PHM)	Resetting the carphone code	V1.10.001
VOLVO	V70 (00-)	2004 Phone module (PHM)	Erase codes	V1.10.001
VOLVO	V70 (00-)	2004 Rear electronic module (REM)	Read codes	V1.10.001
VOLVO	V70 (00-)	2004 Rear electronic module (REM)	Erase codes	V1.10.001
VOLVO	V70 (00-)	2004 Rear electronic module (REM)	Reading off extended diagnostic trouble code (DTC) information, rear electrical module	V1.10.001
VOLVO	V70 (00-)	2004 Rear electronic module (REM)	Reading control unit ID	V1.10.001
VOLVO	V70 (00-)	2004 Rear electronic module (REM)	Reading off the parameter values	V1.10.001
VOLVO	V70 (00-)	2004 Rear electronic module (REM)	Activating components and functions	V1.10.001
VOLVO	V70 (00-)	2004 Rear electronic module (REM)	Calibrating the Bi-Xenon lamp position sensor	V1.10.001
VOLVO	V70 (00-)	2004 Road traffic information module (RTI)	Read codes	V1.10.001
VOLVO	V70 (00-)	2004 Road traffic information module (RTI)	Erase codes	V1.10.001
VOLVO	V70 (00-)	2004 Road traffic information module (RTI)	Reading off extended diagnostic trouble code (DTC) information, road traffic information (RTI)	V1.10.001
VOLVO	V70 (00-)	2004 Steering wheel module (SWM)	Read codes	V1.10.001
VOLVO	V70 (00-)	2004 Steering wheel module (SWM)	Erase codes	V1.10.001
VOLVO	V70 (00-)	2004 Steering wheel module (SWM)	Reading off extended diagnostic trouble code (DTC) information, steering wheel module	V1.10.001
VOLVO	V70 (00-)	2004 Steering wheel module (SWM)	Reading control unit ID	V1.10.001
VOLVO	V70 (00-)	2004 Steering wheel module (SWM)	Parameter, digital display	V1.10.001
VOLVO	V70 (00-)	2004 Upper electronic module (UEM)	Read codes	V1.10.001

VOLVO	V70 XC100 I / X70	2002	Transmission control module (TCM)	Resetting the counter for gearbox oil change
			Read codes	
			Erase codes	
			Reading off extended diagnostic trouble code (DTC) information, brake control module (BCM)	
			Reading off the control module ID	
			Parameter, digital display	
			Activating components and functions	
			Calibration	
			Checking brake light switch adjustment	
			Self-adjustment of damper motor end stops	
			Adjusting parameters, ECC	
			Reading out programmed parameters in the climate control module	
			Read codes	
			Erase codes	
			Reading control unit id, SAS	
			Digital display parameter (SAS)	
			Reading off extended diagnostic trouble code (DTC) information, steering wheel angle sensor module (SAS)	
			Reading off the control module ID	
			Parameter, digital display	
			Activating components and functions	
			Calibration	
			Checking brake light switch adjustment	
			Self-adjustment of damper motor end stops	
			Adjusting parameters, ECC	
			Reading out programmed parameters in the climate control module	
			Read codes	
			Erase codes	
			Reading off extended diagnostic trouble code (DTC) information, driver's door module	
			Reading control unit id	
			Reading off the parameter values	
			Activating components and functions	
			Window position set-up	
			Read codes	
			Erase codes	
			Reading off extended diagnostic trouble code (DTC) information, power seat module	
			Reading off the control module ID	
			Reading off the seat slants to the seat width	
			Activating components and functions	
			Programming the seat temperature	
			Checking current values	
			Read codes	
			Erase codes	
			Reading off extended diagnostic trouble code (DTC) information, SRS (supplemental restraint system) / SIPS (side impact protection system)	
			Reading off the control module ID	
			Reading off the parameter values	
			Activating components and functions	
			Adaptation of the throttle unit	
			Quick test of exhaust camshaft control	
			Quick test of intake camshaft control	
			Quick test of the fuel rail system	
			Read codes	
			Erase codes	
			Reading off extended fault-tracing information, accessory electronic module	
			Reading off the control module ID	
			Reading off parameters, digital display	
			Activating components and functions	
			Adapting the seat position	
			Activating components and functions	
			Adaptation of the throttle unit	
			Quick test of exhaust camshaft control	
			Quick test of intake camshaft control	
			Quick test of the fuel rail system	
			Read codes	
			Erase codes	
			Reading off extended diagnostic trouble code (DTC) information, engine control module (ECM)	
			Reading off control module ID, ECM	
			Read codes	
			Erase codes	
			Reading off extended diagnostic trouble code (DTC) information, engine control module (ECM)	
			Reading off the control module ID	
			Reading off the parameter values	
			Activating components and functions	
			Adapting the seat position	
			Activating components and functions	
			Adaptation of the throttle unit	
			Quick test of exhaust camshaft control	
			Quick test of intake camshaft control	
			Quick test of the fuel rail system	
			Read codes	
			Erase codes	
			Reading off extended diagnostic trouble code (DTC) information, central electronic module	
			Reading off the control module ID	
			Reading off parameters, digital display	
			Activating components and functions	
			Adapting the seat position	
			Activating components and functions	
			Adaptation of the throttle unit	
			Quick test of exhaust camshaft control	
			Quick test of intake camshaft control	
			Quick test of the fuel rail system	
			Read codes	
			Erase codes	
			Reading off extended diagnostic trouble code (DTC) information, carphone module	
			Reading off the control module ID	
			Reading off parameter values	
			Resetting the carphone code	
			Read codes	
			Erase codes	
			Reading off extended diagnostic trouble code (DTC) information, rear electrical module	
			Reading off the control module ID	
			Reading off parameters, digital display	
			Activating components and functions	
			Test for display lamps in instrument	
			Programming the driver information module (DIM)	
			Read-out of programmed values in driver information module (DIM)	
			Activation of service reminder indicator (SKI)	
			Read codes	
			Erase codes	
			Reading off extended diagnostic trouble code (DTC) information, road traffic information (RTI)	
			Reading off the control module ID	
			Reading off parameter values	
			Resetting the carphone code	
			Read codes	
			Erase codes	
			Reading off extended diagnostic trouble code (DTC) information, rear electrical module	
			Reading off the control module ID	
			Reading off parameter values	
			Activating components and functions	
			Calibrating the Bi-Xenon lamp position sensor	
			Erase codes	
			Reading off extended diagnostic trouble code (DTC) information, road traffic information (RTI)	
			Reading off the control module ID	
			Reading off parameter values	
			Resetting the carphone code	
			Read codes	
			Erase codes	
			Reading off extended diagnostic trouble code (DTC) information, steering wheel module	
			Reading off the control module ID	
			Reading off parameter values	
			Activating components and functions	
			Reset adaptation to zero	
			Reading off programmed values	
			Reading the programmed values	
			Read codes	
			Erase codes	
			Reading off extended diagnostic trouble code (DTC) information, upper electrical module	
			Reading off the control module ID	
			Reading off parameter values	
			Activating components and functions	
			Programming the control unit	
			Configuration of the screen	
			Read codes	
			Erase codes	
			Reading off extended diagnostic trouble code (DTC) information, transmission control module (TCM)	
			Reading off the control module ID	
			Reading off parameter values	
			Activating components and functions	
			Reset adaptation to zero	
			Reading off programmed values	
			Reading the programmed values	
			Read codes	
			Erase codes	
			Reading off extended diagnostic trouble code (DTC) information, brake control module (BCM)	
			Reading off the control module ID	
			Reading off parameter values	
			Activating components and functions	
			Calibration	
			Read codes	
			Erase codes	
			Reading off extended diagnostic trouble code (DTC) information, climate control module (CCM)	
			Reading off the control module ID	
			Reading off parameter values	
			Activating components and functions	
			Self-adjustment of damper motor end stops	
			Adjusting parameters, ECC	
			Reading out programmed parameters in the climate control module	
			Read codes	
			Erase codes	
			Reading control unit id, SAS	
			Digital display parameter (SAS)	
			Reading off extended diagnostic trouble code (DTC) information, steering wheel angle sensor module (SAS)	
			Reading off the control module ID	
			Parameter, digital display	
			Activating components and functions	
			Calibration	
			Checking brake light switch adjustment	
			Self-adjustment of damper motor end stops	
			Adjusting parameters, ECC	
			Reading out programmed parameters in the climate control module	
			Read codes	
			Erase codes	
			Reading off extended diagnostic trouble code (DTC) information, driver's door module	
			Reading control unit id	
			Reading off parameter values	
			Activating components and functions	
			Window position set-up	
			Read codes	
			Erase codes	
			Reading off extended diagnostic trouble code (DTC) information, passenger door module	
			Reading control unit id	
			Reading off parameter values	
			Activating components and functions	
			Programming soft stop	
			Window position set-up	
			Read codes	
			Erase codes	
			Reading off output signals to the seat module	
			Reading off the control module id	
			Reading off input signals to the seat module	
			Read codes	
			Erase codes	
			Reading off extended diagnostic trouble code (DTC) information, power seat module	
			Reading off the control module id	
			Reading off parameter values	
			Activating components and functions	
			Programming the remote control setting	
			Window position set-up	
			Read codes	
			Erase codes	
			Reading off extended diagnostic trouble code (DTC) information, power seat module	
			Reading off the control module id	
			Reading off parameter values	
			Activating components and functions	
			Programming the remote control setting	
			Window position set-up	
			Read codes	
			Erase codes	
			Reading off extended diagnostic trouble code (DTC) information, SRS (supplemental restraint system) / SIPS (side impact protection system)	
			Reading off the control module id	
			Reading off parameter values	
			Activating components and functions	
			Programming optimizing parameters	
			Read codes	
			Erase codes	

VOLVO	V70 XC (D1-1) / X70	2004	Engine control module (ECM)	Reading off extended diagnostic trouble code (DTC) information, engine control module (ECM)	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Engine control module (ECM)	Reading off control module ID, ECM	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Accessory electronic module (AEM)	Readheadings	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Accessory electronic module (AEM)	Parameter, digital display	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Accessory electronic module (AEM)	Activating components and functions	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Accessory electronic module (AEM)	Adjustment of the throttle unit	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Accessory electronic module (AEM)	Quick test of intake camshaft control	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Accessory electronic module (AEM)	Quick test of intake camshaft control	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Engine control module (ECM)	Quick test of the fuel tank system	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Accessory electronic module (AEM)	Read codes	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Accessory electronic module (AEM)	Erase codes	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Accessory electronic module (AEM)	Reading off extended fault-tracing information, accessory electronic module	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Accessory electronic module (AEM)	Reading off the control module ID	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Accessory electronic module (AEM)	Reading off the control module ID, digital display	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Accessory electronic module (AEM)	Activating components and functions	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Audio module (AUM)	Programme the control module	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Audio module (AUM)	Resetting the alarm cause	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Audio module (AUM)	Restoring factory settings	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Audio module (AUM)	Resetting drivers settings	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Central electronic module (CEM)	Resetting the car	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Driver information module (DIM)	Read codes	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Driver information module (DIM)	Erase codes	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Driver information module (DIM)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Driver information module (DIM)	Reading the control unit ID	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Driver information module (DIM)	Reading data for vehicle configuration	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Driver information module (DIM)	Reading off parameters, digital display	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Driver information module (DIM)	Activating parameters, digital display	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Driver information module (DIM)	Testing all displays and lamps in instrument	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Driver information module (DIM)	Programming the driver information module (DIM)	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Driver information module (DIM)	Read off preprogrammed values in driver information module (DIM)	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Driver information module (DIM)	Resetting the service reminder indicator (SRI)	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Phone module (PHM)	Read codes	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Phone module (PHM)	Erase codes	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Phone module (PHM)	Reading off extended diagnostic trouble code (DTC) information, carphone module	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Phone module (PHM)	Reading off the control module ID	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Phone module (PHM)	Reading off parameter values	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Phone module (PHM)	Restoring carphone code	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Rear electronic module (REM)	Read codes	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Rear electronic module (REM)	Erase codes	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Rear electronic module (REM)	Reading off extended diagnostic trouble code (DTC) information, rear electrical module	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Rear electronic module (REM)	Reading control unit ID	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Rear electronic module (REM)	Reading off the parameter values	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Rear electronic module (REM)	Activating components and functions	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Rear electronic module (REM)	Calibration of the Bi-Xenon lamp position sensor	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Road traffic information module (RTI)	Read codes	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Road traffic information module (RTI)	Erase codes	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Road traffic information module (RTI)	Reading off extended diagnostic trouble code (DTC) information, road traffic information (RTI)	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Road traffic information module (RTI)	Reading off the control module ID	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Road traffic information module (RTI)	Reading off parameter values	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Road traffic information module (RTI)	Restoring road traffic information (RTI)	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Steering wheel module (SWM)	Read codes	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Steering wheel module (SWM)	Erase codes	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Steering wheel module (SWM)	Reading off extended diagnostic trouble code (DTC) information, steering wheel module	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Steering wheel module (SWM)	Reading control unit ID	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Steering wheel module (SWM)	Reading off the parameter values	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Steering wheel module (SWM)	Activating components and functions	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Steering wheel module (SWM)	Calibration of the Bi-Xenon lamp position sensor	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Differential electronic module (DEM)	Read codes	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Differential electronic module (DEM)	Erase codes	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Differential electronic module (DEM)	Reading off the control module ID	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Differential electronic module (DEM)	Reading off parameters, digital display	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Transmission control module (TCM)	Read codes	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Transmission control module (TCM)	Erase codes	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Transmission control module (TCM)	Reading off extended diagnostic trouble code (DTC) information, transmission control module (TCM)	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Transmission control module (TCM)	Reading control unit ID	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Transmission control module (TCM)	Parameter, digital display	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Transmission control module (TCM)	Activating components / functions	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Transmission control module (TCM)	Resetting to zero	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Transmission control module (TCM)	Resting the counter for gearbox oil change	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Anti-lock brake system module (ABS/BCM)	Read codes	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Anti-lock brake system module (ABS/BCM)	Erase codes	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Anti-lock brake system module (ABS/BCM)	Reading off extended diagnostic trouble code (DTC) information, brake control module (BCM)	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Anti-lock brake system module (ABS/BCM)	Reading off the control module ID	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Anti-lock brake system module (ABS/BCM)	Parameter, digital display	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Anti-lock brake system module (ABS/BCM)	Activating components and functions	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Anti-lock brake system module (ABS/BCM)	Calibration	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Anti-lock brake system module (ABS/BCM)	Checkinste brake lights switch adjustment	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Anti-lock brake system module (ABS/BCM)	Read codes	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Steering wheel angle sensor module (SAS)	Erase codes	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Steering wheel angle sensor module (SAS)	Reading control unit id, SAS	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Steering wheel angle sensor module (SAS)	Digital display parameter (SAS)	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Steering wheel angle sensor module (SAS)	Read codes	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Climate control module (CCM)	Erase codes	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Climate control module (CCM)	Reading off extended diagnostic trouble code (DTC) information, climate control module	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Climate control module (CCM)	Reading control unit ID	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Climate control module (CCM)	Digital display parameter	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Climate control module (CCM)	Programming the climate control module (CCM)	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Climate control module (CCM)	Self-adjustment of damper motor end stops	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Climate control module (CCM)	Adjustment of the ECC	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Climate control module (CCM)	Readline-out preprogrammed parameters in the climate control module	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Driver door module (DDM)	Read codes	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Driver door module (DDM)	Erase codes	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Driver door module (DDM)	Reading off extended diagnostic trouble code (DTC) information, driver's door module	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Driver door module (DDM)	Reading control unit ID	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Driver door module (DDM)	Reading off the parameter values	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Driver door module (DDM)	Activating components and functions	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Passenger door module (PDM)	Programm soft stop	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Passenger door module (PDM)	Programming the remote control setting	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Passenger door module (PDM)	Window position set up	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Passenger door module (PDM)	Read codes	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Passenger door module (PDM)	Erase codes	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Passenger door module (PDM)	Reading off extended diagnostic trouble code (DTC) information, passenger door module	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Passenger door module (PDM)	Reading control unit id	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Passenger door module (PDM)	Reading off the parameter values	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Power seat module (PSM)	Activating components and functions	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Power seat module (PSM)	Restoring the remote control setting	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Power seat module (PSM)	Programm the seat temperature	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Power seat module (PSM)	Programming the seat temperature	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Power seat module (PSM)	Checking current values	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Supplemental restraint system module (SRS)	Restoring the remote control setting	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Supplemental restraint system module (SRS)	Read codes	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Supplemental restraint system module (SRS)	Erase codes	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Supplemental restraint system module (SRS)	Reading off extended diagnostic trouble code (DTC) information, SRS (supplemental restraint system) / SIPS (side impact protection system)	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Fuel system/combined system	Read codes	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Fuel system/combined system	Erase codes	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Fuel system/combined system	Reading off the control module ID	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Fuel system/combined system	Parameter, digital display	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2004	Fuel system/combined system	Activating components and functions	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Front control module (FCM)	Read codes	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Engine control module (ECM)	Erase codes	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Engine control module (ECM)	Detailed diagnostic trouble code information readout	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Engine control module (ECM)	Reading off control module ID, ECM	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Engine control module (ECM)	Reading off parameters, digital display	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Engine control module (ECM)	Activating components and functions	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Engine control module (ECM)	Adjusting the air flow sensor	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Engine control module (ECM)	Quick test of exhaust camshaft control	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Engine control module (ECM)	Quick test of intake camshaft control	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Engine control module (ECM)	Quick test of the fuel pump (FP)	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Accessory electronic module (AEM)	Read codes	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Accessory electronic module (AEM)	Erase codes	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Accessory electronic module (AEM)	Reading off the control module ID, AEM	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Accessory electronic module (AEM)	Reading off parameters, digital display	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Accessory electronic module (AEM)	Activating components and functions	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Accessory electronic module (AEM)	Restoring the car	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Central electronic module (CEM)	Read codes	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Central electronic module (CEM)	Erase codes	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Central electronic module (CEM)	Reading off extended diagnostic trouble code (DTC) information, central electronic module	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Central electronic module (CEM)	Reading data for vehicle configuration	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Central electronic module (CEM)	Reading off parameters, digital display, central electronic module (CEM)	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Central electronic module (CEM)	Activating components and functions	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Central electronic module (CEM)	Programm the control module, central electronic module (CEM)	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Central electronic module (CEM)	Installine low beam reduction US/CDN	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Central electronic module (CEM)	Programm the control module, central electronic module (CEM) US/CDN	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Central electronic module (CEM)	Quick test of alternator function	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Central electronic module (CEM)	Quick test of the intake camshaft control	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Central electronic module (CEM)	Quick test of the fuel pump (FP)	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Accessory electronic module (AEM)	Read codes	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Accessory electronic module (AEM)	Erase codes	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Accessory electronic module (AEM)		

VOLVO	V70 XC (D1-1) / X70	2005	Rear electronic module (REM)	Readline control unit ID	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Rear electronic module (REM)	Reading off diagnostic trouble code (DTC) information, general display	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Rear electronic module (REM)	Activating components/functions	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Rear electronic module (REM)	Calibrating the position sensor for Bi-Xenon lamps	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Rear electronic module (REM)	Reading off the alarm codes	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Rear traffic information module (RTI)	Read codes	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Rear traffic information module (RTI)	Erase codes	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Road traffic information module (RTI)	Reading off extended diagnostic trouble code (DTC) information, road traffic information (RTI)	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Road traffic information module (RTI)	Reading off the control module ID	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Upper electronic module (UEM)	Reading off the tire pressure sensor	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Upper electronic module (UEM)	Quick test of the tire pressure sensor	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Upper electronic module (UEM)	Erase codes	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Upper electronic module (UEM)	Reading off extended diagnostic trouble code (DTC) information, upper electrical module	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Upper electronic module (UEM)	Reading control unit ID	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Upper electronic module (UEM)	Activating components/functions	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Upper electronic module (UEM)	Parameter values	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Upper electronic module (UEM)	Protramme the control unit	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Upper electronic module (UEM)	Configuring	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Upper electronic module (UEM)	Replacing the control module	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Upper electronic module (UEM)	Replacing the programmed values	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Upper electronic module (UEM)	Reading the programmed values	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Upper electronic module (UEM)	Quick test of the tire pressure sensor	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Upper electronic module (UEM)	Resetting the counter for - gearbox oil change	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Upper electronic module (UEM)	Erase codes	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Anti-lock brake system module (ABS/BCM)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Anti-lock brake system module (ABS/BCM)	Reading off the control module ID	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Anti-lock brake system module (ABS/BCM)	Parameter, digital display	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Anti-lock brake system module (ABS/BCM)	Activating components/functions	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Anti-lock brake system module (ABS/BCM)	Checking brake light switch adjustment	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Anti-lock brake system module (ABS/BCM)	Calibration	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Steering wheel angle sensor module (SAS)	Read codes	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Steering wheel angle sensor module (SAS)	Reading off diagnostic trouble code (DTC) information	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Steering wheel angle sensor module (SAS)	Reading off the control module ID	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Steering wheel angle sensor module (SAS)	Parameter, digital display	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Suspension module (SUM)	Read codes	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Suspension module (SUM)	Reading off programmed parameters	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Suspension module (SUM)	Identifying Damper motor module (DMM)	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Driver door module (DDM)	Read codes	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Driver door module (DDM)	Reading off extended diagnostic trouble code (DTC) information, driver's door module	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Driver door module (DDM)	Reading off control module ID	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Driver door module (DDM)	Reading off parameters, digital display	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Driver door module (DDM)	Activating components/functions	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Driver door module (DDM)	Resetting the seat position	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Driver door module (DDM)	Programming soft stop	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Passenger door module (PDM)	Read codes	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Passenger door module (PDM)	Reading off extended diagnostic trouble code (DTC) information, passenger door module	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Passenger door module (PDM)	Reading off control unit ID	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Passenger door module (PDM)	Reading off parameters, digital display	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Passenger door module (PDM)	Activating components/functions	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Passenger door module (PDM)	Installing the window position	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Power seat module (PSM)	Read codes	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Power seat module (PSM)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Power seat module (PSM)	Reading off the control module ID	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Power seat module (PSM)	Reading off inout signals to the power seat module	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Power seat module (PSM)	Activating components/functions	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Power seat module (PSM)	Checking the value	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Supplemental restraint system module (SR5)	Programming the remote control setting	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Supplemental restraint system module (SR5)	Read codes	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Supplemental restraint system module (SR5)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Supplemental restraint system module (SR5)	Reading off the control module ID	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Supplemental restraint system module (SR5)	Reading off parameters, digital display	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Fuel system/combined system	Read codes	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Fuel system/combined system	Quick test of the fuel tank system (USA/CN)	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Fuel system/combined system	Read codes	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Fuel system/combined system	Erase codes	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Fuel system/combined system	Reading off the control module ID	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Fuel system/combined system	Parameter, digital display	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Fuel system/combined system	Activating components/functions	V1.10.001
VOLVO	V70 XC (D1-1) / X70	2005	Engine control module (ECM)	Read codes	V1.10.001
VOLVO	K80	2003	Engine control module (ECM)	Reading off extended diagnostic trouble code (DTC) information, engine control module (ECM)	V1.10.001
VOLVO	K80	2003	Engine control module (ECM)	Reading off control module ID, ECM	V1.10.001
VOLVO	K80	2003	Engine control module (ECM)	Readiness code	V1.10.001
VOLVO	K80	2003	Engine control module (ECM)	Parameter, digital display	V1.10.001
VOLVO	K80	2003	Engine control module (ECM)	Activating components/functions	V1.10.001
VOLVO	K80	2003	Engine control module (ECM)	Adapting the throttle unit	V1.10.001
VOLVO	K80	2003	Engine control module (ECM)	Quick test of exhaust camshaft control	V1.10.001
VOLVO	K80	2003	Engine control module (ECM)	Quick test of the camshaft control	V1.10.001
VOLVO	K80	2003	Engine control module (ECM)	Quick test of the fuel tank system	V1.10.001
VOLVO	K80	2003	Accessory electronic module (AEM)	Read codes	V1.10.001
VOLVO	K80	2003	Accessory electronic module (AEM)	Reading off extended fault-tracing information, accessory electronic module	V1.10.001
VOLVO	K80	2003	Accessory electronic module (AEM)	Reading off the control module ID	V1.10.001
VOLVO	K80	2003	Accessory electronic module (AEM)	Reading off parameters, digital display	V1.10.001
VOLVO	K80	2003	Antenna module (ATM)	Read codes	V1.10.001
VOLVO	K80	2003	Antenna module (ATM)	Reading off control module ID, antenna module (ATM)	V1.10.001
VOLVO	K80	2003	Antenna module (ATM)	Reading off parameters, digital display, antenna module (ATM)	V1.10.001
VOLVO	K80	2003	Audio module (AUD)	Read codes	V1.10.001
VOLVO	K80	2003	Audio module (AUD)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO	K80	2003	Audio module (AUD)	Reading off control module ID	V1.10.001
VOLVO	K80	2003	CD player module (MP2)	Read codes	V1.10.001
VOLVO	K80	2003	CD player module (MP2)	Reading off extended diagnostic trouble code (DTC) information, CD module (MP2)	V1.10.001
VOLVO	K80	2003	CD player module (MP2)	Reading off control module ID, CD module (MP2)	V1.10.001
VOLVO	K80	2003	CD player module (MP2)	Reading off parameters, digital display, CD module (MP2)	V1.10.001
VOLVO	K80	2003	Central electronic module (CEM)	Activating components/functions, CD module (MP2)	V1.10.001
VOLVO	K80	2003	Central electronic module (CEM)	Erase codes	V1.10.001
VOLVO	K80	2003	Central electronic module (CEM)	Reading off extended diagnostic trouble code (DTC) information, central electronic module	V1.10.001
VOLVO	K80	2003	Central electronic module (CEM)	Reading data for vehicle configuration	V1.10.001
VOLVO	K80	2003	Central electronic module (CEM)	Reading data for immobilizer	V1.10.001
VOLVO	K80	2003	Central electronic module (CEM)	Reading data for vehicle configuration	V1.10.001
VOLVO	K80	2003	Central electronic module (CEM)	Reading data for immobilizer	V1.10.001
VOLVO	K80	2003	Central electronic module (CEM)	Activating components/functions	V1.10.001
VOLVO	K80	2003	Central electronic module (CEM)	Programmung the control module	V1.10.001
VOLVO	K80	2003	Central electronic module (CEM)	Reading off fault cause	V1.10.001
VOLVO	K80	2003	Central electronic module (CEM)	Resetting the car	V1.10.001
VOLVO	K80	2003	Driver information module (DIM)	Read codes	V1.10.001
VOLVO	K80	2003	Driver information module (DIM)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO	K80	2003	Driver information module (DIM)	Reading off control unit ID	V1.10.001
VOLVO	K80	2003	Driver information module (DIM)	Reading off parameters	V1.10.001
VOLVO	K80	2003	Driver information module (DIM)	Activating components/functions	V1.10.001
VOLVO	K80	2003	Driver information module (DIM)	Testing all diodes and fuses in incident	V1.10.001
VOLVO	K80	2003	Driver information module (DIM)	Programmation the driver information module (DIM)	V1.10.001
VOLVO	K80	2003	Driver information module (DIM)	Reading out of programmed values in driver information module (DIM)	V1.10.001
VOLVO	K80	2003	Driver information module (DIM)	Reading service reminder indicator (SRI)	V1.10.001
VOLVO	K80	2003	Infotainment control module (ICM)	Read codes	V1.10.001
VOLVO	K80	2003	Infotainment control module (ICM)	Reading off extended diagnostic trouble code (DTC) information, infotainment control module (ICM)	V1.10.001
VOLVO	K80	2003	Infotainment control module (ICM)	Reading off the control module ID, infotainment control module (ICM)	V1.10.001
VOLVO	K80	2003	Infotainment control module (ICM)	Reading off parameters, digital display, infotainment control module (ICM)	V1.10.001
VOLVO	K80	2003	Infotainment control module (ICM)	Activating components/functions, infotainment control module (ICM)	V1.10.001
VOLVO	K80	2003	Mobile phone (MP3)	Erase codes	V1.10.001
VOLVO	K80	2003	Mobile phone (MP3)	Reading off extended diagnostic trouble code (DTC) information, mobile phone (PHM)	V1.10.001
VOLVO	K80	2003	Mobile phone (MP3)	Reading off the control module ID	V1.10.001
VOLVO	K80	2003	Mobile phone (MP3)	Reading off parameters, digital display, mobile phone (MP3)	V1.10.001
VOLVO	K80	2003	Mobile media module (MMM)	Activating components/functions, MD module (MP1)	V1.10.001
VOLVO	K80	2003	Mobile media module (MMM)	Erase codes	V1.10.001
VOLVO	K80	2003	Mobile media module (MMM)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO	K80	2003	Mobile media module (MMM)	Reading off the control module ID	V1.10.001
VOLVO	K80	2003	Mobile media module (MMM)	Activating components/functions	V1.10.001
VOLVO	K80	2003	Mobile media module (MMM)	Calibrating the Bi-Xenon lamp position sensor	V1.10.001
VOLVO	K80	2003	Phone module (PHM)	Read codes	V1.10.001
VOLVO	K80	2003	Phone module (PHM)	Reading off extended diagnostic trouble code (DTC) information, phone module (PHM)	V1.10.001
VOLVO	K80	2003	Phone module (PHM)	Reading off the control module ID	V1.10.001
VOLVO	K80	2003	Phone module (PHM)	Reading off parameters	V1.10.001
VOLVO	K80	2003	Phone module (PHM)	Activating components/functions	V1.10.001
VOLVO	K80	2003	Rear electronic module (REM)	Erase codes	V1.10.001
VOLVO	K80	2003	Rear electronic module (REM)	Reading off extended diagnostic trouble code (DTC) information, rear electrical module	V1.10.001
VOLVO	K80	2003	Rear electronic module (REM)	Reading off the parameter values	V1.10.001
VOLVO	K80	2003	Rear electronic module (REM)	Activating components/functions	V1.10.001
VOLVO	K80	2003	Rear electronic module (REM)	Activation of parameter values	V1.10.001
VOLVO	K80	2003	Rear electronic module (REM)	Calibrating the Bi-Xenon lamp position sensor	V1.10.001
VOLVO	K80	2003	Steering wheel module (SWM)	Read codes	V1.10.001
VOLVO	K80	2003	Steering wheel module (SWM)	Reading off extended diagnostic trouble code (DTC) information, steering wheel module	V1.10.001
VOLVO	K80	2003	Steering wheel module (SWM)	Reading off the control module ID	V1.10.001
VOLVO	K80	2003	Steering wheel module (SWM)	Parameter, digital display	V1.10.001
VOLVO	K80	2003	Steering wheel module (SWM)	Activating components/functions	V1.10.001
VOLVO	K80	2003	Subwoofer module (SUB)	Erase codes	V1.10.001
VOLVO	K80	2003	Subwoofer module (SUB)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO	K80	2003	Subwoofer module (SUB)	Reading off the control module ID	V1.10.001
VOLVO	K80	2003	Subwoofer module (SUB)	Activating components/functions	V1.10.001
VOLVO	K80	2003	Upper electronic module (UEM)	Erase codes	V1.10.001
VOLVO	K80	2003	Upper electronic module (UEM)	Reading off extended diagnostic trouble code (DTC) information, upper electrical module	V1.10.001
VOLVO	K80	2003	Upper electronic module (UEM)	Reading control unit ID	V1.10.001
VOLVO	K80	2003	Upper electronic module (UEM)	Reading off the parameter values	V1.10.001
VOLVO	K80	2003	Upper electronic module (UEM)	Activating components/functions	V1.10.001
VOLVO	K80	2003	Upper electronic module (UEM)	Programmation the control module	V1.10.001
VOLVO	K80	2003	Upper electronic module (UEM)	Configuration of the screen	V1.10.001
VOLVO	K80	2003	Upper electronic module (UEM)	Replacing the control module	V1.10.001

VOLVO	X90	2003	Upper electronic module (UEM)	Readline the unprogrammed values	V1.10.001
VOLVO	X90	2003	Differential electronic module (DEM)	Read codes	V1.10.001
VOLVO	X90	2003	Differential electronic module (DEM)	Erase codes	V1.10.001
VOLVO	X90	2003	Differential electronic module (DEM)	Reading off the control module ID	V1.10.001
VOLVO	X90	2003	Differential electronic module (DEM)	Reading off parameters, digital display	V1.10.001
VOLVO	X90	2003	Transmission control module (TCM)	Read codes	V1.10.001
VOLVO	X90	2003	Transmission control module (TCM)	Erase codes	V1.10.001
VOLVO	X90	2003	Transmission control module (TCM)	Reading off extended diagnostic trouble code (DTC) information, transmission control module (TCM)	V1.10.001
VOLVO	X90	2003	Transmission control module (TCM)	Reading off diagnostic trouble code (DTC)	V1.10.001
VOLVO	X90	2003	Transmission control module (TCM)	Parameter, digital display	V1.10.001
VOLVO	X90	2003	Transmission control module (TCM)	Activating components / functions	V1.10.001
VOLVO	X90	2003	Transmission control module (TCM)	Reset adaption to zero	V1.10.001
VOLVO	X90	2003	Transmission control module (TCM)	Resetting the counter for - gearbox oil change	V1.10.001
VOLVO	X90	2003	Anti-lock brake system module (ABS/RCM)	Read codes	V1.10.001
VOLVO	X90	2003	Anti-lock brake system module (ABS/RCM)	Erase codes	V1.10.001
VOLVO	X90	2003	Anti-lock brake system module (ABS/RCM)	Reading off extended diagnostic trouble code (DTCI) information, brake control module (BCM)	V1.10.001
VOLVO	X90	2003	Anti-lock brake system module (ABS/RCM)	Reading off the control module ID	V1.10.001
VOLVO	X90	2003	Anti-lock brake system module (ABS/RCM)	Parameter, digital display	V1.10.001
VOLVO	X90	2003	Anti-lock brake system module (ABS/RCM)	Activating components and functions	V1.10.001
VOLVO	X90	2003	Anti-lock brake system module (ABS/RCM)	Checking brake light switch adjustment	V1.10.001
VOLVO	X90	2003	Anti-lock brake system module (ABS/RCM)	Calibration	V1.10.001
VOLVO	X90	2003	Steering wheel angle sensor module (SAS)	Read codes	V1.10.001
VOLVO	X90	2003	Steering wheel angle sensor module (SAS)	Erase codes	V1.10.001
VOLVO	X90	2003	Steering wheel angle sensor module (SAS)	Reading control unit id, SAS	V1.10.001
VOLVO	X90	2003	Steering wheel angle sensor module (SAS)	Digital display parameter (SAS)	V1.10.001
VOLVO	X90	2003	Climate control module (CCM)	Read codes	V1.10.001
VOLVO	X90	2003	Climate control module (CCM)	Erase codes	V1.10.001
VOLVO	X90	2003	Climate control module (CCM)	Reading off extended diagnostic trouble code (DTC) information, climate control module	V1.10.001
VOLVO	X90	2003	Climate control module (CCM)	Reading off control unit ID	V1.10.001
VOLVO	X90	2003	Climate control module (CCM)	Digital display parameter	V1.10.001
VOLVO	X90	2003	Climate control module (CCM)	Programmung remote control module (CCM)	V1.10.001
VOLVO	X90	2003	Climate control module (CCM)	Self-adjustment of damper motor end stops	V1.10.001
VOLVO	X90	2003	Driver door module (DDM)	Adjusting parameters, ECC	V1.10.001
VOLVO	X90	2003	Driver door module (DDM)	Read codes	V1.10.001
VOLVO	X90	2003	Driver door module (DDM)	Erase codes	V1.10.001
VOLVO	X90	2003	Driver door module (DDM)	Reading off extended diagnostic trouble code (DTC) information, driver's door module	V1.10.001
VOLVO	X90	2003	Driver door module (DDM)	Reading control unit id	V1.10.001
VOLVO	X90	2003	Driver door module (DDM)	Reading off the parameter values	V1.10.001
VOLVO	X90	2003	Driver door module (DDM)	Activating components and functions	V1.10.001
VOLVO	X90	2003	Driver door module (DDM)	Positioning soft close	V1.10.001
VOLVO	X90	2003	Driver door module (DDM)	Programming the remote control setting	V1.10.001
VOLVO	X90	2003	Driver door module (DDM)	Window position set-up	V1.10.001
VOLVO	X90	2003	Passenger door module (PDM)	Read codes	V1.10.001
VOLVO	X90	2003	Passenger door module (PDM)	Erase codes	V1.10.001
VOLVO	X90	2003	Passenger door module (PDM)	Reading off extended diagnostic trouble code (DTC) information, passenger door module	V1.10.001
VOLVO	X90	2003	Passenger door module (PDM)	Reading control unit id	V1.10.001
VOLVO	X90	2003	Passenger door module (PDM)	Reading off the parameter values	V1.10.001
VOLVO	X90	2003	Passenger door module (PDM)	Activating components and functions	V1.10.001
VOLVO	X90	2003	Passenger door module (PDM)	Programming soft stop	V1.10.001
VOLVO	X90	2003	Passenger door module (PDM)	Window position set-up	V1.10.001
VOLVO	X90	2003	Power seat module (PSM)	Read codes	V1.10.001
VOLVO	X90	2003	Power seat module (PSM)	Erase codes	V1.10.001
VOLVO	X90	2003	Power seat module (PSM)	Reading off extended diagnostic trouble code (DTC) information, power seat module	V1.10.001
VOLVO	X90	2003	Power seat module (PSM)	Reading off input signals to the power seat module	V1.10.001
VOLVO	X90	2003	Power seat module (PSM)	Activating components/functions	V1.10.001
VOLVO	X90	2003	Power seat module (PSM)	Programmung optimal temperature	V1.10.001
VOLVO	X90	2003	Power seat module (PSM)	Checking current values	V1.10.001
VOLVO	X90	2003	Power seat module (PSM)	Programming the remote control setting	V1.10.001
VOLVO	X90	2003	Supplemental restraint system module (SRS)	Read codes	V1.10.001
VOLVO	X90	2003	Supplemental restraint system module (SRS)	Erase codes	V1.10.001
VOLVO	X90	2003	Supplemental restraint system module (SRS)	Reading off extended diagnostic trouble code (DTC) information, SRS (supplemental restraint system) / SIPS (side impact protection system)	V1.10.001
VOLVO	X90	2003	Supplemental restraint system module (SRS)	Reading control unit id	V1.10.001
VOLVO	X90	2003	Supplemental restraint system module (SRS)	Reading off the parameter values	V1.10.001
VOLVO	X90	2003	Supplemental restraint system module (SRS)	Activating components and functions	V1.10.001
VOLVO	X90	2003	Transmission control module (TCM)	Read codes	V1.10.001
VOLVO	X90	2003	Fuel system/combined system	Erase codes	V1.10.001
VOLVO	X90	2003	Fuel system/combined system	Reading off the control module ID	V1.10.001
VOLVO	X90	2003	Fuel system/combined system	Parameter, digital display	V1.10.001
VOLVO	X90	2003	Fuel system/combined system	Activating components and functions	V1.10.001
VOLVO	X90	2004	Engine control module (ECM)	Read codes	V1.10.001
VOLVO	X90	2004	Engine control module (ECM)	Erase codes	V1.10.001
VOLVO	X90	2004	Engine control module (ECM)	Reading off extended diagnostic trouble code (DTC) information, engine control module (ECM)	V1.10.001
VOLVO	X90	2004	Engine control module (ECM)	Reading off control module ID, ECM	V1.10.001
VOLVO	X90	2004	Engine control module (ECM)	Readiness code	V1.10.001
VOLVO	X90	2004	Engine control module (ECM)	Parameter, digital display	V1.10.001
VOLVO	X90	2004	Engine control module (ECM)	Activating components and functions	V1.10.001
VOLVO	X90	2004	Engine control module (ECM)	Adaptation of the throttle unit	V1.10.001
VOLVO	X90	2004	Engine control module (ECM)	Quick test of exhaust manifold control	V1.10.001
VOLVO	X90	2004	Engine control module (ECM)	Quick test of the fuel tank system	V1.10.001
VOLVO	X90	2004	Accessory electronic module (AEM)	Read codes	V1.10.001
VOLVO	X90	2004	Accessory electronic module (AEM)	Erase codes	V1.10.001
VOLVO	X90	2004	Accessory electronic module (AEM)	Reading off extended fault-tracing information, accessory electronic module	V1.10.001
VOLVO	X90	2004	Accessory electronic module (AEM)	Reading off the control module ID	V1.10.001
VOLVO	X90	2004	Accessory electronic module (AEM)	Reading off parameters, digital display	V1.10.001
VOLVO	X90	2004	Antenna module (ATM)	Read codes	V1.10.001
VOLVO	X90	2004	Antenna module (ATM)	Erase codes	V1.10.001
VOLVO	X90	2004	Antenna module (ATM)	Reading off control module ID, antenna module (ATM)	V1.10.001
VOLVO	X90	2004	Antenna module (ATM)	Reading off parameters, digital display, antenna module (ATM)	V1.10.001
VOLVO	X90	2004	Audio module (AUD)	Read codes	V1.10.001
VOLVO	X90	2004	Audio module (AUD)	Erase codes	V1.10.001
VOLVO	X90	2004	CD player module (MP2)	Read codes	V1.10.001
VOLVO	X90	2004	CD player module (MP2)	Erase codes	V1.10.001
VOLVO	X90	2004	CD player module (MP2)	Reading off extended diagnostic trouble code (DTC) information, CD module (MP2)	V1.10.001
VOLVO	X90	2004	CD player module (MP2)	Reading off control module ID, CD module (MP2)	V1.10.001
VOLVO	X90	2004	CD player module (MP2)	Reading off parameters, digital display, CD module (MP2)	V1.10.001
VOLVO	X90	2004	Central electronic module (CEM)	Read codes	V1.10.001
VOLVO	X90	2004	Central electronic module (CEM)	Erase codes	V1.10.001
VOLVO	X90	2004	Central electronic module (CEM)	Reading off extended diagnostic trouble code (DTC) information, central electronic module	V1.10.001
VOLVO	X90	2004	Central electronic module (CEM)	Reading off control unit ID	V1.10.001
VOLVO	X90	2004	Central electronic module (CEM)	Reading data for vehicle configuration	V1.10.001
VOLVO	X90	2004	Central electronic module (CEM)	Reading off parameters, digital display	V1.10.001
VOLVO	X90	2004	Central electronic module (CEM)	Activating components/functions	V1.10.001
VOLVO	X90	2004	Central electronic module (CEM)	Programming the control module	V1.10.001
VOLVO	X90	2004	Central electronic module (CEM)	Resetting the alarm cause	V1.10.001
VOLVO	X90	2004	Central electronic module (CEM)	Resetting factory settings	V1.10.001
VOLVO	X90	2004	Driver information module (DIM)	Read codes	V1.10.001
VOLVO	X90	2004	Driver information module (DIM)	Erase codes	V1.10.001
VOLVO	X90	2004	Driver information module (DIM)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO	X90	2004	Driver information module (DIM)	Reading the control unit ID	V1.10.001
VOLVO	X90	2004	Driver information module (DIM)	Parameter, initial display	V1.10.001
VOLVO	X90	2004	Driver information module (DIM)	Activating components and functions	V1.10.001
VOLVO	X90	2004	Driver information module (DIM)	Testing all displays and times in instrument	V1.10.001
VOLVO	X90	2004	Driver information module (DIM)	Programming the audio acknowledgement signal, seat belt reminder	V1.10.001
VOLVO	X90	2004	Driver information module (DIM)	Programming the service indicator (SR)	V1.10.001
VOLVO	X90	2004	Infotainment control module (ICM)	Read codes	V1.10.001
VOLVO	X90	2004	Infotainment control module (ICM)	Erase codes	V1.10.001
VOLVO	X90	2004	Infotainment control module (ICM)	Reading off extended diagnostic trouble code (DTC) information, infotainment control module (ICM)	V1.10.001
VOLVO	X90	2004	Infotainment control module (ICM)	Reading off the control module ID, infotainment control module (ICM)	V1.10.001
VOLVO	X90	2004	Infotainment control module (ICM)	Reading off parameters, digital display, infotainment control module (ICM)	V1.10.001
VOLVO	X90	2004	Infotainment control module (ICM)	Activating components and functions, infotainment control module (ICM)	V1.10.001
VOLVO	X90	2004	MD player module (MP1)	Read codes	V1.10.001
VOLVO	X90	2004	MD player module (MP1)	Erase codes	V1.10.001
VOLVO	X90	2004	MD player module (MP1)	Reading off extended diagnostic trouble code (DTC) information, MD module (MP1)	V1.10.001
VOLVO	X90	2004	MD player module (MP1)	Reading off parameters, digital display, MD module (MP1)	V1.10.001
VOLVO	X90	2004	Multimedia module (MMM)	Read codes	V1.10.001
VOLVO	X90	2004	Multimedia module (MMM)	Erase codes	V1.10.001
VOLVO	X90	2004	Multimedia module (MMM)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO	X90	2004	Multimedia module (MMM)	Reading off the control module ID	V1.10.001
VOLVO	X90	2004	Multimedia module (MMM)	Reading off parameters, digital display	V1.10.001
VOLVO	X90	2004	Phone module (PHM)	Read codes	V1.10.001
VOLVO	X90	2004	Phone module (PHM)	Erase codes	V1.10.001
VOLVO	X90	2004	Phone module (PHM)	Reading off extended diagnostic trouble code (DTC) information, phone module (PHM)	V1.10.001
VOLVO	X90	2004	Phone module (PHM)	Reading off the control module ID	V1.10.001
VOLVO	X90	2004	Phone module (PHM)	Resetting the carphone code	V1.10.001
VOLVO	X90	2004	Rear electronic module (REM)	Read codes	V1.10.001
VOLVO	X90	2004	Rear electronic module (REM)	Erase codes	V1.10.001
VOLVO	X90	2004	Rear electronic module (REM)	Reading off extended diagnostic trouble code (DTC) information, rear electrical module	V1.10.001
VOLVO	X90	2004	Rear electronic module (REM)	Reading control unit id	V1.10.001
VOLVO	X90	2004	Rear electronic module (REM)	Reading off the parameter values	V1.10.001
VOLVO	X90	2004	Rear electronic module (REM)	Activating components and functions	V1.10.001
VOLVO	X90	2004	Rear electronic module (REM)	Calibrating the Bi-Xenon lamp position sensor	V1.10.001
VOLVO	X90	2004	Steering wheel module (SWM)	Read codes	V1.10.001
VOLVO	X90	2004	Steering wheel module (SWM)	Erase codes	V1.10.001
VOLVO	X90	2004	Steering wheel module (SWM)	Reading off extended diagnostic trouble code (DTC) information, steering wheel module	V1.10.001
VOLVO	X90	2004	Subwoofer module (SUB)	Read codes	V1.10.001
VOLVO	X90	2004	Subwoofer module (SUB)	Erase codes	V1.10.001
VOLVO	X90	2004	Subwoofer module (SUB)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO	X90	2004	Subwoofer module (SUB)	Reading off the control module ID	V1.10.001
VOLVO	X90	2004	Upper electronic module (UEM)	Read codes	V1.10.001
VOLVO	X90	2004	Upper electronic module (UEM)	Erase codes	V1.10.001
VOLVO	X90	2004	Upper electronic module (UEM)	Programming the control unit	V1.10.001
VOLVO	X90	2004	Upper electronic module (UEM)	Configuration of the screen	V1.10.001
VOLVO	X90	2004	Upper electronic module (UEM)	Regulating the control module	V1.10.001
VOLVO	X90	2004	Upper electronic module (UEM)	Reading the unprogrammed values	V1.10.001
VOLVO	X90	2004	Differential electronic module (DEM)	Read codes	V1.10.001
VOLVO	X90	2004	Differential electronic module (DEM)	Erase codes	V1.10.001
VOLVO	X90	2004	Differential electronic module (DEM)	Reading off the control module ID	V1.10.001
VOLVO	X90	2004	Differential electronic module (DEM)	Reading off parameters, digital display	V1.10.001
VOLVO	X90	2004	Transmission control module (TCM)	Read codes	V1.10.001
VOLVO	X90	2004	Transmission control module (TCM)	Erase codes	V1.10.001
VOLVO	X90	2004	Transmission control module (TCM)	Reading off extended diagnostic trouble code (DTC) information, transmission control module (TCM)	V1.10.001
VOLVO	X90	2004	Transmission control module (TCM)	Reading control unit id	V1.10.001
VOLVO	X90	2004	Transmission control module (TCM)	Parameter, digital display	V1.10.001
VOLVO	X90	2004	Anti-lock brake system module (ABS/RCM)	Read codes	V1.10.001
VOLVO	X90	2004	Anti-lock brake system module (ABS/RCM)	Erase codes	V1.10.001
VOLVO	X90	2004	Anti-lock brake system module (ABS/RCM)	Calibration	V1.10.001
VOLVO	X90	2004	Steering wheel angle sensor module (SAS)	Read codes	V1.10.001
VOLVO	X90	2004	Steering wheel angle sensor module (SAS)	Erase codes	V1.10.001
VOLVO	X90	2004	Steering wheel angle sensor module (SAS)	Reading control unit id, SAS	V1.10.001
VOLVO	X90	2004	Steering wheel angle sensor module (SAS)	Digital display parameter (SAS)	V1.10.001
VOLVO	X90	2004	Climate control module (CCM)	Read codes	V1.10.001

VOLVO	XC90	2004	Climate control module (CCM)	Erase codes	V1.10.001
VOLVO	XC90	2004	Climate control module (CCM)	Reading off extended diagnostic trouble code (DTC) information, climate control module	V1.10.001
VOLVO	XC90	2004	Climate control module (CCM)	Reading control unit ID	V1.10.001
VOLVO	XC90	2004	Climate control module (CCM)	Digital display parameter	V1.10.001
VOLVO	XC90	2004	Climate control module (CCM)	Programming the climate control module (CCM)	V1.10.001
VOLVO	XC90	2004	Climate control module (CCM)	Self-adjustment of damper motor end stops	V1.10.001
VOLVO	XC90	2004	Climate control module (CCM)	Adjusting the damping (ECC)	V1.10.001
VOLVO	XC90	2004	Climate control module (CCM)	Reading-out programmed parameters in the climate control module	V1.10.001
VOLVO	XC90	2004	Driver door module (DOM)	Reading codes	V1.10.001
VOLVO	XC90	2004	Driver door module (DOM)	Erase codes	V1.10.001
VOLVO	XC90	2004	Driver door module (DOM)	Reading off extended diagnostic trouble code (DTC) information, driver's door module	V1.10.001
VOLVO	XC90	2004	Driver door module (DOM)	Reading control unit ID	V1.10.001
VOLVO	XC90	2004	Driver door module (DOM)	Reading off the parameter values	V1.10.001
VOLVO	XC90	2004	Driver door module (DOM)	Activating components and functions	V1.10.001
VOLVO	XC90	2004	Driver door module (DOM)	Programme start stop	V1.10.001
VOLVO	XC90	2004	Driver door module (DOM)	Programme the remote control setting	V1.10.001
VOLVO	XC90	2004	Driver door module (DOM)	Window position set up	V1.10.001
VOLVO	XC90	2004	Passenger door module (PDM)	Read codes	V1.10.001
VOLVO	XC90	2004	Passenger door module (PDM)	Erase codes	V1.10.001
VOLVO	XC90	2004	Passenger door module (PDM)	Reading off extended diagnostic trouble code (DTC) information, passenger door module	V1.10.001
VOLVO	XC90	2004	Passenger door module (PDM)	Reading control unit ID	V1.10.001
VOLVO	XC90	2004	Passenger door module (PDM)	Reading off the parameter values	V1.10.001
VOLVO	XC90	2004	Passenger door module (PDM)	Activating components and functions	V1.10.001
VOLVO	XC90	2004	Passenger door module (PDM)	Programme start stop	V1.10.001
VOLVO	XC90	2004	Passenger door module (PDM)	Programme the remote control setting	V1.10.001
VOLVO	XC90	2004	Passenger door module (PDM)	Window position set up	V1.10.001
VOLVO	XC90	2004	Power seat module (PSM)	Read codes	V1.10.001
VOLVO	XC90	2004	Power seat module (PSM)	Erase codes	V1.10.001
VOLVO	XC90	2004	Power seat module (PSM)	Reading off extended diagnostic trouble code (DTC) information, power seat module	V1.10.001
VOLVO	XC90	2004	Power seat module (PSM)	Reading control unit ID	V1.10.001
VOLVO	XC90	2004	Power seat module (PSM)	Reading off the control module ID	V1.10.001
VOLVO	XC90	2004	Power seat module (PSM)	Reading off input signal at the power seat module	V1.10.001
VOLVO	XC90	2004	Power seat module (PSM)	Activating current values	V1.10.001
VOLVO	XC90	2004	Power seat module (PSM)	Programme the seat temperature	V1.10.001
VOLVO	XC90	2004	Power seat module (PSM)	Checking current values	V1.10.001
VOLVO	XC90	2004	Supplemental restraint system module (SRS)	Read codes	V1.10.001
VOLVO	XC90	2004	Supplemental restraint system module (SRS)	Erase codes	V1.10.001
VOLVO	XC90	2004	Supplemental restraint system module (SRS)	Reading off extended diagnostic trouble code (DTC) information, SRS [supplemental restraint system] / SIPS [side impact protection system]	V1.10.001
VOLVO	XC90	2004	Supplemental restraint system module (SRS)	Reading control unit ID	V1.10.001
VOLVO	XC90	2004	Supplemental restraint system module (SRS)	Reading off parameters, digital display	V1.10.001
VOLVO	XC90	2004	Transmission control module (TCM)	Activating components/functions	V1.10.001
VOLVO	XC90	2004	Transmission control module (TCM)	Read codes	V1.10.001
VOLVO	XC90	2004	Fuel system/combined system	Erase codes	V1.10.001
VOLVO	XC90	2004	Fuel system/combined system	Programming the control module ID	V1.10.001
VOLVO	XC90	2004	Fuel system/combined system	Parameter, digital display	V1.10.001
VOLVO	XC90	2004	Fuel system/combined system	Activating components and functions	V1.10.001
VOLVO	XC90	2005	Engine control module (ECM)	Read codes	V1.10.001
VOLVO	XC90	2005	Engine control module (ECM)	Erase codes	V1.10.001
VOLVO	XC90	2005	Engine control module (ECM)	Reading off extended diagnostic trouble code (DTC) information, engine control module	V1.10.001
VOLVO	XC90	2005	Engine control module (ECM)	Reading control unit ID	V1.10.001
VOLVO	XC90	2005	Engine control module (ECM)	Reading off the control module ID, ECM	V1.10.001
VOLVO	XC90	2005	Engine control module (ECM)	Readiness	V1.10.001
VOLVO	XC90	2005	Engine control module (ECM)	Reading off parameters, digital display	V1.10.001
VOLVO	XC90	2005	Engine control module (ECM)	Activating components and functions	V1.10.001
VOLVO	XC90	2005	Antenna module (ATM)	Read codes	V1.10.001
VOLVO	XC90	2005	Antenna module (ATM)	Erase codes	V1.10.001
VOLVO	XC90	2005	Antenna module (ATM)	Reading off control module ID, antenna module (ATM)	V1.10.001
VOLVO	XC90	2005	Antenna module (ATM)	Reading off parameters, digital display, antenna module (ATM)	V1.10.001
VOLVO	XC90	2005	Audio module (AUD)	Read codes	V1.10.001
VOLVO	XC90	2005	Audio module (AUD)	Erase codes	V1.10.001
VOLVO	XC90	2005	CD player module (MP2)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO	XC90	2005	CD player module (MP2)	Reading off the control module ID	V1.10.001
VOLVO	XC90	2005	CD player module (MP2)	Read codes	V1.10.001
VOLVO	XC90	2005	CD player module (MP2)	Erase codes	V1.10.001
VOLVO	XC90	2005	Central electronic module (CEM)	Reading off extended diagnostic trouble code (DTC) information, central electronic module (CEM)	V1.10.001
VOLVO	XC90	2005	Central electronic module (CEM)	Reading control unit ID	V1.10.001
VOLVO	XC90	2005	Central electronic module (CEM)	Resetting the alternator setting	V1.10.001
VOLVO	XC90	2005	Central electronic module (CEM)	Resetting the low voltage counters	V1.10.001
VOLVO	XC90	2005	Central electronic module (CEM)	Resetting the car	V1.10.001
VOLVO	XC90	2005	Driver information module (DIM)	Read codes	V1.10.001
VOLVO	XC90	2005	Driver information module (DIM)	Erase codes	V1.10.001
VOLVO	XC90	2005	Driver information module (DIM)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO	XC90	2005	Driver information module (DIM)	Reading the control unit ID	V1.10.001
VOLVO	XC90	2005	Driver information module (DIM)	Resetting the digital display	V1.10.001
VOLVO	XC90	2005	Driver information module (DIM)	Activating components and functions	V1.10.001
VOLVO	XC90	2005	Driver information module (DIM)	Testing all displays and lamps in incident	V1.10.001
VOLVO	XC90	2005	Driver information module (DIM)	Programme the driver's seat adjustment signal, seat belt reminder	V1.10.001
VOLVO	XC90	2005	Driver information module (DIM)	Programming the driver information module (DIM)	V1.10.001
VOLVO	XC90	2005	Driver information module (DIM)	Reading off programmed values	V1.10.001
VOLVO	XC90	2005	Driver information module (DIM)	Resetting the service reminder indicator (SRI)	V1.10.001
VOLVO	XC90	2005	Driver information module (DIM)	Read codes	V1.10.001
VOLVO	XC90	2005	Infotainment control module (ICM)	Erase codes	V1.10.001
VOLVO	XC90	2005	Infotainment control module (ICM)	Reading off extended diagnostic trouble code (DTC) information, infotainment control module (ICM)	V1.10.001
VOLVO	XC90	2005	Infotainment control module (ICM)	Reading off the control module ID, infotainment control module (ICM)	V1.10.001
VOLVO	XC90	2005	Infotainment control module (ICM)	Resetting off parameters, digital display, infotainment control module (ICM)	V1.10.001
VOLVO	XC90	2005	Infotainment control module (ICM)	Activating components and functions, infotainment control module (ICM)	V1.10.001
VOLVO	XC90	2005	MD player module (MP1)	Read codes	V1.10.001
VOLVO	XC90	2005	MD player module (MP1)	Erase codes	V1.10.001
VOLVO	XC90	2005	MD player module (MP1)	Reading off extended diagnostic trouble code (DTC) information, MD module (MP1)	V1.10.001
VOLVO	XC90	2005	MD player module (MP1)	Reading off parameters, digital display, MD module (MP1)	V1.10.001
VOLVO	XC90	2005	Multimedia module (MMM)	Activating components/functions, MD module (MP1)	V1.10.001
VOLVO	XC90	2005	Multimedia module (MMM)	Read codes	V1.10.001
VOLVO	XC90	2005	Multimedia module (MMM)	Erase codes	V1.10.001
VOLVO	XC90	2005	Multimedia module (MMM)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO	XC90	2005	Multimedia module (MMM)	Reading off the control module ID	V1.10.001
VOLVO	XC90	2005	Phone module (PHM)	Read codes	V1.10.001
VOLVO	XC90	2005	Phone module (PHM)	Erase codes	V1.10.001
VOLVO	XC90	2005	Phone module (PHM)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO	XC90	2005	Phone module (PHM)	Reading out control module ID	V1.10.001
VOLVO	XC90	2005	Phone module (PHM)	Reading off parameters, digital display	V1.10.001
VOLVO	XC90	2005	Phone module (PHM)	Resetting the carphone case	V1.10.001
VOLVO	XC90	2005	Phone module (PHM)	Read codes	V1.10.001
VOLVO	XC90	2005	Phone module (PHM)	Erase codes	V1.10.001
VOLVO	XC90	2005	Rear electronic module (REM)	Reading off extended diagnostic trouble code (DTC) information, rear electrical module	V1.10.001
VOLVO	XC90	2005	Rear electronic module (REM)	Reading control unit ID	V1.10.001
VOLVO	XC90	2005	Rear electronic module (REM)	Resetting off parameters, digital display	V1.10.001
VOLVO	XC90	2005	Rear electronic module (REM)	Activating components and functions	V1.10.001
VOLVO	XC90	2005	Rear electronic module (REM)	Calibrating the position sensor for Bi-Xenon lamps	V1.10.001
VOLVO	XC90	2005	Rear electronic module (REM)	Reading off the alarm cause	V1.10.001
VOLVO	XC90	2005	Subwoofer module (SUB)	Read codes	V1.10.001
VOLVO	XC90	2005	Subwoofer module (SUB)	Erase codes	V1.10.001
VOLVO	XC90	2005	Upper electronic module (UEM)	Reading off the control module ID	V1.10.001
VOLVO	XC90	2005	Upper electronic module (UEM)	Read codes	V1.10.001
VOLVO	XC90	2005	Upper electronic module (UEM)	Erase codes	V1.10.001
VOLVO	XC90	2005	Upper electronic module (UEM)	Reading off extended diagnostic trouble code (DTC) information, upper electrical module	V1.10.001
VOLVO	XC90	2005	Upper electronic module (UEM)	Reading control unit ID	V1.10.001
VOLVO	XC90	2005	Upper electronic module (UEM)	Resetting off parameters	V1.10.001
VOLVO	XC90	2005	Upper electronic module (UEM)	Activating components and functions	V1.10.001
VOLVO	XC90	2005	Upper electronic module (UEM)	Programming the control unit	V1.10.001
VOLVO	XC90	2005	Upper electronic module (UEM)	Configuring the screen	V1.10.001
VOLVO	XC90	2005	Upper electronic module (UEM)	Replacing the control module	V1.10.001
VOLVO	XC90	2005	Upper electronic module (UEM)	Reading the programmed value	V1.10.001
VOLVO	XC90	2005	Upper electronic module (UEM)	Quick test of the tire pressure sensor	V1.10.001
VOLVO	XC90	2005	Differential electronic module (DEM)	Erase codes	V1.10.001
VOLVO	XC90	2005	Differential electronic module (DEM)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO	XC90	2005	Differential electronic module (DEM)	Reading off the control module ID	V1.10.001
VOLVO	XC90	2005	Differential electronic module (DEM)	Resetting off parameters	V1.10.001
VOLVO	XC90	2005	Differential electronic module (DEM)	Activating components and functions	V1.10.001
VOLVO	XC90	2005	Transmission control module (TCM)	Read codes	V1.10.001
VOLVO	XC90	2005	Transmission control module (TCM)	Erase codes	V1.10.001
VOLVO	XC90	2005	Transmission control module (TCM)	Reading off extended diagnostic trouble code (DTC) information, transmission control module (TCM)	V1.10.001
VOLVO	XC90	2005	Transmission control module (TCM)	Reading control unit ID	V1.10.001
VOLVO	XC90	2005	Transmission control module (TCM)	Resetting to the gearshift position	V1.10.001
VOLVO	XC90	2005	Anti-lock brake system module (ABS/BCM)	Erase codes	V1.10.001
VOLVO	XC90	2005	Anti-lock brake system module (ABS/BCM)	Reading off extended diagnostic trouble code (DTC) information, brake control module (BCM)	V1.10.001
VOLVO	XC90	2005	Anti-lock brake system module (ABS/BCM)	Reading off the control module ID	V1.10.001
VOLVO	XC90	2005	Anti-lock brake system module (ABS/BCM)	Parameter, digital display	V1.10.001
VOLVO	XC90	2005	Anti-lock brake system module (ABS/BCM)	Activating components and functions	V1.10.001
VOLVO	XC90	2005	Climate control module (CCM)	Read codes	V1.10.001
VOLVO	XC90	2005	Climate control module (CCM)	Erase codes	V1.10.001
VOLVO	XC90	2005	Climate control module (CCM)	Reading off extended diagnostic trouble code (DTC) information	V1.10.001
VOLVO	XC90	2005	Climate control module (CCM)	Reading off the control module ID	V1.10.001
VOLVO	XC90	2005	Climate control module (CCM)	Reading off parameters, digital display	V1.10.001
VOLVO	XC90	2005	Climate control module (CCM)	Activating components and functions	V1.10.001
VOLVO	XC90	2005	Climate control module (CCM)	Initialising the window option	V1.10.001
VOLVO	XC90	2005	Climate control module (CCM)	Programme soft stop	V1.10.001
VOLVO	XC90	2005	Climate control module (CCM)	Programming the remote control setting	V1.10.001
VOLVO	XC90	2005	Passenger door module (PDM)	Read codes	V1.10.001
VOLVO	XC90	2005	Passenger door module (PDM)	Erase codes	V1.10.001
VOLVO	XC90	2005	Passenger door module (PDM)	Reading off extended diagnostic trouble code (DTC) information, passenger door module	V1.10.001
VOLVO	XC90	2005	Passenger door module (PDM)	Reading control unit ID	V1.10.001
VOLVO	XC90	2005	Passenger door module (PDM)	Reading off parameters	V1.10.001
VOLVO	XC90	2005	Passenger door module (PDM)	Activating components and functions	V1.10.001
VOLVO	XC90	2005	Passenger door module (PDM)	Initialising the window position	V1.10.001
VOLVO	XC90	2005	Passenger door module (PDM)	Programme soft stop	V1.10.001
VOLVO	XC90	2005	Power seat module (PSM)	Read codes	V1.10.001

