	CITROEN_V01.10 Daig Function Lis	t(Note:For r	eference	only)				
NOTES:								
• This function	is supported.							
ℜ This function	may be supported, which depends on the actual	condition of the	vehicle.					
O This function	is not supported.							
▲ This function is the new feature in this version.								
Vehicle	System Name	EcuInfo.	Read Codes	Erase Codes	LiveData			
BERLINGO	Engine Control Moduel	•	•	•	•			
BERLINGO	Anti-lock Brake System	•	•	•	•			
BERLINGO	Airbag	•	•	•	•			
BERLINGO	Control Panel	•	•	•	•			
BERLINGO	Built-in System Interface	•	•	•	•			
BERLINGO	Parking Assistance Module	•	•	•	•			
BERLINGO	Steering Wheel With Fixed Central Control	•	•	•	•			
BERLINGO	Rain/Brightness Sensor	•	•	•	•			
BERLINGO	Additional Heating	•	•	•	•			
BERLINGO	Multifunction Display A	•	•	•	•			
BERLINGO	Service Module	•	•	•	•			
BERLINGO	CD Player	•	•	•	•			
BERLINGO	Radio	•	•	•	•			
BERLINGO	Alarm	•	•	•	•			
BERLINGO (B9)	Engine Control Moduel	•	•	•	•			
BERLINGO (B9)	Auto Gearbox	•	•	•	•			
BERLINGO (B9)	Anti-lock Brake System	•	•	•	•			
BERLINGO (B9)	Airbag	•	•	•	•			
BERLINGO (B9)	Control Panel	•	•	•	•			
BERLINGO (B9)	Built-in System Interface (BSI)	•	•	•	•			
BERLINGO (B9)	Air Conditioning	•	•	•	•			
BERLINGO (B9)	Passenger Compartment Air Heanting Resistor	•	•	•	•			
BERLINGO (B9)	Engine Relay Unit	•	•	•	•			
BERLINGO (B9)	Trailer Relay Unit	•	•	•	•			
BERLINGO (B9)	Electric Machine Management	•	•	•	•			
BERLINGO (B9)	Electric Power Steering	•	•	•	•			
BERLINGO (B9)	Electric Vehicle Management	•	•	•	•			
BERLINGO (B9)	Steering Wheel With Fixed Central Control	•	•	•	•			
BERLINGO (B9)	Parking Assistance Module	•	•	•	•			
BERLINGO (B9)	Rain/Brightness Sensor	•	•	•	•			
BERLINGO (B9)	Display/Telematics	•	•	•	•			
BERLINGO (B9)	Multifunction Display	•	•	•	•			
BERLINGO (B9)	Battery Change Status Unit	•	•	•	•			
BERLINGO (B9)	Multiplexed Additive Adding Pump	•	•	•	•			
BERLINGO (B9)	Hands-free Control Unit	•	•	•	•			
BERLINGO (B9)	High Frequency Receiver	•	•	•	•			
BERLINGO (B9)	Deflation Detection	•	•	•	•			
BERLINGO (B9)	Bodywork Conversion Unit	•	•	•	•			
BERLINGO (B9)	Anti-slip Mode Selector	•	•	•	•			
BERLINGO (B9)	Service Module	•	•	•	•			
BERLINGO (B9) BERLINGO (B9)	Traction Battery	•	•	•	•			
BERLINGO (B9)	Onboard Charger Of The Traction Battery Traction Battery Cells Management 1	•	•	•	•			
BERLINGO (B9)	Traction Battery Cells Management 1 Traction Battery Cells Management 2	•	•	•	•			
BERLINGO (B9)	Traction Battery Cells Management 2 Traction Battery Cells Management 3	•	•	•	•			
BERLINGO (B9)	Traction Battery Cells Management 4	•	•	•	•			
BERLINGO (B9)	Traction Battery Cells Management 4 Traction Battery Cells Management 5	•	•	•	•			
BERLINGO (B9)	Traction Battery Cells Management 5 Traction Battery Cells Management 7	•	•	•	•			
BERLINGO (B9) BERLINGO (B9)	Traction Battery Cells Management 7 Traction Battery Cells Management 8	•	•	•	•			
BERLINGO (B9)	Traction Battery Cells Management 8 Traction Battery Cells Management 9	•	•	•	•			
DEVETINGO (D9)	fraction dattery cells management 9	-	-		-			

BERLINGO (B9)	Traction Battery Cells Management 10	•	•	•	•
BERLINGO (B9)	CD Player	•	•	•	•
BERLINGO (B9)	Radio	•	•	•	•
BERLINGO (B9)	Alarm	•	•	•	•
C-ZERO	Electric Machine Management	•	•	•	•
C-ZERO	Electric Vehicle Management	•	•	•	•
C-ZERO	ASC	•	•	•	•
C-ZERO	ORC	•	•	•	•
C-ZERO	Instrument Cluster	•	•	•	•
C-ZERO	Air Conditioning	•	•	•	•
C-ZERO	Electric Power Steering	•	•	•	•
C-ZERO	Steering Wheel Angle Sensor	•	•	•	•
C-ZERO	Gateway Wiring Housing	•	•	•	•
C-ZERO	Direct Voltage Transformer	•	•	•	•
C-ZERO	Onboard Charger Of The Traction Battery	•	•	•	•
C-ZERO	Traction Battery	•	•	•	•
C-ZERO	Traction Battery Cells Management 1	•	•	•	•
C-ZERO	Traction Battery Cells Management 2	•	•	•	•
C-ZERO	Traction Battery Cells Management 3	•	•	•	•
	Traction Battery Cells Management 4	•	•	•	•
C-ZERO		-	-	-	-
C-ZERO	Traction Battery Cells Management 5	•	•	•	•
C-ZERO	Traction Battery Cells Management 7	•	•	•	•
C-ZERO	Traction Battery Cells Management 8	•	•	•	•
C-ZERO	Traction Battery Cells Management 9	•	•	•	•
C-ZERO	Traction Battery Cells Management 10	•	•	•	•
C-ZERO	Traction Battery Cells Management 11	•	•	•	•
C-ZERO	Service Module	•	•	•	•
C-ZERO	Radio	•	•	•	•
C1	Engine Control Moduel	•	•	•	•
C1	Manual Gearbox	•	•	•	•
C1	ABS/ESP	•	•	•	•
C1	Airbag	•	•	•	•
C1	Electric Power Steering	•	•	•	•
C1	Immobiliser	•	•	•	•
C1 (B4)	Engine Control Moduel	•	•	•	•
C1 (B4)	Auto Gearbox	•	•	•	•
C1 (B4)	Anti-lock Brake System	•	•	•	•
C1 (B4)	Airbag	•	•	•	•
C1 (B4)	Instrument Cluster	•	•	•	•
C1 (B4)	Air Conditioning	•	•	•	•
C1 (B4)	Electric Power Steering	•	•	•	•
C1 (B4)	Engine immobiliser/hands free starting access electric	•	•	•	•
C1 (B4)	module Start/Stop Control	•	•	•	•
C1 (B4)	Multifunction Display	•	•	•	•
C2	Engine Control Moduel	•	•	•	•
C2	Manual Gearbox	•	•	•	•
C2	Anti-lock Brake System	•	•	•	•
C2	Airbag	•	•	•	•
C2	Control Panel	•	•	•	•
C2	Built-in System Interface (BSI)	•	•	•	•
C2 C2	Air Conditioning	•	•	•	•
C2 C2	Electric Power Steering	•	•	•	•
C2	Steering Wheel With Fixed Central Control	•	•	•	•
C2	Engine Relay Unit	•	•	•	•
C2	Trailer Relay Unit	•	•	•	•
C2	Parking Assistance Module	•	•	•	•
C2	Hands-free Control Unit	•	•	•	•
C2	Start/Stop Control	•	•	•	•

C2	Rain/Brightness Sensor	•	•	•	•
C2	High Frequency Receiver	•	•	•	•
C2	Multifunction Display C	•	•	•	•
C2	Telematic Unit	•	•	•	•
C2 C2	CD Player	•	•	•	•
				-	-
C2	Radio	•	•	•	•
C2	Alarm	•	•	•	•
C2 (CHINA)	Engine Control Moduel	•	•	•	•
C2 (CHINA)	Auto Gearbox	•	•	•	•
C2 (CHINA)	Anti-lock Brake System	•	•	•	•
C2 (CHINA)	Airbag	•	•	•	•
C2 (CHINA)	Instrument Cluster	•	•	•	•
C2 (CHINA)	Built-in System Interface	•	•	•	•
C2 (CHINA)	Air Conditioning	•	•	•	•
C2 (CHINA)	Steering Wheel With Fixed Central Control	•	•	•	•
C3	Engine Control Moduel	•	•	•	•
C3	Auto Gearbox	•	•	•	•
C3	Anti-lock Brake System	•	•	•	•
C3	Airbag	•	•	•	•
C3	Control Panel	•	•	•	•
C3	Built-in System Interface	•	•	•	•
C3	Air Conditioning	•	•	•	•
C3	Electric Power Steering	•	•	•	•
C3	Steering Wheel With Fixed Central Control	•	•	•	•
C3	Parking Assistance Module	•	•	•	•
C3	Diesel Additive Function	•	•	•	•
C3	Rain/Brightness Sensor	•	•	•	•
C3	Multifunction Display A	•	•	•	•
C3	CD Player	•	•	•	•
C3	Radio	•	•	•	•
C3	Alarm	•	•	•	•
C3 (A51)	Engine Control Moduel	•	•	•	•
C3 (A51)	Auto Gearbox	•	•	•	•
C3 (A51)	Anti-lock Brake System	•	•	•	•
C3 (A51)	Airbag	•	•	•	•
C3 (A51)	Control Panel		•	•	•
C3 (A51)		•	•	•	•
	Built-in System Interface	-	•		-
C3 (A51)	Air Conditioning	•		•	•
C3 (A51)	Engine Relay Unit	•	•	•	•
C3 (A51)	Trailer Relay Unit	•	•	•	•
C3 (A51)	Electric Power Steering	•	•	•	•
C3 (A51)		-	-		
	Steering Wheel With Fixed Central Control	•	•	•	•
C3 (A51)	Multiplexed Diesel Additive Pump	•	•	•	•
C3 (A51)	Multiplexed Diesel Additive Pump Driver Door Control Panel	•	•	•	•
	Multiplexed Diesel Additive Pump	•	•	•	•
C3 (A51) C3 (A51) C3 (A51)	Multiplexed Diesel Additive Pump Driver Door Control Panel Seat Belt Reminder LED Battery Change Status Unit	• • •	• • •	• • • •	•
C3 (A51) C3 (A51)	Multiplexed Diesel Additive Pump Driver Door Control Panel Seat Belt Reminder LED	• • •	•	•	•
C3 (A51) C3 (A51) C3 (A51)	Multiplexed Diesel Additive Pump Driver Door Control Panel Seat Belt Reminder LED Battery Change Status Unit	• • •	• • •	• • • •	• • • • •
C3 (A51) C3 (A51) C3 (A51) C3 (A51) C3 (A51)	Multiplexed Diesel Additive Pump Driver Door Control Panel Seat Belt Reminder LED Battery Change Status Unit Hands-free Control Unit	• • •	• • • • • • • • • • • • • • • • • • • •	•	• • • • • • • • • • • • • • • • • • • •
C3 (A51) C3 (A51) C3 (A51) C3 (A51) C3 (A51) C3 (A51)	Multiplexed Diesel Additive Pump Driver Door Control Panel Seat Belt Reminder LED Battery Change Status Unit Hands-free Control Unit High Frequency Receiver	• • • •	• • • •	•	• • • • • • • • • • • • • • • • • • • •
C3 (A51) C3 (A51) C3 (A51) C3 (A51) C3 (A51) C3 (A51) C3 (A51)	Multiplexed Diesel Additive Pump Driver Door Control Panel Seat Belt Reminder LED Battery Change Status Unit Hands-free Control Unit High Frequency Receiver Driver School Module	• • • • •	• • • • •	• • • • •	• • • • •
C3 (A51) C3 (A51) C3 (A51) C3 (A51) C3 (A51) C3 (A51) C3 (A51) C3 (A51)	Multiplexed Diesel Additive Pump Driver Door Control Panel Seat Belt Reminder LED Battery Change Status Unit Hands-free Control Unit High Frequency Receiver Driver School Module Rain/Brightness Sensor	• • • • • • •	• • • • • •	• • • • • •	• • • • • •
C3 (A51) C3 (A51) C3 (A51) C3 (A51) C3 (A51) C3 (A51) C3 (A51) C3 (A51) C3 (A51) C3 (A51)	Multiplexed Diesel Additive Pump Driver Door Control Panel Seat Belt Reminder LED Battery Change Status Unit Hands-free Control Unit High Frequency Receiver Driver School Module Rain/Brightness Sensor Parking Assistance Module	• • • • • • • • • • •	• • • • • • • • • •	• • • • • • • •	• • • • • • •
C3 (A51) C3 (A51)	Multiplexed Diesel Additive Pump Driver Door Control Panel Seat Belt Reminder LED Battery Change Status Unit Hands-free Control Unit High Frequency Receiver Driver School Module Rain/Brightness Sensor Parking Assistance Module Display/Telematics	•           •	•           •	• • • • • • • • • • • • • •	• • • • • • • • • •
C3 (A51) C3 (A51)	Multiplexed Diesel Additive Pump Driver Door Control Panel Seat Belt Reminder LED Battery Change Status Unit Hands-free Control Unit High Frequency Receiver Driver School Module Rain/Brightness Sensor Parking Assistance Module Display/Telematics Multifunction Display	•           •	•           •	• • • • • • • • • • • • • • •	• • • • • • • • • • • • • • • •
C3 (A51) C3 (A51)	Multiplexed Diesel Additive Pump Driver Door Control Panel Seat Belt Reminder LED Battery Change Status Unit Hands-free Control Unit High Frequency Receiver Driver School Module Rain/Brightness Sensor Parking Assistance Module Display/Telematics Multifunction Display Service Module	•           •	•       •	• • • • • • • • • • • • • • • • • • •	• • • • • • • • • • • • • • • • • • •
C3       (A51)	Multiplexed Diesel Additive Pump Driver Door Control Panel Seat Belt Reminder LED Battery Change Status Unit Hands-free Control Unit High Frequency Receiver Driver School Module Rain/Brightness Sensor Parking Assistance Module Display/Telematics Multifunction Display Service Module Radio	•           •	0           0	•       •	•       •
C3       (A51)         C3       (A51)	Multiplexed Diesel Additive Pump Driver Door Control Panel Seat Belt Reminder LED Battery Change Status Unit Hands-free Control Unit High Frequency Receiver Driver School Module Rain/Brightness Sensor Parking Assistance Module Display/Telematics Multifunction Display Service Module Radio Alarm	•       •			

C3 (AIRCROSS)	Anti-lock Brake System	•	•	•	•
C3 (AIRCROSS)	Airbag	•	•	•	•
C3 (AIRCROSS)	Control Panel	•	•	•	•
C3 (AIRCROSS)	Built-in System Interface	•	•	•	•
C3 (AIRCROSS)	Air Conditioning	•	•	•	•
C3 (AIRCROSS)	Electric Power Steering	•	•	•	•
C3 (AIRCROSS)	Steering Wheel With Fixed Central Control	•	•	•	•
C3 (AIRCROSS)	Parking Assistance Module	•	•	•	•
C3 (AIRCROSS)	Rain/Brightness Sensor	•	•	•	•
C3 (AIRCROSS)	Trailer Relay Unit	•	•	•	•
C3 (AIRCROSS)	Stolen Vehicle Location Control Unit	•	•	•	•
C3 (AIRCROSS)	Telematic Unit	•	•	•	•
C3 (AIRCROSS)	Service Module	•	•	•	•
C3 (AIRCROSS)	Radio	•	•	•	•
C3 (AIRCROSS)	Alarm	•	•	•	•
C3 (NEW LOOK)	Engine Control Moduel	•	•	•	•
C3 (NEW LOOK)	Auto Gearbox	•	•	•	•
C3 (NEW LOOK)	Anti-lock Brake System	•	•	•	•
C3 (NEW LOOK)	Airbag	•	•	•	•
C3 (NEW LOOK)	Control Panel	•	•	•	•
C3 (NEW LOOK)	Built-in System Interface	•	•	•	•
C3 (NEW LOOK)	Air Conditioning	•	•	•	•
C3 (NEW LOOK)	Electric Power Steering	•	•	•	•
C3 (NEW LOOK)	Steering Wheel With Fixed Central Control	•	•	•	•
C3 (NEW LOOK)	Parking Assistance Module	•	•	•	•
C3 (NEW LOOK)	Engine Relay Unit	•	•	•	•
C3 (NEW LOOK)	Hands-free Control Unit	•	•	•	•
C3 (NEW LOOK)	Rain/Brightness Sensor	•	•	•	•
C3 (NEW LOOK)	Multifunction Display C	•	•	•	•
C3 (NEW LOOK)	Telematic RT3	•	•	•	•
C3 (NEW LOOK)	CD Player	•	•	•	•
C3 (NEW LOOK)	Radio	•	•	•	•
C3 (NEW LOOK)	Alarm	•	•	•	•
C3 (PLURIEL)	Engine Control Moduel	•	•	•	•
C3 (PLURIEL)	Manual Gearbox	•	•	•	•
C3 (PLURIEL)	Anti-lock Brake System	•	•	•	•
C3 (PLURIEL)	Airbag	•	•	•	•
C3 (PLURIEL)	Control Panel	•	•	•	•
C3 (PLURIEL)	Built-in System Interface	•	•	•	•
C3 (PLURIEL)	Air Conditioning	•	•	•	•
C3 (PLURIEL)	Electric Power Steering	•	•	•	•
C3 (PLURIEL)	Steering Wheel With Fixed Central Control	•	•	•	•
C3 (PLURIEL)	Parking Assistance Module	•	•	•	•
C3 (PLURIEL)	Engine Relay Unit	•	•	•	•
C3 (PLURIEL)	Hands-free Control Unit	•	•	•	•
C3 (PLURIEL)	Rain/Brightness Sensor	•	•	•	•
C3 (PLURIEL)	Multifunction Display C	•	•	•	•
C3 (PLURIEL)	Telematic RT3	•	•	•	•
C3 (PLURIEL)	CD Player	•	•	•	•
C3 (PLURIEL)	Radio	•	•	•	•
C3 (PICASSO)	Engine Control Moduel	•	•	•	•
C3 (PICASSO)	Auto Gearbox	•	•	•	•
C3 (PICASSO)	Anti-lock Brake System	•	•	•	•
C3 (PICASSO)	Airbag	•	•	•	•
C3 (PICASSO)	Control Panel	•	•	•	•
C3 (PICASSO)	Built-in System Interface (BSI)	•	•	•	•
C3 (PICASSO)	Air Conditioning	•	•	•	•
C3 (PICASSO)	Electric Power Steering	•	•	•	•

C3 (PICASSO)	Steering Wheel With Fixed Central Control	•	•	•	•
C3 (PICASSO)	Parking Assistance Module	•	•	•	•
C3 (PICASSO)	Engine Relay Unit	•	•	•	•
C3 (PICASSO)	Trailer Relay Unit	•	•	•	•
C3 (PICASSO)	Driver Door Control Panel	•	•	•	•
C3 (PICASSO)	Multiplexed Diesel Additive Pump	•	•	•	•
C3 (PICASSO)	High Frequency Receiver	•	•	•	•
C3 (PICASSO)	Rain/Brightness Sensor	•	•	•	•
C3 (PICASSO)	Hands-free Control Unit	•	•	•	•
C3 (PICASSO)	Battery Change Status Unit	•	•	•	•
C3 (PICASSO)	Seat Belt Reminder LED	•	•	•	•
C3 (PICASSO)	Service Module	•	•	•	•
C3 (PICASSO)	Multifunction Display	•	•	•	•
C3 (PICASSO)	Display/Telematics	•	•	•	•
	* *'	•	•	•	•
C3 (PICASSO)	Alarm	-	-	-	-
C3 (PICASSO)	Radio	•	•	•	•
C3 (XR)	Engine Control Moduel	•	•	•	•
C3 (XR)	Auto Gearbox	•	•	•	•
C3 (XR)	Anti-lock Brake System	•	•	•	•
C3 (XR)	Airbag	•	•	•	•
C3 (XR)	Control Panel	•	•	•	•
C3 (XR)	Built-in System Interface (BSI)	•	•	•	•
C3 (XR)	Electric Steering Lock	•	•	•	•
C3 (XR)	Electric Power Steering	•	•	•	•
C3 (XR)	Steering Wheel With Fixed Central Control	•	•	•	•
C3 (XR)	Parking Assistance Module	•	•	•	•
C3 (XR)	Hands-free Control Unit	•	•	•	•
C3 (XR)	Electric Key Reader	•	•	•	•
C3 (XR)	Battery Charge Status Unit	•	•	•	•
C3 (XR)	Anti-slip Mode Selector	•	•	•	•
C3 (XR)	Multiplexed Control Panel	•	•	•	•
C3 (XR)	Voltage Retaining Device	•	•	•	•
C3 (XR)	Multifunction Display	•	•	•	•
C3 (XR)	Telematic Unit	•	•	•	•
C3 (XR)	Service Module	•	•	•	•
C3 (XR)	Radio	•	•	•	•
C4	Engine Control Moduel	•	•	•	•
C4	Auto Gearbox	•	•	•	•
C4	Anti-lock Brake System	•	•	•	•
C4	Electric Secondary Brake	•	•	•	•
C4	Airbag	•	•	•	•
C4	Control Panel	•	•	•	•
C4	Built-in System Interface	•	•	•	•
C4	Air Conditioning	•	•	•	•
C4	Electric Power Steering	•	•	•	•
C4	Steering Wheel With Fixed Central Control	•	•	•	•
C4	Engine Relay Unit	•	•	•	•
C4	Diesel Additive Function	•	•	•	•
C4	Unit Rev Counter	•	•	•	•
C4	Driver Door Control Panel	•	•	•	•
C4	Passenger Door Module	•	•	•	•
C4	Driver Seat Memorizing Unit	•	•	•	•
C4 C4	Parking Assistance Module	•	•	•	•
C4 C4	Hands-free Control Unit	•	•	•	•
C4 C4				•	•
	Rain/Brightness Sensor	•	•	-	-
C4	Directional Headlamps	•	•	•	•
C4	High Frequency Receiver	•	•	•	•
C4	Lane Departure Warning System	•	•	•	•

C4	Light Pack Unit	•	•	•	•
C4	Pneumatic Suspension	•	•	•	•
C4	Trailer Relay Unit	•	•	•	•
C4	Windscreen Wiper	•	•	•	•
C4	Multifunction Display	•	•	•	•
C4	Display/Telematics	•	•	•	•
C4	Battery Change Status Unit	•	•	•	•
C4	Multiplexed Additive Adding Pump	•	•	•	•
C4	Service Module	•	•	•	•
C4	Deflation Detection	•	•	•	•
C4	Audio Amplifier	•	•	•	•
C4	Driver School Module	•	•	•	•
C4	CD Player	•	•	•	•
C4	Radio	•	•	•	•
		•	•	•	•
C4 (ALDCDOCC)	Alarm	-	-	-	-
C4 (AIRCROSS)	Engine Control Moduel	•	•	•	•
C4 (AIRCROSS)	Auto Gearbox	•	•	•	•
C4 (AIRCROSS)	Anti-lock Brake System	•	•	•	•
C4 (AIRCROSS)	Airbag	•	•	•	•
C4 (AIRCROSS)	Control Panel	•	•	•	•
C4 (AIRCROSS)	Air Conditioning	•	•	•	•
C4 (AIRCROSS)	Electric Power Steering	•	•	•	•
C4 (AIRCROSS)	Steering Wheel Angle Sensor	•	•	•	•
C4 (AIRCROSS)	Parking Assistance Module	•	•	•	•
C4 (AIRCROSS)	Start/Stop Control	•	•	•	•
C4 (AIRCROSS)	Starting Authorisation	•	•	•	•
C4 (AIRCROSS)	Locking And Immobiliser Control Module	•	•	•	•
C4 (AIRCROSS)	Rear Final Drive Piloted Clutch	•	•	•	•
C4 (AIRCROSS)	Navigation	•	•	•	•
C4 (AIRCROSS)	Radio	•	•	•	•
C4 (CACTUS)	Engine Control Moduel	•	•	•	•
C4 (CACTUS)	Auto Gearbox	•	•	•	•
C4 (CACTUS)	Anti-lock Brake System	•	•	•	•
C4 (CACTUS)	Airbag	•	•	•	•
C4 (CACTUS)	Control Panel	•	•	•	•
C4 (CACTUS)	Built-in System Interface (BSI)	•	•	•	•
C4 (CACTUS)	Air Conditioning	•	•	•	•
C4 (CACTUS)	Diesel Additive Function	•	•	•	•
C4 (CACTUS)	Electric Power Steering	•	•	•	•
C4 (CACTUS)	Steering Wheel With Fixed Central Control	•	•	•	•
C4 (CACTUS)	Parking Assistance Module	•	•	•	•
C4 (CACTUS)	Seat Belts Not Fastened LED Unit	•	•	•	•
C4 (CACTUS)	Trailer Relay Unit	•	•	•	•
C4 (CACTUS)	Rain/Brightness Sensor	•	•	•	•
C4 (CACTUS)	Battery Charge Status Unit	•	•	•	•
C4 (CACTUS)	Voltage Retaining Device	•	•	•	•
C4 (CACTUS)	Multiplexed Control Panel	•	•	•	•
C4 (CACTUS)	Service Module	•	•	•	•
C4 (CACTUS)	External CD Player	•	•	•	•
C4 (CACTUS)	Telematic Unit	•	•	•	•
C4 (CACTUS)	Touch Screen	•	•	•	•
C4 (PICASSO)	Engine Control Moduel	•	•	•	•
C4 (PICASSO)	Auto Gearbox	•	•	•	•
C4 (PICASSO)	Anti-lock Brake System	•	•	•	•
C4 (PICASSO)	Electric Secondary Brake	•	•	•	•
C4 (PICASSO)	Airbag	•	•	•	•
C4 (PICASSO)	Control Panel	•	•	•	•
C4 (PICASSO)	Built-in System Interface	•	•	•	•
				1	

C4 (PICASSO)	Air Conditioning	•	•	•	•
C4 (PICASSO)	Engine Relay Unit	•	•	•	•
C4 (PICASSO)	Trailer Relay Unit	•	•	•	•
C4 (PICASSO)	Diesel Additive Function	•	•	•	•
C4 (PICASSO)	Electric Power Steering	•	•	•	•
C4 (PICASSO)	Electric Steering Lock	•	•	•	•
C4 (PICASSO)	Steering Wheel With Fixed Central Control	•	•	•	•
C4 (PICASSO)	Parking Assistance Module	•	•	•	•
C4 (PICASSO)	Driver Door Control Panel	•	•	•	•
C4 (PICASSO)	Passenger Door Module	•	•	•	•
C4 (PICASSO)	Driver Seat Memorizing Unit	•	•	•	•
C4 (PICASSO)	Right Reversible Seat Belt Reel	•	•	•	•
C4 (PICASSO)	Left Reversible Seat Belt Reel	•	•	•	•
C4 (PICASSO)	Body Control Module	•	•	•	•
C4 (PICASSO)	Hands-free Control Unit	•	•	•	•
C4 (PICASSO)		•	•	•	•
	Multiplexed Additive Adding Pump Electric Key Reader	•	•	•	•
C4 (PICASSO)	•	-	•	-	•
C4 (PICASSO)	Battery Change Status Unit	•	-	•	-
C4 (PICASSO)	Rain/Brightness Sensor	•	•	•	•
C4 (PICASSO)	Directional Headlamps	•	•	•	•
C4 (PICASSO)	Unit Rev Counter	•	•	•	•
C4 (PICASSO)	Deflation Detection	•	•	•	•
C4 (PICASSO)	Pneumatic Suspension	•	•	•	•
C4 (PICASSO)	Driver School Module	•	•	•	•
C4 (PICASSO)	High Frequency Receiver	•	•	•	•
C4 (PICASSO)	Lane Departure Warning System	•	•	•	•
C4 (PICASSO)	Light Pack Unit	•	•	•	•
C4 (PICASSO)	Multifunction Camera	•	•	•	•
C4 (PICASSO)	Vehicle Distance Assistance	•	•	•	•
C4 (PICASSO)	Multiplexed Control Panel	•	•	•	•
C4 (PICASSO)	Signalling Fuse Box	•	•	•	•
C4 (PICASSO)	Supply Protection And Management Unit	•	•	•	•
C4 (PICASSO)	Windscreen Wiper	•	•	•	•
C4 (PICASSO)	Display/Telematics	•	•	•	•
C4 (PICASSO)	Multifunction Display	•	•	•	•
C4 (PICASSO)	Service Module	•	•	•	•
C4 (PICASSO)	Audio Amplifier	•	•	•	•
C4 (PICASSO)	CD Player	•	•	•	•
C4 (PICASSO)	Radio	•	•	•	•
C4 (PICASSO)	Alarm	•	•	•	•
C4 (PICASSO)	Siren	•	•	•	•
C4 (SEDAN)	Engine Control Moduel	•	•	•	•
C4 (SEDAN)	Auto Gearbox	•	•	•	•
C4 (SEDAN)	Anti-lock Brake System	•	•	•	•
C4 (SEDAN)	Electric Secondary Brake	•	•	•	•
C4 (SEDAN)	Airbag	•	•	•	•
C4 (SEDAN)	Control Panel	•	•	•	•
C4 (SEDAN)	Built-in System Interface	•	•	•	•
C4 (SEDAN)	Air Conditioning	•	•	•	•
C4 (SEDAN)	Engine Relay Unit	•	•	•	•
C4 (SEDAN)	Trailer Relay Unit	•	•	•	•
C4 (SEDAN)	Diesel Additive Function	•	•	•	•
C4 (SEDAN)	Electric Power Steering	•	•	•	•
C4 (SEDAN)	Steering Wheel With Fixed Central Control	•	•	•	•
C4 (SEDAN)	Parking Assistance Module	•	•	•	•
C4 (SEDAN)	Driver Door Control Panel	•	•	•	•
C4 (SEDAN)	Passenger Door Module	•	•	•	•
C4 (SEDAN)	Driver Seat Memorizing Unit	•	•	•	•
		1		1	

C4 (SEDAN)	Hands-free Control Unit	•	•	•	•
C4 (SEDAN)	Rain/Brightness Sensor	•	•	•	•
C4 (SEDAN)	Multiplexed Additive Adding Pump	•	•	•	•
C4 (SEDAN)	Directional Headlamps	•	•	•	•
C4 (SEDAN)	Driver School Module	•	•	•	•
C4 (SEDAN)	High Frequency Receiver	•	•	•	•
C4 (SEDAN)	Lane Departure Warning System	•	•	•	•
C4 (SEDAN)	Light Pack Unit	•	•	•	•
C4 (SEDAN)	Pneumatic Suspension	•	•	•	•
C4 (SEDAN)	Deflation Detection	•	•	•	•
C4 (SEDAN)	Unit Rev Counter	•	•	•	•
C4 (SEDAN)	Display/Telematics	•	•	•	•
C4 (SEDAN)	Multifunction Display	•	•	•	•
C4 (SEDAN)	Service Module	•	•	•	•
		•	•	•	•
C4 (SEDAN)	Battery Change Status Unit	-	-	-	-
C4 (SEDAN)	Audio Amplifier	•	•	•	•
C4 (SEDAN)	Windscreen Wiper	•	•	•	•
C4 (SEDAN)	CD Player	•	•	•	•
C4 (SEDAN)	Radio	•	•	•	•
C4 (SEDAN)	Alarm	•	•	•	•
C4L	Engine Control Moduel	•	•	•	•
C4L	Auto Gearbox	•	•	•	•
C4L	Anti-lock Brake System	•	•	•	•
C4L	Electric Secondary Brake	•	•	•	•
C4L	Airbag	•	•	•	•
C4L	Control Panel	•	•	•	•
C4L	Air Conditioning	•	•	•	•
C4L	Engine Relay Unit	•	•	•	•
C4L	Trailer Relay Unit	•	•	•	•
C4L	Electric Power Steering	•	•	•	•
C4L	Electric Steering Lock	•	•	•	•
C4L	Steering Wheel With Fixed Central Control	•	•	•	•
C4L	Driver Door Control Panel	•	•	•	•
C4L	Driver Seat Memorizing Unit	•	•	•	•
C4L	Seat Belts Not Fastened LED Unit	•	•	•	•
C4L	Parking Assistance Module	•	•	•	•
C4L	Directional Headlamps	•	•	•	•
C4L	Matrix Screen Integral To The Instrument Panel	•	•	•	•
C4L	Multiplexed Control Panel	•	•	•	•
C4L	Battery Change Status Unit	•	•	•	•
C4L	Electric Key Reader	•	•	•	•
C4L	Service Module	•	•	•	•
C4L	Supply Protection And Management Unit	•	•	•	•
C4L	Monitoring Of The Blind Spot	•	•	•	•
C4L C4L	Driver School Module	•	•	•	•
C4L C4L	Rain/Brightness Sensor	•	•	•	•
C4L C4L	Lane Departure Warning System	•	•	•	•
C4L C4L	Deflation Detection	•	•	•	•
C4L C4L		•	•	•	•
	Multiplexed Additive Adding Pump				
C4L	Display/Telematics	•	•	•	•
C4L	Multifunction Display	•	•	•	•
C4L	Audio Amplifier	•	•	•	•
C4L	Radio	•	•	•	•
C4L	Alarm	•	•	•	•
C5	Engine Control Moduel	•	•	•	•
C5	Auto Gearbox	•	•	•	•
	Airbag	•	•	•	•
C5 C5	Control Panel	•	•	•	•

			<b>-</b>		
C5	Built-in System Interface	•	•	•	•
C5	Air Conditioning	•	•	•	•
C5	Steering Wheel With Fixed Central Control	•	•	•	•
C5	Parking Assistance Module	•	•	•	•
C5	Rain/Brightness Sensor	•	•	•	•
C5	Multifunction Display A	•	•	•	•
C5	ADDGO 2	•	•	•	•
C5	ADDITIF FAP	•	•	•	•
C5	MDP PASSAG	•	•	•	•
					-
C5	MDP CONDUCT	•	•	•	•
C5	CD Player	•	•	•	•
C5	Radio	•	•	•	•
C5	Alarm	•	•	•	•
C5 (NEW)	Engine Control Moduel	•	•	•	•
C5 (NEW)	Auto Gearbox	•	•	•	•
C5 (NEW)	Anti-lock Brake System	•	•	•	•
C5 (NEW)	Airbag	•	•	•	•
C5 (NEW)	Built-in System Interface	•	•	•	•
C5 (NEW)	Air Conditioning	•	•	•	•
C5 (NEW)	Engine Relay Unit	•	•	•	•
	* .	-			-
C5 (NEW)	Electric Power Steering	•	•	•	•
C5 (NEW)	Steering Wheel With Fixed Central Control	•	•	•	•
C5 (NEW)	Parking Assistance Module	•	•	•	•
C5 (NEW)	Hands-free Control Unit	•	•	•	•
C5 (NEW)	Rain/Brightness Sensor	•	•	•	•
C5 (NEW)	Directional Headlamps	•	•	•	•
C5 (NEW)	Deflation Detection	•	•	•	•
C5 (NEW)	Ecotech Suspension	•	•	•	•
C5 (NEW)	Multifunction Display C	•	•	•	•
C5 (NEW)	Telematic RT3	•	•	•	•
C5 (NEW)	ADDGO 3	•	•	•	•
				-	-
C5 (NEW)	MDP CONDUCT	•	•	•	•
C5 (NEW)	MDP PASSAG	•	•	•	•
C5 (NEW)	CD Player	•	•	•	•
C5 (NEW)	Radio	•	•	•	•
C5 (NEW)	Alarm	•	•	•	•
C5 (X7)	Engine Control Moduel	•	•	•	•
C5 (X7)	Auto Gearbox	•	•	•	•
C5 (X7)	Anti-lock Brake System	•	•	•	•
C5 (X7)	Electric Secondary Brake	•	•	•	•
C5 (X7)	Airbag	•	•	•	•
C5 (X7)	Control Panel	•	•	•	•
C5 (X7)		•	•	•	•
	Built-in System Interface				
C5 (X7)	Air Conditioning	•	•	•	•
C5 (X7)	Electric Power Steering	•	•	•	•
C5 (X7)	Steering Wheel With Fixed Central Control	•	•	•	•
C5 (X7)	Engine Relay Unit	•	•	•	•
C5 (X7)	Trailer Relay Unit	•	•	•	•
C5 (X7)	Body Control Module	•	•	•	•
C5 (X7)	Driver Door Control Panel	•	•	•	•
C5 (X7)	Driver Seat Memorizing Unit	•	•	•	•
	Seat Belt Reminder LED	•	•	•	•
C5 (X7)			1	1	l
C5 (X7) C5 (X7)		•	•	•	•
C5 (X7)	Battery Change Status Unit	•	•	•	•
C5 (X7) C5 (X7)	Battery Change Status Unit Hands-free Control Unit	•	•	•	•
C5 (X7) C5 (X7) C5 (X7)	Battery Change Status Unit Hands-free Control Unit Rain/Brightness Sensor	•	•	•	•
C5 (X7) C5 (X7) C5 (X7) C5 (X7)	Battery Change Status Unit Hands-free Control Unit Rain/Brightness Sensor Parking Assistance Module	• • •	•	•	•
C5 (X7) C5 (X7) C5 (X7)	Battery Change Status Unit Hands-free Control Unit Rain/Brightness Sensor	•	•	•	•

C5 (X7)	High Frequency Receiver	•	•	•	•
C5 (X7)	Lane Departure Warning System	•	•	•	•
C5 (X7)	Display/Telematics	•	•	•	•
C5 (X7)	Service Module	•	•	•	•
C5 (X7)	Multifunction Display	•	•	•	•
C5 (X7)	Directional Headlamps	•	•	•	•
C5 (X7)	Deflation Detection	•	•	•	•
C5 (X7)	Additional Heating	•	•	•	•
C5 (X7)	Audio Amplifier	•	•	•	•
C5 (X7)	BASHE5	•	•	•	•
C5 (X7)	Windscreen Wiper	•	•	•	•
C5 (X7)	CD Player	•	•	•	•
C5 (X7)		•	•	•	-
	Radio				•
C5 (X7)	Alarm	•	•	•	•
C6	Engine Control Moduel	•	•	•	•
C6	Auto Gearbox	•	•	•	•
C6	Anti-lock Brake System	•	•	•	•
C6	Electric Secondary Brake	•	•	•	•
C6	Airbag	•	•	•	•
C6	Control Panel	•	•	•	•
C6	Built-in System Interface (BSI)	•	•	•	•
C6	Engine Relay Unit	•	•	•	•
C6	Trailer Relay Unit	•	•	•	•
C6	Boot Relay Unit	•	•	•	•
C6	Suspension	•	•	•	•
C6	Air Conditioning	•	•	•	•
C6	Rear Air Conditioning Panel	•	•	•	•
C6	Parking Assistance Module	•	•	•	•
C6	Steering Wheel With Fixed Central Control	•	•	•	•
C6	Driver Door Control Panel	•	•	•	•
C6	Passenger Door Module	•	•	•	•
C6	Driver Seat Memorizing Unit	•	•	•	•
C6	Passenger Seat Memorisation Unit	•	•	•	•
C6	Left Seat Switch Panel	•	•	•	•
C6	Right Seat Switch Panel	•	•	•	•
C6	Rear Seat Memorising Unit	•	•	•	•
C6	Battery Change Status Unit	•	•	•	•
C6	Rain/Brightness Sensor	•	•	•	•
C6	Directional Headlamps	•	•	•	•
C6	Deflation Detection	•	•	•	•
C6	Additional Heating	•	•	•	•
C6	Hands-free Control Unit	•	•	•	•
C6	High Frequency Receiver	•	•	•	•
C6		•	•	•	•
	High Head Vision Lane Departure Warning System		•	•	•
C6		•			
C6	Headlamp (Left)	•	•	•	•
C6	Headlamp (Right)	•	•	•	•
C6	Moving Panel Deflector	•	•	•	•
C6	Pedestrian Impact Detection	•	•	•	•
C6	Windscreen Wiper	•	•	•	•
C6	Boitier Telematique	•	•	•	•
C6	Multifunction Display	•	•	•	•
C6	CD Player	•	•	•	•
C6	Radio	•	•	•	•
			-		•
C6	Alarm	•	•	•	-
C8	Alarm Engine Control Moduel	•	•	•	•

C8	Airbag	•	•	•	•
C8	Control Panel	•	•	•	•
C8	Built-in System Interface (BSI)	•	•	•	•
C8	Air Conditioning	•	•	•	•
C8	Engine Relay Unit	•	•	•	•
C8	Trailer Relay Unit	•	•	•	•
C8	Diesel Additive Function	•	•	•	•
C8	Electric Power Steering	•	•	•	•
	ů				•
C8	Steering Wheel With Fixed Central Control	•	•	•	-
C8	Parking Assistance Module	•	•	•	•
C8	Driver Door Control Panel	•	•	•	•
C8	Passenger Door Module	•	•	•	•
C8	Sliding Side Door Module	•	•	•	•
C8	Driver Seat Memorizing Unit	•	•	•	•
C8	Hands-free Control Unit	•	•	•	•
C8	Additional Heating	•	•	•	•
C8	Rain/Brightness Sensor	•	•	•	•
C8	Multifunction Display	•	•	•	•
C8	Headlamp (Left)	•	•	•	•
C8	Headlamp (Right)	•	•	•	•
C8	Display/Telematics	•	•	•	•
C8	Telematic Unit	•	•	•	•
C8	LEDs And Odometer	•	•	•	•
C8	Deflation Detection	•	•	•	•
C8	Front Sunsroof	•	•	•	•
C8	Middle Sunroof	•	•	•	•
C8	Rear Sunroof	•	•	•	•
C8	CD Player	•	•	•	•
C8	Radio	•	•	•	•
C8	Alarm	•	•	•	•
C-CROSSER	Engine Control Moduel	•	•	•	•
C-CROSSER	Auto Gearbox	•	•	•	•
C-CROSSER	Anti-lock Brake System	•	•	•	•
C-CROSSER	Electronic Stability Program	•	•	•	•
C-CROSSER	Airbag	•	•	•	•
C-CROSSER	Control Panel	•	•	•	•
C-CROSSER	Air Conditioning	•	•	•	•
C-CROSSER	Steering Wheel Angle Sensor	•	•	•	•
C-CROSSER	Parking Assistance Module	•	•	•	•
C-CROSSER	Driver Door Control Panel	•	•	•	•
C-CROSSER	Passenger Door Switch Panel	•	•	•	•
C-CROSSER				•	•
	Rear Left Door Switch Panel	•	•	-	
C-CROSSER	Rear Left Door Switch Panel Rear Right Door Switch Panel	•	•	•	•
C–CROSSER C–CROSSER					•
	Rear Right Door Switch Panel	•	•	•	
C-CROSSER	Rear Right Door Switch Panel Rear Final Drive Piloted Clutch	•	•	•	•
C-CROSSER C-CROSSER	Rear Right Door Switch Panel Rear Final Drive Piloted Clutch Locking And Immobiliser Control Module	• • •	•	•	•
C-CROSSER C-CROSSER C-CROSSER	Rear Right Door Switch Panel Rear Final Drive Piloted Clutch Locking And Immobiliser Control Module Headlamp Beam Corrector	• • •	• • •	• • • •	•
C-CROSSER C-CROSSER C-CROSSER C-CROSSER	Rear Right Door Switch Panel Rear Final Drive Piloted Clutch Locking And Immobiliser Control Module Headlamp Beam Corrector Rain/Brightness Sensor	• • •	• • • • • • • • • • • • • • • • • • • •	•	• • • •
C-CROSSER C-CROSSER C-CROSSER C-CROSSER C-CROSSER C-CROSSER	Rear Right Door Switch Panel Rear Final Drive Piloted Clutch Locking And Immobiliser Control Module Headlamp Beam Corrector Rain/Brightness Sensor Hands-free Control Unit	• • • •	• • • •	•	•
C-CROSSER C-CROSSER C-CROSSER C-CROSSER C-CROSSER	Rear Right Door Switch Panel Rear Final Drive Piloted Clutch Locking And Immobiliser Control Module Headlamp Beam Corrector Rain/Brightness Sensor Hands-free Control Unit Gear Lever (DCT) Sunroof	• • • • •	• • • • •	• • • • •	• • • •
C-CROSSER C-CROSSER C-CROSSER C-CROSSER C-CROSSER C-CROSSER C-CROSSER C-CROSSER	Rear Right Door Switch Panel Rear Final Drive Piloted Clutch Locking And Immobiliser Control Module Headlamp Beam Corrector Rain/Brightness Sensor Hands-free Control Unit Gear Lever (DCT)	• • • • • • •	• • • • • • •	• • • • • •	• • • • •
C-CROSSER C-CROSSER C-CROSSER C-CROSSER C-CROSSER C-CROSSER C-CROSSER C-CROSSER C-CROSSER	Rear Right Door Switch Panel Rear Final Drive Piloted Clutch Locking And Immobiliser Control Module Headlamp Beam Corrector Rain/Brightness Sensor Hands-free Control Unit Gear Lever (DCT) Sunroof Navigation Radio	• • • • • • • • • •	•           •	• • • • • • • •	• • • • • •
C-CROSSER C-CROSSER C-CROSSER C-CROSSER C-CROSSER C-CROSSER C-CROSSER C-CROSSER C-CROSSER C-CROSSER C-CROSSER	Rear Right Door Switch Panel Rear Final Drive Piloted Clutch Locking And Immobiliser Control Module Headlamp Beam Corrector Rain/Brightness Sensor Hands-free Control Unit Gear Lever (DCT) Sunroof Navigation Radio Engine Control Moduel	•           •	•           •	• • • • • • • • • • • • • • •	• • • • • • • • • • •
C-CROSSER C-CROSSER C-CROSSER C-CROSSER C-CROSSER C-CROSSER C-CROSSER C-CROSSER C-CROSSER C-CROSSER C-CROSSER C-ELYSEE C-ELYSEE	Rear Right Door Switch Panel Rear Final Drive Piloted Clutch Locking And Immobiliser Control Module Headlamp Beam Corrector Rain/Brightness Sensor Hands-free Control Unit Gear Lever (DCT) Sunroof Navigation Radio Engine Control Moduel Auto Gearbox	•           •	•       •	• • • • • • • • • • • • • • • • • • •	• • • • • • • • • • • • • • • •
C-CROSSER C-CROSSER C-CROSSER C-CROSSER C-CROSSER C-CROSSER C-CROSSER C-CROSSER C-CROSSER C-CROSSER C-ELYSEE C-ELYSEE C-ELYSEE C-ELYSEE	Rear Right Door Switch Panel Rear Final Drive Piloted Clutch Locking And Immobiliser Control Module Headlamp Beam Corrector Rain/Brightness Sensor Hands-free Control Unit Gear Lever (DCT) Sunroof Navigation Radio Engine Control Moduel Auto Gearbox Anti-lock Brake System	•           •	0       0	•       •	• • • • • • • • • • • • • • • • • • •
C-CROSSER C-CROSSER C-CROSSER C-CROSSER C-CROSSER C-CROSSER C-CROSSER C-CROSSER C-CROSSER C-CROSSER C-ELYSEE C-ELYSEE C-ELYSEE C-ELYSEE C-ELYSEE	Rear Right Door Switch Panel Rear Final Drive Piloted Clutch Locking And Immobiliser Control Module Headlamp Beam Corrector Rain/Brightness Sensor Hands-free Control Unit Gear Lever (DCT) Sunroof Navigation Radio Engine Control Moduel Auto Gearbox Anti-lock Brake System SAC (SIEMENS)	•       •			• • • • • • • • • • • • • • • • • • •
C-CROSSER C-CROSSER C-CROSSER C-CROSSER C-CROSSER C-CROSSER C-CROSSER C-CROSSER C-CROSSER C-CROSSER C-CROSSER C-ELYSEE C-ELYSEE C-ELYSEE	Rear Right Door Switch Panel Rear Final Drive Piloted Clutch Locking And Immobiliser Control Module Headlamp Beam Corrector Rain/Brightness Sensor Hands-free Control Unit Gear Lever (DCT) Sunroof Navigation Radio Engine Control Moduel Auto Gearbox Anti-lock Brake System	•           •	0       0	•       •	• • • • • • • • • • • • • • • • • • •

C-ELYSEE (M3/M4)	Anti-lock Brake System	•	•	•	•
C-ELYSEE (M3/M4)	Airbag	•	•	•	•
C-ELYSEE (M3/M4)	Control Panel	•	•	•	•
C-ELYSEE (M3/M4)	Built-in System Interface (BSI)	•	•	•	•
C-ELYSEE (M3/M4)	Electric Power Steering	•	•	•	•
C-ELYSEE (M3/M4)	Steering Wheel With Fixed Central Control	•	•	•	•
C-ELYSEE (M3/M4)	Parking Assistance Module	•	•	•	•
C-ELYSEE (M3/M4)	Trailer Relay Unit	•	•	•	•
C-ELYSEE (M3/M4)	Multiplexed Addition Pump	•	•	•	•
C-ELYSEE (M3/M4)	Multifunction Display	•	•	•	•
C-ELYSEE (M3/M4)	* *	•	•	•	•
	Radio	•	•	•	
C-ELYSEE (M3/M4)	Siren				•
C-QUATRE	Engine Control Moduel	•	•	•	•
C-QUATRE	Auto Gearbox	•	•	•	•
C-QUATRE	Anti-lock Brake System	•	•	•	•
C-QUATRE	Airbag (AUTOLIV)	•	•	•	•
C-QUATRE	Control Panel	•	•	•	•
C-QUATRE	Built-in System Interface (BSI)	•	•	•	•
C-QUATRE	Air Conditioning	•	•	•	•
C-QUATRE	Engine Relay Unit	•	•	•	•
C-QUATRE	Electric Power Steering	•	•	•	•
C-QUATRE	Steering Wheel With Fixed Central Control	•	•	•	•
C-QUATRE	Parking Assistance Module	•	•	•	•
C-QUATRE	Rain/Brightness Sensor	•	•	•	•
C-QUATRE	Hands-free Control Unit	•	•	•	•
C-QUATRE	Multifunction Display	•	•	•	•
C-QUATRE	MDP CONDUCT	•	•	•	•
C-QUATRE	MDP PASSAG	•	•	•	•
C-QUATRE	Telematic RT3	•	•	•	•
C-QUATRE	CD Player	•	•	•	•
C-QUATRE	Radio	•	•	•	•
C-TRIOMPHE	Engine Control Moduel	•	•	•	•
C-TRIOMPHE	Auto Gearbox	•	•	•	•
C-TRIOMPHE	Anti-lock Brake System	•	•	•	•
C-TRIOMPHE	Airbag	•	•	•	•
C-TRIOMPHE	Built-in System Interface	•	•	•	•
C-TRIOMPHE	Air Conditioning	•	•	•	•
C-TRIOMPHE	Engine Relay Unit	•	•	•	•
C-TRIOMPHE	Engine Service Box	•	•	•	•
C-TRIOMPHE	Tachometer Control Box	•	•	•	•
C-TRIOMPHE	Electric Power Steering	•	•	•	•
C-TRIOMPHE	Steering Wheel With Fixed Central Control	•	•	•	•
	*	•		•	
C-TRIOMPHE C-TRIOMPHE	Passenger Door Module	•	•	•	•
	Adjustable Headlight			•	
C-TRIOMPHE	Parking Assistance Module	•	•		•
C-TRIOMPHE	Hands-free Control Unit	•	•	•	•
C-TRIOMPHE	Rain/Brightness Sensor	•	•	•	•
C-TRIOMPHE	Multifunction Display C	•	•	•	•
C-TRIOMPHE	MDP CONDUCT	•	•	•	•
C-TRIOMPHE	Telematic RT3	•	•	•	•
C-TRIOMPHE	CD Player	•	•	•	•
C-TRIOMPHE	Radio	•	•	•	•
C-TRIOMPHE	Alarm	•	•	•	•
DS3	Engine Control Moduel	•	•	•	•
DS3	Auto Gearbox	•	•	•	•
DS3	Anti-lock Brake System	•	•	•	•
DS3	Airbag	•	•	•	•
DS3	Control Panel	•	•	•	•
		•	•		

DS3	Built-in System Interface	•	•	•	•
DS3	Air Conditioning	•	•	•	•
DS3	Engine Relay Unit	•	•	•	•
DS3	Trailer Relay Unit	•	•	•	•
DS3	Electric Power Steering	•	•	•	•
DS3	Steering Wheel With Fixed Central Control	•	•	•	•
DS3	Multiplexed Diesel Additive Pump	•	•	•	•
DS3	Parking Assistance Module	•	•	•	•
DS3	Battery Change Status Unit	•	•	•	•
DS3	Hands-free Control Unit	•	•	•	•
DS3		•	•	•	•
DS3	High Frequency Receiver	•	•	•	•
	Rain/Brightness Sensor	•	•	•	
DS3	Seat Belt Reminder LED				•
DS3	Service Module	•	•	•	•
DS3	Multifunction Display	•	•	•	•
DS3	Display/Telematics	•	•	•	•
DS3	Radio	•	•	•	•
DS3	Alarm	•	•	•	•
DS4	Engine Control Moduel	•	•	•	•
DS4	Auto Gearbox	•	•	•	•
DS4	Anti-lock Brake System	•	•	•	•
DS4	Electric Secondary Brake	•	•	•	•
DS4	Airbag	•	•	•	•
DS4	Control Panel	•	•	•	•
DS4	Built-in System Interface (BSI)	•	•	•	•
DS4	Air Conditioning	•	•	•	•
DS4	Trailer Relay Unit	•	•	•	•
DS4	Engine Relay Unit	•	•	•	•
DS4	Electric Power Steering	•	•	•	•
DS4	Steering Wheel With Fixed Central Control	•	•	•	•
DS4	Battery Charge Status Unit	•	•	•	•
DS4	Matrix Screen Integral To The Instrument Panel	•	•	•	•
DS4	Multiplexed Additive Adding Pump	•	•	•	•
DS4	Lane Departure Warning System	•	•	•	•
DS4	Parking Assistance Module	•	•	•	•
DS4	Driver Door Control Panel	•	•	•	•
DS4	Driver Seat Memorizing Unit	•	•	•	•
DS4	Seat Belts Not Fastened LED Unit	•	•	•	•
DS4	Rain/Brightness Sensor	•	•	•	•
DS4	Driver School Module	•	•	•	•
DS4	Monitoring Of The Blind Spot	•	•	•	•
DS4	Supply Protection And Management Unit	•	•	•	•
DS4	Directional Headlamps	•	•	•	•
DS4	Multifunction Display	•	•	•	•
DS4	Display/Telematics	•	•	•	•
DS4	Multiplexed Control Panel	•	•	•	•
DS4	Deflation Detection	•	•	•	•
DS4 DS4	Audio Amplifier	•	•	•	•
DS4 DS4	Service Module	•	•	•	•
DS4 DS4	Alarm	•	•	•	•
DS4 DS4	Radio	•	•	•	•
DS4 DS5		•	•	•	•
	Engine Control Moduel		-		-
DS5	Auto Gearbox	•	•	•	•
DS5	Anti-lock Brake System	•	•	•	•
DS5	Airbag	•	•	•	•
DS5	Control Panel	•	•	•	•
DS5	Air Conditioning	•	•	•	•
DS5	Engine Relay Unit		•	•	•

		-	1 -	1_	-
DS5	Trailer Relay Unit	•	•	•	•
DS5	Electric Steering Lock	•	•	•	•
DS5	Electric Power Steering	•	•	•	•
DS5	Steering Wheel With Fixed Central Control	•	•	•	•
DS5	Parking Assistance Module	•	•	•	•
DS5	Hands-free Control Unit	•	•	•	•
DS5	Electric Key Reader	•	•	•	•
DS5	Rain/Brightness Sensor	•	•	•	•
				•	•
DS5	Driver Seat Memorizing Unit	•	•	-	-
DS5	Seat Belts Not Fastened LED Unit	•	•	•	•
DS5	Battery Charge Status Unit	•	•	•	•
DS5	Directional Headlamps	•	•	•	•
DS5	Traction Battery	•	•	•	•
DS5	Matrix Screen Integral To The Instrument Panel	•	•	•	•
DS5	Multiplexed Additive Adding Pump	•	•	•	•
DS5	Supply Protection And Management Unit	•	•	•	•
DS5	Service Module	•	•	•	•
DS5	Multifunction Display	•	•	•	•
DS5	Display/Telematics	•	•	•	•
DS5		-	-	•	•
	Windscreen Wiper	•	•	-	-
DS5	Telematic Navigator	•	•	•	•
DS5	Vibrators Control	•	•	•	•
DS5	Multifunction Camera	•	•	•	•
DS5	Deflation Detection	•	•	•	•
DS5	High Head Vision	•	•	•	•
DS5	Audio Amplifier	•	•	•	•
DS5	Multiplexed Control Panel	•	•	•	•
DS5	Hybrid Mode Selector	•	•	•	•
DS5	Hybrid Control 1	•	•	•	•
DS5	Clock	•	•	•	•
DS5		•	•	•	•
	Radio	-	-	-	-
DS5	Alarm	•	•	•	•
DS5 (Hybird 4)	Engine Control Moduel	•	•	•	•
DS5 (Hybird 4)	Auto Gearbox	•	•	•	•
DS5 (Hybird 4)	Anti-lock Brake System	•	•	•	•
DS5 (Hybird 4)	Airbag	•	•	•	•
DS5 (Hybird 4)	Control Panel	•	•	•	•
DS5 (Hybird 4)	Air Conditioning	•	•	•	•
DS5 (Hybird 4)	Engine Relay Unit	•	•	•	•
DS5 (Hybird 4)	Trailer Relay Unit	•	•	•	•
DS5 (Hybird 4)	Electric Steering Lock	•	•	•	•
DS5 (Hybird 4)	Electric Power Steering	•	•	•	•
DS5 (Hybird 4)	-	•	•	•	•
	Steering Wheel With Fixed Central Control				
DS5 (Hybird 4)	Parking Assistance Module	•	•	•	•
DS5 (Hybird 4)	Hands-free Control Unit	•	•	•	•
DS5 (Hybird 4)	Electric Key Reader	•	•	•	•
DS5 (Hybird 4)	Driver Seat Memorizing Unit	•	•	•	•
DS5 (Hybird 4)	Seat Belts Not Fastened LED Unit	•	•	•	•
DS5 (Hybird 4)	Directional Headlamps	•	•	•	•
DS5 (Hybird 4)	Matrix Screen Integral To The Instrument Panel	•	•	•	•
DS5 (Hybird 4)	Battery Charge Status Unit	•	•	•	•
DS5 (Hybird 4)	Multiplexed Additive Adding Pump	•	•	•	•
DS5 (Hybird 4)	Supply Protection And Management Unit	•	•	•	•
DS5 (Hybird 4)	Rain/Brightness Sensor	•	•	•	•
DS5 (Hybird 4)	Service Module	•	•	•	•
DOU (HYDIFU 4)	DETATCE MOUNTE	-		-	
DS5 (Hart in 1 4)	Multifunction Dianlay				
DS5 (Hybird 4)	Multifunction Display	•	•	•	•
DS5 (Hybird 4) DS5 (Hybird 4) DS5 (Hybird 4)	Multifunction Display Display/Telematics Windscreen Wiper	• • •	• • •	• • •	• • •

DS5 (Hybird 4)	Hybrid Mode Selector	•	•	•	•
DS5 (Hybird 4)	Traction Battery	•	•	•	•
	Hybrid Control 1	•	•	•	•
	Hybrid Control 2	•	•	•	•
	Telematic Navigator	•	•	•	•
	Vibrators Control	•	•	•	•
		•	•	•	•
	Multifunction Camera	•	•	•	•
	Multiplexed Control Panel			-	-
	Deflation Detection	•	•	•	•
	High Head Vision	•	•	•	•
DS5 (Hybird 4)	Audio Amplifier	•	•	•	•
DS5 (Hybird 4)	Clock	•	•	•	•
DS5 (Hybird 4)	Radio	•	•	•	•
DS5 (Hybird 4)	Alarm	•	•	•	•
DS 5LS	Engine Control Moduel	•	•	•	•
DS 5LS	Auto Gearbox	•	•	•	•
	Anti-lock Brake System	•	•	•	•
	Electric Secondary Brake	•	•	•	•
	Airbag	•	•	•	•
DS 5LS	Control Panel	•	•	•	•
DS 5LS	Air Conditioning	•	•	•	•
DS 5LS	Engine Relay Unit	•	•	•	•
DS 5LS	Electric Power Steering	•	•	•	•
DS 5LS	Electric Steering Lock	•	•	•	•
DS 5LS	Steering Wheel With Fixed Central Control	•	•	•	•
DS 5LS	Parking Assistance Module	•	•	•	•
DS 5LS	Battery Charge Status Unit	•	•	•	•
DS 5LS	Rain/Brightness Sensor	•	•	•	•
DS 5LS	Matrix Screen Integral To The Instrument Panel	•	•	•	•
DS 5LS	Supply Protection And Management Unit	•	•	•	•
DS 5LS	Hands-free Control Unit	•	•	•	•
DS 5LS	Electric Key Reader	•	•	•	•
DS 5LS	Audio Amplifier	•	•	•	•
DS 5LS	Directional Headlamps	•	•	•	•
DS 5LS	Services Module	•	•	•	•
DS 5LS	Under Inflation Detection	•	•	•	•
DS 5LS	Multifunction Display	•	•	•	•
DS 5LS	Audio/Navigation/Air Conditioning	•	•	•	•
DS 5LS	Telematic Unit	•	•	•	•
DS 5LS	Radio	•	•	•	•
DS 5LS	Alarm	•	•	•	•
DS6	Engine Control Moduel	•	•	•	•
DS6	Auto Gearbox	•	•	•	•
DS6	Anti-lock Brake System	•	•	•	•
DS6	Electric Secondary Brake	•	•	•	•
	Airbag	•	•	•	•
	Control Panel	•	•	•	•
DS6	Air Conditioning	•	•	•	•
DS6	Engine Relay Unit	•	•	•	•
DS6	Electric Steering Lock	•	•	•	•
DS6	Electric Power Steering	•	•	•	•
	Steering Wheel With Fixed Central Control	•	•	•	•
DS6	Parking Assistance Module	•	•	•	•
	Body Control Module	•	•	•	•
	Rain/Brightness Sensor	•	•	•	•
	Directional Headlamps	•	•	•	•
DS6	Hands-free Control Unit				
DS6 DS6	Hands-free Control Unit Electric Key Reader	•	•	•	•

DS6 Ma DS6 Su DS6 Ba DS6 Si DS6 Ar	oltage Retaining Device atrix Screen Integral To The Instrument Panel upply Protection And Management Unit	•	•	•	•
DS6 Su DS6 Ba DS6 Si DS6 Ar	upply Protection And Management Unit	•	•	•	
DS6 Su DS6 Ba DS6 Si DS6 Ar	upply Protection And Management Unit			•	•
DS6 Ba DS6 Si DS6 Ar		•	•	•	•
DS6 Si DS6 An	attery Charge Status Unit	•	•	•	•
DS6 Ar	ignalling Fuse Box	•	•	•	•
	nti-slip Mode Selector	•	•	•	•
200	udio Amplifier	•	•	•	•
DS6 Se	ervices Module	•	•	•	•
	ultifunction Display	•	•	•	•
	udio/Navigation/Air Conditioning	•	•	•	•
	elematic Unit	•	•	•	•
	larm	•	•	•	•
	ngine Control Moduel	•	•	•	•
	uto Gearbox	•	•	•	•
		-	-	•	•
	nti-lock Brake System	•	•	-	-
	irbag (SIEMENS)	•	•	•	•
	irbag (AUTOLIV)	•	•	•	•
	lectric Key Reader	•	•	•	•
	ngine Control Moduel	•	•	•	•
· · · ·	uto Gearbox	•	•	•	•
	BS (5.3)	•	•	•	•
EVASION (SYNERGIE) Ai	irbag (AUTOLIV)	•	•	•	•
FUKANG En	ngine Control Moduel	•	•	•	•
FUKANG Au	uto Gearbox	•	•	•	•
FUKANG Ar	nti-lock Brake System	•	•	•	•
JUMPY (DISPATCH) En	ngine Control Moduel	•	•	•	•
JUMPY (DISPATCH) Au	uto Gearbox	•	•	•	•
JUMPY (DISPATCH) Ar	nti-lock Brake System	•	•	•	•
JUMPY (DISPATCH) Ai	irbag	•	•	•	•
JUMPY (DISPATCH) Co	ontrol Panel	•	•	•	•
JUMPY (DISPATCH) BU	uilt-in System Interface	•	•	•	•
JUMPY (DISPATCH) Ai	ir Conditioning	•	•	•	•
JUMPY (DISPATCH) Re	ear Air Conditioning Panel	•	•	•	•
JUMPY (DISPATCH) En	ngine Relay Unit	•	•	•	•
JUMPY (DISPATCH) Tr	railer Relay Unit	•	•	•	•
	lectric Power Steering	•	•	•	•
	teering Wheel With Fixed Central Control	•	•	•	•
с ( )	arking Assistance Module	•	•	•	•
	ands-free Control Unit	•	•	•	•
	dditional Heating	•	•	•	•
	ultifunction Display	•	•	•	•
	ain/Brightness Sensor	•	•	•	•
	aln/Brightness Sensor odywork Conversion Unit	•	•	•	•
	•	•	•	•	•
	neumatic Suspension				
	nti-slip Mode Selector	•	•	•	•
	attery Change Status Unit	•	•	•	•
	igh Frequency Receiver	•	•	•	•
	eflation Detection	•	•	•	•
	isplay/Telematics	•	•	•	•
	D Player	•	•	•	•
	adio	•	•	•	•
JUMPY (DISPATCH) A1	larm	•	•	•	•
JUMPER (RELAY) En	ngine Control Moduel	•	•	•	•
JUMPER (RELAY) Ar	nti-lock Brake System	•	•	•	•
JUMPER (RELAY) Co	ontrol Panel	•	•	•	•
JUMPER (RELAY) Ai	ir Conditioning	•	•	•	•
JUMPER (RELAY) E1	lectric Power Steering	•	•	•	•

JUMPER (RELAY)	Parking Assistance Module	•	•	•	•
JUMPER (RELAY)	Additional Heating	•	•	•	•
NEMO	Auto Gearbox	•	•	•	•
NEMO	Anti-lock Brake System	•	•	•	•
NEMO	Airbag	•	•	•	•
NEMO	Control Panel	•	•	•	•
NEMO	Parking Assistance Module	•	•	•	•
SAXO	Engine Control Moduel	•	•	•	•
SAXO	Auto Gearbox	•	•	•	•
SAXO	Anti-lock Brake System	•	•	•	•
SAXO	Airbag	•	•	•	•
SAXO	Electric Key Reader	•	•	•	•
XSARA	Engine Control Moduel	•	•	•	•
XSARA	Auto Gearbox	•	•	•	•
XSARA	Anti-lock Brake System	•	•	•	•
		•	-	•	•
XSARA	Airbag	-	•	-	•
XSARA	Control Panel	•	•	•	•
XSARA	Built-in System Interface	•	•	•	•
XSARA	Air Conditioning	•	•	•	•
XSARA	Parking Assistance Module	•	•	•	•
XSARA	Steering Wheel With Fixed Central Control	•	•	•	•
XSARA	Rain/Brightness Sensor	•	•	•	•
XSARA	Multifunction Display B	•	•	•	•
XSARA	Radio	•	•	•	•
XSARA	CD Player	•	•	•	•
XSARA	Alarm	•	•	•	•
XSARA (PICASSO)	Engine Control Moduel	•	•	•	•
XSARA (PICASSO)	Auto Gearbox	•	•	•	•
XSARA (PICASSO)	Anti-lock Brake System	•	•	•	•
XSARA (PICASSO)	Airbag	•	•	•	•
XSARA (PICASSO)	Instrument Cluster	•	•	•	•
XSARA (PICASSO)	Built-in System Interface	•	•	•	•
XSARA (PICASSO)	Air Conditioning	•	•	•	•
XSARA (PICASSO)	Parking Assistance Module	•	•	•	•
XSARA (PICASSO)	Steering Wheel With Fixed Central Control	•	•	•	•
	Rain/Brightness Sensor	•	•	•	•
XSARA (PICASSO)	Multifunction Display B	•	•	•	•
XSARA (PICASSO)	ADDGO 2	•	•	•	•
XSARA (PICASSO)	CD Player	•	•	•	•
XSARA (PICASSO)	Radio	•	•	•	•
XSARA (PICASSO)			-	-	-
	Alarm	•	•	•	•
XSARA (PICASSO) (CHINA)	Engine Control Moduel	•	•	•	•
XSARA (PICASSO)	Auto Gearbox	•	•	•	•
(CHINA) XSARA (PICASSO)	Anti-lock Brake System	•	•	•	•
(CHINA)					
XSARA (PICASSO) (CHINA)	Airbag (AUTOLIV)	•	•	•	•
XSARA (PICASSO)	Control Panel	•	•	•	•
(CHINA) XSARA (PICASSO)	Air Conditioning	•	•	•	•
(CHINA) XSARA (PICASSO)	Parking Assistance Module	•	•	•	•
(CHINA) XSARA (PICASSO)	Steering Wheel With Fixed Central Control	•	•	•	•
(CHINA)					-
XSARA (PICASSO) (CHINA)	Rain/Brightness Sensor	•	•	•	•
XSARA (PICASSO) (CHINA)	Multifunction Display B	•	•	•	•
XSARA (PICASSO)	ADDGO 2	•	•	•	•
(CHINA) XSARA (PICASSO)	CD Player	•	•	•	•
(CHINA)					

XSARA (PICASSO) (CHINA)	Radio	•	•	•	•
XANTIA	Engine Control Moduel	•	•	•	•
XANTIA	Airbag	•	•	•	•
XANTIA	Airbag (Left)	•	•	•	•
XANTIA	CPH_TEXTON	•	•	•	•
XANTIA	TEVES_MK20E	•	•	•	•
XM	Engine Control Moduel	•	•	•	•
XM	Anti-lock Brake System	•	•	•	•
ZX	Engine Control Moduel	•	•	•	•
ZX	Auto Gearbox	•	•	•	•