## BENZ BSC Function List (Note:For reference only)

## NOTES:

• This function is supported.

\* This function may be supported, which depends on the actual condition of the vehicle.

O This function is not supported.

▲ This function is the new feature in this version.

▲ This function is the new feature in this version.			
Chassis	Model Year	BSC	
CLA(117)	ALL	•	
124	ALL	•	
SL (129)	Up to 08/99	•	
SL(129)	As Of 09/99	•	
S(140)	ALL	•	
GLA (156)	ALL	•	
ML(163)	ALL	•	
M(164)	ALL	•	
GL (164)	ALL	•	
ML(166)	ALL	•	
GL(166)	ALL	•	
A(168)	ALL	•	
A(169)	Up To 11/2005	•	
A(169)	As Of 12/2005	•	
SLK (170)	16-PIN	•	
SLK (170)	38-PIN	•	
SLK (171)	Up To 05/2005	•	
SLK (171)	As Of 06/2005	•	
SLK (172)	ALL	•	
A(176)	ALL	•	
SLS (197)	ALL	•	
SLR (199)	ALL	•	
C(202)	Up to 05/97	•	
C(202)	As Of 06/97	•	
CLC (203)	Up To 08/2003	•	
CLC (203)	As Of 09/2003	•	
CLC (203)	As Of 01/2008	•	
C(204)	ALL	•	
GLK (204)	ALL	•	
C(205)	ALL	•	
E(207)	ALL	•	
CLK (208)	ALL	•	
CLK (209)	Up To 03/2004	•	
CLK (209)	As Of 04/2004	•	
E(210)	Up to 02/97	•	
E(210)	As Of 03/97	•	
E(211)	Up To 05/2005	•	
E(211)	From 06/2005 To 05/2006	•	
E(211)	As Of 06/2006	•	
E(212)	ALL	•	
CL (215)	Up To 08/2002	•	
CL (215)	As Of 09/2002	•	
CL (216)	ALL	•	
S(217)	ALL	•	
CLS (218)	ALL	•	
CLS (219)	Up To 05/2005	•	
CLS (219)	From 06/2005 To 05/2006	•	

CLS (219)	As Of 06/2006	•
S (220)	Up To 08/2002	•
S (220)	As Of 09/2002	•
S(221)	Up To 06/2009	•
S(221)	As Of 07/2009	•
S (222)	ALL	•
SL (230)	Up To 08/2003	•
SL (230)	From 09/2003 To 02/2008	•
SL (230)	AS Of 03/2008	•
SL (231)	ALL	•
Maybach (240)	Up To 08/2006	•
Maybach (240)	As Of 09/2006	•
B(242)	ALL	•
B(245)	Up To 11/2005	•
B(245)	As Of 12/2005	•
B(246)	ALL	•
R(251)	ALL	•
GLC (253)	ALL	•
M(292)	ALL	•
G(461)	Up To 02/2007(16-PIN)	•
G(461)	As Of 03/2007(16-PIN)	•
G(461)	38-PIN	•
G (463)	Up To 03/2004(16-PIN)	•
G(463)	From 04/2004 To 08/2006(16-PIN)	•
G (463)	From 09/2006 To 02/2007(16-PIN)	•
G (463)	From 03/2007 To 12/2011(16-PIN)	•
G (463)	From 01/2012 To 12/2017(16-PIN)	•
G (463)	38-PIN	•
	DOC D	T • .

## BSC Function List

Calibrate control unit 'N30/4 (Electronic Stability Program control unit)'

Calibration of component 'A7/3(Traction system hydraulic unit)'

Calibration of component 'Acceleration sensor'

Calibration of control unit RBS

Calibration of intake valves

Calibration of long range radar sensor

Calibration of separation valves

Code brake

Code steering ratio

Coding

Development data

Driving test

ESP(R) calibration at standstill

Initial startup

Learning process

Resetting of variant locking

Resetting value 'Clutch grip point'

Standstill test

Teach in component 'B24/5 (Yaw rate sensor for lateral and longitudinal acceleration)'

Teach in component 'B37/1 (Pedal angle sensor)'

Teach-in component 'ESP(R) control valves'

Teach-in of sensors

Test of component 'S9/1(Brake light switch)'