

Jaguar_V01.30 ETC Fuction List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

VehicleType	ModelYear	Engine Type	ETCS
XJ	2013-2015	Supercharged V6	●
XJ	2013-2015	Normally aspirated V8	●
XJ	2013-2015	Supercharged V8	●
XJ	2010-2012	Normally aspirated V6	●
XJ	2010-2012	Normally aspirated V8	●
XJ	2010-2012	Supercharged V8	●
XJ	2008-2009	Normally aspirated V6	●
XJ	2008-2009	Normally aspirated V8	●
XJ	2008-2009	Supercharged V8	●
XJ	2008-2009	Diesel V6	●
XJ	2006-2007	Normally aspirated V6	●
XJ	2006-2007	Normally aspirated V8	●
XJ	2006-2007	Supercharged V8	●
XJ	2006-2007	Diesel V6	●
XF	2013-2015	2.0L GTDi (P)	●
XF	2013-2015	Supercharged V6	●
XF	2013-2015	Supercharged V8	●
XF	2012	Normally aspirated V6	●
XF	2012	Normally aspirated V8	●
XF	2012	Supercharged V8	●
XF	2010-2011	Normally aspirated V6	●
XF	2010-2011	Normally aspirated V8 (4.2L)	●
XF	2010-2011	Normally aspirated V8 (5.0L)	●
XF	2010-2011	Supercharged V8	●
XF	2010-2011	Diesel V6	●
XF	2008-2009	Normally aspirated V6	●
XF	2008-2009	Normally aspirated V8	●
XF	2008-2009	Supercharged V8	●
XK	2010-2015	Normally aspirated V8	●
XK	2010-2015	Supercharged V8	●
XK	2006-2009	Normally aspirated V8	●
XK	2006-2009	Supercharged V8	●
F TYPE	2014-2015	Supercharged V6	●
F TYPE	2014-2015	Supercharged V8	●
S TYPE	2006-2008	Normally aspirated V6	●
S TYPE	2006-2008	Normally aspirated V8	●
S TYPE	2006-2008	Supercharged V8	●
S TYPE	2006-2008	Diesel V6	●
S TYPE	2004-2005	AJ61 2.5L	●
S TYPE	2004-2005	AJ61 3.0L	●
S TYPE	2004-2005	AJ61 4.2L	●
S TYPE	2004-2005	Diesel V6	●
S TYPE	2002-2003		●